

**APPENDIX B - BLOCKED/PHASED MAINTENANCE PROGRAM****A. SCOPE**

This Appendix provides useful information related to maintenance program packaging. The maintenance requirements for this model are not grouped into letter checks but can be grouped into Base (C check), HMV (Structural Inspection). Each task has a specific interval which will fall into specific phase as determined by applicable utilization. This Appendix provides labor hour information for each MPD requirement parameter (flight hour per cycle and flight hours per day).

**B. MAINTENANCE PROGRAM****1. SCOPE**

This Appendix to the MPD provides a sample blocked/phased program containing most of the scheduled maintenance tasks in the MPD. The sample program contained herein should be used as a basis for establishing a blocked/phased maintenance program.

This blocked/phased program fully complies with all MPD task intervals for the average fleet utilization (5.6 FH per cycle and 14 HR per day). This blocked/phased program concept is similar to the scheduled maintenance programs for other Boeing models that are defined by multiple 'A' and 'C' check packages and a heavy maintenance visit (sometimes referred to as a HMV or 'D' check). This sample blocked/phased program may also provide a basis for lessors/lessees to define maintenance requirements associated with the heavy maintenance visit and to determine the tasks associated with a particular base maintenance visit or HMV check. This sample maintenance program could be used as a basis for defining content of qualifying maintenance event for maintenance reserve.

**2. BASIC PROGRAM RULES**

The blocked/phased program was developed with the following assumptions:

- An airplane average utilization of 14 FH/day and 5.6 FH/cycle
- The sample program contained in this appendix groups tasks into Base Maintenance and HMV. Some tasks are de-escalated for packaging into Base Maintenance and HMV. Check packages can be conveniently scheduled at 'A' check at 1000 FH and base maintenance 'C' check at 1000 Days
- Lesser tasks should be included in Base/HMV as indicated in Figure B-1, "777 Skyline Chart"
- This appendix is for reference use only

**3. PROGRAM DEFINITION**

The sample blocked/phased program includes:

- Manhours Summary by Phase Group and Skill
- Maintenance Task Operating Plan (MTOP) sorted by task number

Manhour Summary by Phase Group, Skill and Access:

- This summary presents the summed hours for each airplane visit given the basic program utilization parameters and equivalent "A" (1000 FH) and Base check (1000 Days) intervals based on the table, "Manhour Summary by Skill for Each Phase Group". The Skyline chart (Figure B-1) shows the airplane visit (phase group) and the associated maintenance hour extracted from the MPD for a duration of 24 years. Note that the MPD hours do not include setup, rectification, docking time, etc. and they may vary between operators given facilities, experience, labor rules, etc. The manhour summary by skill allocates the total phase group hours by skill. Appearance related tasks (seat, galley, cabin refurbishment) are not included in the MPD.

Maintenance Task Operating Plan (MTOP):

- The MTOP is a report (in matrix format) showing each task and what phase group the task is associated with and is dependant on utilization parameters/phase interval.

#### **4. BRIDGING MAINTENANCE PROGRAM**

Bridging of maintenance programs allows an operator to account for all scheduled maintenance requirements for transition from one maintenance program to another. Building a bridging maintenance program depends upon certain information such as the airplanes past and future utilization (FH/day and FH/cycle), whether the current program is a blocked/phased program or phased program, and the content of the old and new programs. An operator should consider the following items while building a bridging maintenance program.

- A. Where is the airplane in terms of the maintenance cycle? Express this in terms of the tasks that have been accomplished, and what the airplane flight hours, cycles and date was at the time each task was accomplished. The tasks still to be accomplished also need to be identified with the amount of flight hours/cycles/time remaining until each task is due.
- B. Define and understand the next scheduled maintenance program based upon a given utilization and the availability of the airplane for maintenance visits or define the adjusted blocked program using the rules in section 2 of this appendix.
- C. Identify any tasks in the existing or new scheduled maintenance program that are unique to the airline's operation (i.e. not in the MPD) and are not mandatory in one program but mandated in the other program. Note the reason the unique task is required (i.e. delay, accident report, unscheduled removal, service experience, other comments, etc.)
- D. To simplify bridging, the operator shall retain all MPD task numbers or provide a cross-reference correlation between the operator's numbering system and the MPD task number should be created. This includes any revisions to the MPD published over time.
- E. The airplane is maintained under the new maintenance program once the bridging package is completed.



777-200/300 MAINTENANCE PLANNING DOCUMENT  
REPORT PARAMETERS HEADER PAGE

CUSTOMIZED MAINTENANCE PROGRAM PACKAGING INDEXES

DATE Sep 05/2021  
MODEL 777-200/300  
FLIGHT HRS/CYC 5.6  
FLIGHT HRS/DAY 14

EQUIVALENT HRS

* A-PHASE IN HOURS	1000.00		
* A-PHASE IN CYCLES	178.57	. . . . (	1000.00 HRS)
c A-PHASE IN DAYS	71.43	. . . . (	1000.00 HRS)
c A-PHASE IN MONTHS	2.35	. . . . (	1000.00 HRS)
* C-PHASE IN HRS	14000.01	. . . . (	14000.01 HRS)
* C-PHASE IN CYCLES	2500.00	. . . . (	14000.01 HRS)
c C-PHASE IN DAYS	1000.00	. . . . (	14000.01 HRS)
c C-PHASE IN MONTHS	32.89	. . . . (	14000.01 HRS)

\* BASED ON THIS AIRPLANE UTILIZATION, THESE LIMITS GOVERN  
c CALCULATED FROM OTHER UTILIZATION VALUES

MAINTENANCE CYCLE NUMBER	01	
A-PHASE PER MAINT CYCLE		122.57
C-PHASE PER MAINT CYCLE		8.76
A-PHASE PER C-PHASE		14.00
PHASE GROUP RANGE	1-123	
PROCESSED PHASE GROUPS	1-123	





# 777-200/300 MAINTENANCE PLANNING DOCUMENT

## MANHOUR SUMMARY BY SKILL FOR EACH PHASE GROUP

The Boeing Company

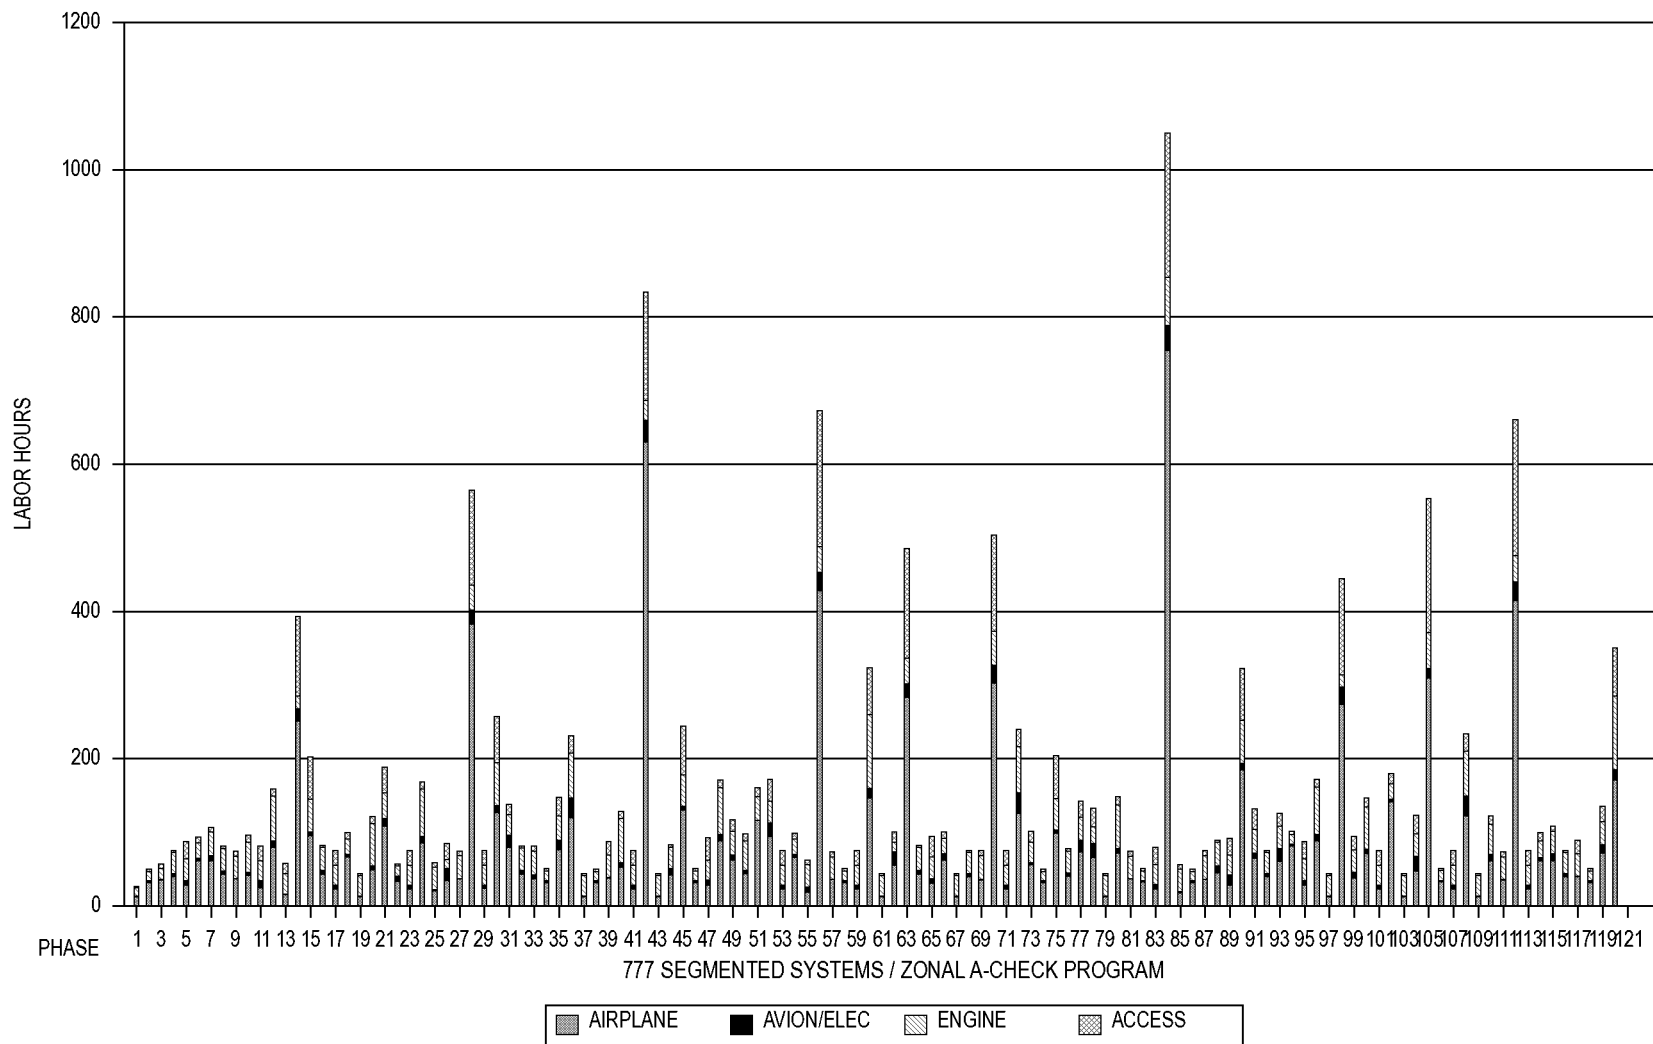


Figure B-1 777 SKYLINE CHART



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	AIRPLANE	AVION/ELEC	ENGINE	ACCESS	TOTAL
1	12.28	0.60	11.20	2.14	26.22
2	31.78	2.10	12.60	2.88	49.36
3	35.23	0.60	14.60	6.57	57.00
4	39.28	3.95	29.00	2.90	75.13
5	27.47	6.10	29.70	23.70	86.97
6	60.58	4.10	20.80	8.12	93.60
7	61.12	7.10	31.80	6.53	106.55
8	42.48	4.45	31.00	2.86	80.79
9	36.27	0.60	30.60	6.57	74.04
10	41.18	4.00	41.30	9.49	95.97
11	24.22	9.85	27.20	19.87	81.14
12	79.46	8.35	61.10	9.57	158.48
13	14.88	0.60	28.00	14.14	57.62
14	250.52	17.00	16.90	108.47	392.89
15	95.19	4.85	44.20	58.22	202.46
16	43.08	4.45	31.80	2.92	82.25
17	23.07	4.85	27.20	19.86	74.98
18	65.82	4.10	20.80	8.31	99.03
19	12.28	0.60	28.00	2.26	43.14
20	48.53	5.85	56.90	9.43	120.71
21	107.57	11.10	34.40	35.32	188.39
22	33.13	7.10	13.40	2.98	56.61
23	22.97	4.85	27.20	19.81	74.83
24	85.36	8.85	64.70	9.59	168.50
25	20.03	1.85	30.50	6.25	58.63
26	34.28	16.10	12.60	21.90	84.88
27	36.37	0.60	30.60	6.62	74.19
28	382.27	18.85	34.10	129.08	564.30



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	AIRPLANE	AVION/ELEC	ENGINE	ACCESS	TOTAL
29	23.17	4.85	27.20	19.90	75.12
30	126.69	9.00	58.20	62.60	256.49
31	78.98	16.85	28.00	13.88	137.71
32	43.08	4.45	31.00	2.88	81.41
33	36.48	5.60	32.20	6.63	80.91
34	31.78	2.10	13.40	2.92	50.20
35	76.01	12.60	33.50	25.05	147.16
36	119.00	27.35	61.10	23.32	230.77
37	12.38	0.60	28.00	2.31	43.29
38	31.68	2.10	12.60	2.88	49.26
39	37.83	0.60	30.60	18.45	87.48
40	52.38	6.35	59.70	9.56	127.99
41	22.97	4.85	27.20	19.81	74.83
42	629.77	29.50	26.70	147.22	833.19
43	12.28	0.60	28.00	2.26	43.14
44	41.43	8.95	29.00	2.92	82.30
45	130.13	4.85	42.60	66.19	243.77
46	31.78	2.10	13.40	2.92	50.20
47	28.17	6.85	27.20	30.26	92.48
48	87.86	8.85	63.10	10.45	170.26
49	61.82	7.10	31.80	15.90	116.62
50	43.83	4.00	40.50	9.45	97.78
51	115.43	0.60	32.20	12.08	160.31
52	93.73	18.45	29.80	29.99	171.97
53	22.97	4.85	27.20	19.81	74.83
54	65.62	4.10	20.80	8.22	98.74
55	18.28	6.85	30.50	6.31	61.94
56	427.22	25.35	35.30	184.67	672.54



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	AIRPLANE	AVION/ELEC	ENGINE	ACCESS	TOTAL
57	35.33	0.60	30.60	6.62	73.15
58	31.78	2.10	13.40	2.92	50.20
59	22.97	4.85	27.20	19.81	74.83
60	145.92	13.25	100.10	64.03	323.30
61	12.28	0.60	28.00	2.26	43.14
62	55.18	18.35	12.60	13.71	99.84
63	282.65	18.85	34.40	149.25	485.15
64	43.08	4.45	31.80	2.92	82.25
65	30.07	6.10	29.70	27.91	93.78
66	61.83	9.10	20.80	8.18	99.91
67	12.38	0.60	28.00	2.31	43.29
68	39.18	3.95	29.00	2.86	74.99
69	35.23	0.60	32.20	6.57	74.60
70	301.82	24.90	45.60	131.20	503.52
71	22.97	4.85	27.20	19.81	74.83
72	125.10	27.85	63.10	23.34	239.39
73	55.98	2.60	28.00	14.53	101.11
74	31.68	2.10	12.60	2.88	49.26
75	98.19	4.85	42.60	58.22	203.86
76	40.28	3.95	29.80	3.56	77.59
77	72.86	16.35	31.00	21.62	141.83
78	65.18	19.10	22.40	26.04	132.72
79	12.28	0.60	28.00	2.26	43.14
80	71.13	6.35	58.90	11.89	148.27
81	36.27	0.60	30.60	6.57	74.04
82	31.88	2.10	13.40	2.92	50.30
83	22.97	5.35	27.20	23.31	78.83
84	754.05	33.75	65.40	196.51	1049.71





## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	AIRPLANE	AVION/ELEC	ENGINE	ACCESS	TOTAL
85	17.03	1.85	30.50	6.25	55.63
86	31.68	2.10	12.60	2.88	49.26
87	35.33	0.60	32.20	6.62	74.75
88	44.83	9.45	31.80	2.96	89.04
89	28.07	13.35	27.20	22.53	91.15
90	184.43	9.00	58.20	70.61	322.24
91	64.42	7.10	31.80	27.78	131.10
92	39.28	3.95	29.00	2.86	75.09
93	60.43	16.85	30.60	17.31	125.19
94	81.28	2.10	13.40	4.05	100.83
95	27.67	6.10	29.70	23.79	87.26
96	87.86	8.85	64.70	10.45	171.86
97	12.38	0.60	28.00	2.31	43.29
98	273.52	23.00	16.90	131.12	444.54
99	37.52	7.60	30.60	18.18	93.90
100	70.68	5.85	57.70	11.91	146.14
101	22.97	4.85	27.20	19.81	74.83
102	140.68	4.10	20.80	13.50	179.08
103	12.28	0.60	28.00	2.26	43.14
104	47.33	19.45	31.00	25.32	123.10
105	309.23	13.35	48.00	182.63	553.21
106	31.98	2.10	13.40	3.01	50.49
107	23.07	4.85	27.20	19.86	74.98
108	121.50	27.35	61.10	23.74	233.69
109	12.28	0.60	28.00	2.26	43.14
110	60.88	9.00	40.50	11.95	122.33
111	35.23	0.60	30.60	6.57	73.00
112	414.12	25.35	36.10	184.67	660.24



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	AIRPLANE	AVION/ELEC	ENGINE	ACCESS	TOTAL
113	22.97	4.85	27.20	19.81	74.83
114	60.58	4.60	22.40	11.62	99.20
115	60.53	10.35	30.50	6.81	108.19
116	39.18	3.95	29.00	2.86	74.99
117	39.17	0.60	30.60	18.59	88.96
118	31.78	2.10	13.40	2.92	50.20
119	71.51	11.35	31.00	21.51	135.37
120	170.72	13.75	100.50	64.69	349.66
121	0.00	0.00	0.00	0.00	0.00
122	0.00	0.00	0.00	0.00	0.00
TOTALS	9644.37	914.50	3908.00	3175.21	17642.08
AVERAGES	79.05	7.50	32.03	26.03	144.61



Sep 05/2020

D622W001

PAGE B.3-2



Sep 05/2020



Sep 05/2020



Sep 05/2020

D622W001



Sep 05/2020





Sep 05/2020



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

### MAINTENANCE TASK OPERATING PLAN (SCHEDULE MATRIX)

				1										2										3										4										5																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																												
				C										C										C										C										C																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																												
				1 1 1 1 1 1 1 1 1 1 1 1 1 2 2 2 2 2 2 2 2 2 2 2 2 3 3 3 3 3 3 3 3 3 3 3 3 4 4 4 4 4 4 4 4 4 4 5 5 5 5 5 5 5 5 5 5 5 5 6 6 6 6 6 6 6 6 6 6 6 6 6 6 6 6 7 7 7 7 7 7 7 7 7 7 8																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																				
TASK	CARD NR	THRESH	REPEAT	PHASE	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																												
SYS	20-642-00-01	6000 FC	6000 FC	01014014										X																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																										

Sep 05/2020

D622W001

PAGE B.3-8

ECCN 9E991 BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details



Sep 05/2020



Sep 05/2020



Sep 05/2020

D622W001



Sep 05/2020



Sep 05/2020

D622W001

PAGE B.3-14





Sep 05/2020

PAGE B.3-16



Sep 05/2020



May 05/2021

May 05/2021

D622W001

May 05/2021

D622W001

May 05/2021

D622W001

May 05/2021

D622W001



PAGE B.3-23



May 05/2021

D622W001

May 05/2021

PAGE B.3-25

PAGE B.3-26

May 05/2021

D622W001



May 05/2021

PAGE B.3-29

May 05/2021



May 05/2021

D622W001

PAGE B.3-32

May 05/2021

PAGE B.3-34

PAGE B.3-35



May 05/2021

May 05/2021

D622W001



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

### MAINTENANCE TASK OPERATING PLAN (SCHEDULE MATRIX)

TASK CARD NR	THRESH	REPEAT	PHASE																										
				1												2													
				C												C													
				1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6
ZON 52-849-02-01	6000 FC	6000 FC	01014014											X															
ZON 52-850-02-01	16000 FC	16000 FC	01045045													X													
ZON 52-851-02-01	16000 FC	16000 FC	01028028																										
ZON 52-852-02-01	6000 FC	6000 FC	01015015														X												
ZON 52-853-02-01	6000 FC	6000 FC	01014014											X															
ZON 52-854-02-01	16000 FC	16000 FC	01045045																										
ZON 52-855-02-01	16000 FC	16000 FC	01028028													X													
STR 53-501-00-01	16000 FC	16000 FC	01042042																										
STR 53-502-00-01	16000 FC	16000 FC	01042042																										
STR 53-503-00-01	16000 FC	16000 FC	01063042																										
STR 53-504-00-01	16000 FC	16000 FC	01063042																										
STR 53-505-00-01	16000 FC	16000 FC	01042042																										
STR 53-506-00-01	16000 FC	16000 FC	01063042																										
STR 53-507-00-01	16000 FC	16000 FC	01063042																										
STR 53-508-00-01	16000 FC	8000 FC	01063021																										
STR 53-509-00-01	4000 FC	4000 FC	01015015																										
STR 53-509-01-01	6000 FC	6000 FC	01014014											X															
STR 53-511-00-01	16000 FC	16000 FC	01063042																										
STR 53-512-00-01	16000 FC	16000 FC	01042042																										
STR 53-512-00-02	16000 FC	16000 FC	01042042																										
STR 53-512-00-03	16000 FC	16000 FC	01042042																										
STR 53-512-00-04	16000 FC	16000 FC	01042042																										
STR 53-512-00-05	16000 FC	16000 FC	01042042																										
STR 53-513-00-01	1000 FC	1000 FC	01003003	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
STR 53-514-00-01	16000 FC	16000 FC	01042042																										
STR 53-515-00-01	16000 FC	16000 FC	01042042																										
STR 53-515-00-02	16000 FC	16000 FC	01042042																										

May 05/2021

D622W001

PAGE B.3-38

ECCN 9E991 BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details



May 05/2021



May 05/2021

D622W001

May 05/2021

PAGE B.3-42

May 05/2021

D622W001



May 05/2021

D622W001



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

### MAINTENANCE TASK OPERATING PLAN (SCHEDULE MATRIX)

				1 C										2 C										3 C										4 C										5 C																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																														
				1	1	1	1	1	1	1	1	1	1	1	1	2	2	2	2	2	2	2	2	2	2	2	2	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3

May 05/2021

D622W001

PAGE B.3-45

ECCN 9E991 BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

May 05/2021



May 05/2021

D622W001

May 05/2021

May 05/2021

D622W001



May 05/2021

May 05/2021



May 05/2021

D622W001

May 05/2021

D622W001



May 05/2021

D622W001





Sep 05/2021

D622W001



Sep 05/2021

D622W001



Sep 05/2021



Sep 05/2021



Sep 05/2021

D622W001



Sep 05/2021

Sep 05/2021

D622W001



Sep 05/2021



Sep 05/2021

D622W001



Sep 05/2021

D622W001

Sep 05/2021

D622W001

PAGE B.3-66



Sep 05/2021

D622W001

PAGE B.3-68



Sep 05/2021

D622W001

PAGE B.3-70





Sep 05/2021

D622W001

PAGE B.3-72

[illegible]





## 777-200/300 MAINTENANCE PLANNING DOCUMENT

### SYSTEMS, STRUCTURAL AND ZONAL MAINTENANCE TASKS SORTED BY PHASE

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
00APUCNG	APU CNG	APU CNG	53-930-00-01	53-930-00	1.00	315 316	315AL 315BL 316AR 316BR	0.18	GVI	APU Compartment - As visible with APU Removed
00APUHRS	400 AH	400 AH	49-010-00-01	49-010-00	0.50	211 212 315 316	315AL 316AR	0.14	SVC	APU and Generator Lubrication System
00ENGCNG	ENG CNG	ENG CNG	54-501-01-01	54-501-01	0.40	410	413AL 414AR 415AL 416AR	0.90	GVI	Powerplant - Left
00ENGCNG	ENG CNG	ENG CNG	54-502-01-01	54-502-01	0.60	410		0.00	DET	Powerplant - Left
00ENGCNG	ENG CNG	ENG CNG	54-504-02-01	54-504-02	0.40	420	423AL 424AR 425AL 426AR	0.90	GVI	Powerplant - Right
00ENGCNG	ENG CNG	ENG CNG	54-505-02-01	54-505-02	0.60	420		0.00	DET	Powerplant - Right
00ENGCNG	ENG CNG	ENG CNG	54-530-01-01	54-530-01	0.40	410	413AL 414AR 415AL 416AR	0.90	GVI	Powerplant - Left
00ENGCNG	ENG CNG	ENG CNG	54-531-01-01	54-531-01	0.60	410		0.00	DET	Powerplant - Left
00ENGCNG	ENG CNG	ENG CNG	54-533-02-01	54-533-02	0.40	420	423AL 424AR 425AL 426AR	0.90	GVI	Powerplant - Right
00ENGCNG	ENG CNG	ENG CNG	54-534-02-01	54-534-02	0.60	420		0.00	DET	Powerplant - Right
00ENGCNG	ENG CNG	ENG CNG	54-560-01-01	54-560-01	0.40	410	413AL 414AR 415AL 416AR	0.90	GVI	Powerplant - Left
00ENGCNG	ENG CNG	ENG CNG	54-561-01-01	54-561-01	0.60	410		0.00	DET	Powerplant - Left
00ENGCNG	ENG CNG	ENG CNG	54-563-02-01	54-563-02	0.40	420	423AL 424AR 425AL 426AR	0.90	GVI	Powerplant - Right
00ENGCNG	ENG CNG	ENG CNG	54-564-02-01	54-564-02	0.60	420		0.00	DET	Powerplant - Right
00ENGCNG	ENG CNG	ENG CNG	71-205-01-01	71-205-01	0.50	411	413AL 414AR 415AL 415LB 415NB 416AR	0.94	DET	Inspection of the Forward Mount
00ENGCNG	ENG CNG	ENG CNG	71-205-02-01	71-205-02	0.50	421	423AL 424AR 425AL 425LB 425NB 426AR	0.94	DET	Inspection of the Forward Mount
00ENGCNG	ENG CNG	ENG CNG	71-210-01-01	71-210-01	0.50	411	413AL 414AR 415AL 415LB 415NB 416AR	0.94	DET	Inspection of the Aft Lower Mount



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
00ENGCG	ENG CNG	ENG CNG	71-210-02-01	71-210-02	0.50	421	423AL 424AR 425AL 425LB 425NB 426AR	0.94	DET	Inspection of the Aft Lower Mount
00ENGCG	ENG CNG	ENG CNG	71-350-01-01	71-350-01	0.50	411	413AL 414AR 415AL 416AR	0.90	DET	Inspection of the Forward Mount
00ENGCG	ENG CNG	ENG CNG	71-350-02-01	71-350-02	0.50	421	423AL 424AR 425AL 426AR	0.90	DET	Inspection of the Forward Mount
00ENGCG	ENG CNG	ENG CNG	71-355-01-01	71-355-01	0.50	411	413AL 414AR 415AL 416AR	0.90	DET	Inspection of the AFT Engine Mount
00ENGCG	ENG CNG	ENG CNG	71-355-02-01	71-355-02	0.50	421	423AL 424AR 425AL 426AR	0.90	DET	Inspection of the AFT Engine Mount
00ENGCG	ENG CNG	ENG CNG	72-025-01-01	72-025-01	0.25	411		0.00	DET	Inspection of the forward Mount - Left (GE90-70/80/90 series engines only)
00ENGCG	ENG CNG	ENG CNG	72-025-01-03	72-025-01	0.25	411		0.00	DET	Inspection of the forward Mount - Left (GE90-100 series engines only)
00ENGCG	ENG CNG	ENG CNG	72-025-02-02	72-025-02	0.25	421		0.00	DET	Inspection of the forward Mount - Right (for GE90-70/80/90 series engines only)
00ENGCG	ENG CNG	ENG CNG	72-025-02-04	72-025-02	0.25	421		0.00	DET	Inspection of the forward Mount - Right (for GE90-100 series engines only)
00ENGCG	ENG CNG	ENG CNG	72-280-01-01	72-280-01	0.20	411	413AL 414AR 415AL 415HB 415JB 415KB 416AR	0.96	DET	Inspection of the Turbine Exhaust Case Rail Mount (AFT Eng Mount) - Left
00ENGCG	ENG CNG	ENG CNG	72-280-02-01	72-280-02	0.20	421	423AL 424AR 425AL 425HB 425JB 426AR	0.94	DET	Inspection of the Turbine Exhaust Case Rail Mount (AFT Eng Mount) - Right
00ENGCG	ENG CNG	ENG CNG	72-370-01-01	72-370-01	0.50	411	413AL 414AR 415AL 416AR	0.90	DET	Inspection of the Lugs
00ENGCG	ENG CNG	ENG CNG	72-370-02-01	72-370-02	0.50	421	423AL 424AR 425AL 426AR	0.90	DET	Inspection of the Lugs
00ENGCG	ENG CNG	ENG CNG	78-005-01-01	78-005-01	0.15	411	413AL 414AR 415AL 415HB 415JB 415KB 416AR	0.96	GVI	Inspect General Visual Exhaust Sleeve/Center Body - Left (for GE90-70/80/90 series engines only)



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
00ENGCGNG	ENG CNG	ENG CNG	78-005-01-03	78-005-01	0.15	411	413AL 414AR 415AL 415HB 415JB 415KB 416AR	0.96	GVI	Inspect General Visual Exhaust Sleeve/Center Body - Left (for GE90-100 series engines only)
00ENGCGNG	ENG CNG	ENG CNG	78-005-02-02	78-005-02	0.15	421	423AL 424AR 425AL 425HB 425JB 425KB 426AR	0.96	GVI	Inspect General Visual Exhaust Sleeve/Center Body - Right (for GE90-70/80/90 series engines only)
00ENGCGNG	ENG CNG	ENG CNG	78-005-02-04	78-005-02	0.15	421	423AL 424AR 425AL 425HB 425JB 425KB 426AR	0.96	GVI	Inspect General Visual Exhaust Sleeve/Center Body - Right (for GE90-100 series engines only)
00IDGCGNG	IDG CNG ENG CNG	IDG CNG ENG CNG	24-060-00-01	24-060-00	0.50	411 421	413AL 415AL 423AL 425AL	0.90	OPC	Generator Drive Disconnect - Left
00IDGCGNG	IDG CNG ENG CNG	IDG CNG ENG CNG	24-060-00-02	24-060-00	0.50	411 421	413AL 415AL 423AL 425AL	0.90	OPC	Generator Drive Disconnect - Right
00IDGCGNG	IDG CNG ENG CNG	IDG CNG ENG CNG	24-061-00-01	24-061-00	0.50	411 421	413AL 423AL	0.36	OPC	Generator Drive Disconnect - Left
00IDGCGNG	IDG CNG ENG CNG	IDG CNG ENG CNG	24-061-00-02	24-061-00	0.50	411 421	413AL 423AL	0.36	OPC	Generator Drive Disconnect - Right
00IDGCGNG	IDG CNG ENG CNG	IDG CNG ENG CNG	24-062-00-01	24-062-00	0.50	411 421	413AL 415AL 423AL 425AL	0.90	OPC	Generator Drive Disconnect - Left
00IDGCGNG	IDG CNG ENG CNG	IDG CNG ENG CNG	24-062-00-02	24-062-00	0.50	411 421	413AL 415AL 423AL 425AL	0.90	OPC	Generator Drive Disconnect - Right
00LDGCGNG	24000 FH LDG CNG	24000 FH LDG CNG	32-130-00-01	32-130-00	0.50	212 711 731 741		0.00	OPC	Landing Gear Downlock Springs and Gear Release Hooks
00LIFLIM	LIF LIM	LIF LIM	23-090-00-01	23-090-00	0.50	264		0.00	DIS	Voice Recorder - Underwater Locator Beacon
00LIFLIM	LIF LIM	LIF LIM	23-090-00-02	23-090-00	0.50	264		0.00	DIS	Voice Recorder - Underwater Locator Beacon
00LIFLIM	LIF LIM	LIF LIM	25-069-00-01	25-069-00	2.00	197 198		0.00	DIS	Off-Wing Slide Inflation Cylinder Squib Cartridges
00LIFLIM	LIF LIM	LIF LIM	25-180-00-01	25-180-00	0.50	200		0.00	DIS	Smokehoods
00LIFLIM	LIF LIM	LIF LIM	26-130-00-01	26-130-00	1.00	122	117AL 821	0.12	DIS	Engine Fire Bottle Squib Cartridges
00LIFLIM	LIF LIM	LIF LIM	26-180-00-01	26-180-00	1.00	313	117AL 313AL	0.06	DIS	APU Fire Bottle Squib Cartridges



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
00LIFLIM	LIF LIM	LIF LIM	26-240-00-01	26-240-00	1.00	122	117AL 821	0.12	DIS	Cargo Compartment Fire Extinguishing Bottle SQUIB Cartridges
00LIFLIM	LIF LIM	LIF LIM	26-260-00-01	26-260-00	1.00	122	117AL 821	0.12	DIS	Cargo Fire Extinguishing Flow Valve Squib Cartridges
00LIFLIM	LIF LIM	LIF LIM	27-370-00-01	27-370-00	2.00	211 212 553 653	552CB 652CB	0.94	DIS	Spoiler Auxiliary Retract Device (SARD) Pyrotechnic Cartridge
00LIFLIM	LIF LIM	LIF LIM	31-020-00-01	31-020-00	0.50	264		0.00	DIS	Flight Data Recorder System
00LIFLIM	LIF LIM	LIF LIM	35-080-00-01	35-080-00	0.50	151 152 200		0.00	DIS	Passenger Chemical Oxygen Generators
00LIFLIM	LIF LIM	LIF LIM	35-080-00-02	35-080-00	0.50	151 152 200		0.00	DIS	Passenger Chemical Oxygen Generators
00LIFLIM	LIF LIM	LIF LIM	35-080-00-03	35-080-00	0.50	151 152 200		0.00	DIS	Passenger Chemical Oxygen Generators
00LIFLIM	LIF LIM	LIF LIM	35-080-00-04	35-080-00	0.50	151 152 200		0.00	DIS	Passenger Chemical Oxygen Generators
00LIFLIM	LIF LIM	LIF LIM	35-081-00-01	35-081-00	0.20	200		0.00	DIS	Lavatory oxygen Constant Dispensing System (CDS) cylinder discard.
00LIFLIM	LIF LIM	LIF LIM	35-163-00-01	35-163-00	0.10	200		0.00	DIS	Portable oxygen cylinders
00LIFLIM	LIF LIM	LIF LIM	35-164-00-01	35-164-00	0.10	115 211 212		0.00	DIS	Crew Oxygen Cylinders
00LIFLIM	LIF LIM	LIF LIM	49-020-00-01	49-020-00	0.00	315 316	315AL 315BL 316AR 316BR	0.18	DIS	APU 1st & 2ND Stage Compressor Impellers
00LIFLIM	LIF LIM	LIF LIM	49-030-00-01	49-030-00	0.00	315 316	315AL 315BL 316AR 316BR	0.18	DIS	APU Turbine Wheels
00LIFLIM	LIF LIM	LIF LIM	49-040-00-01	49-040-00	0.00	315 316	315AL 315BL 316AR 316BR	0.18	DIS	APU Load Compressor Impeller





## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
00LIFLIM	LIF LIM	LIF LIM	52-070-00-01	52-070-00	1.00	831 832 834 835 841 842 844 845		0.00	DIS	Passenger Entry Door EPAS SQUIBS
00LIFLIM	LIF LIM	LIF LIM	52-070-01-01	52-070-01	1.00	831 832 834 835 841 842 844 845		0.00	DIS	Passenger Entry Door EPAS SQUIBS
00LIFLIM	LIF LIM	LIF LIM	52-075-00-01	52-075-00	0.25	833 843		0.00	DIS	No. 3 Over-Wing Door EPAS Squibs
00LIFLIM	VEN REC	VEN REC	52-091-00-01	52-091-00	0.50	831 832 834 835 841 842 844 845		0.00	RST	Passenger Entry Door EPAS Battery
00LIFLIM	VEN REC	VEN REC	52-091-00-02	52-091-00	0.50	831 832 834 835 841 842 844 845		0.00	RST	Passenger Entry Door EPAS Battery
00LIFLIM	LIF LIM	LIF LIM	72-010-00-01	72-010-00	0.00	411 421		0.00	DIS	Discard Fan Disk and Booster Spool (for GE90-70/80/90 series engines only)
00LIFLIM	LIF LIM	LIF LIM	72-010-00-02	72-010-00	0.00	411 421		0.00	DIS	Discard Fan Disk and Booster Spool (for GE90-100 series engines only)
00LIFLIM	LIF LIM	LIF LIM	72-015-00-01	72-015-00	0.00	411 421		0.00	DIS	Discard Fan Shaft (for GE90-70/80/90 series engines only)



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
00LIFLIM	LIF LIM	LIF LIM	72-015-00-02	72-015-00	0.00	411 421		0.00	DIS	Discard Fan Shaft (for GE90-100 series engines only)
00LIFLIM	LIF LIM	LIF LIM	72-035-00-01	72-035-00	0.00	411 421		0.00	DIS	Discard HPC Stage 1 Disk/Shaft (for GE90-70/80/90 series engines only)
00LIFLIM	LIF LIM	LIF LIM	72-035-00-02	72-035-00	0.00	411 421		0.00	DIS	Discard HPC Stage 1 Disk/Shaft (for GE90-100 series engines only)
00LIFLIM	LIF LIM	LIF LIM	72-040-00-01	72-040-00	0.00	411 421		0.00	DIS	Discard HPC Stage 2 thru 6 Spool (for GE90-70/80/90 series engines only)
00LIFLIM	LIF LIM	LIF LIM	72-040-00-02	72-040-00	0.00	411 421		0.00	DIS	Discard HPC Stage 2 thru 5 Spool (for GE90-100 series engines only)
00LIFLIM	LIF LIM	LIF LIM	72-045-00-01	72-045-00	0.00	411 421		0.00	DIS	Discard HPC Stage 7 Disk (for GE90-70/80/90 series engines only)
00LIFLIM	LIF LIM	LIF LIM	72-045-00-02	72-045-00	0.00	411 421		0.00	DIS	Discard HPC Stage 6 Disk (for GE90-100 series engines only)
00LIFLIM	LIF LIM	LIF LIM	72-050-00-01	72-050-00	0.00	411 421		0.00	DIS	Discard HPC Stage 8 thru 10 Spool (for GE90-70/80/90 series engines only)
00LIFLIM	LIF LIM	LIF LIM	72-050-00-02	72-050-00	0.00	411 421		0.00	DIS	Discard HPC Stage 7 thru 9 Spool (for GE90-100 series engines only)
00LIFLIM	LIF LIM	LIF LIM	72-055-00-01	72-055-00	0.00	411 421		0.00	DIS	Discard CDP Seal (for GE90-70/80/90 series engines only)
00LIFLIM	LIF LIM	LIF LIM	72-055-00-02	72-055-00	0.00	411 421		0.00	DIS	Discard CDP Seal (for GE90-100 series engines only)
00LIFLIM	LIF LIM	LIF LIM	72-070-00-01	72-070-00	0.00	411 421		0.00	DIS	Discard HPT Stage 1 and 2 Disks and Seals (for GE90-70/80/90 series engines only)
00LIFLIM	LIF LIM	LIF LIM	72-070-00-02	72-070-00	0.00	411 421		0.00	DIS	Discard HPT Stage 1 and 2 Disks and Seals (for GE90-100 series engines only)
00LIFLIM	LIF LIM	LIF LIM	72-075-00-01	72-075-00	0.00	411 421		0.00	DIS	Discard LPT Shaft, LPT Cone Shaft and LPT Stage 1 thru 6 Disks (for GE90-70/80/90 series engines only)
00LIFLIM	LIF LIM	LIF LIM	72-075-00-02	72-075-00	0.00	411 421		0.00	DIS	Discard LPT Shaft, LPT Cone Shaft and LPT Stage 1 thru 6 Disks (for GE90-100 series engines only)
00LIFLIM	LIF LIM	LIF LIM	72-225-00-01	72-225-00	0.00	411 421		0.00	DIS	Discard Fan Hub & LPC Drum Rotor



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
00LIFLIM	LIF LIM	LIF LIM	72-250-00-01	72-250-00	0.00	411 421		0.00	DIS	Discard Front HUB, 5th Disk, Drum Rotor/Drive Turbine Shaft
00LIFLIM	LIF LIM	LIF LIM	72-255-00-01	72-255-00	0.00	411 421		0.00	DIS	Discard HUBS, ROTATING AIRSEAL, AND BLADE RETAINING PLATES
00LIFLIM	LIF LIM	LIF LIM	72-260-00-01	72-260-00	0.00	411 421		0.00	DIS	Discard LPC/LPT COUPLING
00LIFLIM	LIF LIM	LIF LIM	72-265-00-01	72-265-00	0.00	411 421		0.00	DIS	Discard Disks, Rotating Airseals and Shafts
00LIFLIM	LIF LIM	LIF LIM	72-355-00-01	72-355-00	0.00	411 421		0.00	DIS	Discard LPC Disk
00LIFLIM	LIF LIM	LIF LIM	72-360-00-01	72-360-00	0.00	411 421		0.00	DIS	Discard LPC Shaft
00LIFLIM	LIF LIM	LIF LIM	72-365-00-01	72-365-00	0.00	411 421		0.00	DIS	Discard Fan Shaft
00LIFLIM	LIF LIM	LIF LIM	72-380-00-01	72-380-00	0.00	411 421		0.00	DIS	Discard IPC Rear Stubshaft
00LIFLIM	LIF LIM	LIF LIM	72-405-00-01	72-405-00	0.00	411 421		0.00	DIS	Discard HPC Shaft/Assemblies
00LIFLIM	LIF LIM	LIF LIM	72-420-00-01	72-420-00	0.00	411 421		0.00	DIS	Discard HPT Disk
00LIFLIM	LIF LIM	LIF LIM	72-425-00-01	72-425-00	0.00	411 421		0.00	DIS	Discard IPT Disk
00LIFLIM	LIF LIM	LIF LIM	72-430-00-01	72-430-00	0.00	411 421		0.00	DIS	Discard IPT Shaft
00LIFLIM	LIF LIM	LIF LIM	72-435-00-01	72-435-00	0.00	411 421		0.00	DIS	Discard IPT Disks
00LIFLIM	LIF LIM	LIF LIM	72-440-00-01	72-440-00	0.00	411 421		0.00	DIS	Discard LPT Shaft
00NATREQ	NAT REQ	NAT REQ	38-010-00-01	38-010-00	1.00	100 200	122CR 154AR	0.04	RST	Potable Water Supply System
00NOTE	NOTE	NOTE	21-170-00-01	21-170-00	1.00	135 136	195EL 196ER	0.14	DET	AC Pack Fan Bypass Check Valve



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
00NOTE	NOTE	NOTE	23-110-00-01	23-110-00	0.01	210 211 212 263 264		0.00	OPC	Emergency Locator Transmitter (For A/C Equipped with Artex ELTs)
00NOTE	NOTE	NOTE	23-110-00-02	23-110-00	0.00	210 211 212 263 264		0.00	OPC	Emergency Locator Transmitter (For A/C equipped with Honeywell ELTs)
00NOTE	NOTE	NOTE	23-110-00-03	23-110-00	0.00	210 211 212 263 264		0.00	OPC	Emergency Locator Transmitter (For A/C Equipped with CEIS ELTs)
00NOTE	NOTE	NOTE	23-110-00-04	23-110-00	0.00	210 211 212 263 264		0.00	OPC	Emergency Locator Transmitter (For A/C Equipped with CEIS/ELTA ELTs)
00NOTE	NOTE	NOTE	23-110-00-05	23-110-00	0.01	210 211 212 263 264		0.00	OPC	Emergency Locator Transmitter (For A/C Equipped with Artex ELTs)
00NOTE	NOTE	NOTE	23-120-00-01	23-120-00	0.02	211 212 263 264		0.00	DIS	Emergency Locator Transmitter (For A/C equipped with Artex ELTs)
00NOTE	NOTE	NOTE	23-120-00-02	23-120-00	0.01	211 212 263 264		0.00	DIS	Emergency Locator Transmitter (For A/C equipped with Honeywell ELTs)
00NOTE	NOTE	NOTE	23-120-00-03	23-120-00	0.01	211 212 263 264		0.00	DIS	Emergency Locator Transmitter (For A/C equipped with CEIS ELTs)



# 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
00NOTE	NOTE	NOTE	23-120-00-04	23-120-00	0.01	211 212 263 264		0.00	DIS	Emergency Locator Transmitter (For A/C equipped with CEIS/ELTA ELTs)
00NOTE	NOTE	NOTE	25-240-00-01	25-240-00	0.50	830 833 840 843		0.00	OPC	Passenger Entry Door Emergency Escape Slide
00NOTE	NOTE	NOTE	25-240-00-02	25-240-00	0.50	830 833 840 843		0.00	OPC	Overwing Door Emergency Escape Slide
00NOTE	NOTE	NOTE	26-270-00-01	26-270-00	0.50	200 220 230 250 260		0.00	DET	Lavatory Waste Compartment Fire Extinguisher Bottles
00NOTE	NOTE	NOTE	26-270-00-02	26-270-00	0.50	200 220 230 250 260		0.00	DET	Lavatory Linen Disposal Compartment Fire Extinguisher Bottles
00NOTE	NOTE	NOTE	26-276-00-01	26-276-00	0.10	151 152		0.00	VCK	LLAR Fire Extinguishing Tubing
00NOTE	NOTE	NOTE	54-703-03-01	54-703-03	2.00	432 433 442 443		0.00	SDI	Strut Side Skin (PW)
00NOTE	NOTE	NOTE	54-703-04-01	54-703-04	2.00	432 433 442 443		0.00	SDI	Strut Side Skin (PW)
00NOTE	NOTE	NOTE	54-710-03-01	54-710-03	1.00	432 433 442 443		0.00	SDI	Upper Spar Bay 3 (GE)
00NOTE	NOTE	NOTE	54-710-04-01	54-710-04	1.00	432 433 442 443		0.00	SDI	Upper Spar Bay 3 (GE)



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
00NOTE	NOTE	NOTE	54-711-03-01	54-711-03	1.50	432 433 442 443		0.00	SDI	Strut Upper Spar Bay 5/6 at Cutout (GE)
00NOTE	NOTE	NOTE	54-711-04-01	54-711-04	1.50	432 433 442 443		0.00	SDI	Strut Upper Spar Bay 5/6 at Cutout (GE)
00NOTE	NOTE	NOTE	54-712-03-01	54-712-03	1.50	432 433 442 443		0.00	SDI	Strut Upper Spar Bay 5 at Cutout (GE)
00NOTE	NOTE	NOTE	54-712-04-01	54-712-04	1.50	432 433 442 443		0.00	SDI	Strut Upper Spar Bay 5 at Cutout (GE)
00NOTE	NOTE	NOTE	54-713-03-01	54-713-03	1.50	432 433 442 443		0.00	SDI	Strut Upper Spar Bay 6 at Cutout (GE)
00NOTE	NOTE	NOTE	54-713-04-01	54-713-04	1.50	432 433 442 443		0.00	SDI	Strut Upper Spar Bay 6 at Cutout (GE)
00NOTE	NOTE	NOTE	54-716-02-01	54-716-02	2.50	432 433 442 443		0.00	SDI	Side Skin Cutout (GE)
00NOTE	NOTE	NOTE	54-716-03-01	54-716-03	2.50	432 433 442 443		0.00	SDI	Side Skin Cutout (GE)
00NOTE	NOTE	NOTE	54-717-03-01	54-717-03	1.00	432 433 442 443		0.00	SDI	Lower Spar Bay 3 (GE)
00NOTE	NOTE	NOTE	54-717-04-01	54-717-04	1.00	432 433 442 443		0.00	SDI	Lower Spar Bay 3 (GE)



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
00NOTE	NOTE	NOTE	54-781-01-01	54-781-01	1.00	432 433 442 443		0.00	SDI	Aluminum Aft Strut Bulkhead (RR)
00NOTE	NOTE	NOTE	54-781-02-01	54-781-02	1.00	432 433 442 443		0.00	SDI	Aluminum Aft Strut Bulkhead (RR)
00NOTE	NOTE	NOTE	57-711-12-01	57-711-12	2.00	133 134	139AZ	0.30	SDI	Wing Center Section, Lower Rear Spar Chord, Lower Chord
00NOTE	NOTE	NOTE	57-721-02-01	57-721-02	1.50	521 531 541 621 631 641	533DB 533EB 533FB 541DB 541EB 541NB 541PB 633DB 633EB 633FB 641DB 641EB 641NB 641PB	2.94	SDI	Wing Outboard, Typical Splice Stringer
00NOTE	NOTE	NOTE	57-721-03-01	57-721-03	1.50	521 531 541 621 631 641	533DB 533EB 533FB 541DB 541EB 541NB 541PB 633DB 633EB 633FB 641DB 641EB 641NB 641PB	2.94	SDI	Wing Outboard, Typical Splice Stringer
00NOTE	NOTE	NOTE	57-729-03-01	57-729-03	4.00	521 621		0.00	SDI	Wing Outboard, Typical Stringer Attachment at Nacelle Fitting
00NOTE	NOTE	NOTE	57-729-05-01	57-729-05	4.00	521 621		0.00	SDI	Wing Outboard, Typical Stringer Attachment at Nacelle Fitting
00NOTE	NOTE	NOTE	72-346-01-01	72-346-01	2.00	411		0.00	LUB	Fan Blade Lubrication
00NOTE	NOTE	NOTE	72-346-02-01	72-346-02	2.00	421		0.00	LUB	Fan Blade Lubrication
00NOTE	NOTE	NOTE	73-010-01-01	73-010-01	0.15	212		0.00	OPC	Restore All C2 Messages - Left (for GE90-70/80/90 series engines only)
00NOTE	NOTE	NOTE	73-010-01-03	73-010-01	0.15	212		0.00	OPC	Restore All C2 Messages - Left (for GE90-100 series engines only)
00NOTE	NOTE	NOTE	73-010-02-02	73-010-02	0.15	212		0.00	OPC	Restore All C2 Messages - Right (for GE90-70/80/90 series engines only)



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
00NOTE	NOTE	NOTE	73-010-02-04	73-010-02	0.15	212		0.00	OPC	Restore All C2 Messages - Right (for GE90-100 series engines only)
00NOTE	6500 FH NOTE	6500 FH NOTE	79-385-01-01	79-385-01	1.00	411	413AL 414AR	0.36	RST	Restore Oil Pressure Filter
00NOTE	6500 FH NOTE	6500 FH NOTE	79-385-02-01	79-385-02	1.00	421	423AL 424AR	0.36	RST	Restore Oil Pressure Filter
00SHPVST	SHP VST	SHP VST	21-160-00-01	21-160-00	2.00	135 136	195EL 196ER	0.14	FNC	AC Pack Heat Exchangers
00SHPVST	SHP VST	SHP VST	24-100-00-01	24-100-00	1.00	411 421		0.00	RST	IDG and Backup Generator (VSCF) Heat Exchangers (for GE90-70/80/90 series engine only)
00SHPVST	SHP VST	SHP VST	24-100-00-02	24-100-00	1.00	411 421		0.00	RST	IDG and Backup Generator (VSCF) Heat Exchangers (for GE90-100 series engine only)
00SHPVST	SHP VST	SHP VST	24-100-00-03	24-100-00	2.00	411 421		0.00	RST	IDG and Backup Generator (VSCF) Heat Exchangers
00SHPVST	SHP VST	SHP VST	24-100-00-04	24-100-00	0.50	411 421		0.00	RST	Engine 1 IDG/Backup Generator (VSCF) Heat Exchangers
00SHPVST	SHP VST	SHP VST	24-100-00-05	24-100-00	0.50	411 421		0.00	RST	Engine 2 IDG/Backup Generator (VSCF) Heat Exchangers
00SHPVST	SHP VST	SHP VST	24-100-00-06	24-100-00	0.50	411 421		0.00	RST	Engine 1 IDG/Backup Generator (VSCF) Heat Exchangers
00SHPVST	SHP VST	SHP VST	24-100-00-07	24-100-00	0.50	411 421		0.00	RST	Engine 2 IDG/Backup Generator (VSCF) Heat Exchangers
00SHPVST	SHP VST	SHP VST	26-120-00-01	26-120-00	0.10	122	821	0.10	FNC	Engine Fire Bottle Extinguishing Bottle Pressure Switches
00SHPVST	SHP VST	SHP VST	26-170-00-01	26-170-00	0.50	300	313AL	0.04	FNC	APU Fire Extinguishing Bottle Pressure Switch
00SHPVST	SHP VST	SHP VST	26-220-00-01	26-220-00	0.50	122	821	0.10	FNC	Cargo Fire Extinguishing Bottle Pressure Switches
00SHPVST	SHP VST	SHP VST	26-278-00-01	26-278-00	1.00	151 152		0.00	FNC	Lower Lobe Attendant Rest Fire Extinguishing System
00SHPVST	SHP VST	SHP VST	49-060-00-01	49-060-00	0.00	315 316	315AL 316AR	0.14	FNC	APU Combustor Drain Valve





## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
00VENREC	VEN REC	VEN REC	24-190-00-01	24-190-00	1.00	117 118 122	117AL 821	0.12	RST	Flight Control DC Power Battery
00VENREC	VEN REC	VEN REC	25-056-00-01	25-056-00	1.00	200		0.00	OPC	Inflatable Seat Restraint System
00VENREC	VEN REC	VEN REC	25-056-00-02	25-056-00	1.00	200		0.00	OPC	Inflatable Seat Restraint System
00VENREC	VEN REC	VEN REC	25-056-00-03	25-056-00	1.00	200		0.00	OPC	Inflatable Seat Restraint System
00VENREC	VEN REC	VEN REC	25-056-00-04	25-056-00	1.00	200		0.00	OPC	Inflatable Seat Restraint System
00VENREC	VEN REC	VEN REC	25-057-00-01	25-057-00	4.00	200		0.00	DET	Inflatable Seat Restraint System Seatbelt Airbag Assembly (SAA)
00VENREC	VEN REC	VEN REC	25-058-00-01	25-058-00	4.00	200		0.00	DIS	Inflatable Seat Restraint System Gas Generator Assembly (GGA)
00VENREC	VEN REC	VEN REC	25-058-00-02	25-058-00	4.00	200		0.00	DIS	Inflatable Seat Restraint System Gas Generator Assembly (GGA)
00VENREC	VEN REC	VEN REC	25-058-00-03	25-058-00	4.00	200		0.00	DIS	Inflatable Seat Restraint System Gas Generator Assembly (GGA)
00VENREC	VEN REC	VEN REC	25-059-00-01	25-059-00	1.00	200		0.00	RST	Inflatable Seat Restraint System Electronic Module Assembly (EMA) Battery
00VENREC	VEN REC	VEN REC	25-059-00-02	25-059-00	1.00	200		0.00	RST	Inflatable Seat Restraint System Electronic Module Assembly (EMA) Battery
00VENREC	VEN REC	VEN REC	25-059-00-03	25-059-00	1.00	200		0.00	RST	Inflatable Seat Restraint System Electronic Module Assembly (EMA) Battery
00VENREC	VEN REC	VEN REC	25-065-00-01	25-065-00	2.50	833 843		0.00	RST	Off-Wing Emergency Escape Slide Assembly
00VENREC	VEN REC	VEN REC	25-100-00-01	25-100-00	0.10	200		0.00	RST	Survival Kit - Life Vests (Jackets)
00VENREC	VEN REC	VEN REC	25-110-00-01	25-110-00	0.50	200		0.00	RST	Life Vests (Jackets)
00VENREC	VEN REC	VEN REC	25-110-00-02	25-110-00	0.50	200		0.00	RST	Life Vests (Jackets)
00VENREC	VEN REC	VEN REC	25-115-00-01	25-115-00	0.50	200		0.00	RST	Flotation Cots
00VENREC	VEN REC	VEN REC	25-115-00-02	25-115-00	0.50	200		0.00	RST	Flotation Cots
00VENREC	VEN REC	VEN REC	25-120-00-01	25-120-00	0.10	200		0.00	FNC	Emergency Locator Transmitters
00VENREC	VEN REC	VEN REC	25-125-00-01	25-125-00	0.10	200		0.00	DIS	Emergency Locator Transmitter (Batteries)
00VENREC	VEN REC	VEN REC	25-140-00-01	25-140-00	0.10	200		0.00	RST	Emergency Medical Kit



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
00VENREC	VEN REC	VEN REC	25-145-00-01	25-145-00	0.01	200		0.00	RST	Automated External Defibrillator
00VENREC	VEN REC	VEN REC	25-170-00-01	25-170-00	0.50	200		0.00	DIS	Emergency Flashlight Batteries
00VENREC	VEN REC	VEN REC	25-200-00-01	25-200-00	0.10	200		0.00	DIS	Megaphone Batteries
00VENREC	VEN REC	VEN REC	25-210-00-01	25-210-00	1.00	831 832 834 835 841 842 844 845		0.00	RST	Emergency Escape Slide/Rafts
00VENREC	VEN REC	VEN REC	52-091-01-01	52-091-01	0.50	831 832 834 835 841 842 844 845		0.00	RST	Passenger Entry Door EPAS Battery
00VENREC	VEN REC	VEN REC	52-091-01-02	52-091-01	0.50	831 832 834 835 841 842 844 845		0.00	RST	Passenger Entry Door EPAS Battery
00VENREC	VEN REC	VEN REC	52-096-00-01	52-096-00	0.60	833 843		0.00	RST	No. 3 Over-Wing Door EPAS/Backup Battery
01000000	50 FC 25 DY	50 FC 25 DY	12-081-00-01	12-081-00	0.05	731 741		0.00	LUB	Main Landing Gear Truck Beam and Inner Cylinder Pivot Joints
01000000	50 FC 25 DY	50 FC 25 DY	12-081-00-02	12-081-00	0.05	731 741		0.00	LUB	Main Landing Gear Truck Beam and Inner Cylinder Pivot Joints
01000000	150 FC 50 DY	150 FC 50 DY	12-082-00-01	12-082-00	0.05	143 144 731 741	551BB 551DB 651BB 651DB	0.94	LUB	Main Landing Gear Forward Trunnion Bearing Housing and Retract Arm Assembly



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01000000	150 FC 50 DY	150 FC 50 DY	12-082-00-02	12-082-00	0.05	143 144 731 741	551BB 551DB 651BB 651DB	0.94	LUB	Main Landing Gear Forward Trunnion Bearing Housing and Retract Arm Assembly
01000000	150 FC 50 DY	150 FC 50 DY	12-082-00-03	12-082-00	0.05	143 144 731 741	551BB 551DB 651BB 651DB	0.94	LUB	Main Landing Gear Forward Trunnion Bearing Housing and Retract Arm Assembly
01000000	150 FC 50 DY	150 FC 50 DY	12-082-00-04	12-082-00	0.05	143 144 731 741	551BB 551DB 651BB 651DB	0.94	LUB	Main Landing Gear Forward Trunnion Bearing Housing and Retract Arm Assembly
01000000	250 FH	250 FH	24-010-00-01	24-010-00	0.25	212 411 421	415JB 425JB	0.04	SVC	IDG Oil Servicing - Left
01000000	250 FH	250 FH	24-010-00-02	24-010-00	0.25	212 411 421	415JB 425JB	0.04	SVC	IDG Oil Servicing - Right
01000000	450 FH	450 FH	24-011-00-01	24-011-00	0.25	411 421	413BL 423BL	0.04	SVC	IDG Oil Servicing - Left
01000000	450 FH	450 FH	24-011-00-02	24-011-00	0.25	411 421	413BL 423BL	0.04	SVC	IDG Oil Servicing - Right
01000000	250 FH	250 FH	24-012-00-01	24-012-00	0.25	212 411 421	415MB 425MB	0.04	SVC	IDG Oil Servicing -Left
01000000	250 FH	250 FH	24-012-00-02	24-012-00	0.25	212 411 421	415MB 425MB	0.04	SVC	IDG Oil Servicing -Right
01000000	500 FH	500 FH	24-030-00-01	24-030-00	0.25	212 411 421		0.00	SVC	VSCF Backup Generator Oil Servicing - Left
01000000	500 FH	500 FH	24-030-00-02	24-030-00	0.25	212 411 421		0.00	SVC	VSCF Backup Generator Oil Servicing - Right
01000000	200 FH	200 FH	24-080-00-01	24-080-00	0.20	212		0.00	GVI	IDG Oil Filter Bypass - Left
01000000	200 FH	200 FH	24-080-00-02	24-080-00	0.20	212		0.00	GVI	IDG Oil Filter Bypass - Right



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01000000	700 FH	700 FH	24-120-00-01	24-120-00	0.20	212		0.00	GVI	VSCF Backup Generator Differential Pressure Switch - Left
01000000	700 FH	700 FH	24-120-00-02	24-120-00	0.20	212		0.00	GVI	VSCF Backup Generator Differential Pressure Switch -Right
01000000	700 FH	700 FH	27-140-00-01	27-140-00	0.20	212		0.00	OPC	Primary Flight Computers (PFC)
01000000	500 FH	500 FH	27-160-00-01	27-160-00	0.20	212		0.00	OPC	Actuator Control Electronics (ACE)
01000000	24 HR	24 HR	31-100-00-01	31-100-00	0.40	211 212		0.00	OPC	Fire Warning System
01000000	48 HR	48 HR	32-010-00-01	32-010-00	0.20	711 731 741		0.00	SVC	Tires
01000000	72 HR	72 HR	32-190-00-01	32-190-00	0.10	711 731 741		0.00	GVI	Wheels
01000000	72 HR	72 HR	32-200-00-01	32-200-00	0.10	711 731 741		0.00	GVI	Tires
01000000	100 FC	100 FC	32-210-00-01	32-210-00	0.20	731 741		0.00	GVI	Brakes
01000000	130 FH	130 FH	72-375-01-01	72-375-01	0.25	411		0.00	DET	MCD Inspection
01000000	130 FH	130 FH	72-375-02-01	72-375-02	0.25	421		0.00	DET	MCD Inspection
01000001	125 FH	1000 FH	24-040-00-01	24-040-00	0.50	411 421	413AL 415AL 423AL 425AL	0.90	SVC	Change IDG Oil - Left
01000001	125 FH	1000 FH	24-040-00-02	24-040-00	0.50	411 421	413AL 415AL 423AL 425AL	0.90	SVC	Change IDG Oil - Right
01000001	125 FH	1000 FH	24-041-00-01	24-041-00	0.50	411 421	413AL 423AL	0.36	SVC	Change IDG OIL - Left
01000001	125 FH	1000 FH	24-041-00-02	24-041-00	0.50	411 421	413AL 423AL	0.36	SVC	Change IDG OIL - Right
01000001	125 FH	1000 FH	24-042-00-01	24-042-00	0.50	411 421	413AL 415AL 423AL 425AL	0.90	SVC	IDG Oil Change - Left
01000001	125 FH	1000 FH	24-042-00-02	24-042-00	0.50	411 421	413AL 415AL 423AL 425AL	0.90	SVC	IDG Oil Change - Right



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01000001	125 FH	1000 FH	24-070-00-01	24-070-00	0.50	411 421	413AL 415AL 423AL 425AL	0.90	DIS	IDG Oil Filter - Left
01000001	125 FH	1000 FH	24-070-00-02	24-070-00	0.50	411 421	413AL 415AL 423AL 425AL	0.90	DIS	IDG Oil Filter - Right
01000001	125 FH	1000 FH	24-071-00-01	24-071-00	0.50	411 421	413AL 423AL	0.36	DIS	IDG Oil Filter - Left
01000001	125 FH	1000 FH	24-071-00-02	24-071-00	0.50	411 421	413AL 423AL	0.36	DIS	IDG Oil Filter - Right
01000001	125 FH	1000 FH	24-072-00-01	24-072-00	0.50	411 421	413AL 415AL 423AL 425AL	0.90	DIS	IDG Oil Filter - Left
01000001	125 FH	1000 FH	24-072-00-02	24-072-00	0.50	411 421	413AL 415AL 423AL 425AL	0.90	DIS	IDG Oil Filter - Right
01000001	125 FH	1000 FH	24-075-00-01	24-075-00	0.05	411 421		0.00	VCK	IDG Oil Filter - Left
01000001	125 FH	1000 FH	24-075-00-02	24-075-00	0.05	411 421		0.00	VCK	IDG Oil Filter - Right
01001001	250 FC 125 DY	250 FC 125 DY	12-090-00-01	12-090-00	0.20	821		0.00	LUB	Forward Large Cargo Door Hinge Pins
01001001	250 FC 125 DY	250 FC 125 DY	12-092-00-01	12-092-00	0.20	824		0.00	LUB	Aft Large Cargo Door Hinge Pins
01001001	1000 FH	1000 FH	21-230-00-01	21-230-00	0.50	135 136 212	195EL 196ER	0.14	RST	Ozone Converters
01001001	1000 FH	1000 FH	26-035-00-01	26-035-00	0.34	223 224 243 244 253 254 263 264		0.00	OPC	OFAR SMOKE DETECTOR SYSTEM
01001001	1000 FH	1000 FH	26-068-00-01	26-068-00	0.06	215 221 241		0.00	OPC	Flight Crew Rest (FCR) Smoke Detection System
01001001	1000 FH	1000 FH	26-068-00-02	26-068-00	0.07	215 221 241		0.00	OPC	Flight Crew Rest (FCR) Smoke Detection System



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01001001	1500 FH	1500 FH	28-080-00-01	28-080-00	0.10	212		0.00	OPC	Fuel Quantity Processor Unit (FQPU)
01001001	1000 FH	1000 FH	32-020-00-01	32-020-00	0.10	144 211		0.00	FNC	Brake Accumulator
01001001	100 DY	100 DY	32-270-00-01	32-270-00	0.05	711		0.00	VCK	Nose Landing Gear Pressure Gage
01001001	1500 FH	1500 FH	33-060-00-01	33-060-00	0.10	200		0.00	OPC	Emergency Lights
01001001	1500 FH	1500 FH	33-070-00-01	33-070-00	0.50	200 711		0.00	OPC	Emergency Lights
01001001	80 DY	80 DY	33-105-00-01	33-105-00	0.01	223 224 243 244 253 254 263 264		0.00	OPC	Overhead Flight Attendant Rest (BCAG Door 3) Backup Lights System
01001001	80 DY	80 DY	33-105-00-02	33-105-00	0.01	223 224 243 244 253 254 263 264		0.00	OPC	Overhead Flight Attendant Rest (Door 5) Backup Lights System
01001001	80 DY	80 DY	33-105-00-03	33-105-00	0.01	223 224 243 244 253 254 263 264		0.00	OPC	Overhead Flight Attendant Rest (Door 4) Backup Lights System
01001001	80 DY	80 DY	33-105-00-04	33-105-00	0.01	223 224 243 244 253 254 263 264		0.00	OPC	Overhead Flight Attendant Rest (BAS Door 3) Backup Lights System



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01001001	80 DY	80 DY	33-105-00-05	33-105-00	0.01	223 224 243 244 253 254 263 264		0.00	OPC	Overhead Flight Crew Rest (BAS Style) Backup Lights System
01001001	80 DY	80 DY	33-105-00-06	33-105-00	0.01	223 224 243 244 253 254 263 264		0.00	OPC	Overhead Flight Crew Rest (BCAG Style) Backup Lights System
01001001	1400 FH	1400 FH	35-160-00-01	35-160-00	0.30	200		0.00	GVI	Portable Oxygen Equipment Pressure
01001001	1400 FH	1400 FH	35-161-00-01	35-161-00	0.10	200		0.00	GVI	Portable oxygen disposable type masks
01001001	500 FH	500 FH	71-802-01-01	71-802-01	2.00	411	413AL 414AR 415AL 415LB 415MB 415NB 416AR	0.96	GVI	Left Engine
01001001	500 FH	500 FH	71-814-02-01	71-814-02	2.00	421	423AL 424AR 425AL 425LB 425MB 425NB 426AR	0.96	GVI	Right Engine
01001001	600 FH	600 FH	72-220-01-01	72-220-01	2.00	411		0.00	DET	Low Pressure Compressor Section - Left
01001001	600 FH	600 FH	72-220-02-01	72-220-02	2.00	421		0.00	DET	Low Pressure Compressor Section - Right
01001001	1200 FH	1200 FH	72-235-01-01	72-235-01	0.10	412		0.00	GVI	Fan Case Section - Left
01001001	1200 FH	1200 FH	72-235-02-01	72-235-02	0.10	422		0.00	GVI	Fan Case Section - Right
01001001	600 FH	600 FH	72-270-01-01	72-270-01	0.50	411	413BL	0.02	DET	Lubrication and Scavage System - Left
01001001	600 FH	600 FH	72-270-02-01	72-270-02	0.50	421	423BL	0.02	DET	Lubrication and Scavage System - Right
01001001	600 FH	600 FH	80-205-01-01	80-205-01	1.00	411	413AL 414AR 415AL 415LB 415NB 416AR	0.94	SVC	Starter Oil



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01001001	600 FH	600 FH	80-205-02-01	80-205-02	1.00	421	423AL 424AR 425AL 425LB 425NB 426AR	0.94	SVC	Starter Oil
01001001	1000 FH	1000 FH	80-210-01-01	80-210-01	0.50	411	413AL 414AR 415AL 415LB 415NB 416AR	0.94	DET	Starter Chip Detector
01001001	1000 FH	1000 FH	80-210-02-01	80-210-02	0.50	421	423AL 424AR 425AL 425LB 425NB 426AR	0.94	DET	Starter Chip Detector
01001001	600 FH	600 FH	80-350-01-01	80-350-01	1.00	411	413AL	0.18	SVC	Starter Oil
01001001	600 FH	600 FH	80-350-02-01	80-350-02	1.00	421	423AL	0.18	SVC	Starter Oil
01001001	600 FH	600 FH	80-355-01-01	80-355-01	0.50	411	413AL	0.18	DET	Starter Chip Detector
01001001	600 FH	600 FH	80-355-02-01	80-355-02	0.50	421	423AL	0.18	DET	Starter Chip Detector
01001003	1500 FH	3000 FH	29-080-00-01	29-080-00	0.04	144 434 444	434DR 444DR	0.04	GVI	Center Hydraulic System ACMP Pressure and Case Drain Filter Module
01001003	1500 FH	3000 FH	29-080-00-02	29-080-00	0.03	144 434 444	434DR 444DR	0.04	GVI	Left Hydraulic System ACMP Pressure and Case Drain Filter Module
01001003	1500 FH	3000 FH	29-080-00-03	29-080-00	0.03	144 434 444	434DR 444DR	0.04	GVI	Right Hydraulic System ACMP Pressure and Case Drain Filter Module
01002002	800 FC 150 DY	800 FC 150 DY	12-070-00-01	12-070-00	1.03	113 114 711	713 714	0.08	LUB	Nose Landing Gear Steering and Actuating Components - Upper End
01002002	800 FC 150 DY	800 FC 150 DY	12-070-00-10	12-070-00	1.02	113 114 711	713 714	0.08	LUB	Nose Landing Gear Steering and Actuating Components - Lower End
01002002	800 FC 150 DY	800 FC 150 DY	12-074-00-01	12-074-00	0.60	113 114 711 713 714 715 716	713 714	0.08	LUB	Nose Landing Gear Doors and Actuating Mechanisms





## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01002002	800 FC 150 DY	800 FC 150 DY	12-080-00-01	12-080-00	0.66	143 144 731 741	551DB 651DB	0.04	LUB	Left Main Landing Gear and Actuating Mechanisms - Upper End
01002002	800 FC 150 DY	800 FC 150 DY	12-080-00-02	12-080-00	0.66	143 144 731 741	551DB 651DB	0.04	LUB	Right Main Landing Gear and Actuating Mechanisms - Upper End
01002002	800 FC 150 DY	800 FC 150 DY	12-080-00-03	12-080-00	0.66	143 144 731 741	551DB 651DB	0.04	LUB	Left Main Landing Gear and Actuating Mechanisms - Upper End (Applicable to 300ER, 200LR and 777F)
01002002	800 FC 150 DY	800 FC 150 DY	12-080-00-04	12-080-00	0.66	143 144 731 741	551DB 651DB	0.04	LUB	Right Main Landing Gear and Actuating Mechanisms - Upper End (Applicable to 300ER, 200LR and 777F)
01002002	800 FC 150 DY	800 FC 150 DY	12-080-00-05	12-080-00	0.66	143 144 731 741	551DB 651DB	0.04	LUB	Left Main Landing Gear and Actuating Mechanisms - Lower End (Applicable to 200LR and 777F)
01002002	800 FC 150 DY	800 FC 150 DY	12-080-00-06	12-080-00	0.66	143 144 731 741	551DB 651DB	0.04	LUB	Right Main Landing Gear and Actuating Mechanisms - Lower End (Applicable to 200LR and 777F)
01002002	800 FC 150 DY	800 FC 150 DY	12-080-00-11	12-080-00	0.66	143 144 731 741	551DB 651DB	0.04	LUB	Left Main Landing Gear and Actuating Mechanisms - Lower End
01002002	800 FC 150 DY	800 FC 150 DY	12-080-00-12	12-080-00	0.66	143 144 731 741	551DB 651DB	0.04	LUB	Right Main Landing Gear and Actuating Mechanisms - Lower End
01002002	800 FC 150 DY	800 FC 150 DY	12-080-00-13	12-080-00	0.66	143 144 731 741	551DB 651DB	0.04	LUB	Left Main Landing Gear and Actuating Mechanisms - Lower End (Applicable to 300ER)
01002002	800 FC 150 DY	800 FC 150 DY	12-080-00-14	12-080-00	0.66	143 144 731 741	551DB 651DB	0.04	LUB	Right Main Landing Gear and Actuating Mechanisms - Lower End (Applicable to 300ER)



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01002002	800 FC 150 DY	800 FC 150 DY	12-086-00-01	12-086-00	0.30	143 144 732 742	732 742	0.08	LUB	Left Main Landing Gear Doors and Actuating Mechanisms
01002002	800 FC 150 DY	800 FC 150 DY	12-086-00-02	12-086-00	0.30	143 144 732 742	732 742	0.08	LUB	Right Main Landing Gear Doors and Actuating Mechanisms
01002002	800 FC 150 DY	800 FC 150 DY	12-086-00-03	12-086-00	0.30	143 144 732 742	732 742	0.08	LUB	Left Main Landing Gear Doors and Actuating Mechanisms
01002002	800 FC 150 DY	800 FC 150 DY	12-086-00-04	12-086-00	0.30	143 144 732 742	732 742	0.08	LUB	Right Main Landing Gear Doors and Actuating Mechanisms
01002002	800 FC 150 DY	800 FC 150 DY	12-088-00-01	12-088-00	0.30	143 144 551 651	551DB 651DB	0.04	LUB	Left Main Landing Gear Support Beam
01002002	800 FC 150 DY	800 FC 150 DY	12-088-00-02	12-088-00	0.30	143 144 551 651	551DB 651DB	0.04	LUB	Right Main Landing Gear Support Beam
01002002	800 FC 150 DY	800 FC 150 DY	12-088-00-03	12-088-00	0.30	143 144 551 651	551DB 651DB	0.04	LUB	Left Main Landing Gear Support Beam
01002002	800 FC 150 DY	800 FC 150 DY	12-088-00-04	12-088-00	0.30	143 144 551 651	551DB 651DB	0.04	LUB	Right Main Landing Gear Support Beam
01002002	400 FC 187 DY	400 FC 187 DY	12-094-00-01	12-094-00	0.70	821	821	0.10	LUB	Forward Large Cargo Door, Door to Cutout Mating Surfaces
01002002	400 FC 187 DY	400 FC 187 DY	12-096-00-01	12-096-00	0.70	824	824	0.10	LUB	Aft Large Cargo Door, Door to Cutout Mating Surfaces
01002002	2000 FH	2000 FH	25-066-00-01	25-066-00	0.10	197 198	197DL 198DR	0.12	VCK	Off-Wing Inflation Cylinder Pressure



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01002002	2000 FH	2000 FH	25-230-00-01	25-230-00	0.50	831 832 834 835 841 842 844 845		0.00	VCK	Slide/Raft Inflation Cylinder Pressure
01002002	2000 FH	2000 FH	26-014-01-01	26-014-01	1.00	221 222		0.00	OPC	Passenger Cabin, High Wall Suites Smoke Detector System
01002002	2000 FH	2000 FH	26-030-00-01	26-030-00	0.10	200		0.00	OPC	Lavatory Smoke Detector Circuitry
01002002	2000 FH	2000 FH	26-030-00-02	26-030-00	0.10	200		0.00	OPC	Overhead Cross-Aisle Stowage Smoke Detector Circuitry
01002002	2000 FH	2000 FH	26-030-00-03	26-030-00	0.10	200		0.00	OPC	Lavatory Smoke Detector Circuitry
01002002	400 FC	400 FC	32-240-00-01	32-240-00	0.10	300		0.00	VCK	Tail Skid
01002002	200 DY	200 DY	33-100-00-01	33-100-00	0.50	151 152		0.00	OPC	Lower Lobe Attendant Rest (LLAR) Back-up Lighting System
01002002	2000 FH	2000 FH	35-040-00-01	35-040-00	0.25	211 212		0.00	OPC	Crew Oxygen Mask, Diluter Demand Regulator, and Microphone
01002002	400 FC 210 DY	400 FC 210 DY	52-032-40-01	52-032-40	0.50	836		0.00	LUB	Main Deck Cargo Door Latch Pins and Cam Latches
01002002	400 FC 150 DY	400 FC 150 DY	53-816-00-01	53-816-00	1.00	121 122	821	0.10	GVI	Forward Cargo Compartment
01002002	700 FC 175 DY	700 FC 175 DY	53-836-00-01	53-836-00	0.30	143	732	0.04	GVI	Left Main Landing Gear Wheel Well - From the Ground
01002002	700 FC 175 DY	700 FC 175 DY	53-840-00-01	53-840-00	0.30	144	742	0.04	GVI	Right Main Landing Gear Wheel Well - From the Ground
01002002	400 FC 375 DY	400 FC 375 DY	53-846-00-01	53-846-00	1.00	151 152	823	0.10	GVI	Aft Cargo Compartment
01002002	400 FC 375 DY	400 FC 375 DY	53-848-00-01	53-848-00	1.00	151 152	824	0.10	GVI	Aft Cargo Compartment
01002002	500 FC	500 FC	72-001-00-01	72-001-00	0.50	411 421		0.00	RST	Engine Gas Path
01002002	500 FC	500 FC	72-001-00-02	72-001-00	0.50	411 421		0.00	RST	Engine Gas Path



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01002002	2500 FH	2500 FH	72-020-01-01	72-020-01	0.10	411	413AL 414AR 415AL 415HB 415JB 415KB 416AR	0.96	DET	Check for Bearing and Gear Degradation - Left
01002002	2500 FH	2500 FH	72-020-01-02	72-020-01	0.10	411	413AL 414AR 415AL 415HB 415JB 415KB 416AR	0.96	DET	Check for Bearing and Gear Degradation - Left
01002002	2500 FH	2500 FH	72-020-02-01	72-020-02	0.10	421	423AL 424AR 425AL 425HB 425JB 425KB 426AR	0.96	DET	Check for Bearing and Gear Degradation - Right
01002002	2500 FH	2500 FH	72-020-02-02	72-020-02	0.10	421	423AL 424AR 425AL 425HB 425JB 425KB 426AR	0.96	DET	Check for Bearing and Gear Degradation - Right
01002002	2000 FH	2000 FH	80-005-01-01	80-005-01	0.25	411	413AL 414AR 415AL 415HB 415JB 415KB 416AR	0.96	DET	Inspect Starter Chip Detector - Left (for GE90-70/80/90 series engines only)
01002002	2000 FH	2000 FH	80-005-01-03	80-005-01	0.25	411	413AL 414AR 415AL 415HB 415JB 415KB 416AR	0.96	DET	Inspect Starter Chip Detector - Left (for GE90-100 series engines only)
01002002	2000 FH	2000 FH	80-005-02-02	80-005-02	0.25	421	423AL 424AR 425AL 425HB 425JB 425KB 426AR	0.96	DET	Inspect Starter Chip Detector - Right (for GE90-70/80/90 series engines only)
01002002	2000 FH	2000 FH	80-005-02-04	80-005-02	0.25	421	423AL 424AR 425AL 425HB 425JB 425KB 426AR	0.96	DET	Inspect Starter Chip Detector - Right (for GE90-100 series engines only)
01002004	2000 FH	4000 FH	29-060-00-01	29-060-00	0.05	434 444	434CR 444CR	0.04	GVI	Left Hydraulic System EDP Pressure and Case Drain Filter Module
01002004	2000 FH	4000 FH	29-060-00-02	29-060-00	0.05	434 444	434CR 444CR	0.04	GVI	Right Hydraulic System EDP Pressure and Case Drain Filter Module
01002005	2000 FH	5000 FH	29-100-00-01	29-100-00	0.10	197	197DL	0.05	GVI	ADP Pressure and Case Drain Filter Module



# 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01003003	3000 FH 400 DY	3000 FH 400 DY	12-006-00-01	12-006-00	0.30	311 312	311BL	0.04	LUB	HORIZONTAL STABILIZER BALLSCREW ACTUATOR
01003003	3000 FH	3000 FH	12-020-00-01	12-020-00	0.20	553 554 653 654	552BB 552FB 652BB 652FB	1.12	LUB	Left Wing Inboard Spoiler Hinges and PCU'S
01003003	3000 FH	3000 FH	12-020-00-02	12-020-00	0.20	553 554 653 654	552BB 552FB 652BB 652FB	1.12	LUB	Right Wing Inboard Spoiler Hinges and PCU'S
01003003	3000 FH	3000 FH	12-022-00-01	12-022-00	0.40	562 563 564 565 566 662 663 664 665 666		0.00	LUB	Left Wing Outboard Spoiler Hinges and PCU'S
01003003	3000 FH	3000 FH	12-022-00-02	12-022-00	0.40	562 563 564 565 566 662 663 664 665 666		0.00	LUB	Right Wing Outboard Spoiler Hinges and PCU'S
01003003	1000 FC 240 DY	1000 FC 240 DY	12-034-00-01	12-034-00	0.42	571 573 576 577 671 673 676 677		0.00	LUB	Left Wing Inboard Flap Transmission No. 4, BallscREW and Gimbal



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01003003	1000 FC 240 DY	1000 FC 240 DY	12-034-00-02	12-034-00	0.42	571 573 576 577 671 673 676 677		0.00	LUB	Right Wing Inboard Flap Transmission No. 5, Ballscrew and Gimbal
01003003	1000 FC 240 DY	1000 FC 240 DY	12-034-00-11	12-034-00	0.41	571 573 576 577 671 673 676 677		0.00	LUB	Left Wing Inboard Flap No. 3 Transmission, Ballscrew and Gimbal
01003003	1000 FC 240 DY	1000 FC 240 DY	12-034-00-12	12-034-00	0.41	571 573 576 577 671 673 676 677		0.00	LUB	Right Wing Inboard Flap No. 6 Transmission, Ballscrew and Gimbal
01003003	1000 FC 240 DY	1000 FC 240 DY	12-034-00-21	12-034-00	0.41	571 573 576 577 671 673 676 677		0.00	LUB	Left Wing Outboard Flap Transmissions No. 1 Ballscrew and Gimbal
01003003	1000 FC 240 DY	1000 FC 240 DY	12-034-00-22	12-034-00	0.41	571 573 576 577 671 673 676 677		0.00	LUB	Right Wing Outboard Flap Transmission No. 8, Ballscrew and Gimbal



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01003003	1000 FC 240 DY	1000 FC 240 DY	12-034-00-31	12-034-00	0.41	571 573 576 577 671 673 676 677		0.00	LUB	Left Wing Outboard Flap Transmission No. 2, Ballscrew and Gimbal
01003003	1000 FC 240 DY	1000 FC 240 DY	12-034-00-32	12-034-00	0.41	571 573 576 577 671 673 676 677		0.00	LUB	Right Wing Outboard Flap Transmission No. 7, Ballscrew and Gimbal
01003003	1000 FC 240 DY	1000 FC 240 DY	12-050-00-01	12-050-00	0.34	567 571 572 573 576 577 578 667 671 672 673 676 677 678	573AB 573BB 573CL 573CR 576BB 577BB 673AB 673BB 673CL 673CR 676BB 677BB	2.34	LUB	Left Wing Inboard Flap, Inboard Flap Support No. 4 Support Mechanisms
01003003	1000 FC 240 DY	1000 FC 240 DY	12-050-00-02	12-050-00	0.33	567 571 572 573 576 577 578 667 671 672 673 676 677 678	573AB 573BB 573CL 573CR 576BB 577BB 673AB 673BB 673CL 673CR 676BB 677BB	2.34	LUB	Right Wing Inboard Flap, Inboard Flap Support No. 5 Support Mechanisms



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01003003	1000 FC 240 DY	1000 FC 240 DY	12-050-00-03	12-050-00	0.33	567 571 572 573 576 577 578 667 671 672 673 676 677 678	573AB 573BB 573CL 573CR 576BB 577BB 673AB 673BB 673CL 673CR 676BB 677BB	2.34	LUB	Left Wing Inboard Flap, Outboard Flap Support No. 3 Mechanisms
01003003	1000 FC 240 DY	1000 FC 240 DY	12-050-00-04	12-050-00	0.33	567 571 572 573 576 577 578 667 671 672 673 676 677 678	573AB 573BB 573CL 573CR 576BB 577BB 673AB 673BB 673CL 673CR 676BB 677BB	2.34	LUB	Right Wing Inboard Flap, Outboard Flap Support No. 6 Mechanisms
01003003	1000 FC 240 DY	1000 FC 240 DY	12-050-00-11	12-050-00	0.33	567 571 572 573 576 577 578 667 671 672 673 676 677 678	573AB 573BB 573CL 573CR 576BB 577BB 673AB 673BB 673CL 673CR 676BB 677BB	2.34	LUB	Left Wing Inboard Aft Flap Track Rollers





## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01003003	1000 FC 240 DY	1000 FC 240 DY	12-050-00-12	12-050-00	0.33	567 571 572 573 576 577 578 667 671 672 673 676 677 678	573AB 573BB 573CL 573CR 576BB 577BB 673AB 673BB 673CL 673CR 676BB 677BB	2.34	LUB	Right Wing Inboard Aft Flap Track Rollers
01003003	1000 FC 240 DY	1000 FC 240 DY	12-050-00-21	12-050-00	0.33	567 571 572 573 576 577 578 667 671 672 673 676 677 678	573AB 573BB 573CL 573CR 576BB 577BB 673AB 673BB 673CL 673CR 676BB 677BB	2.34	LUB	Left Wing Outboard Flap, Outboard Support No. 1 Mechanisms
01003003	1000 FC 240 DY	1000 FC 240 DY	12-050-00-22	12-050-00	0.34	567 571 572 573 576 577 578 667 671 672 673 676 677 678	573AB 573BB 573CL 573CR 576BB 577BB 673AB 673BB 673CL 673CR 676BB 677BB	2.34	LUB	Right Wing Outboard Flap, Outboard Support No. 8 Mechanisms



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01003003	1000 FC 240 DY	1000 FC 240 DY	12-050-00-31	12-050-00	0.34	567 571 572 573 576 577 578 667 671 672 673 676 677 678	573AB 573BB 573CL 573CR 576BB 577BB 673AB 673BB 673CL 673CR 676BB 677BB	2.34	LUB	Left Wing Outboard Flap, Inboard Support No. 2 Support Mechanisms
01003003	1000 FC 240 DY	1000 FC 240 DY	12-050-00-32	12-050-00	0.34	567 571 572 573 576 577 578 667 671 672 673 676 677 678	573AB 573BB 573CL 573CR 576BB 577BB 673AB 673BB 673CL 673CR 676BB 677BB	2.34	LUB	Right Wing Outboard Flap, Inboard Support No. 7 Support Mechanisms
01003003	1000 FC 240 DY	1000 FC 240 DY	12-050-00-41	12-050-00	0.34	567 571 572 573 576 577 578 667 671 672 673 676 677 678	573AB 573BB 573CL 573CR 576BB 577BB 673AB 673BB 673CL 673CR 676BB 677BB	2.34	LUB	Left Wing Outbd Flap, Inboard Auxiliary Support Tracks and Carriage



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01003003	1000 FC 240 DY	1000 FC 240 DY	12-050-00-42	12-050-00	0.34	567 571 572 573 576 577 578 667 671 672 673 676 677 678	573AB 573BB 573CL 573CR 576BB 577BB 673AB 673BB 673CL 673CR 676BB 677BB	2.34	LUB	Right Wing Outbd Flap, Inboard Auxiliary Support Tracks and Carriages
01003003	1000 FC 240 DY	1000 FC 240 DY	12-050-00-51	12-050-00	0.34	567 571 572 573 576 577 578 667 671 672 673 676 677 678	573AB 573BB 573CL 573CR 576BB 577BB 673AB 673BB 673CL 673CR 676BB 677BB	2.34	LUB	Left Wing Outbd Flap, Outboard Auxiliary Support Tracks and Carriages
01003003	1000 FC 240 DY	1000 FC 240 DY	12-050-00-52	12-050-00	0.34	567 571 572 573 576 577 578 667 671 672 673 676 677 678	573AB 573BB 573CL 573CR 576BB 577BB 673AB 673BB 673CL 673CR 676BB 677BB	2.34	LUB	Right Wing Outbd Flap, Outboard Auxiliary Support Tracks and Carriages



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01003003	3000 FH	3000 FH	24-050-00-01	24-050-00	0.50	411 421	413AL 414AR 415AL 423AL 424AR 425AL	1.26	SVC	VSCF Backup Generator Oil and Filter Change
01003003	3000 FH	3000 FH	24-050-00-02	24-050-00	0.50	411 421	413AL 414AR 415AL 423AL 424AR 425AL	1.26	SVC	VSCF Backup Generator Oil and Filter Change
01003003	3000 FH	3000 FH	24-050-00-03	24-050-00	0.50	411 421	413AL 414AR 415AL 423AL 424AR 425AL	1.26	SVC	VSCF Backup Generator Oil and Filter Change - Left
01003003	3000 FH	3000 FH	24-050-00-04	24-050-00	0.50	411 421	413AL 414AR 415AL 423AL 424AR 425AL	1.26	SVC	VSCF Backup Generator Oil and Filter Change - Right
01003003	3000 FH	3000 FH	24-050-00-05	24-050-00	0.50	411 421	413AL 414AR 415AL 423AL 424AR 425AL	1.26	SVC	VSCF Backup Generator Oil Change - Left
01003003	3000 FH	3000 FH	24-050-00-06	24-050-00	0.50	411 421	413AL 414AR 415AL 423AL 424AR 425AL	1.26	SVC	VSCF Backup Generator Oil Change - Right
01003003	3000 FH	3000 FH	24-090-00-01	24-090-00	0.50	411 421	413AL 415AL 423AL 425AL	0.90	FNC	IDG QAD Coupler - Left
01003003	3000 FH	3000 FH	24-090-00-02	24-090-00	0.50	411 421	413AL 415AL 423AL 425AL	0.90	FNC	IDG QAD Coupler - Right
01003003	3000 FH	3000 FH	24-091-00-01	24-091-00	0.50	411 421	413AL 423AL	0.36	FNC	IDG QAD Coupler - Left
01003003	3000 FH	3000 FH	24-091-00-02	24-091-00	0.50	411 421	413AL 423AL	0.36	FNC	IDG QAD Coupler - Right
01003003	3000 FH	3000 FH	24-092-00-01	24-092-00	0.50	411 421	413AL 415AL 423AL 425AL	0.90	FNC	IDG QAD Coupler - Left
01003003	3000 FH	3000 FH	24-092-00-02	24-092-00	0.50	411 421	413AL 415AL 423AL 425AL	0.90	FNC	IDG QAD Coupler - Right
01003003	250 DY	250 DY	32-011-00-01	32-011-00	0.30	212 711 731 741		0.00	FNC	Tire Pressure Indication System (TPIS)



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01003003	250 DY	250 DY	32-012-00-01	32-012-00	0.30	212 711 731 741		0.00	FNC	Tire and Brake Monitoring System (TBMS)
01003003	700 FC 375 DY	700 FC 375 DY	52-520-01-01	52-520-01	0.10	831	831	0.04	GVI	Left #1 Entry Door
01003003	700 FC 375 DY	700 FC 375 DY	52-521-01-01	52-521-01	0.10	832	832	0.04	GVI	Left #2 Passenger Entry Door
01003003	700 FC 375 DY	700 FC 375 DY	52-522-01-01	52-522-01	0.10	833	833	0.04	GVI	Left #3 Overwing Door
01003003	700 FC 375 DY	700 FC 375 DY	52-523-01-01	52-523-01	0.10	834	834	0.04	GVI	Left #3 Passenger Entry Door
01003003	700 FC 375 DY	700 FC 375 DY	52-524-01-01	52-524-01	0.10	834	834	0.04	GVI	Left #4 Passenger Entry Door
01003003	700 FC 375 DY	700 FC 375 DY	52-525-01-01	52-525-01	0.10	835	835	0.04	GVI	Left #4 Passenger Entry Door
01003003	700 FC 375 DY	700 FC 375 DY	52-526-01-01	52-526-01	0.10	835	835	0.04	GVI	Left #5 Passenger Entry Door
01003003	700 FC 375 DY	700 FC 375 DY	52-535-02-01	52-535-02	0.10	841	841	0.04	GVI	Right #1 Entry Door
01003003	700 FC 375 DY	700 FC 375 DY	52-536-02-01	52-536-02	0.10	842	842	0.04	GVI	Right #2 Passenger Entry Door
01003003	700 FC 375 DY	700 FC 375 DY	52-537-02-01	52-537-02	0.10	843	843	0.04	GVI	Right #3 Overwing Door
01003003	700 FC 375 DY	700 FC 375 DY	52-538-02-01	52-538-02	0.10	844	844	0.04	GVI	Right #3 Passenger Entry Door
01003003	700 FC 375 DY	700 FC 375 DY	52-539-02-01	52-539-02	0.10	844	844	0.04	GVI	Right #4 Passenger Entry Door
01003003	700 FC 375 DY	700 FC 375 DY	52-540-02-01	52-540-02	0.10	845	845	0.04	GVI	Right #4 Passenger Entry Door
01003003	700 FC 375 DY	700 FC 375 DY	52-541-02-01	52-541-02	0.10	845	845	0.04	GVI	Right #5 Passenger Entry Door
01003003	1000 FC 240 DY	1000 FC 240 DY	53-513-00-01	53-513-00	0.20	124	821	0.10	GVI	Area Below Forward Cargo Compartment



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01003003	1000 FC 240 DY	1000 FC 240 DY	53-521-00-01	53-521-00	0.40	152	823	0.10	GVI	Aft Cargo Compartment
01003003	1000 FC 240 DY	1000 FC 240 DY	53-527-00-01	53-527-00	0.10	154	823	0.10	GVI	Area Below Aft Cargo Compartment
01003003	1000 FC 240 DY	1000 FC 240 DY	53-528-00-01	53-528-00	0.20	154	824	0.10	GVI	Area Below Aft Cargo Compartment
01003003	1000 FC 250 DY	1000 FC 250 DY	53-850-00-01	53-850-00	0.50	151 152	252XF	0.02	GVI	Aft Cargo Compartment Lower Lobe Attendant Rest
01003003	1000 FC 250 DY	1000 FC 250 DY	53-868-00-01	53-868-00	0.75	161 162	825	0.09	GVI	Bulk Cargo Compartment
01003003	3000 FH	3000 FH	71-830-01-01	71-830-01	0.20	410		0.00	GVI	Left Powerplant - From the Ground
01003003	3000 FH	3000 FH	71-832-01-01	71-832-01	0.50	410		0.00	GVI	Left Powerplant
01003003	3000 FH	3000 FH	71-836-01-01	71-836-01	0.25	412	413AL 414AR	0.36	GVI	Inlet Cowl - Left Engine
01003003	3000 FH	3000 FH	71-838-01-01	71-838-01	0.50	413 414	413AL 414AR	0.36	GVI	Left Engine Fan Cowls
01003003	3000 FH	3000 FH	71-840-01-01	71-840-01	0.50	415 416 417 418	413AL 414AR 415AL 415HB 415JB 415KB 416AR	0.96	GVI	Left Engine Thrust Reversers
01003003	3000 FH	3000 FH	71-844-02-01	71-844-02	0.20	420		0.00	GVI	Right Powerplant - From the Ground
01003003	3000 FH	3000 FH	71-846-02-01	71-846-02	0.50	420		0.00	GVI	Right Powerplant
01003003	3000 FH	3000 FH	71-850-02-01	71-850-02	0.25	422	423AL 424AR	0.36	GVI	Inlet Cowl - Right Engine
01003003	3000 FH	3000 FH	71-852-02-01	71-852-02	0.50	423 424	423AL 424AR	0.36	GVI	Right Engine Fan Cowls
01003003	3000 FH	3000 FH	71-854-02-01	71-854-02	0.50	425 426 427 428	423AL 424AR 425AL 425HB 425JB 425KB 426AR	0.96	GVI	Right Engine Thrust Reversers
01003003	3000 FH	3000 FH	71-860-01-01	71-860-01	0.20	410		0.00	GVI	Left Powerplant - From the Ground
01003003	3000 FH	3000 FH	71-874-02-01	71-874-02	0.20	420		0.00	GVI	Right Powerplant - From the Ground
01003003	3700 FH	3700 FH	73-011-00-01	73-011-00		411 421		0.00	RST	Engine Fuel



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01003003	3700 FH	3700 FH	73-011-00-02	73-011-00		411 421		0.00	RST	Engine Fuel
01003003	3700 FH	3700 FH	73-011-00-03	73-011-00		411 421		0.00	RST	Engine Fuel
01003003	3700 FH	3700 FH	73-011-00-04	73-011-00		411 421		0.00	RST	Engine Fuel
01003003	3000 FH	3000 FH	77-005-01-01	77-005-01	0.10	212		0.00	DET	Inspect for EGT System Degradation - Left (for GE90-70/80/90 series engines only)
01003003	3000 FH	3000 FH	77-005-01-03	77-005-01	0.10	212		0.00	DET	Inspect for EGT System Degradation - Left (for GE90-100 series engines only)
01003003	3000 FH	3000 FH	77-005-02-02	77-005-02	0.10	212		0.00	DET	Inspect for EGT System Degradation - Right (for GE90-70/80/90 series engines only)
01003003	3000 FH	3000 FH	77-005-02-04	77-005-02	0.10	212		0.00	DET	Inspect for EGT System Degradation - Right (for GE90-100 series engines only)
01003003	1500 FH	1500 FH	79-390-01-01	79-390-01	1.00	411	413AL 414AR	0.36	DIS	Replace Scavenge Oil Filter
01003003	1500 FH	1500 FH	79-390-02-01	79-390-02	1.00	421	423AL 424AR	0.36	DIS	Replace Scavenge Oil Filter
01003006	3000 FH	6000 FH	29-050-00-01	29-050-00	0.04	144 434 444	434DR 444DR	0.04	GVI	Center Hydraulic System Return Filter Module
01003006	3000 FH	6000 FH	29-050-00-02	29-050-00	0.03	144 434 444	434DR 444DR	0.04	GVI	Left Hydraulic System Return Filter Module.
01003006	3000 FH	6000 FH	29-050-00-03	29-050-00	0.03	144 434 444	434DR 444DR	0.04	GVI	Right Hydraulic System Return Filter Module
01004004	4000 FH	4000 FH	21-050-00-01	21-050-00	0.50	121 212		0.00	RST	Equipment Cooling Air Filter
01004004	4000 FH	4000 FH	23-070-00-01	23-070-00	1.00	211 212		0.00	OPC	Voice Recorder System
01004004	800 FC	800 FC	32-260-00-01	32-260-00	0.30	731 741		0.00	FNC	Main Landing Gear Shock Strut Dimension "A"
01004004	4000 FH	4000 FH	33-010-00-01	33-010-00	0.25	211 212		0.00	OPC	Flight Compartment Panel Flood Lights



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01004004	4000 FH	4000 FH	33-020-00-01	33-020-00	0.25	211 212	117AL	0.00	OPC	Integral Panel Lights
01004004	4000 FH	4000 FH	33-030-00-01	33-030-00	0.25	211 212		0.00	OPC	Integral Panel Lights
01004004	4000 FH	4000 FH	33-040-00-01	33-040-00	0.10	211 212		0.00	OPC	Indicator Lights DIM/BRT Relays
01004004	4000 FH	4000 FH	35-020-00-01	35-020-00	0.25	115 211 212		0.02	GVI	Crew Oxygen System
01004004	300 DY	300 DY	52-090-00-01	52-090-00	0.06	831 832 834 835 841 842 844 845		0.00	OPC	Passenger Entry Door EPAS Battery
01004004	300 DY	300 DY	52-090-00-02	52-090-00	0.07	831 832 834 835 841 842 844 845		0.00	OPC	Passenger Entry Door EPAS Battery
01004004	300 DY	300 DY	52-090-00-03	52-090-00	0.07	831 832 834 835 841 842 844 845		0.00	OPC	Passenger Entry Door EPAS Battery
01004004	300 DY	300 DY	52-090-01-01	52-090-01	0.10	831 832 834 835 841 842 844 845		0.00	OPC	Passenger Entry Door EPAS Battery





## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01004004	300 DY	300 DY	52-090-01-02	52-090-01	0.10	831 832 834 835 841 842 844 845		0.00	OPC	Passenger Entry Door EPAS Battery
01004004	300 DY	300 DY	52-090-02-01	52-090-02	0.05	831 841		0.00	OPC	Passenger Entry Door EPAS Battery
01004004	300 DY	300 DY	52-095-00-01	52-095-00	0.10	833 843		0.00	OPC	No. 3 Over-wing Door EPAS/Backup Battery
01004004	3000 FH	3000 FH	71-800-01-01	71-800-01	0.50	410		0.00	GVI	Left Powerplant
01004004	3000 FH	3000 FH	71-804-01-01	71-804-01	0.25	412	413AL 414AR	0.36	GVI	Inlet Cowl - Left Engine
01004004	3000 FH	3000 FH	71-806-01-01	71-806-01	0.50	413 414	413AL 414AR	0.36	GVI	Left Engine Fan Cows
01004004	3000 FH	3000 FH	71-808-01-01	71-808-01	0.50	415 416 417 418	413AL 414AR 415AL 415LB 415MB 415NB 416AR	0.96	GVI	Left Engine Thrust Reversers
01004004	3000 FH	3000 FH	71-812-02-01	71-812-02	0.50	420		0.00	GVI	Right Powerplant
01004004	3000 FH	3000 FH	71-816-02-01	71-816-02	0.25	422	423AL 424AR	0.36	GVI	Inlet Cowl - Right Engine
01004004	3000 FH	3000 FH	71-818-02-01	71-818-02	0.50	423 424	423AL 424AR	0.36	GVI	Right Engine Fan Cows
01004004	3000 FH	3000 FH	71-820-02-01	71-820-02	0.50	425 426 427 428	423AL 424AR 425AL 425LB 425MB 425NB 426AR	0.96	GVI	Right Engine Thrust Reversers
01004004	3000 FH	3000 FH	71-866-01-01	71-866-01	0.25	412	413AL 414AR	0.36	GVI	Inlet Cowl - Left Engine
01004004	3000 FH	3000 FH	71-868-01-01	71-868-01	0.50	413 414	413AL 414AR	0.36	GVI	Left Engine Fan Cows
01004004	3000 FH	3000 FH	71-870-01-01	71-870-01	0.50	415 416 417 418	413AL 414AR 415AL 415HB 415JB 416AR	0.94	GVI	Left Engine Thrust Reversers
01004004	3000 FH	3000 FH	71-880-02-01	71-880-02	0.25	422	423AL 424AR	0.36	GVI	Inlet Cowl - Right Engine



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01004004	3000 FH	3000 FH	71-882-02-01	71-882-02	0.50	423 424	423AL 424AR	0.36	GVI	Right Engine Fan Cowls
01004004	3000 FH	3000 FH	71-884-02-01	71-884-02	0.50	425 426 427 428	423AL 424AR 425AL 425HB 425JB 426AR	0.94	GVI	Right Engine Thrust Reversers
01004004	2000 FH 600 FC	2000 FH 600 FC	72-206-01-01	72-206-01	3.00	411	413AL 414AR 415AL 415LB 415NB 416AR	0.94	DET	Turbine Section - Left
01004004	2000 FH 600 FC	2000 FH 600 FC	72-206-02-01	72-206-02	3.00	421	423AL 424AR 425AL 425LB 425NB 426AR	0.94	DET	Turbine Section - Right
01004004	2000 FH 600 FC	2000 FH 600 FC	72-207-01-01	72-207-01	3.00	411	413AL 414AR 415AL 415LB 415NB 416AR	0.94	DET	Turbine Section - Left
01004004	2000 FH 600 FC	2000 FH 600 FC	72-207-02-01	72-207-02	3.00	421	423AL 424AR 425AL 425LB 425NB 426AR	0.94	DET	Turbine Section - Right
01004004	2000 FH 600 FC	2000 FH 600 FC	72-211-01-01	72-211-01	1.00	411	413AL 414AR 415AL 415LB 415NB 416AR	0.94	DET	Diffuser Case Section - Left
01004004	2000 FH 600 FC	2000 FH 600 FC	72-211-02-01	72-211-02	1.00	421	423AL 424AR 425AL 425LB 425NB 426AR	0.94	DET	Diffuser Case Section - Right
01004004	2000 FH 600 FC	2000 FH 600 FC	72-212-01-01	72-212-01	1.00	411	413AL 414AR 415AL 415LB 415NB 416AR	0.94	DET	Diffuser Case Section - Left
01004004	2000 FH 600 FC	2000 FH 600 FC	72-212-02-01	72-212-02	1.00	421	423AL 424AR 425AL 425LB 425NB 426AR	0.94	DET	Diffuser Case Section - Right
01004004	4000 FH	4000 FH	73-055-01-01	73-055-01	0.10	212		0.00	DET	Inspect Detailed Fuel Filter (for GE90-70/80/90 series engines only)
01004004	4000 FH	4000 FH	73-055-01-03	73-055-01	0.10	212		0.00	DET	Inspect Detailed Fuel Filter (for GE90-100 series engines only)
01004004	4000 FH	4000 FH	73-055-02-02	73-055-02	0.10	212		0.00	DET	Inspect Detailed Fuel Filter (for GE90-70/80/90 series engines only)



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01004004	4000 FH	4000 FH	73-055-02-04	73-055-02	0.10	212		0.00	DET	Inspect Detailed Fuel Filter (for GE90-100 series engines only)
01005002	1000 FC	500 FC	72-060-01-01	72-060-01	1.50	411	413AL 414AR 415AL 415HB 415JB 415KB 416AR	0.96	SDI	Borescope Inspection of the Combustor - Left (for GE90-70/80/90 series engines only)
01005002	1000 FC	500 FC	72-060-01-03	72-060-01	1.50	411	413AL 414AR 415AL 415HB 415JB 415KB 416AR	0.96	SDI	Borescope Inspection of the Combustor - Left (for GE90-100 series engines only)
01005002	1000 FC	500 FC	72-060-02-02	72-060-02	1.50	421	423AL 424AR 425AL 425HB 425JB 425KB 426AR	0.96	SDI	Borescope Inspection of the Combustor - Right (for GE90-70/80/90 series engines only)
01005002	1000 FC	500 FC	72-060-02-04	72-060-02	1.50	421	423AL 424AR 425AL 425HB 425JB 425KB 426AR	0.96	SDI	Borescope Inspection of the Combustor - Right (for GE90-100 series engines only)
01005002	1000 FC	500 FC	72-065-01-01	72-065-01	1.50	411	413AL 414AR 415AL 415HB 415JB 415KB 416AR	0.96	SDI	Borescope Inspection of the 1 St. & 2 ND. Stage Turbine Blades - Left (for GE90-70/80/90 series engines only)
01005002	1000 FC	500 FC	72-065-01-03	72-065-01	1.50	411	413AL 414AR 415AL 415HB 415JB 415KB 416AR	0.96	SDI	Borescope Inspection of the 1 St. & 2 ND. Stage Turbine Blades - Left (for GE90-100 series engines only)
01005002	1000 FC	500 FC	72-065-02-02	72-065-02	1.50	421	423AL 424AR 425AL 425HB 425JB 425KB 426AR	0.96	SDI	Borescope Inspection of the 1 St. & 2 ND. Stage Turbine Blades - Right (for GE90-70/80/90 series engines only)
01005002	1000 FC	500 FC	72-065-02-04	72-065-02	1.50	421	423AL 424AR 425AL 425HB 425JB 425KB 426AR	0.96	SDI	Borescope Inspection of the 1 St. & 2 ND. Stage Turbine Blades - Right (for GE90-100 series engines only)
01005002	1000 FC	500 FC	72-345-01-01	72-345-01	2.00	411		0.00	SDI	Fan Blade Ultrasonic Test
01005002	1000 FC	500 FC	72-345-02-01	72-345-02	2.00	421		0.00	SDI	Fan Blade Ultrasonic Test
01005005	6000 FH 400 DY	6000 FH 400 DY	27-450-00-01	27-450-00	0.20	311 312	311BL	0.04	DET	Stabilizer Trim Ballscrew, Ballnut, and Ballnut Return Tubes



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01005005	375 DY	375 DY	28-022-65-01	28-022-65	0.20	117 118 122 531 533 551 631 633 651	521DB 552HB 652HB	1.82	OPC	AC Fuel Pump Ground Fault Interrupter (GFI) and Ground Fault Protector (GFP)
01005005	375 DY	375 DY	28-022-65-02	28-022-65	0.20	117 118 122 531 533 551 631 633 651	521DB 552HB 652HB	1.82	OPC	AC Fuel Pump Ground Fault Interrupter (GFI) and Ground Fault Protector (GFP)
01005005	375 DY	375 DY	28-022-65-03	28-022-65	0.20	117 118 122 531 533 551 631 633 651	521DB 552HB 652HB	1.82	OPC	AC Fuel Pump Ground Fault Interrupter (GFI) and Ground Fault Protector (GFP)
01005005	375 DY	375 DY	28-022-65-04	28-022-65	0.20	117 118 122 531 533 551 631 633 651	521DB 552HB 652HB	1.82	OPC	AC Fuel Pump Ground Fault Interrupter (GFI) and Ground Fault Protector (GFP)



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01005005	375 DY	375 DY	28-022-65-05	28-022-65	0.20	117 118 122 531 533 551 631 633 651	521DB 552HB 652HB	1.82	OPC	AC Fuel Pump Ground Fault Interrupter (GFI) and Ground Fault Protector (GFP)
01005005	375 DY	375 DY	28-022-65-06	28-022-65		117 118 122 531 533 551 631 633 651	521DB 552HB 652HB	1.82	OPC	AC Fuel Pump Ground Fault Interrupter (GFI) and Ground Fault Protector (GFP)
01005005	375 DY	375 DY	28-112-00-01	28-112-00	0.50	122		0.00	OPC	Auxiliary Fuel Tank AC Fuel Pump Uncommanded On/Auto Shutoff
01005005	1400 FC 375 DY	1400 FC 375 DY	32-800-00-01	32-800-00	0.30	711 713 714 715 716	713 714 715 716	0.16	GVI	Nose Landing Gear and Landing Gear Doors - From the Ground
01005005	1400 FC 375 DY	1400 FC 375 DY	32-804-01-01	32-804-01	0.50	731 732 733 734 735	732 733 734 735	0.65	GVI	Left Main Landing Gear and Landing Gear Doors - From the Ground
01005005	1400 FC 375 DY	1400 FC 375 DY	32-808-02-01	32-808-02	0.50	741 742 743 744 745	742 743 744 745	0.65	GVI	Right Main Landing Gear and Landing Gear Doors - From the Ground
01005005	400 DY	400 DY	33-080-00-01	33-080-00	0.75	200		0.00	FNC	Emergency Lights Battery Packs
01005005	375 DY	375 DY	35-162-00-01	35-162-00	0.30	200		0.00	DET	Portable oxygen non-disposable type masks
01005005	5000 FH	5000 FH	38-080-00-01	38-080-00	0.05	122 200	821	0.10	OPC	Waste Tank Quantity Indication System



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01005005	5000 FH	5000 FH	38-080-00-02	38-080-00	0.05	122 200	821	0.10	OPC	Waste Tank Quantity Indication
01005005	375 DY	375 DY	52-110-00-01	52-110-00	0.20	831 832 834 835 841 842 844 845		0.00	VCK	Passenger Entry Door EPAS Pressure Gauge
01005005	375 DY	375 DY	52-110-01-01	52-110-01	0.20	831 832 834 835 841 842 844 845		0.00	VCK	Passenger Entry Door EPAS Pressure Gauge
01005005	375 DY	375 DY	52-110-02-01	52-110-02	0.05	831 841		0.00	VCK	Passenger Entry Door EPAS Pressure Gauge
01005005	375 DY	375 DY	52-115-00-01	52-115-00	0.05	833 843		0.00	VCK	No. 3 Over-Wing Door EPAS Pressure Gauge
01005005	1000 FC 375 DY	1000 FC 375 DY	52-501-00-01	52-501-00	0.10	821	821	0.10	GVI	Forward Large Cargo Door
01005005	1000 FC 375 DY	1000 FC 375 DY	52-506-00-01	52-506-00	0.10	823	823	0.10	GVI	Aft Small Cargo Door
01005005	1000 FC 375 DY	1000 FC 375 DY	52-507-00-01	52-507-00	0.10	825	825	0.09	GVI	Bulk Cargo Door
01005005	1000 FC 375 DY	1000 FC 375 DY	52-509-00-01	52-509-00	0.10	824	824	0.10	GVI	Aft Large Cargo Door
01005005	375 DY 1000 FC	375 DY 1000 FC	52-549-00-01	52-549-00	0.20	836	836	0.20	GVI	Main Deck Cargo Door
01005005	1000 FC 375 DY	1000 FC 375 DY	53-587-00-01	53-587-00	0.30	151 251	836	0.20	GVI	Main Deck Cargo Compartment
01005005	1400 FC 375 DY	1400 FC 375 DY	53-808-00-01	53-808-00	0.20	113 114	713 714	0.08	GVI	Nose Gear Wheel Well - from the ground
01005005	5000 FH	5000 FH	72-377-01-01	72-377-01	0.25	411	414CR	0.02	FNC	Functionally Check Master Electric Chip Detector (active DMS) Left Engine



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01005005	5000 FH	5000 FH	72-377-02-01	72-377-02	0.25	421	424CR	0.02	FNC	Functionally Check Master Electric Chip Detector (active DMS) Right Engine
01005005	5000 FH	5000 FH	78-025-01-03	78-025-01	1.00	411	413AL 414AR 434CL	0.38	OPC	Thrust Reverser Sync Lock- Left (for GE90-100 series engines only)
01005005	5000 FH	5000 FH	78-025-02-04	78-025-02	1.00	421	423AL 424AR 444CL	0.38	OPC	Thrust Reverser Sync Lock - Right (for GE90-100 series engines only)
01005006	6000 FH 560 DY	6000 FH 560 DY	12-002-01-01	12-002-01	0.25	335 345	335EB 335EXB 335FB 345EB 345EXB 345FB	2.45	LUB	Left Elevator Power Control Actuators and Elevator Hinges
01005006	6000 FH 560 DY	6000 FH 560 DY	12-002-01-02	12-002-01	0.25	335 345	335EB 335EXB 335FB 345EB 345EXB 345FB	2.45	LUB	Right Elevator Power Control Actuators and Elevator Hinges
01005006	6000 FH 560 DY	6000 FH 560 DY	12-004-00-01	12-004-00	1.10	324 325 326	324DL 324DXL 324EL 324FL 324NL 324PLX	2.36	LUB	RUDDER PCU'S, RUDDER AND TAB HINGES
01005006	2400 FC 470 DY	2400 FC 470 DY	12-010-00-01	12-010-00	0.10	512 612		0.00	LUB	Left Wing Inboard Slat Main Tracks
01005006	2400 FC 470 DY	2400 FC 470 DY	12-010-00-02	12-010-00	0.10	512 612		0.00	LUB	Right Wing Inboard Slat Main Tracks
01005006	2400 FC 470 DY	2400 FC 470 DY	12-012-00-01	12-012-00	0.23	522 523 524 525 526 527 622 623 624 625 626 627		0.00	LUB	Left Wing Outboard Slats Main Tracks



# 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01005006	2400 FC 470 DY	2400 FC 470 DY	12-012-00-02	12-012-00	0.23	522 523 524 525 526 527 622 623 624 625 626 627		0.00	LUB	Right Wing Outboard Slats Main Tracks
01005006	6000 FH 560 DY	6000 FH 560 DY	12-024-00-01	12-024-00	0.50	561 568 661 668	561KAB 561MB 561NB 561PB 561QAB 561QBB 561RAB 661KAB 661MB 661NB 661PB 661QAB 661QBB 661RAB	2.16	LUB	Left Wing Aileron Power Control Units (PCUs) and Hinges
01005006	6000 FH 560 DY	6000 FH 560 DY	12-024-00-02	12-024-00	0.50	561 568 661 668	561KAB 561MB 561NB 561PB 561QAB 561QBB 561RAB 661KAB 661MB 661NB 661PB 661QAB 661QBB 661RAB	2.16	LUB	Right Wing Aileron Power Control Units (PCUs) and Hinges
01005006	6000 FH 560 DY	6000 FH 560 DY	12-026-00-01	12-026-00	0.20	557 574 575 657 674 675		0.00	LUB	Left Wing Flaperon Power Control Units (PCU's) and Hinges
01005006	6000 FH 560 DY	6000 FH 560 DY	12-026-00-02	12-026-00	0.20	557 574 575 657 674 675		0.00	LUB	Right Wing Flaperon Power Control Units (PCU's) and Hinges
01005006	2400 FC 460 DY	2400 FC 460 DY	12-118-00-03	12-118-00	0.20	432 433 442 443	431GL 431GR 434ER 441GL 441GR 444EL 513BT 613BT	2.46	LUB	Left Wing Nacelle Attach Fittings (For GE90 engines only)





## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01005006	2400 FC 460 DY	2400 FC 460 DY	12-118-00-04	12-118-00	0.20	432 433 442 443	431GL 431GR 434ER 441GL 441GR 444EL 513BT 613BT	2.46	LUB	Right Wing Nacelle Attach Fittings (For GE90 engines only)
01005006	6000 FH	6000 FH	21-030-00-01	21-030-00	0.20	216 221 222 231 232 241 242 251 252 261 262		0.00	DIS	Galley Ventilation Filters
01005006	470 DY	470 DY	24-160-00-01	24-160-00	2.00	162		0.00	FNC	APU Battery Charge Capacity
01005006	470 DY	470 DY	24-170-00-01	24-170-00	2.00	117 118		0.00	FNC	Main Battery Charge Capacity
01005006	18 MO 6000 FH	18 MO 6000 FH	26-235-00-01	26-235-00	1.00	122	821	0.10	DET	Cargo Fire Extinguishing Bottles
01005006	2400 FC 470 DY	2400 FC 470 DY	27-020-00-01	27-020-00	1.00	511	511AB	0.39	SVC	Slat Power Drive Unit and Slat Electric Motor
01005006	2400 FC 470 DY	2400 FC 470 DY	27-030-00-01	27-030-00	0.50	510 520 610 620	511CB 511MB 521AAB 521ACB 521AFB 521BB 521EB 521GB 521JB 521MB 521PB 521RB 521TB 521WB 521YB 611CB 611MB 621AAB 621ACB 621AFB 621BB 621EB 621GB 621JB 621MB 621PB 621RB 621TB 621WB 621YB	7.67	SVC	Left Inboard and outboard Leading Edge No-Back Offset Gearbox



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01005006	2400 FC 470 DY	2400 FC 470 DY	27-030-00-02	27-030-00	0.50	510 520 610 620	511CB 511MB 521AAB 521ACB 521AFB 521BB 521EB 521GB 521JB 521MB 521PB 521RB 521TB 521WB 521YB 611CB 611MB 621AAB 621ACB 621AFB 621BB 621EB 621GB 621JB 621MB 621PB 621RB 621TB 621WB 621YB	7.67	SVC	Right Inboard and outboard Leading Edge No-Back Offset Gearbox
01005006	2400 FC 470 DY	2400 FC 470 DY	27-040-00-01	27-040-00	1.00	143		0.00	SVC	Flap Power Drive Unit and Flap Electric Motor
01005006	2400 FC 470 DY	2400 FC 470 DY	27-050-00-01	27-050-00	0.50	143 144 571 573 576 577 671 673 676 677		0.00	SVC	Left Inboard and Outboard Flap Transmissions
01005006	2400 FC 470 DY	2400 FC 470 DY	27-050-00-02	27-050-00	0.50	143 144 571 573 576 577 671 673 676 677		0.00	SVC	Right Inboard and Outboard Flap Transmissions
01005006	2400 FC 470 DY	2400 FC 470 DY	27-060-00-01	27-060-00	0.50	561 661		0.00	SVC	Left Flap Skewed Roller No-Back Brakes
01005006	2400 FC 470 DY	2400 FC 470 DY	27-060-00-02	27-060-00	0.50	561 661		0.00	SVC	Right Flap Skewed Roller No-Back Brakes
01005006	6000 FH	6000 FH	31-040-00-01	31-040-00	0.25	212		0.00	OPC	Airplane Information Management System



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01005006	450 DY	450 DY	33-115-00-06	33-115-00	0.03	223 224 243 244 253 254 263 264		0.00	FNC	OFCR (BCAG Style) Back-up Lighting Power Packs
01005006	6000 FH	6000 FH	36-022-00-02	36-022-00	0.25	410 420	413AL 414AR 416AR 423AL 424AR 426AR	1.26	FNC	Right Engine Air Supply IP Check Valve (for GE90-70/80/90 series engine only)
01005006	6000 FH	6000 FH	36-022-00-04	36-022-00	0.25	410 420	413AL 414AR 416AR 423AL 424AR 426AR	1.26	FNC	Right Engine Air Supply IP Check Valve (for GE90-100 series engine only)
01006006	6000 FH	6000 FH	20-500-01-01	20-500-01	0.50	411	413AL 414AR 415AL 416AR 431AT 431BT	1.89	DET	GE90 FADEC Control System Wires Detail Inspection
01006006	6000 FH	6000 FH	20-500-02-01	20-500-02	0.50	421	423AL 424AR 425AL 426AR 441AT 441BT	1.14	DET	GE90 FADEC Control System Wires Detail Inspection
01006006	3000 FH	3000 FH	20-540-01-01	20-540-01	0.50	411	413AL 414AR 415AL 416AR	0.90	DET	Trent Electronic Engine Control System Wire Runs
01006006	3000 FH	3000 FH	20-540-02-01	20-540-02	0.50	421	423AL 424AR 425AL 426AR	0.90	DET	Trent Electronic Engine Control System Wire Runs
01006006	6000 FH	6000 FH	21-080-00-01	21-080-00	0.25	115 163 212		0.00	OPC	Outflow Valve Manual Control
01006006	6000 FH	6000 FH	35-230-00-01	35-230-00	0.50	152 210 212		0.00	GVI	Supernumerary Oxygen System Pressure Indications
01006006	6000 FH	6000 FH	35-230-00-02	35-230-00	0.50	152 210 212		0.00	GVI	Supernumerary Oxygen System Pressure Indications
01006006	2000 FC 480 DY	2000 FC 480 DY	53-535-00-01	53-535-00	0.30	162	825	0.09	GVI	Bulk Cargo Compartment
01006006	2000 FC 480 DY	2000 FC 480 DY	53-551-00-01	53-551-00	0.10	221	831	0.04	GVI	Passenger Compartment - Left



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01006006	2000 FC 480 DY	2000 FC 480 DY	53-551-01-01	53-551-01	0.10	215	831	0.04	GVI	Supernumerary Cabin - Left
01006006	2000 FC 480 DY	2000 FC 480 DY	53-552-00-01	53-552-00	0.10	222	841	0.04	GVI	Passenger Compartment - Right
01006006	2000 FC 480 DY	2000 FC 480 DY	53-552-01-01	53-552-01	0.10	216	841	0.04	GVI	Supernumerary Cabin - Right
01006006	2000 FC 480 DY	2000 FC 480 DY	53-562-00-01	53-562-00	0.50	231	832	0.04	GVI	Passenger Compartment - Left
01006006	2000 FC 480 DY	2000 FC 480 DY	53-563-00-01	53-563-00	0.50	232	842	0.04	GVI	Passenger Compartment - Right
01006006	2000 FC 480 DY	2000 FC 480 DY	53-582-00-01	53-582-00	0.50	251	834	0.04	GVI	Passenger Compartment
01006006	2000 FC 480 DY	2000 FC 480 DY	53-583-00-01	53-583-00	0.50	252	844	0.04	GVI	Passenger Compartment
01006006	2000 FC 480 DY	2000 FC 480 DY	53-599-00-01	53-599-00	0.50	261	835	0.04	GVI	Passenger Compartment
01006006	2000 FC 480 DY	2000 FC 480 DY	53-601-00-01	53-601-00	0.50	262	845	0.04	GVI	Passenger Compartment
01006006	2000 FC 480 DY	2000 FC 480 DY	53-617-00-01	53-617-00	0.50	241 242	833 843	0.08	GVI	Passenger Compartment - Left
01006006	2000 FC 480 DY	2000 FC 480 DY	53-617-00-02	53-617-00	0.50	241 242	833 843	0.08	GVI	Passenger Compartment - Right
01006006	1200 FC	1200 FC	72-005-01-01	72-005-01	1.00	411		0.00	DET	Fan Blade Inspection - Left (for GE90-70/80/90 series engines only)
01006006	1200 FC	1200 FC	72-005-01-03	72-005-01	1.00	411		0.00	DET	Fan Blade Inspection - Left (for GE90-100 series engines only)
01006006	1200 FC	1200 FC	72-005-02-02	72-005-02	1.00	421		0.00	DET	Fan Blade Inspection - Right (for GE90-70/80/90 series engines only)
01006006	1200 FC	1200 FC	72-005-02-04	72-005-02	1.00	421		0.00	DET	Fan Blade Inspection - Right (for GE90-100 series engines only)
01006006	1200 FC	1200 FC	72-030-01-01	72-030-01	0.20	411		0.00	GVI	General Visual Inspection of the Fan Area- Left (for GE90-70/80/90 series engines only)
01006006	1200 FC	1200 FC	72-030-01-03	72-030-01	0.20	411		0.00	GVI	General Visual Inspection of the Fan Area- Left (for GE90-100 series engines only)



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01006006	1200 FC	1200 FC	72-030-02-02	72-030-02	0.20	421		0.00	GVI	General Visual Inspection of the Fan Area - Right (for GE90-70/80/90 series engines only)
01006006	1200 FC	1200 FC	72-030-02-04	72-030-02	0.20	421		0.00	GVI	General Visual Inspection of the Fan Area - Right (for GE90-100 series engines only)
01007003	7500 FH	3500 FH	78-030-01-01	78-030-01	0.20	212		0.00	OPC	Operationally Check DCV and Locking Sensors - Left (for GE90-70/80/90 series engines only)
01007003	7500 FH	3500 FH	78-030-01-03	78-030-01	0.20	212		0.00	OPC	Operationally Check DCV and Locking Sensors - Left (for GE90-100 series engines only)
01007003	7500 FH	3500 FH	78-030-02-02	78-030-02	0.20	212		0.00	OPC	Operationally Check DCV and Locking Sensors - Right (for GE90-70/80/90 series engines only)
01007003	7500 FH	3500 FH	78-030-02-04	78-030-02	0.20	212		0.00	OPC	Operationally Check DCV and Locking Sensors - Right (for GE90-100 series engines only)
01007007	7500 FH	7500 FH	12-114-00-01	12-114-00	0.15	198	198HR	1.10	LUB	Ram Air Turbine (RAT) Actuator, Strut and Door Actuation Link
01007007	2400 FC 460 DY	2400 FC 460 DY	12-118-00-01	12-118-00	0.20	432 433 442 443	431GL 431GR 434ER 441GL 441GR 444EL 513BT 613BT	2.46	LUB	Left Wing Nacelle Attach Fittings (For PW 4000 engines only)
01007007	2400 FC 460 DY	2400 FC 460 DY	12-118-00-02	12-118-00	0.20	432 433 442 443	431GL 431GR 434ER 441GL 441GR 444EL 513BT 613BT	2.46	LUB	Right Wing Nacelle Attach Fittings (For PW 4000 engines only)
01007007	2400 FC 460 DY	2400 FC 460 DY	12-118-00-05	12-118-00	0.20	432 433 442 443	431GL 431GR 434ER 441GL 441GR 444EL 513BT 613BT	2.46	LUB	Left Wing Nacelle Attach Fittings (For Trent engines only)
01007007	2400 FC 460 DY	2400 FC 460 DY	12-118-00-06	12-118-00	0.20	432 433 442 443	431GL 431GR 434ER 441GL 441GR 444EL 513BT 613BT	2.46	LUB	Right Wing Nacelle Attach Fittings (For Trent engines only)
01007007	15000 FH	15000 FH	20-070-00-01	20-070-00	0.50	143 144	732 742	0.08	DET	Exposed, Unprotected Brake Control Cables in the Wheel Well
01007007	15000 FH	15000 FH	20-070-00-02	20-070-00	0.50	143 144	732 742	0.08	DET	Exposed, Unprotected Brake Control Cables in the Wheel Well
01007007	7500 FH	7500 FH	20-520-01-01	20-520-01	0.50	411	413AL 414AR 415AL 416AR	0.90	DET	PW4000 Electronic Engine Control System Wire Run



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01007007	7500 FH	7500 FH	20-520-02-01	20-520-02	0.50	421	423AL 424AR 425AL 426AR	0.90	DET	PW4000 Electronic Engine Control System Wire Run
01007007	7500 FH	7500 FH	21-010-00-01	21-010-00	1.00	234 254		0.00	DIS	Upper Recirculation Air Filters
01007007	7500 FH	7500 FH	21-020-00-01	21-020-00	0.50	125 126	821	0.10	DIS	Lower Recirculation Air Filters
01007007	10000 FH	10000 FH	21-052-00-01	21-052-00	0.50	117 121	117AL	0.02	DET	IFE Cooling Smoke Detector
01007007	15000 FH	7500 FH	21-060-00-01	21-060-00	1.00	253		0.00	DET	E11 Rack Satcom Backup Fan Check Valves
01007007	15000 FH	7500 FH	21-065-00-01	21-065-00	1.00	244		0.00	DET	E13 Rack Satcom Backup Fan Check Valves
01007007	15000 FH	15000 FH	21-070-00-01	21-070-00	2.00	243 253		0.00	DET	E11 Rack Satcom Backup Cooling Check Valve
01007007	15000 FH	15000 FH	21-075-00-01	21-075-00	1.00	244		0.00	DET	E13 Rack Satcom Backup Cooling Check Valve
01007007	15000 FH	15000 FH	21-090-00-01	21-090-00	0.50	212		0.00	OPC	Landing Altitude Manual Select Switch
01007007	7500 FH	7500 FH	21-100-00-01	21-100-00	0.50	115 117 161	117AL	0.02	RST	Cabin Pressure Control Outflow Valves
01007007	7500 FH	7500 FH	21-100-00-02	21-100-00	0.50	115 117 161	117AL	0.02	RST	Cabin Pressure Control Outflow Valves
01007007	15000 FH	15000 FH	21-105-00-01	21-105-00	0.25	117 118 161	117AL 825	0.11	GVI	Cabin Pressure Control Outflow Valves
01007007	15000 FH	15000 FH	21-105-00-02	21-105-00	0.25	117 118 161	117AL 825	0.11	GVI	Cabin Pressure Control Outflow Valves
01007007	7500 FH	7500 FH	21-190-00-01	21-190-00	0.20	212		0.00	OPC	AC Pack Condenser Low Limit Valves
01007007	7500 FH	7500 FH	21-200-00-01	21-200-00	0.10	212		0.00	OPC	AC Pack 2nd Stage Turbine Bypass Valves
01007007	10000 FH	10000 FH	21-210-00-01	21-210-00	0.10	212		0.00	OPC	AC Pack Secondary Heat Exchangers Outlet Temperature Sensor
01007007	7500 FH	7500 FH	21-220-00-01	21-220-00	0.10	212		0.00	OPC	Cabin Air Conditioning and Temperature Controllers
01007007	15000 FH	15000 FH	23-020-00-01	23-020-00	0.50	221		0.00	OPC	Passenger Address System



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01007007	15000 FH	12000 FH	23-030-00-01	23-030-00	0.50	221 222		0.00	OPC	Passenger Address System
01007007	15000 FH	15000 FH	23-040-00-01	23-040-00	0.10	221		0.00	OPC	Cabin Interphone System Alternate Channel
01007007	15000 FH	15000 FH	23-050-00-01	23-050-00	0.10	211 212		0.00	OPC	Flight Interphone System - Audio Transfer
01007007	18 MO	18 MO	24-160-01-01	24-160-01	2.00	162		0.00	RST	APU Battery Charge Capacity
01007007	18 MO	18 MO	24-170-01-01	24-170-01	2.00	117 118		0.00	RST	Main Battery Charge Capacity
01007007	12000 FH	12000 FH	25-040-00-01	25-040-00	0.34	200 215 216 220 230 240 250 260		0.00	OPC	Passenger Seat Belts
01007007	12000 FH	12000 FH	25-040-00-02	25-040-00	0.33	200 215 216 220 230 240 250 260		0.00	OPC	CREW REST SEAT BELTS
01007007	15000 FH	15000 FH	25-045-00-01	25-045-00	0.20	200		0.00	OPC	Crew and/or Attendant Rest Bunk Belts
01007007	15000 FH	15000 FH	25-050-00-01	25-050-00	1.00	200		0.00	OPC	Passenger Compartment Seats
01007007	15000 FH	15000 FH	25-060-00-01	25-060-00	1.00	151 152 220 230 240 250 260		0.00	OPC	Attendant Seat Restraint
01007007	7500 FH	7500 FH	25-070-00-01	25-070-00	1.00	200		0.00	DET	Lavatory Waste Compartment Doors & Flaps
01007007	15000 FH	7500 FH	25-130-00-01	25-130-00	0.50	200		0.00	OPC	Emergency Evacuation Signal System
01007007	560 DY	560 DY	25-135-00-01	25-135-00	0.02	200		0.00	VCK	First Aid Kits
01007007	560 DY	560 DY	25-160-00-01	25-160-00	0.25	200		0.00	OPC	Emergency Flashlights



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01007007	7500 FH	7500 FH	25-250-00-01	25-250-00	0.10	223 224		0.00	DET	Overhead Flight Crew Rest (OFCR) Seat Assembly Lanyard
01007007	7500 FH	7500 FH	26-010-00-01	26-010-00	0.10	212		0.00	OPC	Engine Fire/Overheat Detection
01007007	7500 FH	7500 FH	26-014-02-01	26-014-02		221 222		0.00	OPC	Passenger Cabin, High Wall Suites Smoke Detectors System
01007007	7500 FH	7500 FH	26-014-03-01	26-014-03	1.00	221 222		0.00	RST	Passenger Cabin, High Wall Suites Smoke Detector System
01007007	7500 FH	7500 FH	26-015-00-01	26-015-00	0.10	212		0.00	OPC	APU Fire Detection Control Cards
01007007	7500 FH	7500 FH	26-040-00-01	26-040-00	0.50	200		0.00	OPC	Lavatory Smoke Detectors
01007007	7500 FH	7500 FH	26-040-00-03	26-040-00	0.50	200		0.00	OPC	Lavatory Smoke Detectors
01007007	15000 FH	15000 FH	26-066-00-02	26-066-00	0.50	121 151		0.20	FNC	Cargo Smoke Detector Water Separators (for 300 and 300ER airplanes only)
01007007	15000 FH	15000 FH	26-067-00-02	26-067-00	0.38	121 151		0.20	FNC	Cargo Compartment Smoke Detector Heaters and Controllers
01007007	7500 FH	7500 FH	26-069-00-02	26-069-00	0.17	215 221 241		0.00	FNC	Flight Crew Rest (FCR) Smoke Detection System
01007007	7500 FH	7500 FH	26-190-00-01	26-190-00	0.50	122 211	117AL 821	0.12	OPC	Cargo Fire Extinguishing Bottle Pressure Switches
01007007	540 DY	540 DY	26-290-00-01	26-290-00	0.05	200	311BL	0.00	DET	Portable Halon Fire Extinguishers
01007007	540 DY	540 DY	26-290-00-02	26-290-00	0.05	200		0.00	DET	Portable Halon Fire Extinguishers
01007007	7500 FH	7500 FH	27-010-00-01	27-010-00	0.20	311 312		0.04	SVC	Stabilizer Primary Brake Housing
01007007	15000 FH	15000 FH	27-230-00-01	27-230-00	0.30	211 212		0.00	FNC	Column Force Transducer
01007007	15000 FH	15000 FH	27-250-00-01	27-250-00	0.20	211		0.00	OPC	Alternate Stabilizer Trim Control System
01007007	15000 FH	15000 FH	27-260-00-01	27-260-00	0.10	211		0.00	OPC	Stabilizer Cutout Switches
01007007	15000 FH	15000 FH	27-310-00-01	27-310-00	0.30	212		0.00	OPC	High Lift System Alternate Control Switches
01007007	7500 FH	7500 FH	27-415-00-01	27-415-00	2.00	211 212 711		0.00	FNC	Nose Gear Pressure Transducer





## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01007007	7500 FH	7500 FH	28-020-00-01	28-020-00	1.00	211 212	195GAL 196GAR	0.00	OPC	Engine Fuel Suction Feed System
01007007	7500 FH	7500 FH	28-025-00-01	28-025-00	0.25	411 421		0.00	OPC	Left Engine Fuel Spar Valve
01007007	7500 FH	7500 FH	28-025-00-03	28-025-00	0.25	411 421		0.00	OPC	Right Engine Fuel Spar Valve
01007007	7500 FH	7500 FH	28-060-00-01	28-060-00	0.10	212		0.00	OPC	Densitometers of Fuel Quantity Indicating System
01007007	7500 FH	7500 FH	28-070-00-01	28-070-00	0.10	212		0.00	OPC	Tank Units of Fuel Quantity Indicating System
01007007	7500 FH	7500 FH	28-090-00-01	28-090-00	0.50	531 533 541 631 633 641	197JL	0.04	GVI	Fuel Tanks Microbial Growth
01007007	7500 FH	7500 FH	29-010-00-01	29-010-00	0.10	197		0.09	SVC	Air Drive Unit
01007007	12000 FH	12000 FH	29-040-00-01	29-040-00	0.24	144 434 444		0.12	VCK	Center Hydraulic System Return Filter Module
01007007	12000 FH	12000 FH	29-040-00-02	29-040-00	0.23	144 434 444		0.12	VCK	Left Hydraulic System Return Filter Module
01007007	12000 FH	12000 FH	29-040-00-03	29-040-00	0.23	144 434 444		0.12	VCK	Right Hydraulic System Return Filter Module
01007007	12000 FH	12000 FH	29-070-00-01	29-070-00	0.25	434 444	434CL 434CR 434DR 444CL 444CR 444DR	0.12	VCK	Left Hydraulic System EDP Pressure and Case Drain Filter Module
01007007	12000 FH	12000 FH	29-070-00-02	29-070-00	0.25	434 444		0.12	VCK	Right Hydraulic System EDP Pressure and Case Drain Filter Module
01007007	12000 FH	12000 FH	29-090-00-01	29-090-00	0.33	144 434 444		0.08	VCK	Center Hydraulic System ACMP Pressure and Case Drain Filter Module
01007007	12000 FH	12000 FH	29-090-00-02	29-090-00	0.33	144 434 444		0.08	VCK	Left Hydraulic System ACMP Pressure and Case Drain Filter Module



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01007007	12000 FH	12000 FH	29-090-00-03	29-090-00	0.34	144 434 444	434CR 434DR 444CR 444DR	0.08	VCK	Right Hydraulic System ACMP Pressure and Case Drain Filter Module
01007007	7500 FH	7500 FH	29-150-00-01	29-150-00	2.00	144 198 211 212	198HR	1.10	OPC	Ram Air Turbine
01007007	7500 FH	7500 FH	29-160-00-01	29-160-00	0.10	198	198HR	1.10	GVI	Ram Air Turbine
01007007	7500 FH	7500 FH	29-170-00-01	29-170-00	0.20	144		0.00	VCK	Ram Air Turbine
01007007	15000 FH	15000 FH	31-050-00-01	31-050-00	0.10	118		0.00	OPC	Airplane Information Management System - Coaxial Splitter
01007007	15000 FH	15000 FH	31-070-00-01	31-070-00	0.10	211 212		0.00	OPC	Primary Display System - Inboard Select Switching
01007007	15000 FH	15000 FH	31-090-00-01	31-090-00	0.10	211 212		0.00	OPC	Primary Display System - Display Control Switches
01007007	7500 FH	7500 FH	32-120-00-01	32-120-00	0.50	113 143 144 211 212 711 713 714 732 742	198LR	0.02	OPC	Landing Gear Alternate Extension System
01007007	15000 FH	12000 FH	32-140-00-01	32-140-00	0.50	211 731 741		0.00	OPC	Alternate Source Select Valve
01007007	15000 FH	15000 FH	32-150-00-01	32-150-00	0.20	211 731 741		0.00	OPC	Accumulator Isolation Valve
01007007	7500 FH 560 DY	7500 FH 560 DY	35-050-00-01	35-050-00	0.25	211 212		0.00	DET	Crew Oxygen Masks
01007007	7500 FH	7500 FH	36-030-00-01	36-030-00	0.10	212		0.00	OPC	Air Supply Manifold Dual Temperature Sensor
01007007	7500 FH	7500 FH	38-050-00-01	38-050-00	0.50	122 161	821	0.10	RST	Waste Tank Liquid Separators (Not applicable to the 777F)



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01007007	7500 FH	7500 FH	38-050-00-02	38-050-00	0.50	122 161	821	0.10	RST	Waste Tank Liquid Separators (Applicable to the 777F only)
01007007	7500 FH	7500 FH	38-050-00-03	38-050-00	0.50	122 161	821	0.10	RST	Waste Tank Liquid Separators
01007007	7500 FH	7500 FH	38-070-00-01	38-070-00	0.50	122 161	821 825	0.19	RST	Vacuum Blower Air Filter
01007007	7500 FH	7500 FH	38-070-00-02	38-070-00	0.50	122 161	821 825	0.19	RST	Vacuum Blower Air Filter
01007007	10000 FH	10000 FH	38-090-00-01	38-090-00	0.10	161	825	0.09	OPC	Waste Tank Quantity Indication
01007007	7500 FH	7500 FH	38-100-00-01	38-100-00	0.70	162	825	0.09	DIS	Compressor Inlet Filter
01007007	7500 FH	7500 FH	38-110-00-01	38-110-00	1.00	166	825	0.09	DIS	APU Duct Bleed Air Inline Filter
01007007	7500 FH	7500 FH	54-800-01-01	54-800-01	0.50	430		0.00	GVI	Left Nacelle Strut
01007007	7500 FH	7500 FH	54-810-02-01	54-810-02	0.50	440		0.00	GVI	Right Nacelle Strut
01007007	7500 FH	7500 FH	54-820-01-01	54-820-01	0.50	430		0.00	GVI	Left Nacelle Strut
01007007	7500 FH	7500 FH	54-830-02-01	54-830-02	0.50	440		0.00	GVI	Right Nacelle Strut
01007007	7500 FH	7500 FH	54-840-01-01	54-840-01	0.50	430		0.00	GVI	Left Nacelle Strut
01007007	7500 FH	7500 FH	54-850-02-01	54-850-02	0.50	440		0.00	GVI	Right Nacelle Strut
01007007	7500 FH	7500 FH	71-834-01-01	71-834-01	2.00	411	413AL 414AR 415AL 415HB 415JB 415KB 416AR	0.96	GVI	Left Engine
01007007	7500 FH	7500 FH	71-842-01-01	71-842-01	0.25	415 416		0.00	GVI	Left Engine Thrust Reversers
01007007	7500 FH	7500 FH	71-848-02-01	71-848-02	2.00	421	423AL 424AR 425AL 425HB 425JB 425KB 426AR	0.96	GVI	Right Engine
01007007	7500 FH	7500 FH	71-856-02-01	71-856-02	0.50	425 426		0.00	GVI	Right Engine Thrust Reversers
01007007	7500 FH	7500 FH	71-862-01-01	71-862-01	0.50	410		0.00	GVI	Left Powerplant
01007007	7500 FH	7500 FH	71-864-01-01	71-864-01	2.00	411	413AL 414AR 415AL 415HB 415JB 416AR	0.94	GVI	Left Engine



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01007007	7500 FH	7500 FH	71-876-02-01	71-876-02	0.50	420		0.00	GVI	Right Powerplant
01007007	7500 FH	7500 FH	71-878-02-01	71-878-02	2.00	421	423AL 424AR 425AL 425HB 425JB 426AR	0.94	GVI	Right Engine
01007007	7500 FH	7500 FH	72-083-01-01	72-083-01	0.25	411	413AL 414AR 415AL 415HB 415JB 415KB 416AR	0.96	DET	Detailed Inspection of TRF AFT Engine Mount Lugs- Left (for GE90-100 series engines only)
01007007	7500 FH	7500 FH	72-083-02-01	72-083-02	0.25	421	423AL 424AR 425AL 425HB 425JB 425KB 426AR	0.96	DET	Detailed Inspection of TRF AFT Engine Mount Lugs - Right (for GE90-100 series engines only)
01007007	10000 FH	10000 FH	72-090-01-03	72-090-01	0.25	411	413AL 414AR 415AL 415HB 415JB 415KB 416AR	0.96	DET	Detailed Inspection ACC GB. and Fittings - Left (for GE90-100 series engines only)
01007007	10000 FH	10000 FH	72-090-02-04	72-090-02	0.25	421	423AL 424AR 425AL 425HB 425JB 425KB 426AR	0.96	DET	Detailed Inspection ACC GB. and Fittings - Right (for GE90-100 series engines only)
01007007	15000 FH	9000 FH	78-010-01-03	78-010-01	0.80	411	413AL 414AR	0.36	DET	Inspect Detailed T/R Blocker Door Hinges, Drag Links and Attachments - Left (for GE90-100 series engines only)
01007007	15000 FH	9000 FH	78-010-02-04	78-010-02	0.80	421	423AL 424AR	0.36	DET	Inspect Detailed T/R Blocker Door Hinges, Drag Links and Attachments - Right (for GE90-100 series engines only)
01007007	10000 FH	10000 FH	78-020-01-03	78-020-01	0.10	411	413AL 414AR 434CL	0.38	OPC	Thrust Reverser Locks - Left (for GE90-100 series engines only)
01007007	10000 FH	10000 FH	78-020-02-04	78-020-02	0.10	421	423AL 424AR 444CL	0.38	OPC	Thrust Reverser Locks - Right (for GE90-100 series engines only)
01007007	7500 FH	7500 FH	79-010-01-03	79-010-01	0.50	411	414AR 416AR	0.45	DET	Inspect Oil Filter Scavenge Screen - Left (for GE90-100 series engines only)
01007007	7500 FH	7500 FH	79-010-02-04	79-010-02	0.50	421	424AR 426AR	0.45	DET	Inspect Oil Filter Scavenge Screen - Right (for GE90-100 series engines only)
01007011	7500 FH	11500 FH	29-120-00-01	29-120-00	0.10	197 211 212	197JL	0.09	FNC	ADU and ADU Heater System (Airplanes without the MAT ground test only)



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01007011	7500 FH	11500 FH	29-120-00-02	29-120-00	0.10	197 211 212	197JL	0.09	FNC	ADU and ADU Heater System (Airplanes with the MAT ground test only)
01008008	8000 FH	8000 FH	27-410-00-01	27-410-00	2.00	211 212 711		0.00	FNC	Nose Gear Pressure Switch
01008008	1600 FC	1600 FC	32-250-00-01	32-250-00	0.30	731 741		0.00	SVC	Main Landing Gear Shock Strut Servicing
01008008	1600 FC	1600 FC	32-280-00-01	32-280-00	0.15	711		0.00	SVC	Nose Landing Gear Shock Strut Servicing
01008008	400 DY	400 DY	33-110-00-01	33-110-00	0.50	151 152		0.00	FNC	Lower Lobe Attendant Rest (LLAR) Back-up Lighting System
01008008	1600 FC	1600 FC	52-100-00-01	52-100-00	0.40	831 832 834 835 841 842 844 845		0.00	VCK	Passenger Entry Door Girt Bar Floor Fittings
01008008	1600 FC	1600 FC	52-100-01-01	52-100-01	0.40	831 832 834 835 841 842 844 845		0.00	VCK	Passenger Entry Door Girt Bar Floor Fittings
01008008	1600 FC	1600 FC	52-100-02-01	52-100-02	0.05	831 841		0.00	VCK	Passenger Entry Door Girt Bar Floor Fittings
01008008	4000 FH	4000 FH	73-210-01-01	73-210-01	1.00	411	413AL 414AR 415AL 415LB 415NB 416AR	0.94	DIS	Fuel Pump Filter Element - Left
01008008	4000 FH	4000 FH	73-210-02-01	73-210-02	1.00	421	423AL 424AR 425AL 425LB 425NB 426AR	0.94	DIS	Fuel Pump Filter Element - Right
01009009	9000 FH	9000 FH	21-260-00-01	21-260-00	0.50	125 126	821	0.10	DET	Lower Recirculation Air Fan Check Valves



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01009009	450 DY	450 DY	33-115-00-01	33-115-00	0.04	223 224 243 244 253 254 263 264		0.00	FNC	OFAR (BCAG Door 3) Back-up Lighting Power Packs
01009009	9000 FH	9000 FH	38-140-00-01	38-140-00	0.50	121 166		0.00	RST	Fill Line Water Filter of Pump Based Potable Water System
01010010	10000 FH	10000 FH	22-040-00-01	22-040-00	0.25	211 212		0.00	OPC	Take-Off/ Go-Around (TO/GA) Switch
01010010	10000 FH	10000 FH	25-020-04-01	25-020-04	0.20	211 212		0.00	DET	Flight Compartment Seat Harness
01010010	10000 FH	10000 FH	25-020-06-01	25-020-06	0.10	211 212		0.00	OPC	Flight Compartment Seat Inertial Reel
01010010	10000 FH	10000 FH	29-180-00-01	29-180-00	0.25	313	313AL	0.04	FNC	Hydraulic Accumulators
01010010	10000 FH	10000 FH	29-180-00-02	29-180-00	0.25	313	313AL	0.04	FNC	Hydraulic Accumulators
01010010	2 YR	2 YR	34-020-00-05	34-020-00	0.40	211 212		0.00	FNC	ATC Transponder System
01010010	6000 FC 750 DY	6000 FC 750 DY	52-040-00-01	52-040-00	0.30	825	825	0.09	DET	Bulk Cargo Door Seals
01010010	750 DY	750 DY	52-165-00-01	52-165-00	0.37	197 198 211 212 553 554 653 654 833 843	197EL 198ER 552CB 652CB	1.60	FNC	Left No. 3 Over-Wing Door Circuitry



# 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01010010	750 DY	750 DY	52-165-00-02	52-165-00	0.38	197 198 211 212 553 554 653 654 833 843	197EL 198ER 552CB 652CB	1.60	FNC	Right No. 3 Over-Wing Door Circuitry
01010010	750 DY	750 DY	52-166-00-01	52-166-00	0.25	833 843		0.00	FNC	No. 3 Over-Wing Door EPAS Battery Circuitry
01010010	750 DY	750 DY	52-167-00-01	52-167-00	0.37	197 198 211 212 553 554 653 654 833 843	197DL 198DR 552CB 552DB 652CB 652DB	2.28	FNC	No. 3 Over-Wing Door Backup Battery Circuitry
01010010	750 DY	750 DY	52-167-00-02	52-167-00	0.38	197 198 211 212 553 554 653 654 833 843	197DL 198DR 552CB 552DB 652CB 652DB	2.28	FNC	No. 3 Over-Wing Door Backup Battery Circuitry
01010010	750 DY	750 DY	52-255-00-01	52-255-00	0.10	251		0.00	OPC	Lower Lobe Attendant Rest Emergency Exit Hatch
01010010	10000 FH	10000 FH	53-928-00-01	53-928-00	1.20	315 316	315AL 315BL 316AR 316BR	0.18	GVI	APU Compartment
01010010	7500 FH	7500 FH	71-872-01-01	71-872-01	0.25	415 416		0.00	GVI	Left Engine Thrust Reversers
01010010	7500 FH	7500 FH	71-886-02-01	71-886-02	0.25	425 426		0.00	GVI	Right Engine Thrust Reversers



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01010010	10000 FH	10000 FH	72-090-01-01	72-090-01	0.25	411	413AL 414AR 415AL 415HB 415JB 415KB 416AR	0.96	DET	Detailed Inspection ACC GB. and Fittings - Left (for GE90-70/80/90 series engines only)
01010010	10000 FH	10000 FH	72-090-02-02	72-090-02	0.25	421	423AL 424AR 425AL 425HB 425JB 425KB 426AR	0.96	DET	Detailed Inspection ACC GB. and Fittings - Right (for GE90-70/80/90 series engines only)
01010010	5000 FH 1000 FC	5000 FH 1000 FC	72-410-01-01	72-410-01	1.50	411	413AL 414AR 415AL 416AR	0.90	DET	Borescope Combustor
01010010	5000 FH 1000 FC	5000 FH 1000 FC	72-410-02-01	72-410-02	1.50	421	423AL 424AR 425AL 426AR	0.90	DET	Borescope Combustor
01010010	5000 FH 1000 FC	5000 FH 1000 FC	72-415-01-01	72-415-01	1.50	411	413AL 414AR 415AL 416AR	0.90	DET	Borescope Turbine Blades
01010010	5000 FH 1000 FC	5000 FH 1000 FC	72-415-02-01	72-415-02	1.50	421	423AL 424AR 425AL 426AR	0.90	DET	Borescope Turbine Blades
01010010	5000 FH 1000 FC	5000 FH 1000 FC	72-445-01-01	72-445-01	1.50	411	413AL 414AR 415AL 416AR	0.90	DET	Borescope Nozzle Guide Vanes
01010010	5000 FH 1000 FC	5000 FH 1000 FC	72-445-02-01	72-445-02	1.50	421	423AL 424AR 425AL 426AR	0.90	DET	Borescope Nozzle Guide Vanes
01010010	10000 FH	10000 FH	78-015-01-01	78-015-01	0.25	411	413AL 414AR	0.36	DET	Thrust Reverser Bullnose Seal (for GE90-70/80/90 series engines only)
01010010	10000 FH	10000 FH	78-015-01-03	78-015-01	0.25	411	413AL 414AR	0.36	DET	Thrust Reverser Bullnose Seal (for GE90-100 series engines only)
01010010	10000 FH	10000 FH	78-015-02-02	78-015-02	0.25	421	423AL 424AR	0.36	DET	Thrust Reverser Bullnose Seal (for GE90-70/80/90 series engines only)
01010010	10000 FH	10000 FH	78-015-02-04	78-015-02	0.25	421	423AL 424AR	0.36	DET	Thrust Reverser Bullnose Seal (for GE90-100 series engines only)
01010010	10000 FH	10000 FH	78-020-01-01	78-020-01	0.10	411	413AL 414AR 434CL	0.38	OPC	Thrust Reverser Locks - Left (for GE90-70/80/90 series engines only)
01010010	10000 FH	10000 FH	78-020-02-02	78-020-02	0.10	421	423AL 424AR 444CL	0.38	OPC	Thrust Reverser Locks - Right (for GE90-70/80/90 series engines only)
01010010	5000 FH	5000 FH	78-025-01-01	78-025-01	1.00	411	413AL 414AR 434CL	0.38	OPC	Thrust Reverser Sync Lock- Left (for GE90-70/80/90 series engines only)





## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01010010	5000 FH	5000 FH	78-025-02-02	78-025-02	1.00	421	423AL 424AR 444CL	0.38	OPC	Thrust Reverser Sync Lock - Right (for GE90-70/80/90 series engines only)
01010010	10000 FH	10000 FH	78-205-01-01	78-205-01	0.70	411	413AL 414AR	0.36	GVI	Thrust Reverser Bullnose Seal - Left
01010010	10000 FH	10000 FH	78-205-02-01	78-205-02	0.70	421	423AL 424AR	0.36	GVI	Thrust Reverser Bullnose Seal - Right
01010010	5000 FH	5000 FH	78-220-01-01	78-220-01	3.00	411	413AL 414AR 434CL	0.38	OPC	Operationally Check Sync Lock on Thrust Reverser
01010010	5000 FH	5000 FH	78-220-02-01	78-220-02	3.00	421	423AL 424AR 444CL	0.38	OPC	Operationally Check Sync Lock on Thrust Reverser
01010010	10000 FH	10000 FH	78-355-01-01	78-355-01	0.40	411	413AL 414AR	0.36	DET	Thrust Reverser Bullnose Seal
01010010	10000 FH	10000 FH	78-355-02-01	78-355-02	0.40	421	423AL 424AR	0.36	DET	Thrust Reverser Bullnose Seal
01010010	10000 FH	10000 FH	78-360-01-01	78-360-01	1.50	411	413AL 414AR	0.36	OPC	Thrust Reverser Locks
01010010	10000 FH	10000 FH	78-360-02-01	78-360-02	1.50	421	423AL 424AR	0.36	OPC	Thrust Reverser Locks
01010010	5000 FH	5000 FH	78-365-01-01	78-365-01	0.75	411	413AL 414AR	0.36	OPC	Thrust Reverser Sync Lock
01010010	5000 FH	5000 FH	78-365-02-01	78-365-02	0.75	421	423AL 424AR	0.36	OPC	Thrust Reverser Sync Lock
01010015	10000 FH	15000 FH	25-010-00-01	25-010-00	0.25	211 212		0.00	DET	Crew Seat Attachments
01011011	800 DY	800 DY	26-300-00-01	26-300-00	0.10	200		0.00	DET	Portable Water Fire Extinguishers
01011011	800 DY	800 DY	26-300-00-02	26-300-00	0.10	200		0.00	DET	Portable Water Fire Extinguishers
01011011	800 DY	800 DY	33-090-00-01	33-090-00	5.00	200		0.00	RST	Emergency Lights Battery Packs
01011011	800 DY	800 DY	33-095-00-01	33-095-00	0.05	223 224 243 244 253 254 263 264		0.00	RST	OFAR (BCAG Door 3) Backup Lighting Power Supply Battery Packs
01011011	2000 FC	2000 FC	54-210-01-01	54-210-01	0.50	410 430	414AR 416AR 432BR	0.48	FNC	Left Forward Engine Strut Drain.
01011011	2000 FC	2000 FC	54-210-02-01	54-210-02	0.50	420 440	424AR 426AR 442BR	0.48	FNC	Right Forward Engine Strut Drain.
01012012	12000 FH	12000 FH	21-140-00-01	21-140-00	0.50	211 212		0.00	OPC	AC Pack Flow Sensors



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01012012	12000 FH	12000 FH	21-150-00-01	21-150-00	2.00	135 136	195EL 196ER	0.14	RST	AC Pack Heat Exchangers
01012012	12000 FH	12000 FH	23-085-00-01	23-085-00	0.40	162 211 212		0.00	FNC	Voice recorder back up power system
01012012	12000 FH	12000 FH	25-030-00-01	25-030-00	2.00	200 215 216 220 230 240 250 260		0.00	VCK	Passenger Compartment Seats
01012012	12000 FH	12000 FH	25-030-00-02	25-030-00	0.10	200 215 216 220 230 240 250 260		0.00	VCK	CREW REST COMPARTMENT SEATS
01012012	12000 FH	12000 FH	25-030-00-03	25-030-00	0.10	200 215 216 220 230 240 250 260		0.00	VCK	Supernumerary Compartment Seats
01012012	12000 FH	12000 FH	25-030-00-04	25-030-00	0.20	200 215 216 220 230 240 250 260		0.00	VCK	Flight Attendant Seats



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01012012	12000 FH	12000 FH	26-045-00-06	26-045-00	0.20	223 224 243 244 253 254 263 264	117AL	0.02	OPC	OFCR Smoke Detector System
01012012	15000 FH	15000 FH	26-061-00-01	26-061-00	0.40	151 152		0.00	OPC	Lower Lobe Attendant Rest (LLAR) Smoke Detection System
01012012	15000 FH	15000 FH	26-066-00-01	26-066-00	0.50	121 151	821 824	0.20	FNC	Cargo Smoke Detector Water Separators (for 200, 200ER, and 200LR airplanes only)
01012012	15000 FH	15000 FH	26-067-00-01	26-067-00	0.37	121 151	821 824	0.20	FNC	Cargo Compartment Smoke Detector Heaters and Controllers
01012012	7500 FH	7500 FH	26-069-00-01	26-069-00	0.16	215 221 241		0.00	FNC	Flight Crew Rest (FCR) Smoke Detection System
01012012	6000 FH	6000 FH	28-085-00-01	28-085-00	2.00	134 139 531 631	139AL 139AZ 531AB 531BB 631AB 631BB	1.43	GVI	Center Wing Fuel Tank FQIS Wiring
01012012	12000 FH	12000 FH	29-130-00-01	29-130-00	2.00	211 212		0.00	OPC	Center Hydraulic Isolation System
01012012	6000 FH	6000 FH	36-020-00-01	36-020-00	0.50	410 420	413AL 414AR 415AL 416AR 423AL 424AR 425AL 426AR	1.80	FNC	Left Engine Air Supply IP Check Valve
01012012	6000 FH	6000 FH	36-020-00-02	36-020-00	0.50	410 420	413AL 414AR 415AL 416AR 423AL 424AR 425AL 426AR	1.80	FNC	Right Engine Air Supply IP Check Valve
01012012	6000 FH	6000 FH	36-022-00-01	36-022-00	0.25	410 420	413AL 414AR 416AR 423AL 424AR 426AR	1.26	FNC	Left Engine Air Supply IP Check Valve (for GE90-70/80/90 series engine only)
01012012	6000 FH	6000 FH	36-024-00-01	36-024-00	0.50	410 420	413AL 415AL 423AL 425AL	0.90	FNC	Left Engine Air Supply IP Check Valve
01012012	6000 FH	6000 FH	36-024-00-02	36-024-00	0.50	410 420	413AL 415AL 423AL 425AL	0.90	FNC	Right Engine Air Supply IP Check Valve



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01012012	7500 FH	7500 FH	71-810-01-01	71-810-01	0.25	415 416		0.00	GVI	Left Engine Thrust Reversers
01012012	7500 FH	7500 FH	71-822-02-01	71-822-02	0.25	425 426		0.00	GVI	Right Engine Thrust Reversers
01012012	7500 FH	7500 FH	72-350-01-01	72-350-01	2.00	411		0.00	DET	Fan Blade Inspection
01012012	7500 FH	7500 FH	72-350-02-01	72-350-02	2.00	421		0.00	DET	Fan Blade Inspection
01012012	7500 FH	7500 FH	72-385-01-01	72-385-01	0.50	411	413AL 414AR	0.36	DET	Inspect Detailed Kevlar
01012012	7500 FH	7500 FH	72-385-02-01	72-385-02	0.50	421	423AL 424AR	0.36	DET	Inspect Detailed Kevlar
01012012	7500 FH	7500 FH	72-390-01-01	72-390-01	0.20	411	413AL 414AR 415AL 416AR	0.90	GVI	General Visual of the Splitter Fairing
01012012	7500 FH	7500 FH	72-390-02-01	72-390-02	0.20	421	423AL 424AR 425AL 426AR	0.90	GVI	General Visual of the Splitter Fairing
01012012	7500 FH	7500 FH	73-350-01-01	73-350-01	1.00	411	413AL 414AR	0.36	DIS	Discard LP Fuel Filter
01012012	7500 FH	7500 FH	73-350-02-01	73-350-02	1.00	421	423AL 424AR	0.36	DIS	Discard LP Fuel Filter
01012012	12000 FH	12000 FH	78-210-01-01	78-210-01	3.00	411	413AL 414AR 434CL	0.38	OPC	Thrust Reverser System
01012012	12000 FH	12000 FH	78-210-02-01	78-210-02	3.00	421	423AL 424AR 444CL	0.38	OPC	Thrust Reverser System
01012012	7500 FH	7500 FH	78-215-01-01	78-215-01	0.50	411		0.00	OPC	Thrust Reverser System
01012012	7500 FH	7500 FH	78-215-02-01	78-215-02	0.50	421		0.00	OPC	Thrust Reverser System
01012012	7500 FH	7500 FH	78-225-01-01	78-225-01	1.60	411	413AL 414AR	0.36	DET	Inspect Detailed T/R Blocker Door Hinge and Drag Link Attachments - Left
01012012	7500 FH	7500 FH	78-225-02-01	78-225-02	1.60	421	423AL 424AR	0.36	DET	Inspect Detailed T/R Blocker Door Hinge and Drag Link Attachments - Right
01012012	7500 FH	7500 FH	78-350-01-01	78-350-01	1.60	411	413AL 414AR	0.36	DET	Inspect Detailed Thrust Reverser Blocker Door Hinge and Drag Link Attachments
01012012	7500 FH	7500 FH	78-350-02-01	78-350-02	1.60	421	423AL 424AR	0.36	DET	Inspect Detailed Thrust Reverser Blocker Door Hinge and Drag Link Attachments
01012012	15000 FH	15000 FH	78-370-01-01	78-370-01	0.75	212		0.00	OPC	Thrust Reverser Sensor Checks
01012012	15000 FH	15000 FH	78-370-02-01	78-370-02	0.75	212		0.00	OPC	Thrust Reverser Sensor Checks
01012012	7500 FH	7500 FH	78-375-01-01	78-375-01	0.30	411	413AL 414AR 415AL 416AR	0.90	GVI	Inspect Fire Seal



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01012012	7500 FH	7500 FH	78-375-02-01	78-375-02	0.30	421	423AL 424AR 425AL 426AR	0.90	GVI	Inspect Fire Seal
01012012	7500 FH	7500 FH	79-010-01-01	79-010-01	0.50	411	414AR 416AR	0.45	DET	Inspect Oil Filter Scavenge Screen - Left (for GE90-70/80/90 series engines only)
01012012	7500 FH	7500 FH	79-010-02-02	79-010-02	0.50	421	424AR 426AR	0.45	DET	Inspect Oil Filter Scavenge Screen - Right (for GE90-70/80/90 series engines only)
01013013	4800 FC 940 DY	4800 FC 940 DY	12-014-00-01	12-014-00	0.65	511 521 611 621	511CB 511EB 511GB 511JB 511LB 511MB 521AAB 521ACB 521AFB 521BB 521EB 521GB 521JB 521MB 521PB 521RB 521TB 521WB 521YB 611CB 611EB 611GB 611JB 611LB 611MB 621AAB 621ACB 621AFB 621BB 621DAB 621EB 621GB 621JB 621MB 621PB 621RB 621TB 621WB 621YB	11.88	LUB	Left Wing Inboard Slat Track Rollers and Pinion Bearings



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01013013	4800 FC 940 DY	4800 FC 940 DY	12-014-00-02	12-014-00	0.65	511 521 611 621	511CB 511EB 511GB 511JB 511LB 511MB 521AAB 521ACB 521AFB 521BB 521EB 521GB 521JB 521MB 521PB 521RB 521TB 521WB 521YB 611CB 611EB 611GB 611JB 611LB 611MB 621AAB 621ACB 621AFB 621BB 621DAB 621EB 621GB 621JB 621MB 621PB 621RB 621TB 621WB 621YB	11.88	LUB	Right Wing Inboard Slat Track Rollers and Pinion Bearings
01013013	4800 FC 940 DY	4800 FC 940 DY	12-014-00-11	12-014-00	0.65	511 521 611 621	511CB 511EB 511GB 511JB 511LB 511MB 521AAB 521ACB 521AFB 521BB 521EB 521GB 521JB 521MB 521PB 521RB 521TB 521WB 521YB 611CB 611EB 611GB 611JB 611LB 611MB 621AAB 621ACB 621AFB 621BB 621DAB 621EB 621GB 621JB 621MB 621PB 621RB 621TB 621WB 621YB	11.88	LUB	Left Wing Outboard Slat Main Track Rollers & Pinion Bearings



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01013013	4800 FC 940 DY	4800 FC 940 DY	12-014-00-12	12-014-00	0.65	511 521 611 621	511CB 511EB 511GB 511JB 511LB 511MB 521AAB 521ACB 521AFB 521BB 521EB 521GB 521JB 521MB 521PB 521RB 521TB 521WB 521YB 611CB 611EB 611GB 611JB 611LB 611MB 621AAB 621ACB 621AFB 621BB 621DAB 621EB 621GB 621JB 621MB 621PB 621RB 621TB 621WB 621YB	11.88	LUB	Right Wing Outboard Slat Main Track Rollers & Pinion Bearings



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01014014	6000 FC 1125 DY	6000 FC 1125 DY	12-008-00-01	12-008-00	0.70	511 513 521 611 613 621	511AB 511CB 511GB 511MB 513AT 513BT 521AAB 521AB 521ACB 521AFB 521BB 521DB 521EB 521FB 521GB 521HB 521JB 521KB 521LB 521MB 521PB 521QB 521RB 521TB 521UB 521VB 521WB 521YB 521ZB 611AB 611CB 611GB 611MB 613AT 613BT 621AAB 621AB 621ACB 621AFB 621BB 621CAB 621DAB 621DB 621EB 621FB 621GB 621HB 621JB 621KB 621LB 621MB 621PB 621QB 621RB 621TB 621UB 621VB 621WB 621YB 621ZB	16.67	LUB	Left Wing Inboard Leading Edge Torque Tube Supports and Couplings





## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01014014	6000 FC 1125 DY	6000 FC 1125 DY	12-008-00-02	12-008-00	0.70	511 513 521 611 613 621	511AB 511CB 511GB 511MB 513AT 513BT 521AAB 521AB 521ACB 521AFB 521BB 521DB 521EB 521FB 521GB 521HB 521JB 521KB 521LB 521MB 521PB 521QB 521RB 521TB 521UB 521VB 521WB 521YB 521ZB 611AB 611CB 611GB 611MB 613AT 613BT 621AAB 621AB 621ACB 621AFB 621BB 621CAB 621DAB 621DB 621EB 621FB 621GB 621HB 621JB 621KB 621LB 621MB 621PB 621QB 621RB 621TB 621UB 621VB 621WB 621YB 621ZB	16.67	LUB	Right Wing Inboard Leading Edge Torque Tube Supports and Couplings



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01014014	6000 FC 1125 DY	6000 FC 1125 DY	12-008-00-11	12-008-00	0.70	511 513 521 611 613 621	511AB 511CB 511GB 511MB 513AT 513BT 521AAB 521AB 521ACB 521AFB 521BB 521DB 521EB 521FB 521GB 521HB 521JB 521KB 521LB 521MB 521PB 521QB 521RB 521TB 521UB 521VB 521WB 521YB 521ZB 611AB 611CB 611GB 611MB 613AT 613BT 621AAB 621AB 621ACB 621AFB 621BB 621CAB 621DAB 621DB 621EB 621FB 621GB 621HB 621JB 621KB 621LB 621MB 621PB 621QB 621RB 621TB 621UB 621VB 621WB 621YB 621ZB	16.67	LUB	Left Wing Outboard Leading Edge Torque Tube Supports and Couplings



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01014014	6000 FC 1125 DY	6000 FC 1125 DY	12-008-00-12	12-008-00	0.70	511 513 521 611 613 621	511AB 511CB 511GB 511MB 513AT 513BT 521AAB 521AB 521ACB 521AFB 521BB 521DB 521EB 521FB 521GB 521HB 521JB 521KB 521LB 521MB 521PB 521QB 521RB 521TB 521UB 521VB 521WB 521YB 521ZB 611AB 611CB 611GB 611MB 613AT 613BT 621AAB 621AB 621ACB 621AFB 621BB 621CAB 621DAB 621DB 621EB 621FB 621GB 621HB 621JB 621KB 621LB 621MB 621PB 621QB 621RB 621TB 621UB 621VB 621WB 621YB 621ZB	16.67	LUB	Right Wing Outboard Leading Edge Torque Tube Supports and Couplings
01014014	6000 FC 1125 DY	6000 FC 1125 DY	12-008-01-01	12-008-01	1.10	121 122		0.00	LUB	Forward Cargo Compartment Torque Tube Supports and Couplings
01014014	6000 FC 1125 DY	6000 FC 1125 DY	12-018-00-01	12-018-00	0.10	513 613		0.00	LUB	Left Wing Krueger Flap Drive Arm Bearing
01014014	6000 FC 1125 DY	6000 FC 1125 DY	12-018-00-02	12-018-00	0.10	513 613		0.00	LUB	Right Wing Krueger Flap Drive Arm Bearing



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01014014	6000 FC 1125 DY	6000 FC 1125 DY	12-030-00-01	12-030-00	1.75	143 144 550 560 571 573 576 577 650 660 671 673 676 677		0.00	LUB	Left Wing Trailing Edge Torque Tube and Torque Tube Supports
01014014	6000 FC 1125 DY	6000 FC 1125 DY	12-030-00-02	12-030-00	1.75	143 144 550 560 571 573 576 577 650 660 671 673 676 677		0.00	LUB	Right Wing Trailing Edge Torque Tube and Torque Tube Supports
01014014	6000 FC 1125 DY	6000 FC 1125 DY	12-106-00-01	12-106-00	0.35	831 832 833 834 835 841 842 843 844 845	831 832 833 834 835 841 842 843 844 845	0.40	LUB	Passenger Entry Door Mechanisms
01014014	6000 FC 1125 DY	6000 FC 1125 DY	12-110-00-01	12-110-00	0.10	112	112AL	0.02	LUB	Forward Access Door Latch Pin
01014014	6000 FC 1125 DY	6000 FC 1125 DY	12-112-00-01	12-112-00	0.10	117	117AL	0.02	LUB	Main Equipment Center Access Door Latch Pin



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01014014	24000 FH	24000 FH	20-010-00-01	20-010-00	0.60	112 115 116 117 118 141 142 151 152 161 162	112AL 117AL	0.04	DET	Primary Flight Control and Brake Control Cables Turns
01014014	24000 FH	24000 FH	20-010-00-02	20-010-00	0.60	112 115 116 117 118 141 142 151 152 161 162	112AL 117AL	0.04	DET	Primary Flight Control and Brake Control Cables
01014014	24000 FH	24000 FH	20-010-00-03	20-010-00	0.60	112 115 116 117 118 141 142 151 152 161 162	112AL 117AL	0.04	DET	Primary Flight Control and Brake Control Cable Turns
01014014	24000 FH	24000 FH	20-010-00-04	20-010-00	0.60	112 115 116 117 118 141 142 151 152 161 162	112AL 117AL	0.04	DET	Primary Flight Control Cable Turns



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01014014	24000 FH	24000 FH	20-010-00-05	20-010-00	0.60	112 115 116 117 118 141 142 151 152 161 162	112AL 117AL	0.04	DET	Primary Flight Control Cable Turns
01014014	24000 FH	24000 FH	20-012-00-01	20-012-00	0.75	112 115 116 117 118	112AL 117AL	0.04	DET	Nose Gear Steering Control Cable Turns
01014014	24000 FH	24000 FH	20-012-00-02	20-012-00	0.75	112 115 116 117 118	112AL 117AL	0.04	DET	Nose Gear Steering Control Cable Turns
01014014	24000 FH	24000 FH	20-015-00-01	20-015-00	0.55	112 115 116 117 118 121 122 125 126 131 132 141 142 151 152 161 162 165 166	112AL 117AL	0.04	DET	Primary Flight Control and Brake Control Cables - straight runs



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01014014	24000 FH	24000 FH	20-015-00-02	20-015-00	0.55	112 115 116 117 118 121 122 125 126 131 132 141 142 151 152 161 162 165 166	112AL 117AL	0.04	DET	Primary Flight Control and Brake Control Cables - straight runs
01014014	24000 FH	24000 FH	20-015-00-03	20-015-00	0.55	112 115 116 117 118 121 122 125 126 131 132 141 142 151 152 161 162 165 166	112AL 117AL	0.04	DET	Primary Flight Control and Brake Control Cables - Straight Runs



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01014014	24000 FH	24000 FH	20-015-00-04	20-015-00	0.55	112 115 116 117 118 121 122 125 126 131 132 141 142 151 152 161 162 165 166	112AL 117AL	0.04	DET	Primary Flight Control and Brake Control Cables - Straight Runs
01014014	24000 FH	24000 FH	20-015-00-05	20-015-00	0.56	112 115 116 117 118 121 122 125 126 131 132 141 142 151 152 161 162 165 166	112AL 117AL	0.04	DET	Primary Flight Control and Brake Control Cable - Straight Runs





## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01014014	24000 FH	24000 FH	20-015-00-06	20-015-00	0.56	112 115 116 117 118 121 122 125 126 131 132 141 142 151 152 161 162 165 166	112AL 117AL	0.04	DET	Primary Flight Control and Brake Control Cable - Straight Runs
01014014	24000 FH	24000 FH	20-015-00-07	20-015-00	0.56	112 115 116 117 118 121 122 125 126 131 132 141 142 151 152 161 162 165 166	112AL 117AL	0.04	DET	Primary Flight Control Cables - Straight Runs



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01014014	24000 FH	24000 FH	20-015-00-08	20-015-00	0.56	112 115 116 117 118 121 122 125 126 131 132 141 142 151 152 161 162 165 166	112AL 117AL	0.04	DET	Primary Flight Control Cables - Straight Runs
01014014	24000 FH	24000 FH	20-015-00-09	20-015-00	0.56	112 115 116 117 118 121 122 125 126 131 132 141 142 151 152 161 162 165 166	112AL 117AL	0.04	DET	Primary Flight Control Cables in Fuselage - Straight Runs
01014014	24000 FH	24000 FH	20-018-00-01	20-018-00	1.25	112 115 116 117 118	112AL 117AL	0.04	DET	Nose Gear Steering Control Cables - straight runs



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01014014	24000 FH	24000 FH	20-018-00-02	20-018-00	1.25	112 115 116 117 118	112AL 117AL	0.04	DET	Nose Gear Steering Control Cables - straight runs
01014014	24000 FH	24000 FH	20-110-00-01	20-110-00	0.56	143 144 311 312 551 552 561 651 652 661	311BL 551AB 551BB 551DB 551EB 552HB 552LB 561AB 561BB 561CB 651AB 651BB 651DB 651EB 652HB 652LB 661AB 661BB 661CB	8.14	DET	Primary Flight Control Cables - Protected Unpressurized Areas
01014014	24000 FH	24000 FH	20-110-00-02	20-110-00	0.56	143 144 311 312 551 552 561 651 652 661	311BL 551AB 551BB 551DB 551EB 552HB 552LB 561AB 561BB 561CB 651AB 651BB 651DB 651EB 652HB 652LB 661AB 661BB 661CB	8.14	DET	Primary Flight Control Cables - Protected Unpressurized Areas
01014014	24000 FH	24000 FH	20-110-00-03	20-110-00	0.56	143 144 311 312 551 552 561 651 652 661	311BL 551AB 551BB 551DB 551EB 552HB 552LB 561AB 561BB 561CB 651AB 651BB 651DB 651EB 652HB 652LB 661AB 661BB 661CB	8.14	DET	Primary Flight Control Cables - Protected Unpressurized Areas



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01014014	24000 FH	24000 FH	20-110-00-04	20-110-00	0.56	143 144 311 312 551 552 561 651 652 661	311BL 551AB 551BB 551DB 551EB 552HB 552LB 561AB 561BB 561CB 651AB 651BB 651DB 651EB 652HB 652LB 661AB 661BB 661CB	8.14	DET	Primary Flight Control Cables - Protected Unpressurized Areas
01014014	24000 FH	24000 FH	20-110-00-05	20-110-00	0.56	143 144 311 312 551 552 561 651 652 661	311BL 551AB 551BB 551DB 551EB 552HB 552LB 561AB 561BB 561CB 651AB 651BB 651DB 651EB 652HB 652LB 661AB 661BB 661CB	8.14	DET	Primary Flight Control Cables - PROTECTED/UNPROTECTED UNPRESSURIZED AREAS
01014014	1125 DY	1125 DY	20-251-10-01	20-251-10	0.80	411 430 511	413AL 414AR 415AL 416AR 431DT 431ET 431FL 431FR 431FT 511AB 511CB 511DB 511EB 511FB 511GB 511HB 511JB 511KB 511LB 511MB 511NB 511PB 511QB	9.93	DET	FOIL/MESH PANELS; ENGINE COWLS, STRUT, LEADING EDGE
01014014	1125 DY	1125 DY	20-251-20-01	20-251-20	0.80	421 440 611	423AL 424AR 425AL 426AR 441DT 441ET 441FL 441FR 441FT 611AB 611CB 611DB 611EB 611FB 611GB 611HB 611JB 611KB 611LB 611MB 611NB 611PB 611QB	9.69	DET	FOIL/MESH PANELS; ENGINE COWLS, STRUT, LEADING EDGE



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01014014	6000 FC 1125 DY	6000 FC 1125 DY	20-642-00-01	20-642-00	0.10	143	732	0.04	GVI	Forward Bulkhead Left Main Landing Gear Wheel Well
01014014	6000 FC 1125 DY	6000 FC 1125 DY	20-644-00-01	20-644-00	0.10	144	742	0.04	GVI	Forward Bulkhead Right Main Landing Gear Wheel Well
01014014	8000 FC 1500 DY	8000 FC 1500 DY	20-648-00-01	20-648-00	0.50	121 122	821	0.10	GVI	Forward Cargo Power Drive Unit Wire Bundles
01014014	8000 FC 1500 DY	8000 FC 1500 DY	20-650-00-01	20-650-00	0.50	121 122	821	0.10	RST	Areas Behind the FWD Cargo Compartment Sidewalls
01014014	8000 FC 1500 DY	8000 FC 1500 DY	20-658-00-01	20-658-00	0.25	125 126	121EZ 121FZ 121TW	0.00	RST	Area Behind the Forward Cargo Compartment
01014014	8000 FC 1500 DY	8000 FC 1500 DY	20-665-00-01	20-665-00	0.50	151 152	823 824	0.20	GVI	Aft Cargo Power Drive Unit Wire Bundles
01014014	8000 FC 1500 DY	8000 FC 1500 DY	20-700-00-01	20-700-00	0.25	221 222		0.00	RST	Areas Behind the Passenger Compartment Air Grilles
01014014	8000 FC 1500 DY	8000 FC 1500 DY	20-704-00-01	20-704-00	0.20	221 222		0.00	GVI	Wiring Behind Passenger Compartment Air Grilles
01014014	8000 FC 1500 DY	8000 FC 1500 DY	20-716-00-01	20-716-00	0.15	221 222 231 232		0.00	RST	Area Around the Video Control Center
01014014	8000 FC 1500 DY	8000 FC 1500 DY	20-734-00-01	20-734-00	0.50	118	118AF	0.00	GVI	External Power Receptacle in the Main Equipment Center.
01014014	8000 FC 1500 DY	8000 FC 1500 DY	20-742-00-01	20-742-00	0.25	231 232		0.00	RST	Areas Behind the Passenger Compartment Air Grilles
01014014	8000 FC 1500 DY	8000 FC 1500 DY	20-750-00-01	20-750-00	0.25	231 232		0.00	GVI	Wiring Behind Passenger Compartment Air Grilles
01014014	8000 FC 1500 DY	8000 FC 1500 DY	20-754-00-01	20-754-00	0.25	241 242		0.00	RST	Areas Behind the Passenger Compartment Air Grilles
01014014	8000 FC 1500 DY	8000 FC 1500 DY	20-758-00-01	20-758-00	0.20	241 242		0.00	GVI	Wiring Behind Passenger Compartment Air Grilles
01014014	8000 FC 1500 DY	8000 FC 1500 DY	20-766-00-01	20-766-00	0.25	251 252		0.00	RST	Areas Behind the Passenger Compartment Air Grilles
01014014	8000 FC 1500 DY	8000 FC 1500 DY	20-774-00-01	20-774-00	0.20	251 252		0.00	GVI	Wiring Behind Passenger Compartment Air Grilles



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01014014	8000 FC 1500 DY	8000 FC 1500 DY	20-778-00-01	20-778-00	0.25	261 262	315AL 315BL 316AR 316BR  413AL 414AR 415AL 416AR  423AL 424AR 425AL 426AR          195EL 196ER	0.00	RST	Areas Behind the Passenger Compartment Air Grilles
01014014	8000 FC 1500 DY	8000 FC 1500 DY	20-782-00-01	20-782-00	0.20	261 262		0.00	GVI	Wiring Behind Passenger Compartment Air Grilles
01014014	8000 FC 1500 DY	8000 FC 1500 DY	20-794-00-01	20-794-00	0.50	315 316		0.18	DET	APU and APU Starter Power Feeders
01014014	6000 FC 1125 DY	6000 FC 1125 DY	20-800-00-01	20-800-00	0.25	411		0.90	DET	ENGINE IDG AND BACKUP GENERATOR POWER FEEDERS - LEFT ENGINE
01014014	6000 FC 1125 DY	6000 FC 1125 DY	20-802-00-01	20-802-00	0.25	421		0.90	DET	ENGINE IDG AND BACKUP GENERATOR POWER FEEDERS - RIGHT ENGINE
01014014	18000 FH	18000 FH	21-048-00-01	21-048-00	0.25	211 212		0.00	OPC	E/E Cooling System Override Switch
01014014	18000 FH	18000 FH	21-055-00-01	21-055-00	1.00	212		0.00	FNC	Condenser/Reheater
01014014	18000 FH	18000 FH	21-110-00-01	21-110-00	0.75	121		0.00	FNC	Cabin Positive Pressure Relief Valves - On-aircraft
01014014	18000 FH	18000 FH	21-110-00-02	21-110-00	0.75	121		0.00	FNC	Cabin Positive Pressure Relief Valves - Off-aircraft
01014014	18000 FH	18000 FH	21-120-00-01	21-120-00	0.50	121 821		0.00	DIS	Cabin Positive Pressure Relief Filters
01014014	24000 FH	24000 FH	21-130-00-01	21-130-00	0.10	211 212		0.00	OPC	AFT and Bulk Cargo Temperature Selector Switches
01014014	15000 FH	15000 FH	21-240-00-01	21-240-00	0.50	135 136 212		0.14	RST	Ozone Converters
01014014	18000 FH	18000 FH	23-010-00-01	23-010-00	0.75	211 212 215 216 221 222 231 232		0.00	FNC	Passenger Address System



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01014014	18000 FH	18000 FH	23-010-00-02	23-010-00	0.75	211 212 215 216 221 222 231 232		0.00	FNC	Personnel Address System
01014014	18000 FH	18000 FH	23-060-00-01	23-060-00	2.00	300 500 600		0.00	GVI	Static Dischargers
01014014	1125 DY	1125 DY	23-080-00-01	23-080-00	1.00	264		0.00	FNC	Voice Recorder System - Four Channel Operation
01014014	1125 DY	1125 DY	23-100-00-01	23-100-00	0.50	264		0.00	OPC	Voice Recorder System - Under Water Locator Beacon
01014014	1125 DY	1125 DY	23-100-00-02	23-100-00	0.50	264		0.00	OPC	Voice Recorder System - Under Water Locator Beacon
01014014	14000 FH 1000 DY	14000 FH 1000 DY	24-201-00-01	24-201-00	0.10	117 118	118AR	0.02	FNC	Airplane External Power Receptacle Neutral Pin Continuity to Airframe Ground
01014014	4000 FC	4000 FC	25-055-00-01	25-055-00	0.40	220 230 240 250 260		0.00	OPC	Passenger Compartment Articulating Seats
01014014	1125 DY	1125 DY	25-062-00-01	25-062-00	0.25	200	833	0.04	RST	Life Raft
01014014	18000 FH	18000 FH	26-090-00-01	26-090-00	0.34	122 211 212	117AL 821	0.12	OPC	Engine Fire Switches
01014014	18000 FH	18000 FH	26-090-00-02	26-090-00	0.33	122 211 212	117AL 821	0.12	OPC	Engine Fire Switches
01014014	18000 FH	18000 FH	26-090-00-03	26-090-00	0.33	122 211 212	117AL 821	0.12	OPC	Engine Fire Switches
01014014	18000 FH	18000 FH	26-200-00-01	26-200-00	1.00	122 152 212	117AL 821 823 824	0.32	OPC	Cargo Fire Extinguishing Arm & Discharge Switches



# 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01014014	20000 FH	20000 FH	27-170-00-01	27-170-00	1.00	311 552 561 652 661	311BL 552HB 552LB 652LB	1.68	FNC	Left Wing Aileron and Flaperon System Hydraulic Fuses
01014014	20000 FH	20000 FH	27-170-00-02	27-170-00	1.00	311 552 561 652 661	311BL 552HB 552LB 652LB	1.68	FNC	Right Wing Aileron and Flaperon System Hydraulic Fuses
01014014	20000 FH	20000 FH	27-170-00-03	27-170-00	1.00	311 552 561 652 661	311BL 552HB 552LB 652LB	1.68	FNC	Rudder System Hydraulic Fuse
01014014	24000 FH	24000 FH	27-180-00-01	27-180-00	0.30	311	311BL	0.04	FNC	Rudder Check Valve
01014014	15000 FH	15000 FH	27-200-00-01	27-200-00	0.30	211 212		0.00	FNC	Rudder Power Control Units
01014014	24000 FH	24000 FH	27-220-00-01	27-220-00	0.50	335 336 345 346	335EB 335EXB 335FB 345EB 345EXB 345FB	2.45	OPC	Elevator Power Control Units
01014014	18000 FH	18000 FH	27-240-00-01	27-240-00	2.00	336 346	112AL	0.02	FNC	Elevator Power Control Unit Bearings
01014014	24000 FH	24000 FH	27-320-00-01	27-320-00	1.50	567 667		0.00	FNC	Left Wing TE Flap No-Back Brakes
01014014	24000 FH	24000 FH	27-320-00-02	27-320-00	1.50	567 667		0.00	FNC	Right Wing TE Flap No-Back Brakes
01014014	24000 FH	24000 FH	27-350-00-01	27-350-00	2.00	113 114 144 197	117AL	0.02	OPC	Autoslat Priority Valves - Main Landing Gear
01014014	18000 FH	18000 FH	27-360-00-01	27-360-00	0.50	212 522 526 622 626	526CB 626CB	0.42	OPC	Left Leading Edge Slat Skew/Loss Cable





## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01014014	18000 FH	18000 FH	27-360-00-02	27-360-00	0.50	212 522 526 622 626	526CB 626CB	0.42	OPC	Right Leading Edge Slat Skew/Loss Cable
01014014	18000 FH	18000 FH	27-430-00-01	27-430-00	2.00	211 212 325 326		0.00	FNC	Rudder Power Control Unit
01014014	1125 DY	1125 DY	28-022-60-01	28-022-60	0.15	117 118 531 533 551 631 633 651		0.00	OPC	GFI Relay Check
01014014	1125 DY	1125 DY	28-022-60-02	28-022-60	0.15	117 118 531 533 551 631 633 651		0.00	OPC	GFI Relay Check
01014014	24000 FH	24000 FH	28-050-00-01	28-050-00	1.00	210 521	117AL 521DB	0.04	OPC	Fuel Jettison System
01014014	18000 FH	18000 FH	29-030-00-01	29-030-00	1.50	211 212		0.00	FNC	Hydraulic System Gross Internal Leakage
01014014	15000 FH	15000 FH	29-140-00-01	29-140-00	0.67	144 434 444	434CL 434CR 444CL 444CR	0.08	RST	Center Hydraulic System Reservoir Pressurization Module
01014014	15000 FH	15000 FH	29-140-00-02	29-140-00	0.66	144 434 444	434CL 434CR 444CL 444CR	0.08	RST	Left Hydraulic System Reservoir Pressurization Module
01014014	15000 FH	15000 FH	29-140-00-03	29-140-00	0.67	144 434 444	434CL 434CR 444CL 444CR	0.08	RST	Right Hydraulic System Reservoir Pressurization Module
01014014	1125 DY	1125 DY	31-010-00-01	31-010-00	0.25	264		0.00	FNC	Flight Data Recorder System



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01014014	1125 DY	1125 DY	31-010-00-02	31-010-00	0.25	264		0.00	FNC	Flight Data Recorder System
01014014	1125 DY	1125 DY	31-010-00-03	31-010-00	0.25	264		0.00	FNC	Flight Data Recorder System
01014014	1125 DY	1125 DY	31-010-00-04	31-010-00	0.25	264		0.00	FNC	Flight Data Recorder System
01014014	1125 DY	1125 DY	31-030-00-01	31-030-00	0.50	264		0.00	OPC	Flight Data Recorder Underwater Locator Beacon (ULB)
01014014	1125 DY	1125 DY	31-030-00-02	31-030-00	0.50	264		0.00	OPC	Flight Data Recorder Underwater Locator Beacon (ULB)
01014014	18000 FH	18000 FH	32-160-00-01	32-160-00	2.00	211 731 741	713 714 715 716	0.00	FNC	Brake Accumulator
01014014	6000 FC 1125 DY	6000 FC 1125 DY	32-320-00-01	32-320-00	0.05	113 114 711		0.00	GVI	Nose Landing Gear Mechanisms
01014014	6000 FC 1125 DY	6000 FC 1125 DY	32-802-00-01	32-802-00	1.00	711 713 714 715 716		0.16	GVI	Nose Landing Gear and Landing Gear Doors
01014014	6000 FC 1125 DY	6000 FC 1125 DY	32-806-01-01	32-806-01	1.50	731 732 733 734 735		0.65	GVI	Left Main Landing Gear and Landing Gear Doors
01014014	6000 FC 1125 DY	6000 FC 1125 DY	32-810-02-01	32-810-02	1.50	741 742 743 744 745		0.65	GVI	Right Main Landing Gear and Landing Gear Doors
01014014	2 YR	2 YR	34-020-00-01	34-020-00	0.40	211 212	742 743 744 745	0.00	FNC	ATC Transponder System
01014014	2 YR	2 YR	34-020-00-02	34-020-00	0.40	211 212		0.00	FNC	ATC Transponder System
01014014	18000 FH	18000 FH	35-140-00-01	35-140-00	1.00	152		0.00	OPC	Passenger Gaseous Oxygen System Flow Control Units
01014014	24000 FH	24000 FH	36-010-00-01	36-010-00	2.00	411 421		0.00	FNC	Engine Air Supply Manifold



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01014014	18000 FH	18000 FH	38-030-00-01	38-030-00	0.50	124 163	122DR 163AL 821 825	0.23	FNC	Waste Drain Ball Valve & Fitting Seals (Not applicable to the 777F)
01014014	24000 FH	24000 FH	38-120-00-01	38-120-00	1.00	166	825	0.09	OPC	Potable Water Pressure Relief Valve
01014014	15000 FH	15000 FH	47-100-00-01	47-100-00	1.50	191	191NL	0.39	RST	Restore the Ozone Converter (off-aircraft).
01014014	15000 FH	15000 FH	47-110-00-01	47-110-00	2.50	191	191QL	0.36	RST	Clean the Primary Heat Exchanger (off-aircraft).
01014014	15000 FH	15000 FH	47-120-00-01	47-120-00	2.50	191	191QL	0.36	FNC	Functionally check the Regenerative Heat Exchanger (off-aircraft).
01014014	15000 FH	15000 FH	47-130-00-01	47-130-00	1.50	196	196CR	0.04	FNC	Functionally Check the Filter Differential Pressure Sensor Switch (off-aircraft).
01014014	15000 FH	15000 FH	47-140-00-01	47-140-00	0.50	192	192LR	0.45	VCK	Visually Check for Fluid Accumulation Through the Drain Valve or Drain Cap.
01014014	15000 FH	15000 FH	47-150-00-01	47-150-00	3.00	192 600	192NR 192PR 192QR 611AB 611CB	1.90	DET	Inspect (detailed) the Nitrogen Enriched Air (NEA) distribution lines
01014014	6000 FC 1125 DY	6000 FC 1125 DY	52-130-01-01	52-130-01	1.00	831 832 834 835 841 842 844 845		0.00	DET	Passenger Entry Door Girt Bar Mechanism Interlock
01014014	1125 DY	1125 DY	52-160-00-01	52-160-00	0.50	831 832 834 835 841 842 844 845		0.00	FNC	Passenger Entry Door EPAS Circuitry
01014014	1125 DY	1125 DY	52-160-00-02	52-160-00	0.50	831 832 834 835 841 842 844 845		0.00	FNC	Passenger Entry Door EPAS Circuitry



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01014014	1125 DY	1125 DY	52-160-00-03	52-160-00	0.50	831 832 834 835 841 842 844 845		0.00	FNC	Passenger Entry Door EPAS Circuitry
01014014	1125 DY	1125 DY	52-160-00-04	52-160-00	0.50	831 832 834 835 841 842 844 845		0.00	FNC	Passenger Entry Door EPAS Circuitry
01014014	6000 FC 1125 DY	6000 FC 1125 DY	52-170-01-01	52-170-01	2.00	831 832 834 835 841 842 844 845		0.00	FNC	Passenger Entry Door Mechanisms
01014014	6000 FC 1125 DY	6000 FC 1125 DY	52-175-00-01	52-175-00	0.50	833 843		0.00	FNC	No. 3 Over-Wing Door Mechanisms
01014014	6000 FC 1125 DY	6000 FC 1125 DY	52-180-00-01	52-180-00	2.00	821	821	0.10	OPC	Forward Large Cargo Door Manual Drive Mechanism & Lift PDU Brake
01014014	6000 FC 1125 DY	6000 FC 1125 DY	52-185-00-01	52-185-00	2.00	824	824	0.10	OPC	AFT Large Cargo Door Manual Drive Mechanism & Lift PDU Brake
01014014	6000 FC 1125 DY	6000 FC 1125 DY	52-210-00-01	52-210-00	0.50	821	821	0.10	OPC	Forward Large Cargo Door Ditching Interlock Mechanism
01014014	6000 FC 1125 DY	6000 FC 1125 DY	52-215-00-01	52-215-00	0.50	824	824	0.10	OPC	AFT Large Cargo Door Ditching Interlock Mechanism
01014014	6000 FC 1125 DY	6000 FC 1125 DY	52-220-00-01	52-220-00	3.00	823		0.00	OPC	AFT Small Cargo Door Hinge Power Drive Unit and Manual Drive Mechanism
01014014	6000 FC 1125 DY	6000 FC 1125 DY	52-240-00-01	52-240-00	0.25	825	825	0.09	DET	Bulk Cargo Door Latch Mechanism



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01014014	6000 FC 1125 DY	6000 FC 1125 DY	52-260-00-01	52-260-00	0.10	211 831 832 834 835 841 842 844 845		0.00	OPC	Passenger Entry Door Closed Proximity Sensors
01014014	6000 FC 1125 DY	6000 FC 1125 DY	52-265-00-01	52-265-00	0.10	211 833 843		0.00	OPC	No. 3 Over-Wing Doors Closed Proximity Sensors
01014014	1125 DY	1125 DY	52-310-00-01	52-310-00	0.50	211 212		0.00	OPC	Flight Deck Door Pressure Sensor
01014014	6000 FC 1125 DY	6000 FC 1125 DY	52-502-00-01	52-502-00	0.30	821	821	0.10	DET	Forward Large Cargo Door
01014014	6000 FC 1125 DY	6000 FC 1125 DY	52-510-00-01	52-510-00	0.30	824	824	0.10	DET	Aft Large Cargo Door
01014014	1125 DY 2500 FC	1125 DY 2500 FC	52-550-00-01	52-550-00	0.50	836	836	0.20	DET	Main Deck Cargo Door
01014014	6000 FC 1125 DY	6000 FC 1125 DY	52-802-00-01	52-802-00	0.50	821	821	0.10	GVI	Forward Large Cargo Door
01014014	6000 FC 1125 DY	6000 FC 1125 DY	52-806-00-01	52-806-00	0.40	823	823	0.10	GVI	Aft Small Cargo Door
01014014	6000 FC 1125 DY	6000 FC 1125 DY	52-810-00-01	52-810-00	0.50	824	824	0.10	GVI	Aft Large Cargo Door
01014014	6000 FC 1125 DY	6000 FC 1125 DY	52-814-00-01	52-814-00	0.20	825	825	0.09	GVI	Bulk Cargo Door
01014014	6000 FC 1125 DY	6000 FC 1125 DY	52-816-01-01	52-816-01	0.40	831	831	0.04	GVI	Left No. 1 Passenger Entry Door - Section 41
01014014	6000 FC 1125 DY	6000 FC 1125 DY	52-820-01-01	52-820-01	0.40	832	832	0.04	GVI	Left No. 2 Passenger Entry Door - Section 43
01014014	6000 FC 1125 DY	6000 FC 1125 DY	52-824-01-01	52-824-01	0.40	833	833	0.04	GVI	Left No. 3 Overwing Door - Section 44
01014014	6000 FC 1125 DY	6000 FC 1125 DY	52-827-01-01	52-827-01	0.40	834	834	0.04	GVI	Left No. 4 Passenger Entry Door - Section 46



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01014014	6000 FC 1125 DY	6000 FC 1125 DY	52-831-01-01	52-831-01	0.40	835	835	0.04	GVI	Left No. 5 Passenger Entry Door - Section 47
01014014	6000 FC 1125 DY	6000 FC 1125 DY	52-834-02-01	52-834-02	0.40	841	841	0.04	GVI	Right No. 1 Passenger/Crew Entry Door - Section 41
01014014	6000 FC 1125 DY	6000 FC 1125 DY	52-840-02-01	52-840-02	0.40	842	842	0.04	GVI	Right No. 2 Passenger Entry Door - Section 43
01014014	6000 FC 1125 DY	6000 FC 1125 DY	52-844-02-01	52-844-02	0.40	843	843	0.04	GVI	Right No. 3 Overwing Door - Section 44
01014014	6000 FC 1125 DY	6000 FC 1125 DY	52-849-02-01	52-849-02	0.40	844	844	0.04	GVI	Right No. 4 Passenger Entry Door - Section 46
01014014	6000 FC 1125 DY	6000 FC 1125 DY	52-853-02-01	52-853-02	0.40	845	845	0.04	GVI	Right No. 5 Passenger Entry Door - Section 47
01014014	6000 FC 1125 DY	6000 FC 1125 DY	53-509-01-01	53-509-01	0.20	122	821	0.10	GVI	Forward Cargo Compartment
01014014	6000 FC 1125 DY	6000 FC 1125 DY	53-518-00-01	53-518-00	0.20	143	732	0.04	DET	Main Landing Gear Wheel Well, Left
01014014	6000 FC 1125 DY	6000 FC 1125 DY	53-519-00-01	53-519-00	0.20	144	742	0.04	DET	Main Landing Gear Wheel Well, Right
01014014	6000 FC 1125 DY	6000 FC 1125 DY	53-522-01-01	53-522-01	0.30	152	823	0.10	GVI	Aft Cargo Compartment
01014014	6000 FC 1125 DY	6000 FC 1125 DY	53-523-01-01	53-523-01	0.30	152	824	0.10	GVI	Aft Cargo Compartment
01014014	6000 FC 1125 DY	6000 FC 1125 DY	53-529-01-01	53-529-01	0.10	154	823	0.10	GVI	Area Below Aft Cargo Compartment
01014014	6000 FC 1125 DY	6000 FC 1125 DY	53-530-01-01	53-530-01	0.50	154	824	0.10	GVI	Area Below Aft Cargo Compartment
01014014	6000 FC 1125 DY	6000 FC 1125 DY	53-553-00-01	53-553-00	0.40	221	831	0.04	GVI	Passenger Compartment - Left
01014014	6000 FC 1125 DY	6000 FC 1125 DY	53-554-00-01	53-554-00	0.60	222	841	0.04	GVI	Passenger Compartment - Right
01014014	6000 FC 1125 DY	6000 FC 1125 DY	53-564-00-01	53-564-00	0.20	231	832	0.04	GVI	Passenger Compartment - Left
01014014	6000 FC 1125 DY	6000 FC 1125 DY	53-565-00-01	53-565-00	0.20	232	842	0.04	GVI	Passenger Compartment - Right



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01014014	6000 FC 1125 DY	6000 FC 1125 DY	53-584-00-01	53-584-00	0.20	251	834	0.04	GVI	Passenger Compartment
01014014	6000 FC 1125 DY	6000 FC 1125 DY	53-585-00-01	53-585-00	0.30	252	844	0.04	GVI	Passenger Compartment
01014014	6000 FC 1125 DY	6000 FC 1125 DY	53-586-00-01	53-586-00	0.30	252	844	0.04	GVI	Passenger Compartment
01014014	6000 FC 1125 DY	6000 FC 1125 DY	53-602-00-01	53-602-00	0.20	261	835	0.04	GVI	Passenger Compartment
01014014	6000 FC 1125 DY	6000 FC 1125 DY	53-603-00-01	53-603-00	0.20	262	845	0.04	GVI	Passenger Compartment
01014014	6000 FC 1125 DY	6000 FC 1125 DY	53-611-00-01	53-611-00	0.70	131 132		0.00	GVI	Area above Wing Center Section
01014014	6000 FC 1125 DY	6000 FC 1125 DY	53-614-00-01	53-614-00	0.25	241 242	833 843	0.08	GVI	Passenger Compartment Left
01014014	6000 FC 1125 DY	6000 FC 1125 DY	53-614-00-02	53-614-00	0.25	241 242	833 843	0.08	GVI	Passenger Compartment Right



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01014014	6000 FC 1125 DY	6000 FC 1125 DY	53-800-00-01	53-800-00	0.00	100 110 120 121 122 123 124 139 149 151 152 153 154 161 162 163 164 165 166 191 192 195 196 197 198	112AL 117AL 825	0.13	GVI	Left Fuselage Lower Half - Section 41 & 43 - STA 92.5 to STA 858





## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01014014	6000 FC 1125 DY	6000 FC 1125 DY	53-800-00-02	53-800-00	0.00	100 110 120 121 122 123 124 139 149 151 152 153 154 161 162 163 164 165 166 191 192 195 196 197 198	112AL 117AL 825	0.13	GVI	Right Fuselage Lower Half - Section 41 & 43 - STA 92.5 to STA 858



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01014014	6000 FC 1125 DY	6000 FC 1125 DY	53-800-00-03	53-800-00	0.00	100 110 120 121 122 123 124 139 149 151 152 153 154 161 162 163 164 165 166 191 192 195 196 197 198	112AL 117AL 825	0.13	GVI	Lower Left Fuselage & Wing to Body Fairing - STA 858 to STA 1655



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01014014	6000 FC 1125 DY	6000 FC 1125 DY	53-800-00-04	53-800-00	0.00	100 110 120 121 122 123 124 139 149 151 152 153 154 161 162 163 164 165 166 191 192 195 196 197 198	112AL 117AL 825	0.13	GVI	Lower Right Fuselage & Wing to Body Fairing - STA 858 to STA 1655



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01014014	6000 FC 1125 DY	6000 FC 1125 DY	53-800-00-05	53-800-00	0.00	100 110 120 121 122 123 124 139 149 151 152 153 154 161 162 163 164 165 166 191 192 195 196 197 198	112AL 117AL 825	0.13	GVI	Lower Left Fuselage - STA 1655 to STA 2150



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01014014	6000 FC 1125 DY	6000 FC 1125 DY	53-800-00-06	53-800-00	0.00	100 110 120 121 122 123 124 139 149 151 152 153 154 161 162 163 164 165 166 191 192 195 196 197 198	112AL 117AL 825	0.13	GVI	Lower Right Fuselage - STA 1655 to STA 2150
01014014	6000 FC 1125 DY	6000 FC 1125 DY	53-804-00-01	53-804-00	0.25	111	111AL	0.13	GVI	Radome
01014014	6000 FC 1125 DY	6000 FC 1125 DY	53-806-00-01	53-806-00	0.70	112	112AL	0.02	GVI	Area Forward of Nose Landing Gear Wheel Well
01014014	6000 FC 1125 DY	6000 FC 1125 DY	53-810-00-01	53-810-00	1.00	113 114	713 714 715 716	0.16	GVI	Nose Gear Wheel Well (Inspection Accomplished from Within Wheel Well)
01014014	6000 FC 1125 DY	6000 FC 1125 DY	53-812-00-01	53-812-00	0.60	115 116	112AL 117AL	0.04	GVI	Area Above and Outboard of the Nose Landing Gear Wheel Well
01014014	6000 FC 1125 DY	6000 FC 1125 DY	53-814-00-01	53-814-00	1.00	117 118	117AL	0.02	GVI	Main Equipment Center
01014014	8000 FC 1500 DY	8000 FC 1500 DY	53-832-00-01	53-832-00	0.60	139	139AL 139BL 139CL 139DL	0.93	GVI	Forward Keel Beam
01014014	6000 FC 1125 DY	6000 FC 1125 DY	53-838-00-01	53-838-00	1.50	143	732	0.04	GVI	Left Main Landing Gear Wheel Well (Inspection accomplished within WW)



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01014014	6000 FC 1125 DY	6000 FC 1125 DY	53-842-00-01	53-842-00	1.50	144	742	0.04	GVI	Right Main Landing Gear Wheel Well (Inspection accomplished Within WW)
01014014	8000 FC 1500 DY	8000 FC 1500 DY	53-844-00-01	53-844-00	0.60	149	149AL 149BL 149CL	0.55	GVI	Aft Keel Beam
01014014	8000 FC 1500 DY	8000 FC 1500 DY	53-852-00-01	53-852-00	1.50	151 152	823	0.10	GVI	Aft Cargo Compartment
01014014	6000 FC 1125 DY	6000 FC 1125 DY	53-876-00-01	53-876-00	0.75	165 166	825	0.09	GVI	Area Aft of the Bulk Cargo Compartment
01014014	8000 FC 1500 DY	8000 FC 1500 DY	53-880-00-01	53-880-00	1.00	191	191GL 191JL 191KL 191PL 191RL	1.82	GVI	Forward Wing-To-Body Fairings - Left
01014014	8000 FC 1500 DY	8000 FC 1500 DY	53-882-00-01	53-882-00	1.00	192	192DR 192GR 192NR 192PR	1.80	GVI	Forward Wing-To-Body Fairings - Right
01014014	6000 FC 1125 DY	6000 FC 1125 DY	53-898-00-01	53-898-00	0.20	111 211 212		0.00	GVI	Left Upper Fuselage - Flight Compartment - STA 92.5 to STA 246
01014014	6000 FC 1125 DY	6000 FC 1125 DY	53-898-00-02	53-898-00	0.20	111 211 212		0.00	GVI	Right Upper Fuselage - Flight Compartment - STA 92.5 to STA 246
01014014	6000 FC 1125 DY	6000 FC 1125 DY	53-900-00-01	53-900-00	1.00	211 212	211AL 212AR	0.14	GVI	Flight Compartment
01014014	6000 FC 1125 DY	6000 FC 1125 DY	53-904-00-01	53-904-00	2.00	221 222	831 841	0.08	GVI	Passenger Compartment - Section 41
01014014	6000 FC 1125 DY	6000 FC 1125 DY	53-908-00-01	53-908-00	2.00	231 232	832 842	0.08	GVI	Passenger Compartment - Section 43
01014014	6000 FC 1125 DY	6000 FC 1125 DY	53-912-00-01	53-912-00	2.00	241 242		0.00	GVI	Passenger Compartment - Section 44
01014014	6000 FC 1125 DY	6000 FC 1125 DY	53-916-00-01	53-916-00	2.00	251 252	834 844	0.08	GVI	Passenger Compartment - Section 46
01014014	6000 FC 1125 DY	6000 FC 1125 DY	53-920-00-01	53-920-00	2.00	261 262	835 845	0.08	GVI	Passenger Compartment - Section 47
01014014	6000 FC 1125 DY	6000 FC 1125 DY	53-926-00-01	53-926-00	1.50	311 312	311BL	0.04	GVI	Fuselage Area Aft of Bulkhead - Inspection Accomplished within Fuselage



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01014014	6000 FC 1125 DY	6000 FC 1125 DY	54-824-01-01	54-824-01	0.30	432 433	413AL 414AR 415AL 415HB 415JB 415KB 416AR	0.96	GVI	Forward and Aft Torque Box - Left Nacelle Strut - Cowls Opened
01014014	6000 FC 1125 DY	6000 FC 1125 DY	54-826-01-01	54-826-01	0.40	432 433	413AL 414AR 415AL 415HB 415JB 415KB 416AR 432AL 432AR 432BL 432CL 432CR 432DR 432EL 432FR 432GL 433BR 433CL 433CR 433DL 433DR	2.36	GVI	Forward and Aft Torque Box - Left Nacelle Strut
01014014	6000 FC 1125 DY	6000 FC 1125 DY	54-828-01-01	54-828-01	0.40	434	434BL 434BR 434CL 434CR 434DL 434DR 434EL 434ER 434FB	1.41	GVI	Aft Strut Fairing - Left Nacelle Strut
01014014	6000 FC 1125 DY	6000 FC 1125 DY	54-834-02-01	54-834-02	0.30	442 443	423AL 424AR 425AL 425HB 425JB 425KB 426AR	0.96	GVI	Forward and Aft Torque Box - Right Nacelle Strut - Fan Cowls Opened
01014014	6000 FC 1125 DY	6000 FC 1125 DY	54-836-02-01	54-836-02	0.40	442 443	423AL 424AR 425AL 425HB 425JB 425KB 426AR 442AL 442AR 442BL 442CL 442CR 442DR 442EL 442FR 442GL 443BR 443CL 443CR 443DL 443DR	2.19	GVI	Forward and Aft Torque Box - Right Nacelle Strut
01014014	6000 FC 1125 DY	6000 FC 1125 DY	54-838-02-01	54-838-02	0.40	444	444BL 444BR 444CL 444CR 444DL 444DR 444EL 444ER 444FB	1.46	GVI	Aft Strut Fairing - Right Nacelle Strut
01014014	6000 FC 1125 DY	6000 FC 1125 DY	55-501-00-01	55-501-00	1.00	331 341	311BL	0.04	DET	Horizontal Stabilizer Center Section



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01014014	6000 FC 1125 DY	6000 FC 1125 DY	55-804-00-01	55-804-00	0.60	321		0.00	GVI	Vertical Stabilizer Leading Edge
01014014	6000 FC 1125 DY	6000 FC 1125 DY	55-812-00-01	55-812-00	0.10	323	322EL 322FL	1.96	GVI	Vertical Stabilizer - Front Spar to Rear Spar - Between Ribs 8 and 9
01014014	6000 FC 1125 DY	6000 FC 1125 DY	55-814-00-01	55-814-00	0.50	324		0.00	GVI	Vertical Stabilizer - Rear Spar to Trailing Edge
01014014	6000 FC 1125 DY	6000 FC 1125 DY	55-817-00-01	55-817-00	1.00	324	324AL 324CXL 324DXL 324GL	3.20	GVI	Vertical Stabilizer - Rear Spar to Trailing Edge
01014014	6000 FC 1125 DY	6000 FC 1125 DY	55-820-00-01	55-820-00	0.60	325		0.00	GVI	Rudder
01014014	6000 FC 1125 DY	6000 FC 1125 DY	55-822-00-01	55-822-00	0.30	326		0.00	GVI	Rudder Tab
01014014	6000 FC 1125 DY	6000 FC 1125 DY	55-824-00-01	55-824-00	0.30	327		0.00	GVI	Vertical Stabilizer Forward Tip
01014014	6000 FC 1125 DY	6000 FC 1125 DY	55-830-01-01	55-830-01	0.30	332		0.00	GVI	Left Horizontal Stabilizer - Leading Edge
01014014	6000 FC 1125 DY	6000 FC 1125 DY	55-838-01-01	55-838-01	0.40	335		0.00	GVI	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
01014014	6000 FC 1125 DY	6000 FC 1125 DY	55-838-03-02	55-838-03	0.20	334	335GXB	0.97	GVI	Left Horizontal Stabilizer - Front Spar to Rear Spar
01014014	6000 FC 1125 DY	6000 FC 1125 DY	55-841-00-01	55-841-00	1.00	335	335CB 335DB 335EXB 335GXB	3.09	GVI	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
01014014	6000 FC 1125 DY	6000 FC 1125 DY	55-844-01-01	55-844-01	0.60	336		0.00	GVI	Left Elevator
01014014	6000 FC 1125 DY	6000 FC 1125 DY	55-846-01-01	55-846-01	0.20	337		0.00	GVI	Left Horizontal Stabilizer Tip
01014014	6000 FC 1125 DY	6000 FC 1125 DY	55-850-02-01	55-850-02	0.30	342		0.00	GVI	Right Horizontal Stabilizer - Leading Edge
01014014	6000 FC 1125 DY	6000 FC 1125 DY	55-856-04-01	55-856-04	0.20	344	345GXB	0.63	GVI	Right Horizontal Stabilizer - Front Spar to Rear Spar
01014014	6000 FC 1125 DY	6000 FC 1125 DY	55-858-02-01	55-858-02	0.40	345		0.00	GVI	Right Horizontal Stabilizer - Rear Spar to Trailing Edge
01014014	6000 FC 1125 DY	6000 FC 1125 DY	55-861-00-01	55-861-00	1.00	345	345CB 345DB 345EXB 345GXB	2.62	GVI	Right Horizontal Stabilizer - Rear Spar to Trailing Edge





## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01014014	6000 FC 1125 DY	6000 FC 1125 DY	55-864-02-01	55-864-02	0.60	346	511AB 511CB 511DB 511FB 511HB 511JB 511KB 511LB 511NB 511PB 511QB	0.00	GVI	Right Elevator
01014014	6000 FC 1125 DY	6000 FC 1125 DY	55-866-02-01	55-866-02	0.20	347		0.00	GVI	Right Horizontal Stabilizer Tip
01014014	6000 FC 1125 DY	6000 FC 1125 DY	56-010-00-01	56-010-00	0.25	211 212		0.00	OPC	Flight Deck #2 Windows MICROSWITCH
01014014	1125 DY	1125 DY	56-020-00-01	56-020-00	0.50	211 212		0.00	LUB	Flight Deck Number 2 Windows Guide Bearings
01014014	1125 DY	1125 DY	56-030-00-01	56-030-00	0.30	211 212		0.00	OPC	Flight Deck Number 2 Windows Open/Close Function
01014014	8000 FC 1500 DY	8000 FC 1500 DY	57-630-00-01	57-630-00	1.50	131 132		0.00	GVI	Area Above Wing Center Section
01014014	6000 FC 1125 DY	6000 FC 1125 DY	57-804-01-01	57-804-01	1.00	510		5.75	GVI	Leading Edge to Front Spar - Inboard of Nacelle Strut - Left Wing
01014014	6000 FC 1125 DY	6000 FC 1125 DY	57-806-01-01	57-806-01	0.50	511		0.00	GVI	Leading Edge to Front Spar - Inboard of Nacelle Strut - Left Wing
01014014	6000 FC 1125 DY	6000 FC 1125 DY	57-808-01-01	57-808-01	0.10	512		0.00	GVI	Slat No. 7
01014014	6000 FC 1125 DY	6000 FC 1125 DY	57-810-01-01	57-810-01	0.20	513		0.00	GVI	Krueger Seal Flap/Nacelle Gap Cover Area - Left Wing
01014014	6000 FC 1125 DY	6000 FC 1125 DY	57-812-01-01	57-812-01	0.10	513		0.00	GVI	Krueger Seal Flap/Nacelle Gap Cover Area - Left Wing
01014014	6000 FC 1125 DY	6000 FC 1125 DY	57-814-01-01	57-814-01	0.50	521		0.00	GVI	Leading Edge to Front Spar - Outboard of Nacelle Strut - Left Wing



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01014014	6000 FC 1125 DY	6000 FC 1125 DY	57-817-01-01	57-817-01	1.50	520	521AAB 521AB 521ABB 521ACB 521AFB 521AHB 521BB 521DB 521EB 521GB 521HB 521JB 521MB 521NB 521PB 521RB 521SB 521TB 521WB 521XB 521YB	5.54	GVI	Leading Edge to Front Spar - Outboard of Nacelle Strut - Left Wing
01014014	6000 FC 1125 DY	6000 FC 1125 DY	57-818-01-01	57-818-01	0.60	522 523 524 525 526 527		0.00	GVI	Left Wing Outboard Leading Edge Slats Number 1 through 6
01014014	6000 FC 1125 DY	6000 FC 1125 DY	57-836-01-01	57-836-01	0.30	532	532AB	0.21	GVI	Left Wing Dry Bay
01014014	6000 FC 1125 DY	6000 FC 1125 DY	57-848-01-01	57-848-01	0.10	545		0.00	GVI	Left Wing Tip
01014014	6000 FC 1125 DY	6000 FC 1125 DY	57-852-01-01	57-852-01	0.30	551 552		0.00	GVI	Left Wing Fixed T.E. - Aft of Rear Spar, Inbd of Outbd Support Fairing
01014014	6000 FC 1125 DY	6000 FC 1125 DY	57-854-01-01	57-854-01	0.60	550	551AB 551BB 551CB 551DB 551EB 551FB	2.73	GVI	Rear Spar to Landing Gear Support Beam - Left Wing
01014014	6000 FC 1125 DY	6000 FC 1125 DY	57-856-01-01	57-856-01	0.40	550	552AB 552BB 552CB 552DB 552EB 552FB 552GB 552HB 552JB 552LB	4.42	GVI	Landing Gear Support Beam and Rear Spar to Trailing Edge - Left Wing
01014014	6000 FC 1125 DY	6000 FC 1125 DY	57-858-01-01	57-858-01	0.20	553 554		0.00	GVI	Inboard Spoilers Numbers 6 and 7
01014014	6000 FC 1125 DY	6000 FC 1125 DY	57-860-01-01	57-860-01	0.40	555 556		0.00	GVI	Inboard Trailing Edge Flaps - Left Wing
01014014	6000 FC 1125 DY	6000 FC 1125 DY	57-862-01-01	57-862-01	0.20	557		0.00	GVI	Left Wing Flaperon
01014014	6000 FC 1125 DY	6000 FC 1125 DY	57-864-01-01	57-864-01	0.50	561		0.00	GVI	Rear Spar to Trailing Edge - Outboard of Flaperon - Left Wing



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01014014	6000 FC 1125 DY	6000 FC 1125 DY	57-866-01-01	57-866-01	1.50	560	561AB 561BB 561CB 561DB 561EB 561FB 561GB 561HB 561JB 561KB 561LB 561MB 561NB 561PB 561QB 561RB 561SB	6.39	GVI	Rear Spar to Trailing Edge - Outboard of Flaperon - Left Wing
01014014	6000 FC 1125 DY	6000 FC 1125 DY	57-868-01-01	57-868-01	0.50	562 563 564 565 566		0.00	GVI	Outboard Spoilers Numbers 1 through 5
01014014	6000 FC 1125 DY	6000 FC 1125 DY	57-870-01-01	57-870-01	0.50	567		0.00	GVI	Left Wing Outboard Flap
01014014	6000 FC 1125 DY	6000 FC 1125 DY	57-872-01-01	57-872-01	0.30	568		0.00	GVI	Left Wing Aileron
01014014	6000 FC 1125 DY	6000 FC 1125 DY	57-874-01-01	57-874-01	0.10	571		0.00	GVI	Flap Support Fairing No. 4
01014014	8000 FC 1500 DY	8000 FC 1500 DY	57-876-01-01	57-876-01	0.15	571	571AB 571BB	0.46	GVI	Flap Support Fairing No. 4
01014014	6000 FC 1125 DY	6000 FC 1125 DY	57-878-01-01	57-878-01	0.10	572		0.00	GVI	Inboard Flap Center Track Fairing - Left Wing
01014014	6000 FC 1125 DY	6000 FC 1125 DY	57-880-01-01	57-880-01	0.25	573 574		0.00	GVI	Flap Support Fairing No. 3 and Inboard Flaperon Support Fairing
01014014	8000 FC 1500 DY	8000 FC 1500 DY	57-882-01-01	57-882-01	0.80	573 574	573AB 573BB 573CL 573CR 573EB	2.05	GVI	Flap Support Fairing No. 3 and Inboard Flaperon Support Fairing
01014014	6000 FC 1125 DY	6000 FC 1125 DY	57-884-01-01	57-884-01	0.10	575		0.00	GVI	Outboard Flaperon Support Fairing - Left Wing
01014014	6000 FC 1125 DY	6000 FC 1125 DY	57-886-01-01	57-886-01	0.20	576		0.00	GVI	Flap Support Fairing No. 2
01014014	8000 FC 1500 DY	8000 FC 1500 DY	57-888-01-01	57-888-01	0.70	576	576AB 576BB 576CL 576CR 576DB 576EB 576GL	2.19	GVI	Flap Support Fairing No. 2



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01014014	6000 FC 1125 DY	6000 FC 1125 DY	57-890-01-01	57-890-01	0.20	577		0.00	GVI	Flap Support Fairing No. 1
01014014	8000 FC 1500 DY	8000 FC 1500 DY	57-892-01-01	57-892-01	0.70	577	577AB 577BB 577CB 577DL 577DR 577EB 577GL	2.09	GVI	Flap Support Fairing No. 1
01014014	6000 FC 1125 DY	6000 FC 1125 DY	57-894-01-01	57-894-01	0.10	578		0.00	GVI	Outboard Auxiliary Support Fairing - Left Wing
01014014	6000 FC 1125 DY	6000 FC 1125 DY	57-896-02-01	57-896-02	1.00	610	611AB 611CB 611DB 611FB 611HB 611JB 611KB 611LB 611NB 611PB 611QB	5.79	GVI	Leading Edge to Front Spar - Inboard of Nacelle Strut - Right Wing
01014014	6000 FC 1125 DY	6000 FC 1125 DY	57-898-02-01	57-898-02	0.50	611		0.00	GVI	Leading Edge to Front Spar - Inboard of Nacelle Strut - Right Wing
01014014	6000 FC 1125 DY	6000 FC 1125 DY	57-900-02-01	57-900-02	0.10	612		0.00	GVI	Slat No. 8
01014014	6000 FC 1125 DY	6000 FC 1125 DY	57-902-02-01	57-902-02	0.20	613		0.00	GVI	Krueger Seal Flap/Nacelle Gap Cover Area - Right Wing
01014014	6000 FC 1125 DY	6000 FC 1125 DY	57-904-02-01	57-904-02	0.10	613		0.00	GVI	Krueger Seal Flap/Nacelle Gap Cover Area - Right Wing
01014014	6000 FC 1125 DY	6000 FC 1125 DY	57-906-02-01	57-906-02	0.50	621		0.00	GVI	Leading Edge to Front Spar - Outboard of Nacelle Strut - Right Wing
01014014	6000 FC 1125 DY	6000 FC 1125 DY	57-909-02-01	57-909-02	1.50	620	621AAB 621AB 621ABB 621ACB 621AFB 621AHB 621BB 621DB 621EB 621GB 621HB 621JB 621MB 621NB 621PB 621RB 621SB 621TB 621WB 621XB 621YB	5.57	GVI	Leading Edge to Front Spar - Outboard of Nacelle Strut - Right Wing



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01014014	6000 FC 1125 DY	6000 FC 1125 DY	57-910-02-01	57-910-02	0.60	622 623 624 625 626 627		0.00	GVI	Outboard Leading Edge Slats Number 9 through 14
01014014	6000 FC 1125 DY	6000 FC 1125 DY	57-928-02-01	57-928-02	0.30	632	632AB	0.21	GVI	Right Wing Dry Bay
01014014	6000 FC 1125 DY	6000 FC 1125 DY	57-940-02-01	57-940-02	0.10	645		0.00	GVI	Right Wing Tip
01014014	6000 FC 1125 DY	6000 FC 1125 DY	57-944-02-01	57-944-02	0.30	651 652		0.00	GVI	Right Wing Fixed T.E. - Aft of Rear Spar, Inbd of Outbd Support Fairing
01014014	6000 FC 1125 DY	6000 FC 1125 DY	57-946-02-01	57-946-02	0.60	650	651AB 651BB 651CB 651DB 651EB 651FB	2.73	GVI	Rear Spar to Landing Gear Support Beam - Right Wing
01014014	6000 FC 1125 DY	6000 FC 1125 DY	57-948-02-01	57-948-02	0.40	650	652AB 652BB 652CB 652DB 652EB 652FB 652GB 652HB 652JB 652LB	4.42	GVI	Landing Gear Support Beam and Rear Spar to Trailing Edge - Right Wing
01014014	6000 FC 1125 DY	6000 FC 1125 DY	57-950-02-01	57-950-02	0.20	653 654		0.00	GVI	Inboard Spoilers Numbers 8 and 9
01014014	6000 FC 1125 DY	6000 FC 1125 DY	57-952-02-01	57-952-02	0.40	655 656		0.00	GVI	Inboard Trailing Edge Flaps - Right Wing
01014014	6000 FC 1125 DY	6000 FC 1125 DY	57-954-02-01	57-954-02	0.20	657		0.00	GVI	Right Wing Flaperon
01014014	6000 FC 1125 DY	6000 FC 1125 DY	57-956-02-01	57-956-02	0.50	661		0.00	GVI	Rear Spar to Trailing Edge - Outboard of Flaperon - Right Wing
01014014	6000 FC 1125 DY	6000 FC 1125 DY	57-958-02-01	57-958-02	1.50	660	661AB 661BB 661CB 661DB 661EB 661FB 661GB 661HB 661JB 661KB 661LB 661MB 661NB 661PB 661QB 661RB 661SB	6.39	GVI	Rear Spar to Trailing Edge - Outboard of Flaperon - Right Wing



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01014014	6000 FC 1125 DY	6000 FC 1125 DY	57-960-02-01	57-960-02	0.50	662 663 664 665 666		0.00	GVI	Outboard Spoilers Numbers 10 through 14
01014014	6000 FC 1125 DY	6000 FC 1125 DY	57-962-02-01	57-962-02	0.50	667		0.00	GVI	Right Wing Outboard Flap
01014014	6000 FC 1125 DY	6000 FC 1125 DY	57-964-02-01	57-964-02	0.30	668		0.00	GVI	Right Wing Aileron
01014014	6000 FC 1125 DY	6000 FC 1125 DY	57-966-02-01	57-966-02	0.10	671		0.00	GVI	Flap Support Fairing No. 5
01014014	8000 FC 1500 DY	8000 FC 1500 DY	57-968-02-01	57-968-02	0.15	671	671AB 671BB	0.46	GVI	Flap Support Fairing No. 5
01014014	6000 FC 1125 DY	6000 FC 1125 DY	57-970-02-01	57-970-02	0.10	672		0.00	GVI	Inboard Flap Center Track Fairing - Right Wing
01014014	6000 FC 1125 DY	6000 FC 1125 DY	57-972-02-01	57-972-02	0.25	673 674		0.00	GVI	Flap Support Fairing No. 6 and Inbd Flaperon Support Fairing
01014014	8000 FC 1500 DY	8000 FC 1500 DY	57-974-02-01	57-974-02	0.10	673 674	673AB 673BB 673CL 673CR 673EB	2.05	GVI	Flap Support Fairing No. 6 and Inbd Flaperon Support Fairing
01014014	6000 FC 1125 DY	6000 FC 1125 DY	57-976-02-01	57-976-02	0.10	675		0.00	GVI	Outboard Flaperon Support Fairing - Right Wing
01014014	6000 FC 1125 DY	6000 FC 1125 DY	57-978-02-01	57-978-02	0.20	676		0.00	GVI	Flap Support Fairing No. 7
01014014	8000 FC 1500 DY	8000 FC 1500 DY	57-980-02-01	57-980-02	0.70	676	676AB 676BB 676CL 676CR 676DB 676EB 676GR	2.19	GVI	Flap Support Fairing No. 7
01014014	6000 FC 1125 DY	6000 FC 1125 DY	57-982-02-01	57-982-02	0.20	677		0.00	GVI	Flap Support Fairing No. 8
01014014	8000 FC 1500 DY	8000 FC 1500 DY	57-984-02-01	57-984-02	0.70	677	677AB 677BB 677CB 677DL 677DR 677EB 677GR	2.09	GVI	Flap Support Fairing No. 8
01014014	6000 FC 1125 DY	6000 FC 1125 DY	57-986-02-01	57-986-02	0.10	678		0.00	GVI	Outboard Auxiliary Support Fairing - Right Wing



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01015009	15000 FH	9000 FH	78-010-01-01	78-010-01	0.80	411	413AL 414AR	0.36	DET	Inspect Detailed T/R Blocker Door Hinges, Drag Links and Attachments - Left (for GE90-70/80/90 series engines only)
01015009	15000 FH	9000 FH	78-010-02-02	78-010-02	0.80	421	423AL 424AR	0.36	DET	Inspect Detailed T/R Blocker Door Hinges, Drag Links and Attachments - Right (for GE90-70/80/90 series engines only)
01015015	6000 FC 1125 DY	6000 FC 1125 DY	12-008-01-02	12-008-01	1.10	121 122		0.00	LUB	Forward Cargo Compartment Torque Tube Supports and Couplings
01015015	6000 FC 1125 DY	6000 FC 1125 DY	12-008-01-03	12-008-01	1.10	121 122		0.00	LUB	Forward Cargo Compartment Torque Tube Supports and Couplings
01015015	6000 FC 1125 DY	6000 FC 1125 DY	12-008-01-04	12-008-01	1.10	121 122		0.00	LUB	Forward Cargo Compartment Torque Tube Supports and Couplings
01015015	6000 FC 1125 DY	6000 FC 1125 DY	12-008-01-05	12-008-01	1.10	121 122		0.00	LUB	Forward Cargo Compartment Torque Tube Supports and Couplings
01015015	6000 FC 1125 DY	6000 FC 1125 DY	12-008-01-06	12-008-01	1.10	121 122		0.00	LUB	Forward Cargo Compartment Torque Tube Supports and Couplings
01015015	6000 FC 1125 DY	6000 FC 1125 DY	12-106-00-03	12-106-00	0.35	831 832 833 834 835 841 842 843 844 845	831 832 833 834 835 841 842 843 844 845	0.40	LUB	Crew Entry Door Mechanisms
01015015	6000 FC 1125 DY	6000 FC 1125 DY	12-106-00-04	12-106-00	0.35	831 832 833 834 835 841 842 843 844 845	831 832 833 834 835 841 842 843 844 845	0.40	LUB	Passenger Entry Door Mechanisms
01015015	6000 FC 1125 DY	6000 FC 1125 DY	12-108-00-01	12-108-00	0.20	825		0.00	LUB	Bulk Cargo Door Probe Support Fittings



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01015015	6000 FC 1125 DY	6000 FC 1125 DY	12-110-00-02	12-110-00	0.10	112	112AL	0.02	LUB	Forward Access Door Latch Pin
01015015	6000 FC 1125 DY	6000 FC 1125 DY	12-110-00-03	12-110-00	0.10	112	112AL	0.02	LUB	Forward Access Door Latch Pin
01015015	6000 FC 1125 DY	6000 FC 1125 DY	12-110-00-04	12-110-00	0.10	112	112AL	0.02	LUB	Forward Access Door Latch Pin
01015015	6000 FC 1125 DY	6000 FC 1125 DY	12-110-00-05	12-110-00	0.10	112	112AL	0.02	LUB	Forward Access Door Latch Pin
01015015	6000 FC 1125 DY	6000 FC 1125 DY	12-110-00-06	12-110-00	0.10	112	112AL	0.02	LUB	Forward Access Door Latch Pin
01015015	1125 DY	1125 DY	12-122-00-01	12-122-00	0.20	211 212		0.00	LUB	No. 2 Left and Right Flight Compartment Window Drive Tracks
01015015	1125 DY	1125 DY	20-250-10-01	20-250-10	0.80	411 430 511	413AL 414AR 415AL 416AR 431BL 431BR 431CL 431CR 431FR 431FT 511AB 511CB 511DB 511EB 511FB 511GB 511HB 511JB 511KB 511LB 511MB 511NB 511PB 511QB	10.30	DET	FOIL/MESH PANELS; ENGINE COWLS, STRUT, LEADING EDGE
01015015	1125 DY	1125 DY	20-250-20-01	20-250-20	0.80	421 440 611	423AL 424AR 425AL 426AR 441BL 441CL 441FL 441FR 441FT 611AB 611CB 611DB 611EB 611FB 611GB 611HB 611JB 611KB 611LB 611MB 611NB 611PB 611QB	9.93	DET	FOIL/MESH PANELS; ENGINE COWLS, STRUT, LEADING EDGE





## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01015015	1125 DY	1125 DY	20-252-10-01	20-252-10	0.80	411 430 511	413AL 414AR 415AL 416AR 431CT 431ET 431FL 431FR 431FT 511AB 511CB 511DB 511EB 511FB 511GB 511HB 511JB 511KB 511LB 511MB 511NB 511PB 511QB	10.00	DET	FOIL/MESH PANELS; ENGINE COWLS, STRUT, LEADING EDGE
01015015	1125 DY	1125 DY	20-252-20-01	20-252-20	0.80	421 440 611	423AL 424AR 425AL 426AR 441CT 441ET 441FL 441FR 441FT 611AB 611CB 611DB 611EB 611FB 611GB 611HB 611JB 611KB 611LB 611MB 611NB 611PB 611QB	9.67	DET	FOIL/MESH PANELS; ENGINE COWLS, STRUT, LEADING EDGE
01015015	1125 DY	1125 DY	23-180-00-01	23-180-00	0.30	111	111AL	0.13	OPC	Low Frequency Underwater Locator Device
01015015	15000 FH	15000 FH	25-020-00-01	25-020-00	0.10	211 212		0.00	OPC	Crew Seat Lock Mechanism
01015015	1125 DY	1125 DY	25-105-00-01	25-105-00	0.01	200		0.00	VCK	Crash Axe
01015015	1125 DY	1125 DY	25-320-00-01	25-320-00	0.25	221 222		0.00	DET	Rigid Cargo Barrier Sliding Door Seal
01015015	15000 FH	15000 FH	26-020-00-01	26-020-00	0.10	212		0.00	OPC	Duct Leak & Overheat Detection Control Card
01015015	15000 FH	15000 FH	26-050-00-01	26-050-00	0.10	212		0.00	OPC	Sensing Elements
01015015	15000 FH	15000 FH	26-060-00-01	26-060-00	0.10	212		0.00	OPC	Sensing Elements
01015015	1125 DY	1125 DY	26-277-00-01	26-277-00	1.00	151 152		0.00	OPC	Lower Lobe Attendant Rest Fire Extinguishing System
01015015	15000 FH	15000 FH	29-110-00-01	29-110-00	0.50	197	197DL	0.05	VCK	ADP Pressure and Case Drain Filter Module
01015015	15000 FH	15000 FH	29-110-00-02	29-110-00	0.50	197	197DL	0.05	VCK	ADP Pressure and Case Drain Filter Module
01015015	15000 FH	15000 FH	29-110-00-03	29-110-00	0.50	197	197DL	0.05	VCK	ADP Pressure and Case Drain Filter Module
01015015	15000 FH	15000 FH	29-110-00-04	29-110-00	0.50	197	197DL	0.05	VCK	ADP Pressure and Case Drain Filter Module



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01015015	15000 FH	15000 FH	29-110-00-05	29-110-00	0.50	197	197DL	0.05	VCK	ADP Pressure and Case Drain Filter Module
01015015	15000 FH	15000 FH	29-110-00-06	29-110-00	0.50	197	197DL	0.05	VCK	ADP Pressure and Case Drain Filter Module
01015015	15000 FH	15000 FH	30-010-00-01	30-010-00	0.10	211 212		0.00	OPC	Flight Compartment No. 1 Window Backup Anti-Fog
01015015	1125 DY	1125 DY	31-010-00-05	31-010-00	0.25	264		0.00	FNC	Flight Data Recorder System
01015015	1125 DY	1125 DY	31-010-00-06	31-010-00	0.25	264		0.00	FNC	Flight Data Recorder System
01015015	1125 DY	1125 DY	31-030-00-03	31-030-00	0.50	264		0.00	OPC	Flight Data Recorder Underwater Locator Beacon (ULB)
01015015	15000 FH	15000 FH	31-060-00-01	31-060-00	0.40	211 212		0.00	OPC	Warning Electronic System
01015015	15000 FH	15000 FH	31-080-00-01	31-080-00	0.10	211 212		0.00	OPC	Primary Display System - Instrument Source Select Switching
01015015	800 DY	800 DY	33-120-00-01	33-120-00	1.50	151 152		0.00	RST	Lower Lobe Attendant Rest (LLAR) Back-up Lighting System
01015015	15000 FH	15000 FH	38-130-00-01	38-130-00	0.25	166	825	0.09	OPC	Potable Water System Pressure Limit Switch and Relay Circuit
01015015	6000 FC 1125 DY	6000 FC 1125 DY	52-010-00-01	52-010-00	1.00	831 832 834 835 841 842 844 845	831 832 834 835 841 842 844 845	0.32	DET	Passenger Entry Door Seals and Vent Door Seals
01015015	4000 FC 1125 DY	4000 FC 1125 DY	52-015-00-01	52-015-00	0.25	833 843		0.00	DET	No. 3 Over-Wing Door Seals and Vent Door Seals
01015015	6000 FC 1125 DY	6000 FC 1125 DY	52-020-00-01	52-020-00	0.40	821	821	0.10	DET	Forward Large Cargo Door Seals and Vent Door Seals
01015015	6000 FC 1125 DY	6000 FC 1125 DY	52-025-00-01	52-025-00	0.40	824	824	0.10	DET	AFT Large Cargo Door Seals and Vent Door Seals
01015015	6000 FC 1125 DY	6000 FC 1125 DY	52-030-00-01	52-030-00	0.40	823		0.00	DET	AFT Small Cargo Door Seals and Vent Door Seals
01015015	6000 FC 1125 DY	6000 FC 1125 DY	52-050-00-01	52-050-00	0.25	112	112AL	0.02	DET	Forward Access Door Seal



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01015015	6000 FC 1125 DY	6000 FC 1125 DY	52-060-00-01	52-060-00	0.25	117 118	117AL	0.02	DET	Main Equipment Center Door Seals
01015015	6000 FC 1125 DY	6000 FC 1125 DY	52-130-00-01	52-130-00	1.00	831 832 834 835 841 842 844 845		0.00	DET	Passenger Entry Door Girt Bar Mechanism Interlock
01015015	6000 FC 1125 DY	6000 FC 1125 DY	52-170-00-01	52-170-00	2.00	831 832 834 835 841 842 844 845		0.00	FNC	Passenger Entry Door Mechanisms
01015015	6000 FC 1125 DY	6000 FC 1125 DY	52-826-01-01	52-826-01	0.40	834	834	0.04	GVI	Left No. 3 Passenger Entry Door - Section 46
01015015	6000 FC 1125 DY	6000 FC 1125 DY	52-830-01-01	52-830-01	0.40	835	835	0.04	GVI	Left No. 4 Passenger Entry Door - Section 47
01015015	6000 FC 1125 DY	6000 FC 1125 DY	52-848-02-01	52-848-02	0.40	844	844	0.04	GVI	Right No. 3 Passenger Entry Door - Section 46
01015015	6000 FC 1125 DY	6000 FC 1125 DY	52-852-02-01	52-852-02	0.40	845	845	0.04	GVI	Right No. 4 Passenger Entry Door - Section 47
01015015	4000 FC 1125 DY	4000 FC 1125 DY	53-509-00-01	53-509-00	0.20	122	821	0.10	GVI	Forward Cargo Compartment
01015015	4000 FC 1125 DY	4000 FC 1125 DY	53-522-00-01	53-522-00	0.30	152	823	0.10	GVI	Aft Cargo Compartment
01015015	4000 FC 1125 DY	4000 FC 1125 DY	53-523-00-01	53-523-00	0.30	152	824	0.10	GVI	Aft Cargo Compartment
01015015	4000 FC 1125 DY	4000 FC 1125 DY	53-529-00-01	53-529-00	0.10	154	823	0.10	GVI	Area Below Aft Cargo Compartment
01015015	4000 FC 1125 DY	4000 FC 1125 DY	53-530-00-01	53-530-00	0.50	154	824	0.10	GVI	Area Below Aft Cargo Compartment



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01015015	6000 FC 1125 DY	6000 FC 1125 DY	53-800-00-07	53-800-00	0.59	100 110 120 121 122 123 124 139 149 151 152 153 154 161 162 163 164 165 166 191 192 195 196 197 198	112AL 117AL 825	0.13	GVI	Left Fuselage Lower Half - Section 41 & 43 - STA 92.5 to STA 867



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01015015	6000 FC 1125 DY	6000 FC 1125 DY	53-800-00-08	53-800-00	0.59	100 110 120 121 122 123 124 139 149 151 152 153 154 161 162 163 164 165 166 191 192 195 196 197 198	112AL 117AL 825	0.13	GVI	Right Fuselage Lower Half - Section 41 & 43 - STA 92.5 to STA 867



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01015015	6000 FC 1125 DY	6000 FC 1125 DY	53-800-00-09	53-800-00	0.58	100 110 120 121 122 123 124 139 149 151 152 153 154 161 162 163 164 165 166 191 192 195 196 197 198	112AL 117AL 825	0.13	GVI	Lower Left Fuselage & Wing to Body Fairing - STA 858 to STA 1655



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01015015	6000 FC 1125 DY	6000 FC 1125 DY	53-800-00-10	53-800-00	0.58	100 110 120 121 122 123 124 139 149 151 152 153 154 161 162 163 164 165 166 191 192 195 196 197 198	112AL 117AL 825	0.13	GVI	Lower Right Fuselage & Wing to Body Fairing - STA 858 to STA 1655



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01015015	6000 FC 1125 DY	6000 FC 1125 DY	53-800-00-11	53-800-00	0.58	100 110 120 121 122 123 124 139 149 151 152 153 154 161 162 163 164 165 166 191 192 195 196 197 198	112AL 117AL 825	0.13	GVI	Lower Left Fuselage - STA 1655 to STA 2196





# 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01015015	6000 FC 1125 DY	6000 FC 1125 DY	53-800-00-12	53-800-00	0.58	100 110 120 121 122 123 124 139 149 151 152 153 154 161 162 163 164 165 166 191 192 195 196 197 198	112AL 117AL 825	0.13	GVI	Lower Right Fuselage - STA 1655 to STA 2196
01015015	6000 FC 1125 DY	6000 FC 1125 DY	53-804-00-02	53-804-00	0.25	111	111AL	0.13	GVI	Radome
01015015	6000 FC 1125 DY	6000 FC 1125 DY	53-804-00-03	53-804-00	0.25	111	111AL	0.13	GVI	Radome
01015015	6000 FC 1125 DY	6000 FC 1125 DY	53-804-00-04	53-804-00	0.25	111	111AL	0.13	GVI	Radome
01015015	6000 FC 1125 DY	6000 FC 1125 DY	53-804-00-05	53-804-00	0.25	111	111AL	0.13	GVI	Radome
01015015	6000 FC 1125 DY	6000 FC 1125 DY	53-804-00-06	53-804-00	0.25	111	111AL	0.13	GVI	Radome
01015015	6000 FC 1125 DY	6000 FC 1125 DY	53-876-00-02	53-876-00	0.75	165 166	825	0.09	GVI	Area Aft of the Bulk Cargo Compartment
01015015	6000 FC 1125 DY	6000 FC 1125 DY	53-876-00-03	53-876-00	0.75	165 166	825	0.09	GVI	Area Aft of the Bulk Cargo Compartment



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01015015	6000 FC 1125 DY	6000 FC 1125 DY	53-876-00-04	53-876-00	0.75	165 166	825	0.09	GVI	Area Aft of the Bulk Cargo Compartment
01015015	6000 FC 1125 DY	6000 FC 1125 DY	53-876-00-05	53-876-00	0.75	165 166	825	0.09	GVI	Area Aft of the Bulk Cargo Compartment
01015015	6000 FC 1125 DY	6000 FC 1125 DY	53-876-00-06	53-876-00	0.75	165 166	825	0.09	GVI	Area Aft of the Bulk Cargo Compartment
01015015	6000 FC 1125 DY	6000 FC 1125 DY	53-900-00-02	53-900-00	1.00	211 212	211AL 212AR	0.14	GVI	Flight Compartment
01015015	6000 FC 1125 DY	6000 FC 1125 DY	53-900-00-03	53-900-00	1.00	211 212	211AL 212AR	0.14	GVI	Flight Compartment
01015015	6000 FC 1125 DY	6000 FC 1125 DY	53-900-00-04	53-900-00	1.00	211 212	211AL 212AR	0.14	GVI	Flight Compartment
01015015	6000 FC 1125 DY	6000 FC 1125 DY	53-900-00-05	53-900-00	1.00	211 212	211AL 212AR	0.14	GVI	Flight Compartment
01015015	6000 FC 1125 DY	6000 FC 1125 DY	53-900-00-06	53-900-00	1.00	211 212	211AL 212AR	0.14	GVI	Flight Compartment
01015015	4000 FC 1125 DY	4000 FC 1125 DY	53-907-00-01	53-907-00	0.50	223 224		0.00	GVI	Overhead Flight Crew Rest (OFCR) Compartment
01015015	4000 FC 1125 DY	4000 FC 1125 DY	53-919-00-01	53-919-00	0.50	200		0.00	GVI	INTERNAL - ZONAL (GV): Overhead Flight Attendant Rest (OFAR) Compartment(s)
01015015	4000 FC 1125 DY	4000 FC 1125 DY	54-005-01-01	54-005-01	0.50	410 430		0.00	FNC	Left Strut AFT Upper Spar Drain and AFT Strut Fairing Drain (GE90-70/80/90)
01015015	4000 FC 1125 DY	4000 FC 1125 DY	54-005-01-02	54-005-01	0.50	410 430		0.00	FNC	Left Strut AFT Upper Spar Drain and AFT Strut Fairing Drain (GE90-100)
01015015	4000 FC 1125 DY	4000 FC 1125 DY	54-005-02-01	54-005-02	0.50	420 440		0.00	FNC	Right Strut AFT Upper Spar Drain and AFT Strut Fairing Drain (GE90-70/80/90)
01015015	4000 FC 1125 DY	4000 FC 1125 DY	54-005-02-02	54-005-02	0.50	420 440		0.00	FNC	Right Strut AFT Upper Spar Drain and AFT Strut Fairing Drain (GE90-100)
01015015	4000 FC 750 DY	4000 FC 750 DY	54-804-01-01	54-804-01	0.30	432 433	413AL 414AR 415AL 415LB 415MB 415NB 416AR	0.96	GVI	Forward and Aft Torque Box - Left Nacelle Strut



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01015015	4000 FC 750 DY	4000 FC 750 DY	54-806-01-01	54-806-01	0.40	432 433	413AL 414AR 415AL 415LB 415MB 415NB 416AR 432AR 432BL 432BR 432CR 433AL 433CL	1.70	GVI	Forward and Aft Torque Box - Left Nacelle Strut
01015015	4000 FC 750 DY	4000 FC 750 DY	54-808-01-01	54-808-01	0.40	434	434BL 434BR 434CL 434CR 434DL 434DR 434EL 434ER 434FB	1.41	GVI	Aft Strut Fairing - Left Nacelle Strut
01015015	4000 FC 750 DY	4000 FC 750 DY	54-814-02-01	54-814-02	0.30	442 443	423AL 424AR 425AL 425LB 425MB 425NB 426AR	0.96	GVI	Forward and Aft Torque Box - Right Nacelle Strut
01015015	4000 FC 750 DY	4000 FC 750 DY	54-816-02-01	54-816-02	0.40	442 443	423AL 424AR 425AL 425LB 425NB 426AR 442AR 442BL 442BR 442CR 443AL 443CL	1.69	GVI	Forward and Aft Torque Box - Right Nacelle Strut
01015015	4000 FC 750 DY	4000 FC 750 DY	54-818-02-01	54-818-02	0.40	444	444BL 444BR 444CL 444CR 444DL 444DR 444EL 444ER 444FB	1.46	GVI	Aft Strut Fairing - Right Nacelle Strut
01015015	6000 FC 1125 DY	6000 FC 1125 DY	54-844-01-01	54-844-01	0.30	432 433	413AL 414AR 415AL 415HB 415JB 416AR 432AL 432AR 432CL 432CR 432EL 432ER 433AL 433AR 433BL 433BR	2.77	GVI	Forward and Aft Torque Box - Left Nacelle Strut - Cows Opened
01015015	4000 FC 750 DY	4000 FC 750 DY	54-848-01-01	54-848-01	0.40	434	434BL 434BR 434CL 434CR 434DL 434DR 434EL 434ER 434FB	1.41	GVI	Aft Strut Fairing - Left Nacelle Strut



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01015015	6000 FC 1125 DY	6000 FC 1125 DY	54-854-02-01	54-854-02	0.30	442 443	423AL 424AR 425AL 425HB 425JB 426AR 442AL 442AR 442CL 442CR 442EL 442ER 443AR 443BL 443BR	2.44	GVI	Forward and Aft Torque Box - Right Nacelle Strut - Fan Cowls Opened
01015015	4000 FC 750 DY	4000 FC 750 DY	54-858-02-01	54-858-02	0.40	444	444BL 444BR 444CL 444CR 444DL 444DR 444EL 444ER 444FB	1.46	GVI	Aft Strut Fairing - Right Nacelle Strut
01015015	6000 FC 1125 DY	6000 FC 1125 DY	55-816-00-01	55-816-00	1.00	324	324AL 324BL 324CL 324DL 324EL 324FL 324GL	4.38	GVI	Vertical Stabilizer - Rear Spar to Trailing Edge
01015015	6000 FC 1125 DY	6000 FC 1125 DY	55-836-01-01	55-836-01	0.20	334	335GB	0.56	GVI	Left Horizontal Stabilizer - Front Spar to Rear Spar
01015015	6000 FC 1125 DY	6000 FC 1125 DY	55-840-01-01	55-840-01	1.00	335	335CB 335DB 335EB 335FB 335GB	2.81	GVI	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
01015015	6000 FC 1125 DY	6000 FC 1125 DY	55-856-02-01	55-856-02	0.20	344	345GB	0.56	GVI	Right Horizontal Stabilizer - Front Spar to Rear Spar
01015015	6000 FC 1125 DY	6000 FC 1125 DY	55-860-02-01	55-860-02	1.00	345	345CB 345DB 345EB 345FB 345GB	2.81	GVI	Right Horizontal Stabilizer - Rear Spar to Trailing Edge
01015015	6000 FC 1125 DY	6000 FC 1125 DY	57-502-01-01	57-502-01	0.20	512		0.00	GVI	Slat Number 7
01015015	6000 FC 1125 DY	6000 FC 1125 DY	57-504-01-01	57-504-01	2.00	522 523 524 525 526 527		0.00	GVI	Slats Number 1 Through 6
01015015	6000 FC 1125 DY	6000 FC 1125 DY	57-535-02-01	57-535-02	0.20	612		0.00	GVI	Slat Number 8



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01015015	6000 FC 1125 DY	6000 FC 1125 DY	57-538-02-01	57-538-02	2.00	622 623 624 625 626 627		0.00	GVI	Slats Number 9 Through 14
01015015	6000 FC 1125 DY	6000 FC 1125 DY	57-816-01-01	57-816-01	1.50	520	521AAB 521AB 521ABB 521ACB 521AEB 521BB 521DB 521EB 521GB 521HB 521JB 521MB 521NB 521PB 521RB 521SB 521TB 521WB 521XB 521YB	5.42	GVI	Leading Edge to Front Spar - Outboard of Nacelle Strut - Left Wing
01015015	6000 FC 1125 DY	6000 FC 1125 DY	57-908-02-01	57-908-02	1.50	620	621AAB 621AB 621ABB 621ACB 621AEB 621BB 621DB 621EB 621GB 621HB 621JB 621MB 621NB 621PB 621RB 621SB 621TB 621WB 621XB 621YB	5.45	GVI	Leading Edge to Front Spar - Outboard of Nacelle Strut - Right Wing
01015015	15000 FH	15000 FH	72-080-01-01	72-080-01	0.25	411	413AL 414AR 415AL 415HB 415JB 415KB 416AR	0.96	DET	Detailed Inspection of TRF AFT Engine Mount Lugs- Left (for GE90-70/80/90 series engines only)
01015015	15000 FH	15000 FH	72-080-02-02	72-080-02	0.25	421	423AL 424AR 425AL 425HB 425JB 425KB 426AR	0.96	DET	Detailed Inspection of TRF AFT Engine Mount Lugs - Right (for GE90-70/80/90 series engines only)
01015015	15000 FH	15000 FH	72-240-01-01	72-240-01	0.50	411	413AL 414AR	0.36	GVI	Kevlar Inspection on Fan Case - Left
01015015	15000 FH	15000 FH	72-240-02-01	72-240-02	0.50	421	423AL 424AR	0.36	GVI	Kevlar Inspection on Fan Case - Right
01015015	15000 FH	15000 FH	72-245-01-01	72-245-01	0.50	411 412	413AL 414AR 415AL 415LB 415MB 415NB 416AR	0.96	DET	Fan Case Section - Left



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01015015	15000 FH	15000 FH	72-245-01-02	72-245-01	0.50	411 412	413AL 414AR 415AL 415LB 415MB 415NB 416AR	0.96	DET	Fan Case Section - Left (For all PW4000 engine series except 4090D and 4098)
01015015	15000 FH	15000 FH	72-245-01-04	72-245-01	0.50	411 412	413AL 414AR 415AL 415LB 415MB 415NB 416AR	0.96	DET	Fan Case Section - Left (For PW4000 engine series 4074, 4077, and 4084)
01015015	15000 FH	15000 FH	72-245-01-05	72-245-01	0.50	411 412	413AL 414AR 415AL 415LB 415MB 415NB 416AR	0.96	DET	Fan Case Section - Left -For PW4000 engine series 4074D, 4077D, 4084D, 4090, 4090D, and 4098
01015015	15000 FH	15000 FH	72-245-01-06	72-245-01	0.50	411 412	413AL 414AR 415AL 415LB 415MB 415NB 416AR	0.96	DET	Fan Case Section - Left (All PW4000 engines)
01015015	15000 FH	15000 FH	72-245-02-01	72-245-02	0.50	421 422	423AL 424AR 425AL 425LB 425MB 425NB 426AR	0.96	DET	Fan Case Section - Right
01015015	15000 FH	15000 FH	72-245-02-02	72-245-02	0.50	421 422	423AL 424AR 425AL 425LB 425MB 425NB 426AR	0.96	DET	Fan Case Section - Right (For all PW4000 engine series except 4090D and 4098)
01015015	15000 FH	15000 FH	72-245-02-04	72-245-02	0.50	421 422	423AL 424AR 425AL 425LB 425MB 425NB 426AR	0.96	DET	Fan Case Section - Right (For PW4000 engine series 4074, 4077, and 4084)
01015015	15000 FH	15000 FH	72-245-02-05	72-245-02	0.50	421 422	423AL 424AR 425AL 425LB 425MB 425NB 426AR	0.96	DET	Fan Case Section - Right (For PW4000 engine series 4074D, 4077D, 4084D, 4090, 4090D, and 4098)
01015015	15000 FH	15000 FH	72-245-02-06	72-245-02	0.50	421 422	423AL 424AR 425AL 425LB 425MB 425NB 426AR	0.96	DET	Fan Case Section - Right (All PW4000 engines)
01015015	15000 FH	15000 FH	72-400-01-01	72-400-01	0.20	411	413AL 414AR 415AL 416AR	0.90	GVI	General Visual of OGV's



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01015015	15000 FH	15000 FH	72-400-02-01	72-400-02	0.20	421	423AL 424AR 425AL 426AR	0.90	GVI	General Visual of OGV's
01015015	15000 FH	15000 FH	78-380-01-01	78-380-01	0.30	411	413AL 414AR 415AL 416AR	0.90	GVI	Inspect Thrust Reverser Hinges
01015015	15000 FH	15000 FH	78-380-02-01	78-380-02	0.30	421	423AL 424AR 425AL 426AR	0.90	GVI	Inspect Thrust Reverser Hinges
01015015	1125 DY 6000 FC	1125 DY 6000 FC	78-390-01-01	78-390-01	1.00	411 415 416	413AL 414AR 415AL 416AR	0.90	DET	Inspect Thrust Reverser Inner Wall
01015015	1125 DY 6000 FC	1125 DY 6000 FC	78-390-02-01	78-390-02	1.00	421 425 426	423AL 424AR 425AL 426AR	0.90	DET	Inspect Thrust Reverser Inner Wall
01016016	16000 FH	16000 FH	28-040-00-01	28-040-00	0.50	444 530 630	521DB	0.02	OPC	Defuel Valve Actuator
01018018	18000 FH	18000 FH	26-070-00-01	26-070-00	0.34	122	117AL 821	0.12	OPC	Engine Fire Extinguishing Bottle Pressure Switches
01018018	18000 FH	18000 FH	26-070-00-02	26-070-00	0.33	122	117AL 821	0.12	OPC	Engine Fire Extinguishing Bottle Pressure Switches
01018018	18000 FH	18000 FH	26-070-00-03	26-070-00	0.33	122	117AL 821	0.12	OPC	Engine Fire Extinguishing Bottle Pressure Switches
01018018	18000 FH	18000 FH	26-140-00-01	26-140-00	0.50	112 313	117AL 313AL	0.06	OPC	APU Fire Extinguishing Bottle Pressure Switch
01018018	18000 FH	18000 FH	28-050-10-01	28-050-10	1.00	211 212		0.00	FNC	Fuel Scavenge System
01018018	18000 FH	18000 FH	38-030-00-02	38-030-00	0.50	124 163	122DR 163AL 821 825	0.23	FNC	Waste Drain Ball Valve & Fitting Seals (Applicable to the 777F only)
01018018	18000 FH	18000 FH	38-030-00-03	38-030-00	0.50	124 163	122DR 163AL 821 825	0.23	FNC	Waste Drain Ball Valve & Fitting Seals
01018018	18000 FH	18000 FH	38-030-00-04	38-030-00	0.50	124 163	122DR 163AL 821 825	0.23	FNC	Waste Drain Ball Valve & Fitting Seals
01020020	20000 FH	20000 FH	25-020-02-01	25-020-02	0.10	211 212		0.00	OPC	Flight Crew Seat Manual Adjustments
01020020	20000 FH	20000 FH	25-020-02-02	25-020-02	0.10	211 212		0.00	OPC	Flight Crew Seat Manual Adjustments



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01021021	1500 DY	1500 DY	20-450-00-01	20-450-00	2.00	122	821	0.10	FNC	HIRF/Lightning Radio Altimeter Antenna to Transceiver Coax
01021021	8000 FC 1500 DY	8000 FC 1500 DY	20-650-00-02	20-650-00	0.50	121 122	821	0.10	RST	Areas Behind the FWD Cargo Compartment Sidewalls
01021021	8000 FC 1500 DY	8000 FC 1500 DY	20-650-00-03	20-650-00	0.50	121 122	821	0.10	RST	Areas Behind the FWD Cargo Compartment Sidewalls
01021021	8000 FC 1500 DY	8000 FC 1500 DY	20-650-00-04	20-650-00	0.50	121 122	821	0.10	RST	Areas Behind the FWD Cargo Compartment Sidewalls
01021021	8000 FC 1500 DY	8000 FC 1500 DY	20-650-00-05	20-650-00	0.50	121 122	821	0.10	RST	Areas Behind the FWD Cargo Compartment Sidewalls
01021021	8000 FC 1500 DY	8000 FC 1500 DY	20-658-00-02	20-658-00	0.25	125 126	121EZ 121FZ 121TW	0.00	RST	Area Behind the Forward Cargo Compartment
01021021	8000 FC 1500 DY	8000 FC 1500 DY	20-658-00-03	20-658-00	0.25	125 126	121EZ 121FZ 121TW	0.00	RST	Area Behind the Forward Cargo Compartment
01021021	8000 FC 1500 DY	8000 FC 1500 DY	20-658-00-04	20-658-00	0.25	125 126	121EZ 121FZ 121TW	0.00	RST	Area Behind the Forward Cargo Compartment
01021021	8000 FC 1500 DY	8000 FC 1500 DY	20-658-00-05	20-658-00	0.25	125 126	121EZ 121FZ 121TW	0.00	RST	Area Behind the Forward Cargo Compartment
01021021	8000 FC 1500 DY	8000 FC 1500 DY	20-658-00-06	20-658-00	0.25	125 126	121EZ 121FZ 121TW	0.00	RST	Area Behind the Forward Cargo Compartment
01021021	8000 FC 1500 DY	8000 FC 1500 DY	20-700-00-02	20-700-00	0.25	221 222		0.00	RST	Areas Behind the Passenger Compartment Air Grilles
01021021	8000 FC 1500 DY	8000 FC 1500 DY	20-700-00-03	20-700-00	0.25	221 222		0.00	RST	Areas Behind the Passenger Compartment Air Grilles
01021021	8000 FC 1500 DY	8000 FC 1500 DY	20-700-00-04	20-700-00	0.25	221 222		0.00	RST	Areas Behind the Passenger Compartment Air Grilles
01021021	8000 FC 1500 DY	8000 FC 1500 DY	20-700-00-05	20-700-00	0.25	221 222		0.00	RST	Areas Behind the Passenger Compartment Air Grilles
01021021	8000 FC 1500 DY	8000 FC 1500 DY	20-716-00-02	20-716-00	0.15	221 222 231 232		0.00	RST	Area Around the Video Control Center
01021021	8000 FC 1500 DY	8000 FC 1500 DY	20-738-00-01	20-738-00	0.25	231 232		0.00	RST	Areas Behind the Passenger Compartment Air Grilles





## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01021021	8000 FC 1500 DY	8000 FC 1500 DY	20-738-00-02	20-738-00	0.25	231 232		0.00	RST	Areas Behind the Passenger Compartment Air Grilles
01021021	8000 FC 1500 DY	8000 FC 1500 DY	20-738-00-03	20-738-00	0.25	231 232		0.00	RST	Areas Behind the Passenger Compartment Air Grilles
01021021	8000 FC 1500 DY	8000 FC 1500 DY	20-742-00-02	20-742-00	0.25	231 232		0.00	RST	Areas Behind the Passenger Compartment Air Grilles
01021021	8000 FC 1500 DY	8000 FC 1500 DY	20-746-00-01	20-746-00	0.20	231 232		0.00	GVI	Wiring Behind Passenger Compartment Air Grilles
01021021	8000 FC 1500 DY	8000 FC 1500 DY	20-746-00-02	20-746-00	0.20	231 232		0.00	GVI	Wiring Behind Passenger Compartment Air Grilles
01021021	8000 FC 1500 DY	8000 FC 1500 DY	20-746-00-03	20-746-00	0.20	231 232		0.00	GVI	Wiring Behind Passenger Compartment Air Grilles
01021021	8000 FC 1500 DY	8000 FC 1500 DY	20-750-00-02	20-750-00	0.25	231 232		0.00	GVI	Wiring Behind Passenger Compartment Air Grilles
01021021	8000 FC 1500 DY	8000 FC 1500 DY	20-754-00-02	20-754-00	0.25	241 242		0.00	RST	Areas Behind the Passenger Compartment Air Grilles
01021021	8000 FC 1500 DY	8000 FC 1500 DY	20-754-00-03	20-754-00	0.25	241 242		0.00	RST	Areas Behind the Passenger Compartment Air Grilles
01021021	8000 FC 1500 DY	8000 FC 1500 DY	20-754-00-04	20-754-00	0.25	241 242		0.00	RST	Areas Behind the Passenger Compartment Air Grilles
01021021	8000 FC 1500 DY	8000 FC 1500 DY	20-754-00-05	20-754-00	0.25	241 242		0.00	RST	Areas Behind the Passenger Compartment Air Grilles
01021021	8000 FC 1500 DY	8000 FC 1500 DY	20-758-00-02	20-758-00	0.20	241 242		0.00	GVI	Wiring Behind Passenger Compartment Air Grilles
01021021	8000 FC 1500 DY	8000 FC 1500 DY	20-758-00-03	20-758-00	0.20	241 242		0.00	GVI	Wiring Behind Passenger Compartment Air Grilles
01021021	8000 FC 1500 DY	8000 FC 1500 DY	20-758-00-04	20-758-00	0.20	241 242		0.00	GVI	Wiring Behind Passenger Compartment Air Grilles
01021021	8000 FC 1500 DY	8000 FC 1500 DY	20-758-00-05	20-758-00	0.20	241 242		0.00	GVI	Wiring Behind Passenger Compartment Air Grilles
01021021	8000 FC 1500 DY	8000 FC 1500 DY	20-762-00-01	20-762-00	0.25	251 252		0.00	RST	Areas Behind the Passenger Compartment Air Grilles



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01021021	8000 FC 1500 DY	8000 FC 1500 DY	20-762-00-02	20-762-00	0.25	251 252		0.00	RST	Areas Behind the Passenger Compartment Air Grilles
01021021	8000 FC 1500 DY	8000 FC 1500 DY	20-762-00-03	20-762-00	0.25	251 252		0.00	RST	Areas Behind the Passenger Compartment Air Grilles
01021021	8000 FC 1500 DY	8000 FC 1500 DY	20-766-00-02	20-766-00	0.25	251 252		0.00	RST	Areas Behind the Passenger Compartment Air Grilles
01021021	8000 FC 1500 DY	8000 FC 1500 DY	20-770-00-01	20-770-00	0.20	251 252		0.00	GVI	Wiring Behind Passenger Compartment Air Grilles
01021021	8000 FC 1500 DY	8000 FC 1500 DY	20-770-00-02	20-770-00	0.20	251 252		0.00	GVI	Wiring Behind Passenger Compartment Air Grilles
01021021	8000 FC 1500 DY	8000 FC 1500 DY	20-770-00-03	20-770-00	0.20	251 252		0.00	GVI	Wiring Behind Passenger Compartment Air Grilles
01021021	8000 FC 1500 DY	8000 FC 1500 DY	20-774-00-02	20-774-00	0.20	251 252		0.00	GVI	Wiring Behind Passenger Compartment Air Grilles
01021021	8000 FC 1500 DY	8000 FC 1500 DY	20-778-00-02	20-778-00	0.25	261 262		0.00	RST	Areas Behind the Passenger Compartment Air Grilles
01021021	8000 FC 1500 DY	8000 FC 1500 DY	20-778-00-03	20-778-00	0.25	261 262		0.00	RST	Areas Behind the Passenger Compartment Air Grilles
01021021	8000 FC 1500 DY	8000 FC 1500 DY	20-778-00-04	20-778-00	0.25	261 262		0.00	RST	Areas Behind the Passenger Compartment Air Grilles
01021021	8000 FC 1500 DY	8000 FC 1500 DY	20-778-00-05	20-778-00	0.25	261 262		0.00	RST	Areas Behind the Passenger Compartment Air Grilles
01021021	8000 FC 1500 DY	8000 FC 1500 DY	20-782-00-02	20-782-00	0.20	261 262		0.00	GVI	Wiring Behind Passenger Compartment Air Grilles
01021021	8000 FC 1500 DY	8000 FC 1500 DY	20-782-00-03	20-782-00	0.20	261 262		0.00	GVI	Wiring Behind Passenger Compartment Air Grilles
01021021	8000 FC 1500 DY	8000 FC 1500 DY	20-782-00-04	20-782-00	0.20	261 262		0.00	GVI	Wiring Behind Passenger Compartment Air Grilles
01021021	8000 FC 1500 DY	8000 FC 1500 DY	20-782-00-05	20-782-00	0.20	261 262		0.00	GVI	Wiring Behind Passenger Compartment Air Grilles
01021021	1500 DY	1500 DY	25-150-00-01	25-150-00	0.25	200		0.00	VCK	Smokehoods
01021021	1500 DY	1500 DY	25-190-00-01	25-190-00	0.25	200		0.00	OPC	Megaphones



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01021021	1500 DY	1500 DY	26-062-00-01	26-062-00	0.50	151 152		0.00	OPC	Lower Lobe Attendant Rest Smoke Detection System
01021021	6000 FC 1500 DY	6000 FC 1500 DY	52-120-00-01	52-120-00	1.00	831 832 834 835 841 842 844 845		0.00	DET	Passenger Entry Door Flight Lock Mechanism
01021021	6000 FC 1500 DY	6000 FC 1500 DY	52-120-01-01	52-120-01	1.00	831 832 834 835 841 842 844 845		0.00	DET	Passenger Entry Door Flight Lock Mechanism
01021021	6000 FC 1500 DY	6000 FC 1500 DY	52-120-02-01	52-120-02	0.25	831 841		0.00	DET	Passenger Entry Door Flight Lock Mechanism
01021021	6000 FC 1500 DY	6000 FC 1500 DY	52-125-00-01	52-125-00	0.25	833 843		0.00	DET	No. 3 Over-Wing Door Flight Lock Mechanism
01021021	1500 DY	1500 DY	52-315-00-01	52-315-00	0.25	211 212		0.00	VCK	FLIGHT DECK DOOR SEALS AND BREAKAWAY PANEL SEAL
01021021	1500 DY	1500 DY	52-730-00-01	52-730-00	0.20	211 212		0.00	GVI	Flight Deck Security Door
01021021	8000 FC 1500 DY	8000 FC 1500 DY	53-832-00-02	53-832-00	0.60	139	139AL 139BL 139CL 139DL	0.93	GVI	Forward Keel Beam
01021021	8000 FC 1500 DY	8000 FC 1500 DY	53-832-00-03	53-832-00	0.60	139	139AL 139BL 139CL 139DL	0.93	GVI	Forward Keel Beam
01021021	8000 FC 1500 DY	8000 FC 1500 DY	53-832-00-04	53-832-00	0.60	139	139AL 139BL 139CL 139DL	0.93	GVI	Forward Keel Beam
01021021	8000 FC 1500 DY	8000 FC 1500 DY	53-832-00-05	53-832-00	0.60	139	139AL 139BL 139CL 139DL	0.93	GVI	Forward Keel Beam
01021021	8000 FC 1500 DY	8000 FC 1500 DY	53-832-00-06	53-832-00	0.60	139	139AL 139BL 139CL 139DL	0.93	GVI	Forward Keel Beam



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01021021	8000 FC 1500 DY	8000 FC 1500 DY	53-844-00-02	53-844-00	0.60	149	149AL 149BL 149CL	0.55	GVI	Aft Keel Beam
01021021	8000 FC 1500 DY	8000 FC 1500 DY	53-844-00-03	53-844-00	0.60	149	149AL 149BL 149CL	0.55	GVI	Aft Keel Beam
01021021	8000 FC 1500 DY	8000 FC 1500 DY	53-844-00-04	53-844-00	0.60	149	149AL 149BL 149CL	0.55	GVI	Aft Keel Beam
01021021	8000 FC 1500 DY	8000 FC 1500 DY	53-844-00-05	53-844-00	0.60	149	149AL 149BL 149CL	0.55	GVI	Aft Keel Beam
01021021	8000 FC 1500 DY	8000 FC 1500 DY	53-844-00-06	53-844-00	0.60	149	149AL 149BL 149CL	0.55	GVI	Aft Keel Beam
01021021	8000 FC 1500 DY	8000 FC 1500 DY	53-884-00-01	53-884-00	0.20	193		0.00	GVI	Overwing Wing-To-Body Fairing - Left
01021021	8000 FC 1500 DY	8000 FC 1500 DY	53-886-00-01	53-886-00	0.20	194		0.00	GVI	Overwing Wing-To-Body Fairings - Right
01021021	4000 FC 1500 DY	4000 FC 1500 DY	54-802-01-01	54-802-01	0.30	431	431AT 431BL 431BR 431CL 431CR 431DL 431DR 431FL 431FR 431FT 431GL 431GR	4.83	GVI	Forward Strut Fairing - Left Nacelle Strut
01021021	4000 FC 1500 DY	4000 FC 1500 DY	54-812-02-01	54-812-02	0.30	441	441AT 441BL 441BR 441CL 441CR 441DL 441DR 441FL 441FR 441FT 441GL 441GR	4.27	GVI	Forward Strut Fairing - Right Nacelle Strut
01021021	6000 FC 1500 DY	6000 FC 1500 DY	54-822-01-01	54-822-01	0.30	431	431AT 431BT 431CL 431CR 431DT 431ET 431FL 431FR 431FT 431GL 431GR	4.20	GVI	Forward Strut Fairing - Left Nacelle Strut
01021021	6000 FC 1500 DY	6000 FC 1500 DY	54-832-02-01	54-832-02	0.30	441	441AT 441BT 441CL 441CR 441DT 441ET 441FL 441FR 441FT 441GL 441GR	2.73	GVI	Forward Strut Fairing - Right Nacelle Strut



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01021021	8000 FC 1500 DY	8000 FC 1500 DY	54-842-01-01	54-842-01	0.30	431	431AT 431CT 431ET 431FL 431FR 431FT 431GL 431GR	3.23	GVI	Forward Strut Fairing - Left Nacelle Strut
01021021	8000 FC 1500 DY	8000 FC 1500 DY	54-852-02-01	54-852-02	0.30	441	441AT 441CT 441ET 441FL 441FR 441FT 441GL 441GR	2.14	GVI	Forward Strut Fairing - Right Nacelle Strut
01021026	1500 DY	1875 DY	20-280-00-01	20-280-00	2.00	300	311BL 313AL 324CL 324CXL 324DL 324DXL 324EL 324FL 324GL 335DB 335EB 335EXB 335FB 335GB 335GXB 345DB 345EB 345EXB 345FB 345GB 345GXB 825	11.68	FNC	PFCS Wire Shielding Functional Check - Empennage
01024024	12000 FH	12000 FH	26-045-00-01	26-045-00	0.20	223 224 243 244 253 254 263 264	117AL	0.02	OPC	OFAR Smoke Detector System
01024024	24000 FH	24000 FH	27-055-00-01	27-055-00	1.00	143 144 211 212 573 576 577 673 676 677		0.00	OPC	Flap Transmission No Back Brakes
01024024	24000 FH	24000 FH	32-170-00-01	32-170-00	0.50	112 143 144 211 731 741	112AL	0.02	FNC	Normal and Alternate Brake Systems



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01024024	18000 FH	18000 FH	35-130-00-01	35-130-00	1.00	221 222 231 232 241 242 251 252 261 262		0.00	OPC	Therapeutic Oxygen System
01025025	25000 FH 1875 DY	25000 FH 1875 DY	27-440-00-01	27-440-00	3.00	211 212 311 312	311BL	0.04	FNC	Stabilizer Freeplay
01026026	1875 DY	1875 DY	20-270-01-01	20-270-01	7.00	500	544BB 544CB 544DB 551DB 552AB 552BB 552FB 552HB 552LB 561LB 561NB 561PB	3.59	FNC	PFCS Wire Shielding Functional Check - Left Wing
01026026	1875 DY	1875 DY	20-270-02-01	20-270-02	7.00	600	644BB 644CB 644DB 651DB 652AB 652BB 652FB 652HB 652LB 661LB 661NB 661PB	3.59	FNC	PFCS Wire Shielding Functional Check - Right Wing
01028014	12000 FC 2250 DY	8000 FC 1500 DY	53-906-00-01	53-906-00	2.00	223 224		0.00	GVI	Area Above Passenger Compartment Ceiling - Section 41
01028014	12000 FC 2250 DY	8000 FC 1500 DY	53-910-00-01	53-910-00	2.00	233 234		0.00	GVI	Area Above Passenger Compartment Ceiling - Section 43
01028014	12000 FC 2250 DY	8000 FC 1500 DY	53-914-00-01	53-914-00	2.00	243 244		0.00	GVI	Area Above Passenger Compartment - Section 44
01028014	12000 FC 2250 DY	8000 FC 1500 DY	53-918-00-01	53-918-00	2.00	253 254		0.00	GVI	Area Above Passenger Compartment Ceiling - Section 46
01028014	12000 FC 2250 DY	8000 FC 1500 DY	53-922-00-01	53-922-00	2.00	263 264		0.00	GVI	Area Above Passenger Compartment Ceiling - Section 47
01028028	16000 FC 2250 DY	16000 FC 2250 DY	12-100-00-01	12-100-00	0.40	821	821	0.10	LUB	Forward Large Cargo Door, Door Mechanisms



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01028028	16000 FC 2250 DY	16000 FC 2250 DY	12-102-00-01	12-102-00	0.40	824		0.00	LUB	Aft Large Cargo Door, Door Mechanisms
01028028	16000 FC 2250 DY	16000 FC 2250 DY	12-104-00-01	12-104-00	0.30	823		0.00	LUB	Aft Small Cargo Door Hinge Arms and Adjustment Rods
01028028	12000 FC 2250 DY	12000 FC 2250 DY	20-651-00-01	20-651-00	0.50	153 154		0.00	RST	Areas Below the AFT Cargo Compartment
01028028	12000 FC 2250 DY	12000 FC 2250 DY	20-664-00-01	20-664-00	0.50	151 152	823 824	0.20	RST	Areas Behind the Aft Cargo Compartment Sidewalls
01028028	12000 FC 2250 DY	12000 FC 2250 DY	20-668-00-01	20-668-00	0.25	162		0.00	GVI	APU Battery Installation and Power Feeders
01028028	12000 FC 2250 DY	12000 FC 2250 DY	20-670-00-01	20-670-00	0.25	161 162		0.00	RST	Area Behind the Bulk Cargo Compartment Sidewalls
01028028	12000 FC 2250 DY	12000 FC 2250 DY	20-840-01-01	20-840-01	0.25	511	511AB 511CB 511DB 511FB 511HB 511JB 511KB 511LB 511NB 511PB 511QB	5.75	GVI	IDG and Backup Power Feeders - Left Wing
01028028	12000 FC 2250 DY	12000 FC 2250 DY	20-840-02-01	20-840-02	0.25	611	611AB 611CB 611DB 611FB 611HB 611JB 611KB 611LB 611NB 611PB 611QB	5.79	GVI	IDG and Backup Power Feeders - Right Wing
01028028	12000 FC 2250 DY	12000 FC 2250 DY	20-842-00-01	20-842-00	0.25	513 613	513BT 613BT	1.10	GVI	EWIS within Nacelle Gap - Left
01028028	12000 FC 2250 DY	12000 FC 2250 DY	20-842-00-02	20-842-00	0.25	513 613	513BT 613BT	1.10	GVI	EWIS within Nacelle Gap - Right
01028028	12000 FC 2250 DY	12000 FC 2250 DY	20-844-00-01	20-844-00	0.10	513 613	513BT 613BT	1.10	GVI	IDG and Backup Power Feeders - Left Wing
01028028	12000 FC 2250 DY	12000 FC 2250 DY	20-844-00-02	20-844-00	0.10	513 613	513BT 613BT	1.10	GVI	IDG and Backup Power Feeders - Right Wing
01028028	30000 FH	30000 FH	21-054-00-01	21-054-00	0.30	223 233		0.00	DET	IFE Cooling System Air Supply Multi-holed Orifices
01028028	12000 FC 2250 DY	12000 FC 2250 DY	21-250-00-01	21-250-00	0.50	121		0.00	GVI	E/E Equipment Cooling Override Duct



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01028028	2250 DY	2250 DY	25-260-00-01	25-260-00	0.10	223 224 253 254 263 264	311BL	0.00	OPC	Overhead Crew Rest Secondary Egress System
01028028	2250 DY	2250 DY	25-260-00-02	25-260-00	0.10	223 224 253 254 263 264		0.00	OPC	Overhead Attendant Rests Secondary Egress System
01028028	2250 DY	2250 DY	25-270-00-01	25-270-00	0.10	223 224 253 254 263 264		0.00	DET	Overhead Crew Rest Secondary Egress Grab Bar
01028028	2250 DY	2250 DY	25-270-00-02	25-270-00	0.10	223 224 253 254 263 264		0.00	DET	Overhead Attendant Rest Secondary Egress Grab Bar
01028028	2250 DY	2250 DY	26-064-00-01	26-064-00	0.50	151 152		0.00	FNC	Lower Lobe Attendant Rest (LLAR) Smoke Detection System
01028028	5000 FC	5000 FC	27-305-00-01	27-305-00	0.50	311 312		0.04	DET	Stabilizer Trim Actuator - Karon Lined Bushings
01028028	6000 FC	6000 FC	27-460-00-01	27-460-00	6.00	555 567 571 573 576 577 655 667 671 673 676 677		0.00	FNC	TRAILING EDGE FLAP SUPPORT LINKAGE PIN FREEPLAY
01028028	2625 DY	2625 DY	28-023-00-01	28-023-00	0.10	212		0.00	DIS	Fuel Spar Valve Battery





## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01028028	2250 DY	2250 DY	35-070-00-01	35-070-00	1.00	151 152 200	542AB 543DB	0.00	VCK	Passenger Chemical Oxygen Generators
01028028	2250 DY	2250 DY	35-070-00-02	35-070-00	1.00	151 152 200		0.00	VCK	Passenger Chemical Oxygen Generators
01028028	2250 DY	2250 DY	35-090-00-01	35-090-00	0.66	151 152 200		0.00	DET	Passenger Oxygen Masks
01028028	2250 DY	2250 DY	35-090-00-02	35-090-00	0.67	151 152 200		0.00	DET	Passenger Oxygen Masks
01028028	2250 DY	2250 DY	35-090-00-03	35-090-00	0.67	151 152 200		0.00	DET	Passenger Oxygen Masks
01028028	2250 DY	2250 DY	35-120-00-01	35-120-00	1.00	152		0.00	OPC	Passenger Gaseous Oxygen System Pressure Regulator
01028028	2250 DY	2250 DY	35-120-00-02	35-120-00	1.00	152		0.00	OPC	Supernumerary Gaseous Oxygen System Pressure Regulator
01028028	30000 FH	30000 FH	47-160-00-01	47-160-00	0.50	542 543		0.21	OPC	Operationally check the center tank vent cross flow check valve.
01028028	16000 FC 2250 DY	16000 FC 2250 DY	52-140-01-01	52-140-01	1.00	831 832 834 835 841 842 844 845		0.00	DET	Passenger Entry Door Mode Select Mechanism and Cables
01028028	16000 FC 2250 DY	16000 FC 2250 DY	52-145-00-01	52-145-00	0.25	833 843		0.00	DET	No. 3 Over-Wing Doors Mode Select Mechanism and Pull Cable
01028028	16000 FC 2250 DY	16000 FC 2250 DY	52-190-00-01	52-190-00	2.00	821	821	0.10	OPC	Forward Large Cargo Door Rotary Actuator No-Back
01028028	16000 FC 2250 DY	16000 FC 2250 DY	52-195-00-01	52-195-00	2.00	824	824	0.10	OPC	AFT Large Cargo Door Rotary Actuator No-Back
01028028	2250 DY	2250 DY	52-200-00-01	52-200-00	1.00	821	821	0.10	FNC	Forward Large Cargo Door Lock Handle Load Limiter



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01028028	2250 DY	2250 DY	52-205-00-01	52-205-00	1.00	824	824	0.10	FNC	AFT Large Cargo Door Lock Handle Load Limiter
01028028	16000 FC 2250 DY	16000 FC 2250 DY	52-230-00-01	52-230-00	2.00	823		0.00	OPC	AFT Small Cargo Door Rotary Actuator
01028028	16000 FC 2250 DY	16000 FC 2250 DY	52-804-00-01	52-804-00	1.00	821	821 821AW 821BW 821CW 821DW 821EW 821FW 821GW 821JW 821KW 821LW	0.65	GVI	Forward Large Cargo Door
01028028	16000 FC 2250 DY	16000 FC 2250 DY	52-808-00-01	52-808-00	0.75	823	823 823AW 823BW 823CW 823DW 823EW	0.45	GVI	Aft Small Cargo Door
01028028	16000 FC 2250 DY	16000 FC 2250 DY	52-812-00-01	52-812-00	1.00	824	824 824AW 824BW 824CW 824DW 824EW 824FW 824GW 824JW 824KW 824LW	0.65	GVI	Aft Large Cargo Door
01028028	16000 FC 2250 DY	16000 FC 2250 DY	52-818-01-01	52-818-01	0.60	831	831 831AW 831BW 831CW	0.70	GVI	Left No. 1 Passenger/Crew Entry Door - Section 41
01028028	16000 FC 2250 DY	16000 FC 2250 DY	52-822-01-01	52-822-01	0.40	832	832 832AW 832BW 832CW	0.70	GVI	Left No. 2 Passenger Entry Door - Section 43
01028028	16000 FC 2250 DY	16000 FC 2250 DY	52-825-01-01	52-825-01	0.60	833	833 833AW 833BW 833CW	0.70	GVI	Left No. 3 Overwing Door - Section 44
01028028	16000 FC 2250 DY	16000 FC 2250 DY	52-829-01-01	52-829-01	0.60	834	834 834AW 834BW 834CW	0.70	GVI	Left No. 4 Passenger Entry Door - Section 46
01028028	16000 FC 2250 DY	16000 FC 2250 DY	52-833-01-01	52-833-01	0.60	835	835 835AW 835BW 835CW	0.70	GVI	Left No. 5 Passenger Entry Door - Section 47
01028028	16000 FC 2250 DY	16000 FC 2250 DY	52-836-02-01	52-836-02	0.60	841	841 841AW 841BW 841CW	0.70	GVI	Right No. 1 Passenger/Crew Entry Door - Section 41
01028028	16000 FC 2250 DY	16000 FC 2250 DY	52-842-02-01	52-842-02	0.60	842	842 842AW 842BW 842CW	0.69	GVI	Right No. 2 Passenger Entry Door - Section 43
01028028	16000 FC 2250 DY	16000 FC 2250 DY	52-846-02-01	52-846-02	0.60	843	843 843AW 843BW 843CW	0.70	GVI	Right No. 3 Overwing Door - Section 44
01028028	16000 FC 2250 DY	16000 FC 2250 DY	52-851-02-01	52-851-02	0.60	844	844 844AW 844BW 844CW	0.70	GVI	Right No. 4 Passenger Entry Door - Section 46



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01028028	16000 FC 2250 DY	16000 FC 2250 DY	52-855-02-01	52-855-02	0.60	845	845 845AW 845BW 845CW	0.70	GVI	Right No. 5 Passenger Entry Door - Section 47
01028028	12000 FC 2250 DY	12000 FC 2250 DY	53-532-01-01	53-532-01	0.70	154	823	0.10	DET	Area Below Aft Cargo Compartment
01028028	12000 FC 2250 DY	12000 FC 2250 DY	53-533-01-01	53-533-01	0.60	154	824	0.10	DET	Area Below Aft Cargo Compartment
01028028	12000 FC 2250 DY 28000 FC 5250 DY	12000 FC 2250 DY 4000 FC 750 DY	53-574-00-01	53-574-00	0.40	233 234		0.00	GVI	Area Above Main Deck Compartment Ceiling
01028028	12000 FC 2250 DY 28000 FC 5250 DY	12000 FC 2250 DY 4000 FC 750 DY	53-579-00-01	53-579-00	3.50	243 244		0.00	GVI	Area Above Main Deck Compartment Ceiling
01028028	12000 FC 2250 DY	12000 FC 2250 DY	53-595-00-01	53-595-00	0.40	253 254		0.00	GVI	Area above Main Deck Compartment Ceiling
01028028	12000 FC 2250 DY 28000 FC 5250 DY	12000 FC 2250 DY 4000 FC 750 DY	53-596-00-01	53-596-00	4.00	253 254		0.00	GVI	Area above Main Deck Compartment Ceiling
01028028	12000 FC 2250 DY	12000 FC 2250 DY	53-818-00-01	53-818-00	2.00	121 122	821	0.10	GVI	Forward Cargo Compartment
01028028	12000 FC 2250 DY	12000 FC 2250 DY	53-822-00-01	53-822-00	1.00	123 124		0.00	GVI	Area Below Forward Cargo
01028028	12000 FC 2250 DY	12000 FC 2250 DY	53-826-00-01	53-826-00	0.50	125 126	121EZ 121FZ 121TW 821	0.10	GVI	Area Aft of Forward Cargo Compartment
01028028	12000 FC 2250 DY	12000 FC 2250 DY	53-830-00-01	53-830-00	0.50	135 136	195BL 195CL 195DL 195EL 195JL 195NL 195QL 196BR 196CR 196DR 196ER 196JR 196NR 196QR	1.80	GVI	Left Environmental Control Systems Bay



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01028028	12000 FC 2250 DY	12000 FC 2250 DY	53-830-00-02	53-830-00	0.50	135 136	195BL 195CL 195DL 195EL 195JL 195NL 195QL 196BR 196CR 196DR 196ER 196JR 196NR 196QR	1.80	GVI	Right Environmental Control Systems Bay
01028028	12000 FC 2250 DY	12000 FC 2250 DY	53-852-01-01	53-852-01	1.50	151 152	823	0.10	GVI	Aft Cargo Compartment
01028028	12000 FC 2250 DY	12000 FC 2250 DY	53-854-00-01	53-854-00	1.50	151 152	824	0.10	GVI	Aft Cargo Compartment
01028028	12000 FC 2250 DY	12000 FC 2250 DY	53-864-00-01	53-864-00	1.00	153 154	823	0.10	GVI	Area Below Aft Cargo Compartment
01028028	12000 FC 2250 DY	12000 FC 2250 DY	53-866-00-01	53-866-00	1.00	153 154	824	0.10	GVI	Area Below Aft Cargo Compartment
01028028	12000 FC 2250 DY	12000 FC 2250 DY	53-870-00-01	53-870-00	1.00	161 162		0.00	GVI	Bulk Cargo Compartment
01028028	12000 FC 2250 DY	12000 FC 2250 DY	53-874-00-01	53-874-00	1.50	163 164	825	0.09	GVI	Area Below Bulk Cargo Compartment
01028028	12000 FC 2250 DY	12000 FC 2250 DY	53-892-00-01	53-892-00	1.00	197	197DL 197EL 197GL 197JL 197RL	1.30	GVI	Aft Wing-to-Body Fairings - Left
01028028	12000 FC 2250 DY	12000 FC 2250 DY	53-894-00-01	53-894-00	1.00	198	198HR 198JR 198KR 198VR	2.73	GVI	Aft Wing-To-Body Fairings - Right



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01028028	12000 FC 2250 DY	12000 FC 2250 DY	53-896-00-01	53-896-00	0.59	221 222 223 224 231 232 233 234 241 242 243 244 251 252 253 254 261 262 263 264		0.00	GVI	Left Upper Fuselage - Body Sections 41 and 43 - STA 246 to STA 1035
01028028	12000 FC 2250 DY	12000 FC 2250 DY	53-896-00-02	53-896-00	0.59	221 222 223 224 231 232 233 234 241 242 243 244 251 252 253 254 261 262 263 264		0.00	GVI	Right Upper Fuselage - Body Sections 41 and 43 - STA 246 to STA 1035



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01028028	12000 FC 2250 DY	12000 FC 2250 DY	53-896-00-03	53-896-00	0.58	221 222 223 224 231 232 233 234 241 242 243 244 251 252 253 254 261 262 263 264		0.00	GVI	Left Upper Fuselage - Body Section 44 - BS 1035 to 1434
01028028	12000 FC 2250 DY	12000 FC 2250 DY	53-896-00-04	53-896-00	0.58	221 222 223 224 231 232 233 234 241 242 243 244 251 252 253 254 261 262 263 264		0.00	GVI	Right Upper Fuselage - Body Section 44 - STA 1035 to STA 1434



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01028028	12000 FC 2250 DY	12000 FC 2250 DY	53-896-00-05	53-896-00	0.58	221 222 223 224 231 232 233 234 241 242 243 244 251 252 253 254 261 262 263 264		0.00	GVI	Left Upper Fuselage - Body Section 46 and 47 - STA 1434 to STA 2150
01028028	12000 FC 2250 DY	12000 FC 2250 DY	53-896-00-06	53-896-00	0.58	221 222 223 224 231 232 233 234 241 242 243 244 251 252 253 254 261 262 263 264		0.00	GVI	Right Upper Fuselage - Body Sections 46 and 47 - STA 1434 to STA 2150
01028028	12000 FC 2250 DY	12000 FC 2250 DY	53-924-00-01	53-924-00	0.50	310		0.00	GVI	Body Section 48 - BS2150 to BS 2570
01028028	12000 FC 2250 DY	12000 FC 2250 DY	53-924-00-02	53-924-00	0.50	310		0.00	GVI	Body Section 48 - BS2150 to BS 2570



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01028028	12000 FC 2250 DY	12000 FC 2250 DY	54-538-01-01	54-538-01	1.50	432	413AL 414AR 415AL 416AR	0.90	GVI	Forward Torque Box - Left Nacelle Strut
01028028	12000 FC 2250 DY	12000 FC 2250 DY	54-540-01-01	54-540-01	1.00	433	431ET 431FL 431FR 431GL 431GR 433BR 433CL 433DR 433EL	1.88	GVI	AFT Torque Box - Left Nacelle Strut
01028028	12000 FC 2250 DY	12000 FC 2250 DY	54-541-01-02	54-541-01	0.30	433	433BR 433CL 433CR 433DL 433DR	0.15	DET	AFT Torque Box - Left Nacelle Strut (For GE90-100 series engines only)
01028028	12000 FC 2250 DY	12000 FC 2250 DY	54-542-01-02	54-542-01	0.20	432	413AL 414AR 415AL 415HB 415JB 415KB 416AR 432AL 432AR 432BL 432CL 432CR 432DR	1.75	DET	Strut Forward Torque Box (For GE90-100 series engines only)
01028028	12000 FC 2250 DY	12000 FC 2250 DY	54-543-01-02	54-543-01	0.50	433	413AL 414AR 415AL 416AR	0.90	GVI	AFT Torque Box - Left Nacelle Strut (GE90-100)
01028028	12000 FC 2250 DY	12000 FC 2250 DY	54-546-02-01	54-546-02	1.50	442	423AL 424AR 425AL 426AR	0.90	GVI	Forward Torque Box - Right Nacelle Strut
01028028	12000 FC 2250 DY	12000 FC 2250 DY	54-548-02-01	54-548-02	1.00	443	441ET 441FL 441FR 441GL 441GR 443BR 443CL 443CR 443EL	1.08	GVI	AFT Torque Box - Right Nacelle Strut
01028028	12000 FC 2250 DY	12000 FC 2250 DY	54-549-02-02	54-549-02	0.30	443	443BR 443CL 443CR 443DL 443DR	0.16	DET	AFT Torque Box - Right Nacelle Strut (For GE90-100 series engines only)
01028028	12000 FC 2250 DY	12000 FC 2250 DY	54-550-02-02	54-550-02	0.20	442	423AL 424AR 425AL 425HB 425JB 425KB 426AR 442AL 442AR 442BL 442CL 442CR 442DR	1.91	DET	Strut Forward Torque Box (For GE90-100 series engines only)
01028028	12000 FC 2250 DY	12000 FC 2250 DY	54-551-02-02	54-551-02	0.50	443	423AL 424AR 425AL 426AR	0.90	GVI	AFT Torque Box - Right Nacelle Strut (GE90-100 Engine)





## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01028028	12000 FC 2250 DY	12000 FC 2250 DY	54-582-01-01	54-582-01	1.50	432	413AL 414AR 415AL 416AR 431AT 431CL 431CR 431DT 431ET 431FT 432AL 432AR 432BL 432FR	3.99	GVI	FORWARD TORQUE BOX - LEFT NACELLE STRUT (GE90-100 Only)
01028028	12000 FC 2250 DY	12000 FC 2250 DY	54-583-02-01	54-583-02	1.50	442	423AL 424AR 425AL 426AR 441AT 441CL 441CR 441DT 441ET 441FT 442AL 442AR 442BL 442FR	3.44	GVI	FORWARD TORQUE BOX - RIGHT NACELLE STRUT (GE90-100 Only)
01028028	12000 FC 2250 DY	12000 FC 2250 DY	55-502-00-01	55-502-00	0.40	331 341	311BL	0.04	DET	Horizontal Stabilizer Center Section
01028028	12000 FC 2250 DY	12000 FC 2250 DY	55-509-00-01	55-509-00	0.40	322		0.00	DET	Vertical Stabilizer - Auxiliary Spar to Front Spar
01028028	12000 FC 2250 DY	12000 FC 2250 DY	55-511-00-01	55-511-00	1.20	323		0.00	DET	Vertical Stabilizer - Front Spar to Rear Spar
01028028	12000 FC 2250 DY	12000 FC 2250 DY	55-515-00-01	55-515-00	2.00	324	324DL 324EL 324FL	1.07	DET	Vertical Stabilizer - Rear Spar to Trailing Edge
01028028	12000 FC 2250 DY	12000 FC 2250 DY	55-515-01-01	55-515-01	2.00	324	324DXL	0.46	DET	Vertical Stabilizer - Rear Spar to Trailing Edge
01028028	12000 FC 2250 DY	12000 FC 2250 DY	55-517-00-01	55-517-00	0.50	324	324DL 324EL 324FL	1.07	GVI	Vertical Stabilizer - Rear Spar to Trailing Edge
01028028	12000 FC 2250 DY	12000 FC 2250 DY	55-517-01-01	55-517-01	0.50	324	324DXL	0.46	GVI	Vertical Stabilizer - Rear Spar to Trailing Edge
01028028	12000 FC 2250 DY	12000 FC 2250 DY	55-518-00-01	55-518-00	1.00	324	324DL 324EL 324FL	1.07	DET	Vertical Stabilizer - Rear Spar to Trailing Edge
01028028	12000 FC 2250 DY	12000 FC 2250 DY	55-518-01-01	55-518-01	1.00	324	324DXL	0.46	DET	Vertical Stabilizer - Rear Spar to Trailing Edge
01028028	12000 FC 2250 DY	12000 FC 2250 DY	55-521-00-01	55-521-00	0.40	326		0.00	GVI	Rudder Tab



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01028028	12000 FC 2250 DY	12000 FC 2250 DY	55-522-00-01	55-522-00	0.60	326	325AAR 325AR 325BAR 325BR 325CAR 325CR 326AR 326BR 326CR	1.56	DET	Rudder Tab
01028028	12000 FC 2250 DY	12000 FC 2250 DY	55-527-01-01	55-527-01	0.80	331	311BL	0.04	DET	Left Horizontal Stabilizer Center Section
01028028	12000 FC 2250 DY	12000 FC 2250 DY	55-534-01-01	55-534-01	0.80	335	335EB 335FB	0.71	DET	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
01028028	12000 FC 2250 DY	12000 FC 2250 DY	55-534-03-01	55-534-03	0.80	335	335EXB	0.58	DET	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
01028028	12000 FC 2250 DY	12000 FC 2250 DY	55-535-01-01	55-535-01	2.50	335	335CB 335DB 335EB 335FB	2.25	DET	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
01028028	12000 FC 2250 DY	12000 FC 2250 DY	55-535-03-01	55-535-03	2.50	335	335CB 335DB 335EXB	2.12	DET	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
01028028	12000 FC 2250 DY	12000 FC 2250 DY	55-538-02-01	55-538-02	0.80	341	311BL	0.04	DET	Right Horizontal Stabilizer Center Section
01028028	12000 FC 2250 DY	12000 FC 2250 DY	55-545-02-01	55-545-02	0.80	345	345EB 345FB	0.71	DET	Right Horizontal Stabilizer - Rear Spar to Trailing Edge
01028028	12000 FC 2250 DY	12000 FC 2250 DY	55-545-04-01	55-545-04	0.80	345	345EXB	0.45	DET	Right Horizontal Stabilizer - Rear Spar to Trailing Edge
01028028	12000 FC 2250 DY	12000 FC 2250 DY	55-546-02-01	55-546-02	2.50	345	345CB 345DB 345EB 345FB	2.25	DET	Right Horizontal Stabilizer - Rear Spar to Trailing Edge
01028028	12000 FC 2250 DY	12000 FC 2250 DY	55-546-04-01	55-546-04	2.50	345	345CB 345DB 345EXB	1.99	DET	Right Horizontal Stabilizer - Rear Spar to Trailing Edge
01028028	12000 FC 2250 DY	12000 FC 2250 DY	55-808-00-01	55-808-00	0.50	322 323		0.00	GVI	Vertical Stabilizer - Auxiliary Spar to Rear Spar
01028028	12000 FC 2250 DY	12000 FC 2250 DY	55-828-01-01	55-828-01	0.40	331	311BL 313AL	0.08	GVI	Left Horizontal Stabilizer - Center Section
01028028	12000 FC 2250 DY	12000 FC 2250 DY	55-832-01-01	55-832-01	0.50	333 334		0.00	GVI	Left Horizontal Stabilizer - Auxiliary Spar to Rear Spar
01028028	12000 FC 2250 DY	12000 FC 2250 DY	55-848-02-01	55-848-02	0.40	341	311BL 313AL	0.08	GVI	Right Horizontal Stabilizer Center Section



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01028028	12000 FC 2250 DY	12000 FC 2250 DY	55-852-02-01	55-852-02	0.50	343 344		0.00	GVI	Right Horizontal Stabilizer - Auxiliary Spar to Rear Spar
01028028	12000 FC 2250 DY	12000 FC 2250 DY	57-501-00-01	57-501-00	0.40	133 134	133AZ 133BZ 133CZ 139AL 139AZ	1.19	DET	Wing Center Section
01028028	12000 FC 2250 DY	12000 FC 2250 DY	57-515-01-01	57-515-01	0.60	555		0.00	DET	Left Wing Inboard Main Flap
01028028	12000 FC 2250 DY	12000 FC 2250 DY	57-519-01-01	57-519-01	0.20	557	557AT 557BB 557CT 557DB 557EB	0.60	GVI	Left Wing Flaperon
01028028	12000 FC 2250 DY	12000 FC 2250 DY	57-520-01-01	57-520-01	0.20	557	557AT 557BB 557CT 557DB 557EB	0.60	DET	Left Wing Flaperon
01028028	12000 FC 2250 DY	12000 FC 2250 DY	57-533-01-01	57-533-01	0.50	575	575AB 575BB	0.46	GVI	Outboard Flaperon Support Fairing - Left Wing
01028028	12000 FC 2250 DY	12000 FC 2250 DY	57-550-02-01	57-550-02	0.60	655		0.00	DET	Right Wing Inboard Main Flap
01028028	12000 FC 2250 DY	12000 FC 2250 DY	57-554-02-01	57-554-02	0.20	657	657AT 657BB 657CT 657DB 657EB	0.60	GVI	Right Wing Flaperon
01028028	12000 FC 2250 DY	12000 FC 2250 DY	57-555-02-01	57-555-02	0.20	657	657AT 657BB 657CT 657DB 657EB	0.60	DET	Right Wing Flaperon
01028028	12000 FC 2250 DY	12000 FC 2250 DY	57-563-02-01	57-563-02	0.50	675	675AB 675BB	0.46	GVI	Outboard Flaperon Support Fairing - Right Wing
01028028	12000 FC 2250 DY	12000 FC 2250 DY	57-924-02-01	57-924-02	0.25	630		0.00	GVI	Lower Wing Inspar Area (Fuel Tanks) - Inboard of Wing Rib 17 - Right Wing
01028028	12000 FC 2250 DY	12000 FC 2250 DY	57-924-02-02	57-924-02	0.25	630		0.00	GVI	Upper Wing Inspar Area (Fuel Tanks) - Inboard of Wing Rib 17 - Right Wing
01028028	12000 FC 2250 DY	12000 FC 2250 DY	57-932-02-01	57-932-02	0.37	640		0.00	GVI	Wing Inspar Area (Fuel Tanks) - Rib 17 to Wing Tip - Right Wing Lower Surface
01028028	12000 FC 2250 DY	12000 FC 2250 DY	57-932-02-02	57-932-02	0.38	640		0.00	GVI	Wing Inspar Area (Fuel Tanks) - Rib 17 to Wing Tip - Right Wing Upper Surface
01030030	6 YR	6 YR	23-190-00-01	23-190-00	0.50	111	111AL	0.13	DIS	Low Frequency Underwater Locator Device Battery



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01030030	5500 FC 2250 DY	5500 FC 2250 DY	54-350-01-01	54-350-01	0.50	410 430	195DL 195EL 195JL	0.00	FNC	Left Strut AFT Upper Spar Drain and AFT Strut Fairing Drain
01030030	5500 FC 2250 DY	5500 FC 2250 DY	54-350-02-01	54-350-02	0.50	420 440		0.00	FNC	Right Strut AFT Upper Spar Drain and AFT Strut Fairing Drain
01031021	12000 FC 2250 DY	8000 FC 1500 DY	53-888-00-01	53-888-00	0.75	195	196DR 196ER 196JR	0.32	GVI	Underwing Wing-to-Body Fairings - Left
01031021	12000 FC 2250 DY	8000 FC 1500 DY	53-890-00-01	53-890-00	0.75	196		0.32	GVI	Underwing Wing-To-Body Fairings - Right
01031021	12000 FC 2250 DY	8000 FC 1500 DY	53-906-00-02	53-906-00	2.00	223 224		0.00	GVI	Area Above Passenger Compartment Ceiling - Section 41
01031021	12000 FC 2250 DY	8000 FC 1500 DY	53-906-00-03	53-906-00	2.00	223 224		0.00	GVI	Area Above Passenger Compartment Ceiling - Section 41
01031021	12000 FC 2250 DY	8000 FC 1500 DY	53-906-00-04	53-906-00	2.00	223 224		0.00	GVI	Area Above Passenger Compartment Ceiling - Section 41
01031021	12000 FC 2250 DY	8000 FC 1500 DY	53-906-00-05	53-906-00	2.00	223 224		0.00	GVI	Area Above Passenger Compartment Ceiling - Section 41
01031021	12000 FC 2250 DY	8000 FC 1500 DY	53-910-00-02	53-910-00	2.00	233 234		0.00	GVI	Area Above Passenger Compartment Ceiling - Section 43
01031021	12000 FC 2250 DY	8000 FC 1500 DY	53-910-00-03	53-910-00	2.00	233 234		0.00	GVI	Area Above Passenger Compartment Ceiling - Section 43
01031021	12000 FC 2250 DY	8000 FC 1500 DY	53-910-00-04	53-910-00	2.00	233 234		0.00	GVI	Area Above Passenger Compartment Ceiling - Section 43
01031021	12000 FC 2250 DY	8000 FC 1500 DY	53-910-00-05	53-910-00	2.00	233 234		0.00	GVI	Area Above Passenger Compartment Ceiling - Section 43
01031021	12000 FC 2250 DY	8000 FC 1500 DY	53-914-00-02	53-914-00	2.00	243 244		0.00	GVI	Area Above Passenger Compartment - Section 44
01031021	12000 FC 2250 DY	8000 FC 1500 DY	53-914-00-03	53-914-00	2.00	243 244		0.00	GVI	Area Above Passenger Compartment - Section 44
01031021	12000 FC 2250 DY	8000 FC 1500 DY	53-914-00-04	53-914-00	2.00	243 244		0.00	GVI	Area Above Passenger Compartment - Section 44
01031021	12000 FC 2250 DY	8000 FC 1500 DY	53-914-00-05	53-914-00	2.00	243 244		0.00	GVI	Area Above Passenger Compartment - Section 44



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01031021	12000 FC 2250 DY	8000 FC 1500 DY	53-918-00-02	53-918-00	2.00	253 254		0.00	GVI	Area Above Passenger Compartment Ceiling - Section 46
01031021	12000 FC 2250 DY	8000 FC 1500 DY	53-918-00-03	53-918-00	2.00	253 254		0.00	GVI	Area Above Passenger Compartment Ceiling - Section 46
01031021	12000 FC 2250 DY	8000 FC 1500 DY	53-918-00-04	53-918-00	2.00	253 254		0.00	GVI	Area Above Passenger Compartment Ceiling - Section 46
01031021	12000 FC 2250 DY	8000 FC 1500 DY	53-918-00-05	53-918-00	2.00	253 254		0.00	GVI	Area Above Passenger Compartment Ceiling - Section 46
01031021	12000 FC 2250 DY	8000 FC 1500 DY	53-922-00-02	53-922-00	2.00	263 264		0.00	GVI	Area Above Passenger Compartment Ceiling - Section 47
01031021	12000 FC 2250 DY	8000 FC 1500 DY	53-922-00-03	53-922-00	2.00	263 264		0.00	GVI	Area Above Passenger Compartment Ceiling - Section 47
01031021	12000 FC 2250 DY	8000 FC 1500 DY	53-922-00-04	53-922-00	2.00	263 264		0.00	GVI	Area Above Passenger Compartment Ceiling - Section 47
01031021	12000 FC 2250 DY	8000 FC 1500 DY	53-922-00-05	53-922-00	2.00	263 264		0.00	GVI	Area Above Passenger Compartment Ceiling - Section 47
01031021	8000 FC 2250 DY	8000 FC 1500 DY	55-800-00-01	55-800-00	2.00	313 314	311BL 313AL	0.08	GVI	Stabilizer Torsion Box Compartment - Left and Right Sides
01031031	2250 DY	2250 DY	20-260-00-01	20-260-00	1.00	100		0.00	FNC	Ram Air Turbine (RAT) Wire Shielding Functional Check
01031031	2250 DY	2250 DY	20-310-01-01	20-310-01	6.00	143 510 520 540 550 560	511EB 511LB 511NB 521ABB 526CB 543DB 544BB 544EB 544FB	2.34	FNC	Functional Check Wire Bundle Inspection Left Flaps, Slats, Skew Sensors
01031031	2250 DY	2250 DY	20-310-02-01	20-310-02	6.00	144 610 620 640 650 660	611EB 611LB 611NB 621ABB 621DB 626CB 643DB 644BB 644EB 644FB	2.36	FNC	Functional Check Wire Bundle Right Flaps, Slats, Skew Sensors
01031031	2250 DY	2250 DY	20-320-00-01	20-320-00	1.00	300		0.00	FNC	Gust Suppression Transducers Wire Shielding Functional Check



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01031031	2250 DY	2250 DY	20-430-00-01	20-430-00	0.25	113 114 715 716	715 716	0.08	FNC	HIRF/Lightning Glide Slope Tracking Antenna COAX
01031031	2250 DY	2250 DY	20-451-00-01	20-451-00	2.00	122	821	0.10	FNC	HIRF/Lightning Radio Altimeter Antenna to Transceiver Coax
01031031	12000 FC 2250 DY	12000 FC 2250 DY	24-200-00-01	24-200-00	0.30	118	118AR	0.02	FNC	External Power Receptacles (Wear Check)
01031031	12000 FC 2250 DY	12000 FC 2250 DY	24-210-00-01	24-210-00	0.30	118	118AR	0.02	DET	External Power Receptacles (Inspection)
01031031	2250 DY	2250 DY	25-067-00-01	25-067-00	0.50	197 198		0.00	OPC	Off-Wing Slide Compartment Door Lock/Latch System
01031031	2250 DY	2250 DY	26-272-00-01	26-272-00	0.50	151 152		0.00	OPC	Lower Lobe Attendant Rest Fire Extinguishing System
01031031	2250 DY 12000 FC	2250 DY 12000 FC	28-015-00-01	28-015-00	0.50	542 544 642 644	542BB 544BB 642BB 644BB	0.80	GVI	Left Fuel Surge Tank FLAME ARRESTORS. Zone 542
01031031	2250 DY 12000 FC	2250 DY 12000 FC	28-015-00-02	28-015-00	0.50	542 544 642 644	542BB 544BB 642BB 644BB	0.80	GVI	Right Fuel Surge Tank FLAME ARRESTORS. Zone 642
01031031	11000 FC 2250 DY	11000 FC 2250 DY	32-300-00-01	32-300-00	0.25	143 144 731 741		0.00	GVI	Left Main Landing Gear Mechanisms
01031031	11000 FC 2250 DY	11000 FC 2250 DY	32-300-00-02	32-300-00	0.25	143 144 731 741		0.00	GVI	Right Main Landing Gear Mechanisms
01031031	11000 FC 2250 DY	11000 FC 2250 DY	32-310-00-01	32-310-00	0.25	143 144 732 742		0.00	GVI	Left Main Landing Gear Door Mechanisms
01031031	11000 FC 2250 DY	11000 FC 2250 DY	32-310-00-02	32-310-00	0.25	143 144 732 742		0.00	GVI	Right Main Landing Gear Door Mechanisms



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01031031	6000 FC 2250 DY	6000 FC 2250 DY	32-330-00-01	32-330-00	0.05	113 114 713 714		0.00	GVI	Nose Landing Gear Door Mechanisms
01031031	2250 DY	2250 DY	35-060-00-01	35-060-00	0.37	151 152 200		0.00	OPC	Passenger Oxygen System Door Latch/Actuator
01031031	2250 DY	2250 DY	35-060-00-02	35-060-00	0.37	151 152 200		0.00	OPC	Passenger Oxygen System Door Latch/Actuator
01031031	2250 DY	2250 DY	35-060-00-03	35-060-00	0.38	151 152 200		0.00	OPC	Passenger Oxygen System Door Latch/Actuator
01031031	2250 DY	2250 DY	35-060-00-04	35-060-00	0.38	151 152 200		0.00	OPC	Passenger Oxygen System Door Latch/Actuator
01031031	2250 DY	2250 DY	35-070-00-03	35-070-00	0.50	151 152 200		0.00	VCK	Passenger Chemical Oxygen Generators
01031031	2250 DY	2250 DY	35-071-00-01	35-071-00	0.20	200		0.00	VCK	Lavatory Constant Dispensing (CDS) oxygen System
01031031	2250 DY	2250 DY	35-090-00-04	35-090-00	0.20	151 152 200		0.00	DET	Attendant/Lavatory/Main Cabin Oxygen Masks
01031031	2250 DY	2250 DY	35-090-00-05	35-090-00	0.30	151 152 200		0.00	DET	Overhead Crew/Flight Attendant Rest Oxygen Masks
01031031	2250 DY	2250 DY	35-090-00-06	35-090-00	0.20	151 152 200		0.00	DET	Passenger Oxygen Masks
01031031	2250 DY	2250 DY	35-090-00-07	35-090-00	0.20	151 152 200	122CR	0.00	DET	Passenger Oxygen Masks
01031031	2250 DY	2250 DY	38-020-00-01	38-020-00	0.25	231 261		0.02	OPC	Potable Water Isolation Valves and Cables
01031031	6000 FC 2250 DY	6000 FC 2250 DY	52-135-00-01	52-135-00	0.25	833 843		0.00	DET	No. 3 Over-Wing Door Latch Torque Tube Interlock



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01031031	2250 DY	2250 DY	52-150-00-01	52-150-00	2.00	831 832 834 835 841 842 844 845		0.00	DET	Passenger Entry Door EPAS Tubing
01031031	2250 DY	2250 DY	52-150-01-01	52-150-01	2.00	831 832 834 835 841 842 844 845		0.00	DET	Passenger Entry Door EPAS Tubing
01031031	2250 DY	2250 DY	52-150-02-01	52-150-02	0.50	831 841		0.00	DET	Passenger Entry Door EPAS Tubing
01031031	2250 DY	2250 DY	52-155-00-01	52-155-00	0.50	833 843		0.00	DET	No. 3 Over-Wing Doors EPAS Tubing
01031031	12000 FC 2250 DY	12000 FC 2250 DY	53-532-00-01	53-532-00	0.70	154	823	0.10	DET	Area Below Aft Cargo Compartment
01031031	12000 FC 2250 DY	12000 FC 2250 DY	53-533-00-01	53-533-00	0.60	154	824	0.10	DET	Area Below Aft Cargo Compartment
01031031	8000 FC 2250 DY	8000 FC 2250 DY	54-846-01-01	54-846-01	0.40	432 433	413AL 414AR 415AL 415HB 415JB 416AR 432AL 432AR 432BL 432CL 432CR 432DR 432EL 432ER 432FL 432GR 433AL 433AR 433BL 433BR 433CL 433CR	3.08	GVI	Forward and Aft Torque Box - Left Nacelle Strut





## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01031031	8000 FC 2250 DY	8000 FC 2250 DY	54-856-02-01	54-856-02	0.40	442 443	423AL 424AR 425AL 425HB 425JB 426AR 442AL 442AR 442BL 442CL 442CR 442DR 442EL 442ER 442FL 442GR 443AL 443AR 443BL 443BR 443CL 443CR	2.74	GVI	Forward and Aft Torque Box - Right Nacelle Strut
01031031	12000 FC 2250 DY	12000 FC 2250 DY	55-522-00-02	55-522-00	0.60	326	325AAR 325AR 325BAR 325BR 325CAR 325CR 326AR 326BR 326CR	1.56	DET	Rudder Tab
01031031	8000 FC 2250 DY	8000 FC 2250 DY	57-505-01-01	57-505-01	1.50	530		0.00	DET	Wing Inspar Area (Fuel Tanks) - Inboard of Wing Rib 17
01031031	8000 FC 2250 DY	8000 FC 2250 DY	57-507-01-01	57-507-01	2.00	540		0.00	GVI	Wing Inspar Area (Fuel Tanks) - Rib 17 to Wing Tip
01031031	8000 FC 2250 DY	8000 FC 2250 DY	57-540-02-01	57-540-02	1.50	630		0.00	DET	Wing Inspar Area (Fuel Tanks) - Inboard of Wing Rib 17
01031031	8000 FC 2250 DY	8000 FC 2250 DY	57-542-02-01	57-542-02	2.00	640		0.00	GVI	Wing Inspar Area (Fuel Tanks) - Rib 17 to Wing Tip
01031031	12000 FC 2250 DY	12000 FC 2250 DY	57-832-01-01	57-832-01	0.25	530		0.00	GVI	Lower Wing Inspar Area (Fuel Tanks) - Inboard of Wing Rib 17 - Left Wing
01031031	12000 FC 2250 DY	12000 FC 2250 DY	57-832-01-02	57-832-01	0.25	530		0.00	GVI	Upper Wing Inspar Area (Fuel Tanks) - Inboard of Wing Rib 17 - Left Wing
01031031	12000 FC 2250 DY	12000 FC 2250 DY	57-840-01-01	57-840-01	0.37	540		0.00	GVI	Wing Inspar Area - Rib 17 to Wing Tip - Left Wing Lower Surface
01031031	12000 FC 2250 DY	12000 FC 2250 DY	57-840-01-02	57-840-01	0.38	540		0.00	GVI	Wing Inspar Area - Rib 17 to Wing Tip - Left Wing Upper Surface
01036036	2625 DY	2625 DY	20-471-00-01	20-471-00	1.00	144	742	0.04	FNC	HIRF/Lightning Protection - Main Landing Gear (MLG) Selector/Bypass Valve Module
01036036	2625 DY	2625 DY	20-472-00-01	20-472-00	1.00	144	742	0.04	FNC	HIRF/Lightning Protection - Center Hydraulic System Quantity Transmitter



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01036036	2625 DY	2625 DY	20-473-01-01	20-473-01	1.50	143 552	552HB 552LB 732	1.31	FNC	HIRF/Lightning Protection - Flight Control Shutoff Valves - LH Wing & LH MLG W/W
01036036	2625 DY	2625 DY	20-473-02-01	20-473-02	1.50	144 652	652HB 742	0.94	FNC	HIRF/Lightning Protection - Flight Control Shutoff Valves - RH Wing & RH MLG W/W
01036036	2625 DY	2625 DY	20-474-01-01	20-474-01	1.50	143 551	551DB 732	0.06	FNC	HIRF/Lightning Protection - Fuel Crossfeed and Isolation Valves - LH Wing & LH MLG W/W
01036036	2625 DY	2625 DY	20-474-02-01	20-474-02	1.50	144 651	651DB 742	0.06	FNC	HIRF/Lightning Protection - Fuel Crossfeed and Isolation Valves - RH Wing & RH MLG W/W
01036036	2625 DY	2625 DY	20-475-00-01	20-475-00	1.00	143 144	732 742	0.08	FNC	HIRF/Lightning Protection - Center Override Jettison Fuel Pumps - MLG W/W
01036036	2625 DY	2625 DY	20-476-01-01	20-476-01	1.50	143 551	551BB 551DB 732	0.51	FNC	HIRF/Lightning Protection - Fuel Boost Pumps - LH Wing & LH MLG W/W
01036036	2625 DY	2625 DY	20-476-02-01	20-476-02	1.50	144 651	651AB 651BB 742	0.94	FNC	HIRF/Lightning Protection - Fuel Boost Pumps - RH Wing & RH MLG W/W
01036036	2625 DY	2625 DY	20-477-01-01	20-477-01	1.00	552	552HB	0.90	FNC	HIRF/Lightning Protection - Main Tank Fuel Jettison Pump - LH Wing
01036036	2625 DY	2625 DY	20-477-02-01	20-477-02	1.00	652	652HB	0.90	FNC	HIRF/Lightning Protection - Main Tank Fuel Jettison Pump - RH Wing
01036036	2625 DY	2625 DY	20-478-01-01	20-478-01	1.00	543	543AB 561GB	0.61	FNC	HIRF/Lightning Protection - Fuel Jettison Nozzle Valves - LH Wing
01036036	2625 DY	2625 DY	20-478-02-01	20-478-02	1.00	643	643AB 661GB	0.61	FNC	HIRF/Lightning Protection - Fuel Jettison Nozzle Valves - RH Wing
01036036	2625 DY	2625 DY	20-479-01-01	20-479-01	1.00	561	561GB	0.40	FNC	HIRF/Lightning Protection - Fuel Jettison Nozzle Valves - LH Wing
01036036	2625 DY	2625 DY	20-479-02-01	20-479-02	1.00	661	661GB	0.40	FNC	HIRF/Lightning Protection - Fuel Jettison Nozzle Valves - RH Wing
01036036	36000 FH	36000 FH	21-131-00-01	21-131-00	1.00	153 163 211 212		0.00	FNC	AFT/Bulk Cargo Overheat Protection Switch & Relay
01036036	36000 FH	36000 FH	21-180-00-01	21-180-00	0.75	135 136	195BL 195CL 195EL 196CR 196ER	0.26	DET	AC Pack Conditioned Air Check Valves



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01036036	36000 FH	36000 FH	21-180-00-02	21-180-00	0.75	135 136	195BL 195CL 195EL 196CR 196ER	0.26	DET	AC Pack Conditioned Air Check Valves
01036036	36000 FH	36000 FH	26-100-00-01	26-100-00	0.66	122 411 421	413AL 414AR 415AL 416AR 423AL 424AR 425AL 426AR 821	1.90	FNC	Engine Fire Extinguishing Distribution Lines
01036036	36000 FH	36000 FH	26-100-00-02	26-100-00	0.67	122 411 421	413AL 414AR 415AL 416AR 423AL 424AR 425AL 426AR 821	1.90	FNC	Engine Fire Extinguishing Distribution Lines
01036036	36000 FH	36000 FH	26-100-00-03	26-100-00	0.67	122 411 421	413AL 414AR 415AL 416AR 423AL 424AR 425AL 426AR 821	1.90	FNC	Engine Fire Extinguishing Distribution Lines
01036036	36000 FH	36000 FH	26-150-00-01	26-150-00	1.00	211 212 313 315 316	117AL 313AL 825	0.15	FNC	APU Fire Switch
01036036	36000 FH	36000 FH	26-210-00-01	26-210-00	2.00	121 122 151 152 161 162	117AL 821 823 824	0.32	FNC	Cargo Fire Extinguishing Tubing
01036036	36000 FH	36000 FH	27-150-00-01	27-150-00	0.10	211 212		0.00	OPC	Primary Flight Computer Disconnect Switch
01036036	36000 FH	36000 FH	27-190-00-01	27-190-00	0.40	211 212		0.00	OPC	Wheel Jam Breakout Mechanism
01036036	36000 FH	36000 FH	27-210-00-01	27-210-00	0.30	112 211 212		0.00	OPC	Control Column Breakout Mechanism
01036036	36000 FH	36000 FH	27-270-00-01	27-270-00	1.00	211 212 311 312	311BL	0.04	OPC	Stabilizer Secondary Brakes
01036036	36000 FH	36000 FH	27-280-00-01	27-280-00	2.50	211 212		0.00	FNC	Stabilizer Trim Limit Switches



# 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01036036	36000 FH	36000 FH	27-330-00-01	27-330-00	0.30	211 212		0.00	OPC	Auto Speedbrake Function
01036036	36000 FH	36000 FH	27-340-00-01	27-340-00	8.00	511 521 611 621	511CB 511EB 511LB 511MB 521AAB 521ACB 521AFB 521BB 521EB 521GB 521JB 521MB 521PB 521RB 521TB 521WB 521YB 611CB 611EB 611LB 611MB 621AAB 621ACB 621AFB 621BB 621EB 621GB 621JB 621MB 621PB 621RB 621TB 621WB 621YB	8.81	OPC	Left Leading Edge Slat No-Back Brakes
01036036	36000 FH	36000 FH	27-340-00-02	27-340-00	8.00	511 521 611 621	511CB 511EB 511LB 511MB 521AAB 521ACB 521AFB 521BB 521EB 521GB 521JB 521MB 521PB 521RB 521TB 521WB 521YB 611CB 611EB 611LB 611MB 621AAB 621ACB 621AFB 621BB 621EB 621GB 621JB 621MB 621PB 621RB 621TB 621WB 621YB	8.81	OPC	Right Leading Edge Slat No-Back Brakes
01036036	36000 FH	36000 FH	27-400-00-01	27-400-00	2.00	211 212		0.00	OPC	Aileron Trim Inhibit Operational Check
01036036	36000 FH	36000 FH	27-420-00-01	27-420-00	0.50	211 212		0.00	OPC	Rudder Pedal Pogo



# 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01036036	36000 FH	36000 FH	28-030-00-01	28-030-00	2.00	153 154 211 212		0.00	FNC	APU Fuel Supply Line And Shroud
01036036	36000 FH	36000 FH	32-180-00-01	32-180-00	1.50	551 651 731 741	551DB 651DB	0.04	FNC	Left Main Landing Gear Antiskid Module Hydraulic Fuses
01036036	36000 FH	36000 FH	32-180-00-02	32-180-00	1.50	551 651 731 741	551DB 651DB	0.04	FNC	Right Main Landing Gear Antiskid Module Hydraulic Fuses
01042000	16000 FC 3000 DY	0 FC 0 DY	53-568-00-01	53-568-00	5.00	231	832	0.04	GVI	Passenger Compartment - Left
01042000	16000 FC 3000 DY	0 FC 0 DY	53-568-00-02	53-568-00	5.00	231	832	0.04	GVI	Passenger Compartment - Left
01042000	16000 FC 3000 DY	0 FC 0 DY	53-568-00-03	53-568-00	5.00	231	832	0.04	GVI	Passenger Compartment - Left
01042000	16000 FC 3000 DY	0 FC 0 DY	53-568-00-04	53-568-00	5.00	231	832	0.04	GVI	Passenger Compartment - Left
01042000	16000 FC 3000 DY	0 FC 0 DY	53-568-00-05	53-568-00	5.00	231	832	0.04	GVI	Passenger Compartment - Left
01042000	16000 FC 3000 DY	0 FC 0 DY	53-569-00-01	53-569-00	4.00	232	842	0.04	GVI	Passenger Compartment - Right
01042000	16000 FC 3000 DY	0 FC 0 DY	53-569-00-02	53-569-00	4.00	232	842	0.04	GVI	Passenger Compartment - Right
01042000	16000 FC 3000 DY	0 FC 0 DY	53-569-00-03	53-569-00	4.00	232	842	0.04	GVI	Passenger Compartment - Right
01042000	16000 FC 3000 DY	0 FC 0 DY	53-569-00-04	53-569-00	4.00	232	842	0.04	GVI	Passenger Compartment - Right
01042000	16000 FC 3000 DY	0 FC 0 DY	53-569-00-05	53-569-00	4.00	232	842	0.04	GVI	Passenger Compartment - Right
01042000	16000 FC 3000 DY	0 FC 0 DY	53-576-00-01	53-576-00	0.60	233 234		0.00	GVI	Area Above Main Deck Compartment Ceiling
01042000	16000 FC 3000 DY	0 FC 0 DY	53-576-00-02	53-576-00	0.60	233 234		0.00	GVI	Area Above Main Deck Compartment Ceiling



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01042000	16000 FC 3000 DY	0 FC 0 DY	53-576-00-03	53-576-00	0.60	233 234		0.00	GVI	Area Above Main Deck Compartment Ceiling
01042000	16000 FC 3000 DY	0 FC 0 DY	53-576-00-04	53-576-00	0.60	233 234		0.00	GVI	Area Above Main Deck Compartment Ceiling
01042000	16000 FC 3000 DY	0 FC 0 DY	53-576-00-05	53-576-00	0.60	233 234		0.00	GVI	Area Above Main Deck Compartment Ceiling
01042000	16000 FC 3000 DY	0 FC 0 DY	53-576-00-06	53-576-00	0.60	233 234		0.00	GVI	Area Above Main Deck Compartment Ceiling
01042000	16000 FC 3000 DY	0 FC 0 DY	53-577-00-01	53-577-00	0.50	241		0.00	GVI	Main Deck Compartment
01042000	16000 FC 3000 DY	0 FC 0 DY	53-577-00-02	53-577-00	0.50	241		0.00	GVI	Main Deck Compartment
01042000	16000 FC 3000 DY	0 FC 0 DY	53-577-00-03	53-577-00	0.50	241		0.00	GVI	Main Deck Compartment
01042000	16000 FC 3000 DY	0 FC 0 DY	53-577-00-04	53-577-00	0.50	241		0.00	GVI	Main Deck Compartment
01042000	16000 FC 3000 DY	0 FC 0 DY	53-577-00-05	53-577-00	0.50	241		0.00	GVI	Main Deck Compartment
01042000	16000 FC 3000 DY	0 FC 0 DY	53-577-00-06	53-577-00	0.50	241		0.00	GVI	Main Deck Compartment
01042000	16000 FC 3000 DY	0 FC 0 DY	53-578-00-01	53-578-00	0.50	242		0.00	GVI	Main Deck Compartment
01042000	16000 FC 3000 DY	0 FC 0 DY	53-578-00-02	53-578-00	0.50	242		0.00	GVI	Main Deck Compartment
01042000	16000 FC 3000 DY	0 FC 0 DY	53-578-00-03	53-578-00	0.50	242		0.00	GVI	Main Deck Compartment
01042000	16000 FC 3000 DY	0 FC 0 DY	53-578-00-04	53-578-00	0.50	242		0.00	GVI	Main Deck Compartment
01042000	16000 FC 3000 DY	0 FC 0 DY	53-578-00-05	53-578-00	0.50	242		0.00	GVI	Main Deck Compartment
01042000	16000 FC 3000 DY	0 FC 0 DY	53-578-00-06	53-578-00	0.50	242		0.00	GVI	Main Deck Compartment
01042000	16000 FC 3000 DY	0 FC 0 DY	53-591-00-01	53-591-00	7.00	252	844	0.04	GVI	Passenger Compartment



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01042000	16000 FC 3000 DY	0 FC 0 DY	53-591-00-02	53-591-00	7.00	252	844	0.04	GVI	Passenger Compartment
01042000	16000 FC 3000 DY	0 FC 0 DY	53-591-00-03	53-591-00	7.00	252	844	0.04	GVI	Passenger Compartment
01042000	16000 FC 3000 DY	0 FC 0 DY	53-591-00-04	53-591-00	7.00	252	844	0.04	GVI	Passenger Compartment
01042000	16000 FC 3000 DY	0 FC 0 DY	53-591-00-05	53-591-00	7.00	252	844	0.04	GVI	Passenger Compartment
01042000	16000 FC 3000 DY	0 FC 0 DY	53-597-00-01	53-597-00	0.60	253 254		0.00	GVI	Area above Main Deck Compartment Ceiling
01042000	16000 FC 3000 DY	0 FC 0 DY	53-597-00-02	53-597-00	0.60	253 254		0.00	GVI	Area above Main Deck Compartment Ceiling
01042000	16000 FC 3000 DY	0 FC 0 DY	53-597-00-03	53-597-00	0.60	253 254		0.00	GVI	Area above Main Deck Compartment Ceiling
01042000	16000 FC 3000 DY	0 FC 0 DY	53-597-00-04	53-597-00	0.60	253 254		0.00	GVI	Area above Main Deck Compartment Ceiling
01042000	16000 FC 3000 DY	0 FC 0 DY	53-597-00-05	53-597-00	0.60	253 254		0.00	GVI	Area above Main Deck Compartment Ceiling
01042000	16000 FC 3000 DY	0 FC 0 DY	53-597-00-06	53-597-00	0.60	253 254		0.00	GVI	Area above Main Deck Compartment Ceiling
01042000	16000 FC 3000 DY	0 FC 0 DY	53-615-00-01	53-615-00	0.60	241 242	833 843	0.08	GVI	Passenger Compartment Left and Right
01042000	16000 FC 3000 DY	0 FC 0 DY	53-615-00-02	53-615-00	0.60	241 242	833 843	0.08	GVI	Passenger Compartment Left and Right
01042000	16000 FC 3000 DY	0 FC 0 DY	53-619-00-01	53-619-00	0.60	253 254		0.00	GVI	Area above Passenger Compartment Ceiling
01042000	16000 FC 3000 DY	0 FC 0 DY	53-619-00-02	53-619-00	0.60	253 254		0.00	GVI	Area above Passenger Compartment Ceiling
01042000	16000 FC 3000 DY	0 FC 0 DY	53-623-00-01	53-623-00	0.50	233 234		0.00	DET	Main Deck Compartment Ceiling



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01042014	3750 DY	1875 DY	20-290-00-01	20-290-00	5.00	117 118 121 122 143 144 251 252	117AL 821	0.12	FNC	HIRF/Lightning Ace Wire Bundle Shielding
01042014	3000 DY	1500 DY	20-340-00-01	20-340-00	1.00	100 200		0.00	FNC	HIRF/lightning ACE disconnects to pitch rate sensors
01042042	3000 DY	3000 DY	20-410-00-01	20-410-00	0.50	111		0.00	DET	Radome Diverter Strips Detailed Visual Inspection
01042042	3000 DY	3000 DY	20-560-01-01	20-560-01	1.00	510 550	511FB 551DB	1.21	FNC	HIRF/ L Functional Test for FQIS, Left Side
01042042	3000 DY	3000 DY	20-560-02-01	20-560-02	1.00	610 650	611FB 651DB	1.21	FNC	HIRF/ L Functional Test for FQIS, Right Side
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-600-00-01	20-600-00	0.10	115 116	112AL 117AL	0.04	DET	Power Feeders connected to P100 and P200 Power Panels
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-602-00-01	20-602-00	0.30	115 116	112AL 117AL	0.04	RST	Area Above Nose Landing Gear Wheel Well
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-652-00-01	20-652-00	0.25	121	821	0.10	GVI	Forward Cargo Compartment Power Feeders
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-652-00-02	20-652-00	0.25	121	821	0.10	GVI	Forward Cargo Compartment Power Feeders
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-652-00-03	20-652-00	0.25	121	821	0.10	GVI	Forward Cargo Compartment Power Feeders
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-652-00-04	20-652-00	0.25	121	821	0.10	GVI	Forward Cargo Compartment Power Feeders
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-652-00-05	20-652-00	0.25	121	821	0.10	GVI	Forward Cargo Compartment Power Feeders
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-652-00-06	20-652-00	0.25	121	821	0.10	GVI	Forward Cargo Compartment Power Feeders
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-656-00-01	20-656-00	0.50	123 124		0.00	RST	Areas Below the FWD Cargo Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-656-00-02	20-656-00	0.50	123 124		0.00	RST	Areas Below the FWD Cargo Compartment





## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-656-00-03	20-656-00	0.50	123 124		0.00	RST	Areas Below the FWD Cargo Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-656-00-04	20-656-00	0.50	123 124		0.00	RST	Areas Below the FWD Cargo Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-656-00-05	20-656-00	0.50	123 124		0.00	RST	Areas Below the FWD Cargo Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-656-00-06	20-656-00	0.50	123 124		0.00	RST	Areas Below the FWD Cargo Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-659-00-01	20-659-00	0.20	125 126	121EZ 121FZ 121TW	0.00	GVI	Area Behind the Forward Cargo Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-659-00-02	20-659-00	0.20	125 126	121EZ 121FZ 121TW	0.00	GVI	Area Behind the Forward Cargo Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-659-00-03	20-659-00	0.20	125 126	121EZ 121FZ 121TW	0.00	GVI	Area Behind the Forward Cargo Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-659-00-04	20-659-00	0.20	125 126	121EZ 121FZ 121TW	0.00	GVI	Area Behind the Forward Cargo Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-659-00-05	20-659-00	0.20	125 126	121EZ 121FZ 121TW	0.00	GVI	Area Behind the Forward Cargo Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-659-00-06	20-659-00	0.20	125 126	121EZ 121FZ 121TW	0.00	GVI	Area Behind the Forward Cargo Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-660-00-01	20-660-00	0.25	152	823 824	0.20	GVI	Aft Cargo Compartment Power Feeders
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-660-00-02	20-660-00	0.25	152	823 824	0.20	GVI	Aft Cargo Compartment Power Feeders
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-660-00-03	20-660-00	0.25	152	823 824	0.20	GVI	Aft Cargo Compartment Power Feeders
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-660-00-04	20-660-00	0.25	152	823 824	0.20	GVI	Aft Cargo Compartment Power Feeders
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-660-00-05	20-660-00	0.25	152	823 824	0.20	GVI	Aft Cargo Compartment Power Feeders
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-660-00-06	20-660-00	0.25	152	823 824	0.20	GVI	Aft Cargo Compartment Power Feeders
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-701-00-01	20-701-00	0.25	221 222		0.00	RST	Areas Behind the Passenger Compartment Air Grilles



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-701-00-02	20-701-00	0.25	221 222		0.00	RST	Areas Behind the Passenger Compartment Air Grilles
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-701-00-03	20-701-00	0.25	221 222		0.00	RST	Areas Behind the Passenger Compartment Air Grilles
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-701-00-04	20-701-00	0.25	221 222		0.00	RST	Areas Behind the Passenger Compartment Air Grilles
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-701-00-05	20-701-00	0.25	221 222		0.00	RST	Areas Behind the Passenger Compartment Air Grilles
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-702-00-01	20-702-00	0.50	221 222 251 252		0.00	DET	APU and RAT Power Feeders, and Galley and Cabin Power Feeders
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-702-00-02	20-702-00	0.50	221 222 251 252		0.00	DET	APU and RAT Power Feeders, and Galley and Cabin Power Feeders
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-705-00-01	20-705-00	0.20	221 222		0.00	GVI	Wiring Behind Passenger Compartment Air Grilles
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-708-00-01	20-708-00	0.70	223 224 233 234 243 244 253 254 263 264		0.00	RST	Upper Surface of Ceiling Panels, Bins and Modules
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-708-00-02	20-708-00	0.70	223 224 233 234 243 244 253 254 263 264		0.00	RST	Upper Surface of Ceiling Panels, Bins and Modules



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-708-00-03	20-708-00	0.70	223 224 233 234 243 244 253 254 263 264		0.00	RST	Upper Surface of Ceiling Panels, Bins and Modules
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-708-00-04	20-708-00	0.70	223 224 233 234 243 244 253 254 263 264		0.00	RST	Upper Surface of Ceiling Panels, Bins and Modules
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-708-00-05	20-708-00	0.70	223 224 233 234 243 244 253 254 263 264		0.00	RST	Upper Surface of Ceiling Panels, Bins and Modules
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-712-00-01	20-712-00	1.00	211 212		0.00	GVI	Flight Deck EWIS
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-712-00-02	20-712-00	1.00	211 212		0.00	GVI	Flight Deck EWIS
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-712-00-03	20-712-00	1.00	211 212		0.00	GVI	Flight Deck EWIS
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-712-00-04	20-712-00	1.00	211 212		0.00	GVI	Flight Deck EWIS
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-712-00-05	20-712-00	1.00	211 212		0.00	GVI	Flight Deck EWIS



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-712-00-06	20-712-00	1.00	211 212		0.00	GVI	Flight Deck EWIS
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-714-00-01	20-714-00	0.50	211 212		0.00	RST	Flight Deck
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-730-00-01	20-730-00	0.50	117 118	117AL 821	0.12	RST	Equipment Racks in Main Equipment Center.
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-732-00-01	20-732-00	0.50	117 118	117AL 821	0.12	DET	APU, IDG, BAT. & CHGR and Ground Power Feeders in the Main Equipment Center
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-737-00-01	20-737-00	0.25	221 222 231 232 241 242 251 252 261 262		0.00	RST	Main Deck Cargo Compartment Air Grilles
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-740-00-01	20-740-00	0.25	231 232		0.00	RST	Areas Behind the Passenger Compartment Air Grilles
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-740-00-02	20-740-00	0.25	231 232		0.00	RST	Areas Behind the Passenger Compartment Air Grilles
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-740-00-03	20-740-00	0.25	231 232		0.00	RST	Areas Behind the Passenger Compartment Air Grilles
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-744-00-01	20-744-00	0.25	231 232		0.00	RST	Areas Behind the Passenger Compartment Air Grilles
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-744-00-02	20-744-00	0.25	231 232		0.00	RST	Areas Behind the Passenger Compartment Air Grilles
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-748-00-01	20-748-00	0.20	231 232		0.00	GVI	Wiring Behind Passenger Compartment Air Grilles
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-748-00-02	20-748-00	0.20	231 232		0.00	GVI	Wiring Behind Passenger Compartment Air Grilles
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-748-00-03	20-748-00	0.20	231 232		0.00	GVI	Wiring Behind Passenger Compartment Air Grilles
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-752-00-01	20-752-00	0.25	231 232		0.00	GVI	Wiring Behind Passenger Compartment Air Grilles



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-752-00-02	20-752-00	0.25	231 232		0.00	GVI	Wiring Behind Passenger Compartment Air Grilles
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-756-00-01	20-756-00	0.25	241 242		0.00	RST	Areas Behind the Passenger Compartment Air Grilles
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-756-00-02	20-756-00	0.25	241 242		0.00	RST	Areas Behind the Passenger Compartment Air Grilles
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-756-00-03	20-756-00	0.25	241 242		0.00	RST	Areas Behind the Passenger Compartment Air Grilles
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-756-00-04	20-756-00	0.25	241 242		0.00	RST	Areas Behind the Passenger Compartment Air Grilles
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-756-00-05	20-756-00	0.25	241 242		0.00	RST	Areas Behind the Passenger Compartment Air Grilles
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-760-00-01	20-760-00	0.20	241 242		0.00	GVI	Wiring Behind Passenger Compartment Air Grilles
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-760-00-02	20-760-00	0.20	241 242		0.00	GVI	Wiring Behind Passenger Compartment Air Grilles
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-760-00-03	20-760-00	0.20	241 242		0.00	GVI	Wiring Behind Passenger Compartment Air Grilles
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-760-00-04	20-760-00	0.20	241 242		0.00	GVI	Wiring Behind Passenger Compartment Air Grilles
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-760-00-05	20-760-00	0.20	241 242		0.00	GVI	Wiring Behind Passenger Compartment Air Grilles
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-764-00-01	20-764-00	0.25	251 252		0.00	RST	Areas Behind the Passenger Compartment Air Grilles
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-764-00-02	20-764-00	0.25	251 252		0.00	RST	Areas Behind the Passenger Compartment Air Grilles
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-764-00-03	20-764-00	0.25	251 252		0.00	RST	Areas Behind the Passenger Compartment Air Grilles
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-768-00-01	20-768-00	0.25	251 252		0.00	RST	Areas Behind the Passenger Compartment Air Grilles
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-768-00-02	20-768-00	0.25	251 252		0.00	RST	Areas Behind the Passenger Compartment Air Grilles



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-772-00-01	20-772-00	0.20	251 252		0.00	GVI	Wiring Behind Passenger Compartment Air Grilles
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-772-00-02	20-772-00	0.20	251 252		0.00	GVI	Wiring Behind Passenger Compartment Air Grilles
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-772-00-03	20-772-00	0.20	251 252		0.00	GVI	Wiring Behind Passenger Compartment Air Grilles
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-776-00-01	20-776-00	0.20	251 252		0.00	GVI	Wiring Behind Passenger Compartment Air Grilles
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-776-00-02	20-776-00	0.20	251 252		0.00	GVI	Wiring Behind Passenger Compartment Air Grilles
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-780-00-01	20-780-00	0.25	261 262		0.00	RST	Areas Behind the Passenger Compartment Air Grilles
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-780-00-02	20-780-00	0.25	261 262		0.00	RST	Areas Behind the Passenger Compartment Air Grilles
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-780-00-03	20-780-00	0.25	261 262		0.00	RST	Areas Behind the Passenger Compartment Air Grilles
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-780-00-04	20-780-00	0.25	261 262		0.00	RST	Areas Behind the Passenger Compartment Air Grilles
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-780-00-05	20-780-00	0.25	261 262		0.00	RST	Areas Behind the Passenger Compartment Air Grilles
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-784-00-01	20-784-00	0.20	261 262		0.00	GVI	Wiring Behind Passenger Compartment Air Grilles
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-784-00-02	20-784-00	0.20	261 262		0.00	GVI	Wiring Behind Passenger Compartment Air Grilles
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-784-00-03	20-784-00	0.20	261 262		0.00	GVI	Wiring Behind Passenger Compartment Air Grilles
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-784-00-04	20-784-00	0.20	261 262		0.00	GVI	Wiring Behind Passenger Compartment Air Grilles
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-784-00-05	20-784-00	0.20	261 262		0.00	GVI	Wiring Behind Passenger Compartment Air Grilles
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-790-00-01	20-790-00	0.50	311 312	311BL	0.04	GVI	APU and APU Starter Power Feeders



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-792-00-01	20-792-00	0.50	313 314	311BL 313AL	0.08	GVI	APU and APU Starter Power Feeders
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-850-00-01	20-850-00	0.20	521	521CB 521DB 521EB	0.46	GVI	Wing Leading Edge Wiring - Left Wing
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-851-00-01	20-851-00	0.20	621	621CB 621DB 621EB	0.46	GVI	Wing Leading Edge Wiring - Right Wing
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-852-00-01	20-852-00	0.50	542 543 642 643	542AB 542BB 543AB 543BB 543CB 642AB 642BB 643AB 643BB 643CB	2.10	DET	FQIS Wiring in the Wing Main Tank - Left
01042042	16000 FC 3000 DY	16000 FC 3000 DY	20-852-00-02	20-852-00	0.50	542 543 642 643	542AB 542BB 543AB 543BB 543CB 642AB 642BB 643AB 643BB 643CB	2.10	DET	FQIS Wiring in the Wing Main Tank - Right
01042042	3750 DY	3750 DY	25-090-00-01	25-090-00	0.10	211 212		0.00	VCK	Flight Deck Escape Rope
01042042	3000 DY	3000 DY	25-095-00-01	25-095-00	0.12	833 843		0.00	DET	Left Overwing Exit Door Lifeline
01042042	3000 DY	3000 DY	25-095-00-02	25-095-00	0.13	833 843		0.00	DET	Right Overwing Exit Door Lifeline
01042042	3750 DY	3750 DY	26-250-00-01	26-250-00	1.50	122	821	0.10	RST	Cargo Fire Extinguishing System Filter/Regulator
01042042	3750 DY	3750 DY	26-274-00-01	26-274-00	1.00	151 152		0.00	DIS	Lower Lobe Attendant Rest Fire Extinguishing System
01042042	16000 FC 3000 DY	16000 FC 3000 DY	27-290-00-01	27-290-00	3.50	311 312		0.00	DET	Stabilizer Ballscrew Safety Rod
01042042	16000 FC 3000 DY	16000 FC 3000 DY	27-300-00-01	27-300-00	0.20	311 312	311BL	0.04	DET	Stabilizer Trim Actuator Gimbals
01042042	3750 DY	3750 DY	27-380-00-01	27-380-00	2.00	211 212 553 653	552CB 652CB	0.94	OPC	Spoiler Auxiliary Retract Device (SARD) Operational Check
01042042	16000 FC 3000 DY	16000 FC 3000 DY	28-111-00-01	28-111-00	1.00	131 132		0.00	DET	External Wires Over Center Fuel Tank



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01042042	16000 FC 3000 DY	16000 FC 3000 DY	28-113-00-01	28-113-00	0.50	151 152		0.00	DET	External Wires Over the Auxiliary Fuel Tank
01042042	3375 DY	3375 DY	52-301-00-01	52-301-00	1.00	211 212		0.00	DIS	Flight Deck Door Strike Assembly
01042042	3750 DY	3750 DY	52-305-00-01	52-305-00	0.50	211 212		0.00	DET	Flight Deck Door Decompression Panel Latches and Hinges
01042042	3750 DY	3750 DY	52-320-00-01	52-320-00	0.50	211 212		0.00	VCK	Flight Deck Door Decompression Panel Trim Ring Seals
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-501-00-01	53-501-00	1.30	112	112AL	0.02	GVI	Area Forward of Nose Landing Gear Wheel Well and Forward Access Door
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-502-00-01	53-502-00	2.00	115 116	117AL	0.02	GVI	Area Outboard and Above Nose Landing Gear Wheel Well
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-505-00-01	53-505-00	1.30	117 118	117AL	0.02	GVI	Main Equipment Center and Main Equipment Center Access Door
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-512-00-01	53-512-00	0.70	122	821	0.10	DET	Forward Cargo Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-512-00-02	53-512-00	0.70	122	821	0.10	DET	Forward Cargo Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-512-00-03	53-512-00	0.70	122	821	0.10	DET	Forward Cargo Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-512-00-04	53-512-00	0.70	122	821	0.10	DET	Forward Cargo Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-512-00-05	53-512-00	0.70	122	821	0.10	DET	Forward Cargo Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-514-00-01	53-514-00	0.30	123 124		0.00	GVI	Area Below Forward Cargo Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-515-00-01	53-515-00	0.70	124	821	0.10	DET	Area Below Forward Cargo Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-515-00-02	53-515-00	0.70	124	821	0.10	DET	Area Below Forward Cargo Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-515-00-03	53-515-00	0.70	124	821	0.10	DET	Area Below Forward Cargo Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-515-00-04	53-515-00	0.70	124	821	0.10	DET	Area Below Forward Cargo Compartment





## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-515-00-05	53-515-00	0.70	124	821	0.10	DET	Area Below Forward Cargo Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-515-00-06	53-515-00	0.70	124	821	0.10	DET	Area Below Forward Cargo Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-516-00-01	53-516-00	0.80	125 126	121EZ 121FZ 121TW 821	0.10	GVI	Area Aft of Forward Cargo Compartment - Body Station 998 to 1035
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-516-01-01	53-516-01	0.80	125 126	121EZ 121FZ 821	0.10	GVI	Area Aft of Forward Cargo Compartment - Body Station 998 to 1035
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-525-00-01	53-525-00	1.20	152	823	0.10	DET	Aft Cargo Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-526-00-01	53-526-00	0.70	152	824	0.10	DET	Aft Cargo Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-534-00-01	53-534-00	0.30	153 154		0.00	GVI	Area Below Aft Cargo Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-537-00-01	53-537-00	1.00	162	825	0.09	DET	Bulk Cargo Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-537-00-02	53-537-00	1.00	162	825	0.09	DET	Bulk Cargo Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-537-00-03	53-537-00	1.00	162	825	0.09	DET	Bulk Cargo Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-537-00-04	53-537-00	1.00	162	825	0.09	DET	Bulk Cargo Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-537-00-05	53-537-00	1.00	162	825	0.09	DET	Bulk Cargo Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-538-00-01	53-538-00	0.40	164	825	0.09	DET	Area Below Bulk Cargo Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-594-00-01	53-594-00	5.00	252	844	0.04	DET	Passenger Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-594-00-02	53-594-00	5.00	252	844	0.04	DET	Passenger Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-594-00-03	53-594-00	5.00	252	844	0.04	DET	Passenger Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-594-00-04	53-594-00	5.00	252	844	0.04	DET	Passenger Compartment



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-594-00-05	53-594-00	5.00	252	844	0.04	DET	Passenger Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-610-00-01	53-610-00	0.40	131 132		0.00	DET	Area above Wing Center Section
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-610-00-02	53-610-00	0.40	131 132		0.00	DET	Area above Wing Center Section
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-616-00-01	53-616-00	1.50	241 242	833 843	0.08	DET	Passenger Compartment Left and Right
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-616-00-02	53-616-00	1.50	241 242	833 843	0.08	DET	Passenger Compartment Left and Right
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-673-00-01	53-673-00	0.15	195 196	195BL 195CL 195EL 196BR 196CR 196ER	0.68	GVI	Underwing Wing-To-Body Fairing - Left
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-673-00-02	53-673-00	0.15	195 196	195BL 195CL 195EL 196BR 196CR 196ER	0.68	GVI	Underwing Wing-To-Body Fairing - Right
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-824-00-01	53-824-00	1.50	123 124	821	0.10	GVI	Area Below Forward Cargo Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-824-00-02	53-824-00	1.50	123 124	821	0.10	GVI	Area Below Forward Cargo Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-824-00-03	53-824-00	1.50	123 124	821	0.10	GVI	Area Below Forward Cargo Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-824-00-04	53-824-00	1.50	123 124	821	0.10	GVI	Area Below Forward Cargo Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-824-00-05	53-824-00	1.50	123 124	821	0.10	GVI	Area Below Forward Cargo Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-824-00-06	53-824-00	1.50	123 124	821	0.10	GVI	Area Below Forward Cargo Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-834-00-01	53-834-00	1.50	141 142		0.00	GVI	Area Above Main Landing Gear Wheel Well
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-856-00-01	53-856-00	2.00	151 152	823	0.10	GVI	Aft Cargo Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-858-00-01	53-858-00	2.00	151 152	824	0.10	GVI	Aft Cargo Compartment



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-860-00-01	53-860-00	1.50	153 154	823	0.10	GVI	Area Below Aft Cargo Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-862-00-01	53-862-00	1.50	153 154	824	0.10	GVI	Area Below Aft Cargo Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-862-00-02	53-862-00	1.50	153 154	824	0.10	GVI	Area Below Aft Cargo Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-862-00-03	53-862-00	1.50	153 154	824	0.10	GVI	Area Below Aft Cargo Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-862-00-04	53-862-00	1.50	153 154	824	0.10	GVI	Area Below Aft Cargo Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-862-00-05	53-862-00	1.50	153 154	824	0.10	GVI	Area Below Aft Cargo Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-862-00-06	53-862-00	1.50	153 154	824	0.10	GVI	Area Below Aft Cargo Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-872-00-01	53-872-00	1.50	161 162	825	0.09	GVI	Bulk Cargo Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-872-00-02	53-872-00	1.50	161 162	825	0.09	GVI	Bulk Cargo Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-872-00-03	53-872-00	1.50	161 162	825	0.09	GVI	Bulk Cargo Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-872-00-04	53-872-00	1.50	161 162	825	0.09	GVI	Bulk Cargo Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-872-00-05	53-872-00	1.50	161 162	825	0.09	GVI	Bulk Cargo Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-872-00-06	53-872-00	1.50	161 162	825	0.09	GVI	Bulk Cargo Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-878-00-01	53-878-00	1.50	165 166	825	0.09	GVI	Area Aft of the Bulk Cargo Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-878-00-02	53-878-00	1.50	165 166	825	0.09	GVI	Area Aft of the Bulk Cargo Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-878-00-03	53-878-00	1.50	165 166	825	0.09	GVI	Area Aft of the Bulk Cargo Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-878-00-04	53-878-00	1.50	165 166	825	0.09	GVI	Area Aft of the Bulk Cargo Compartment



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-878-00-05	53-878-00	1.50	165 166	825	0.09	GVI	Area Aft of the Bulk Cargo Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-878-00-06	53-878-00	1.50	165 166	825	0.09	GVI	Area Aft of the Bulk Cargo Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-902-00-01	53-902-00	2.00	211 212		0.00	GVI	Flight Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-902-00-02	53-902-00	2.00	211 212		0.00	GVI	Flight Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-902-00-03	53-902-00	2.00	211 212		0.00	GVI	Flight Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-902-00-04	53-902-00	2.00	211 212		0.00	GVI	Flight Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-902-00-05	53-902-00	2.00	211 212		0.00	GVI	Flight Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	53-902-00-06	53-902-00	2.00	211 212		0.00	GVI	Flight Compartment
01042042	3000 DY 16000 FC	3000 DY 16000 FC	53-932-00-01	53-932-00	0.20	233 234		0.00	GVI	Upper Fuselage - Left and Right - Section 43
01042042	16000 FC 3000 DY	16000 FC 3000 DY	55-503-00-01	55-503-00	0.70	311 312	311BL	0.04	DET	Area Aft of Bulkhead
01042042	16000 FC 3000 DY	16000 FC 3000 DY	55-505-00-01	55-505-00	0.60	313 314	311BL	0.04	DET	Stabilizer Torsion Box Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	55-507-00-01	55-507-00	6.50	310	311BL	0.04	GVI	Fuselage - BS 2150-2570.3 (Section 48)
01042042	16000 FC 3000 DY	16000 FC 3000 DY	55-514-00-01	55-514-00	3.00	323	311AZ 311BL 324BL 324BR	1.39	DET	Vertical Stabilizer - Front Spar to Rear Spar
01042042	16000 FC 3000 DY	16000 FC 3000 DY	55-514-01-01	55-514-01	3.00	323	311AZ 311BL 324AZ 324CXL 324CXR	2.87	DET	Vertical Stabilizer - Front Spar to Rear Spar
01042042	16000 FC 3000 DY	16000 FC 3000 DY	55-519-00-01	55-519-00	0.40	325	325AAR 325AR 325BAR 325BR 325CAR 325CR 326AR 326BR 326CR	1.56	GVI	Rudder



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01042042	16000 FC 3000 DY	16000 FC 3000 DY	55-519-00-02	55-519-00	0.40	325	325AAR 325AR 325BAR 325BR 325CAR 325CR 326AR 326BR 326CR	1.56	GVI	Rudder
01042042	16000 FC 3000 DY	16000 FC 3000 DY	55-524-00-01	55-524-00	0.60	321	321A 321AL 321AR 321B	2.32	DET	Vertical Stabilizer Leading Edge
01042042	16000 FC 3000 DY	16000 FC 3000 DY	55-524-01-01	55-524-01	0.60	321	321A 321AL 321AR	1.24	DET	Vertical Stabilizer Leading Edge
01042042	16000 FC 3000 DY	16000 FC 3000 DY	55-525-00-01	55-525-00	0.60	322	322AAL 322AAR 322AL 322AR	1.04	DET	Vertical Stabilizer - Auxiliary Spar to Front Spar
01042042	16000 FC 3000 DY	16000 FC 3000 DY	55-525-01-01	55-525-01	0.60	322	322ABL 322ABR	0.00	DET	Vertical Stabilizer - Auxiliary Spar to Front Spar
01042042	16000 FC 3000 DY	16000 FC 3000 DY	55-529-01-01	55-529-01	1.80	331	311BL 331AZ 331BZ	0.43	DET	Left Horizontal Stabilizer Center Section
01042042	16000 FC 3000 DY	16000 FC 3000 DY	55-530-01-01	55-530-01	1.10	331	311BL 331BZ 331CZ 331DZ	0.10	GVI	Left Horizontal Stabilizer Center Section
01042042	16000 FC 3000 DY	16000 FC 3000 DY	55-531-01-01	55-531-01	0.60	331	311BL 331BZ 331CZ 331DZ 331EZ	0.12	DET	Left Horizontal Stabilizer Center Section
01042042	16000 FC 3000 DY	16000 FC 3000 DY	55-540-02-01	55-540-02	1.80	341	311BL 341AZ 341BZ	0.43	DET	Right Horizontal Stabilizer Center Section
01042042	16000 FC 3000 DY	16000 FC 3000 DY	55-541-02-01	55-541-02	1.10	341	311BL 341BZ 341CZ 341DZ	0.10	GVI	Right Horizontal Stabilizer Center Section
01042042	16000 FC 3000 DY	16000 FC 3000 DY	55-542-02-01	55-542-02	0.60	341	311BL 341BZ 341CZ 341DZ 341EZ	0.12	DET	Right Horizontal Stabilizer Center Section
01042042	16000 FC 3000 DY	16000 FC 3000 DY	55-549-00-01	55-549-00	15.00	311 312 313 314 322 323 324	311AZ 311BL	0.07	SDI	Area Aft of Bulkhead and Stabilizer Torsion Box Compartment
01042042	16000 FC 3000 DY	16000 FC 3000 DY	55-550-00-01	55-550-00	1.00	323 327		0.00	DET	Vertical Stabilizer - Front Spar to Rear Spar



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01042042	16000 FC 3000 DY	16000 FC 3000 DY	55-551-00-01	55-551-00	1.00	337		0.00	DET	Left Horizontal Stabilizer Tip
01042042	16000 FC 3000 DY	16000 FC 3000 DY	55-552-00-01	55-552-00	1.00	347		0.00	DET	Right Horizontal Stabilizer Tip
01042042	16000 FC 3000 DY	16000 FC 3000 DY	57-506-01-01	57-506-01	1.00	530	531AB 531BB 531CB 532AB 533AB 533BB 533CB 533DB 533EB 533FB 533GB	2.31	DET	Wing Inspar Area (Fuel Tanks) - Inboard of Wing Rib 17
01042042	16000 FC 3000 DY	16000 FC 3000 DY	57-508-01-01	57-508-01	1.40	541 542	541AB 541BB 541CB 541DB 541EB 541FB 541GB 541HB 541JB 541KB 541LB 541MB 541NB 541PB 541QB 542AB 542BB	3.57	DET	Wing Inspar Area (Fuel Tanks) - Rib 17 to Rib 34
01042042	16000 FC 3000 DY	16000 FC 3000 DY	57-509-01-01	57-509-01	1.20	543 544	543AB 543BB 543CB 543DB 544AB 544BB 544CB 544DB 544EB 544FB 544GB 544HB 544JB 544KB 544LB 544MB	2.63	DET	Wing Inspar Area (Fuel Tanks) - Rib 34 to Wing Tip
01042042	8000 FC	8000 FC	57-512-00-01	57-512-00	0.40	522 523 524 525 526 527		0.00	DET	Slats Number 1 Through 6 Cove Skin
01042042	16000 FC 4000 DY	16000 FC 4000 DY	57-521-00-01	57-521-00	6.00	555 655	555AT 655AT	2.78	DET	Left Wing Inboard Trailing Edge Flap Torque Tube
01042042	16000 FC 4000 DY	16000 FC 4000 DY	57-521-00-02	57-521-00	6.00	555 655	555AT 655AT	2.78	DET	Right Wing Inboard Trailing Edge Flap Torque Tube



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01042042	8000 FC	8000 FC	57-539-00-01	57-539-00	0.40	622 623 624 625 626 627		0.00	DET	Slats Number 9 Through 14 Cove Skin
01042042	16000 FC 3000 DY	16000 FC 3000 DY	57-541-02-01	57-541-02	1.00	630	631AB 631BB 631CB 632AB 633AB 633BB 633CB 633DB 633EB 633FB 633GB	2.31	DET	Wing Inspar Area (Fuel Tanks) - Inboard of Wing Rib 17
01042042	16000 FC 3000 DY	16000 FC 3000 DY	57-543-02-01	57-543-02	1.40	641 642	641AB 641BB 641CB 641DB 641EB 641FB 641GB 641HB 641JB 641KB 641LB 641MB 641NB 641PB 641QB 642AB 642BB	3.57	DET	Wing Inspar Area (Fuel Tanks) - Rib 17 to Rib 34
01042042	16000 FC 3000 DY	16000 FC 3000 DY	57-544-02-01	57-544-02	1.20	643 644	643AB 643BB 643CB 643DB 644AB 644BB 644CB 644DB 644EB 644FB 644GB 644HB 644JB 644KB 644LB 644MB	2.84	DET	Wing Inspar Area (Fuel Tanks) - Rib 34 to Wing Tip
01042042	16000 FC 3000 DY	16000 FC 3000 DY	57-608-01-01	57-608-01	0.40	500		0.00	GVI	Left Wing
01042042	16000 FC 3000 DY	16000 FC 3000 DY	57-621-02-01	57-621-02	2.50	600		0.00	GVI	Right Wing
01042042	16000 FC 3000 DY	16000 FC 3000 DY	57-802-00-01	57-802-00	1.50	133 134	133AZ 133BZ 133CZ 139AL 139AZ	1.19	GVI	Wing Center Section
01042042	16000 FC 3000 DY	16000 FC 3000 DY	57-845-01-01	57-845-01	0.30	542	542AB 542BB	0.42	GVI	Main Tank Rib 32 to Rib 34 - Left Wing



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01042042	16000 FC 3000 DY	16000 FC 3000 DY	57-847-01-01	57-847-01	1.00	543 544	543AB 543BB 543CB 543DB 544AB 544BB 544CB 544DB 544EB 544FB 544GB 544HB 544JB 544KB 544LB 544MB	2.63	GVI	Main Tank, Surge Tank, and Inspar Area - Left Wing
01042042	16000 FC 3000 DY	16000 FC 3000 DY	57-851-01-01	57-851-01	0.20	545	545CB 545EB 545FL 545GL 545HB	0.35	GVI	Left Wing Tip
01042042	16000 FC 3000 DY	16000 FC 3000 DY	57-937-02-01	57-937-02	0.30	642	642AB 642BB	0.42	GVI	Main Tank - Rib 32 to Rib 34 - Right Wing
01042042	16000 FC 3000 DY	16000 FC 3000 DY	57-939-02-01	57-939-02	1.00	643 644	643AB 643BB 643CB 643DB 644AB 644BB 644CB 644DB 644EB 644FB 644GB 644HB 644JB 644KB 644LB 644MB	2.84	GVI	Main Tank, Surge Tank, and Inspar Area - Right Wing
01042042	16000 FC 3000 DY	16000 FC 3000 DY	57-943-02-01	57-943-02	0.20	645	645CB 645EB 645FR 645GR 645HB	0.35	GVI	Right Wing Tip
01044044	8000 FC 4500 DY	8000 FC 4500 DY	54-205-01-01	54-205-01	0.50	410 430		0.00	FNC	Left Strut AFT Upper Spar Drain and AFT Strut Fairing Drain
01044044	8000 FC 4500 DY	8000 FC 4500 DY	54-205-02-01	54-205-02	0.50	420 440		0.00	FNC	Right Strut AFT Upper Spar Drain and AFT Strut Fairing Drain
01045045	16000 FC 2250 DY	16000 FC 2250 DY	52-140-00-01	52-140-00	1.00	831 832 834 835 841 842 844 845		0.00	DET	Passenger Entry Door Mode Select Mechanism and Cables
01045045	16000 FC 2250 DY	16000 FC 2250 DY	52-828-01-01	52-828-01	0.60	834	834 834AW 834BW 834CW	0.70	GVI	Left No. 3 Passenger Entry Door - Section 46
01045045	16000 FC 2250 DY	16000 FC 2250 DY	52-832-01-01	52-832-01	0.60	835	835 835AW 835BW 835CW	0.70	GVI	Left No. 4 Passenger Entry Door - Section 47





## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01045045	16000 FC 2250 DY	16000 FC 2250 DY	52-850-02-01	52-850-02	0.60	844	844 844AW 844BW 844CW	0.70	GVI	Right No. 3 Passenger Entry Door - Section 46
01045045	16000 FC 2250 DY	16000 FC 2250 DY	52-854-02-01	52-854-02	0.60	845	845 845AW 845BW 845CW	0.70	GVI	Right No. 4 Passenger Entry Door - Section 47
01045045	12000 FC 2250 DY	12000 FC 2250 DY	54-509-01-01	54-509-01	1.50	432	413AL 414AR 415AL 416AR	0.90	GVI	Forward Torque Box - Left Nacelle Strut
01045045	12000 FC 2250 DY	12000 FC 2250 DY	54-510-01-01	54-510-01	1.50	432	413AL 414AR 415AL 416AR 431DL 431DR 432AL 432AR 432BL 432BR 432CL 432CR	2.71	GVI	Forward Torque Box - Left Nacelle Strut
01045045	12000 FC 2250 DY	12000 FC 2250 DY	54-511-01-01	54-511-01	1.00	433	431DL 431DR 431FL 431FR 431GL 431GR 433AL 433AR 433BL 433BR 433CL 433CR	2.60	GVI	AFT Torque Box - Left Nacelle Strut
01045045	12000 FC 2250 DY	12000 FC 2250 DY	54-512-01-01	54-512-01	0.60	433	432CL 432CR 433AL 433AR 433BL 433BR 433CL 433CR	0.82	DET	AFT Torque Box - Left Nacelle Strut
01045045	12000 FC 2250 DY	12000 FC 2250 DY	54-513-01-01	54-513-01	0.40	432	413AL 414AR 415AL 415LB 415MB 415NB 416AR 432BR	0.99	DET	Strut Forward Torque Box
01045045	12000 FC 2250 DY	12000 FC 2250 DY	54-514-01-01	54-514-01	1.00	433	413AL 414AR 415AL 416AR	0.90	GVI	AFT Torque Box - Left Nacelle Strut
01045045	12000 FC 2250 DY	12000 FC 2250 DY	54-517-02-01	54-517-02	1.50	442	423AL 424AR 425AL 426AR	0.90	GVI	Forward Torque Box - Right Nacelle Strut
01045045	12000 FC 2250 DY	12000 FC 2250 DY	54-518-02-01	54-518-02	1.50	442	424AR 425AL 426AR 432AL 441DL 441DR 442AL 442AR 442BL 442BR 442CL 442CR	2.97	GVI	Forward Torque Box - Right Nacelle Strut



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01045045	12000 FC 2250 DY	12000 FC 2250 DY	54-519-02-01	54-519-02	1.00	443	441DL 441DR 441FL 441FR 441GL 441GR 443AL 443AR 443BL 443BR 443CL 443CR	2.16	GVI	AFT Torque Box - Right Nacelle Strut
01045045	12000 FC 2250 DY	12000 FC 2250 DY	54-520-02-01	54-520-02	0.60	443	442CL 442CR 443AL 443AR 443BL 443BR 443CL 443CR	0.66	DET	AFT Torque Box - Right Nacelle Strut
01045045	12000 FC 2250 DY	12000 FC 2250 DY	54-521-02-01	54-521-02	0.40	442	423AL 424AR 425AL 425LB 425MB 425NB 426AR 442BR	0.99	DET	Strut Forward Torque Box
01045045	12000 FC 2250 DY	12000 FC 2250 DY	54-522-02-01	54-522-02	1.00	443	423AL 424AR 425AL 426AR	0.90	GVI	AFT Torque Box - Right Nacelle Strut
01045045	12000 FC 2250 DY	12000 FC 2250 DY	54-539-01-01	54-539-01	1.50	432	413AL 414AR 415AL 416AR 431DT 431ET 432BL 432CL 432CR	2.41	GVI	Forward Torque Box - Left Nacelle Strut (For GE90-70/80/90 series engines only)
01045045	12000 FC 2250 DY	12000 FC 2250 DY	54-541-01-01	54-541-01	0.30	433	433BR 433CL 433CR 433DL 433DR	0.15	DET	AFT Torque Box - Left Nacelle Strut (For GE90 series engines)
01045045	12000 FC 2250 DY	12000 FC 2250 DY	54-542-01-01	54-542-01	0.20	432	413AL 414AR 415AL 415HB 415JB 415KB 416AR 432AL 432AR 432BL 432CL 432CR 432DR	1.75	DET	Strut Forward Torque Box (For GE90 series engines only)
01045045	12000 FC 2250 DY	12000 FC 2250 DY	54-543-01-01	54-543-01	0.50	433	413AL 414AR 415AL 416AR	0.90	GVI	AFT Torque Box - Left Nacelle Strut (GE90)
01045045	12000 FC 2250 DY	12000 FC 2250 DY	54-547-02-01	54-547-02	1.50	442	424AR 425AL 426AR 441DT 441ET 442BL 442CL 442CR	1.71	GVI	Forward Torque Box - Right Nacelle Strut (For GE90-70/80/90 series engines only)
01045045	12000 FC 2250 DY	12000 FC 2250 DY	54-549-02-01	54-549-02	0.30	443	443BR 443CL 443CR 443DL 443DR	0.16	DET	AFT Torque Box - Right Nacelle Strut (For GE90 series engines only)



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01045045	12000 FC 2250 DY	12000 FC 2250 DY	54-550-02-01	54-550-02	0.20	442	423AL 424AR 425AL 425HB 425JB 425KB 426AR 442AL 442AR 442BL 442CL 442CR 442DR	1.91	DET	Strut Forward Torque Box (For GE90 series engines only)
01045045	12000 FC 2250 DY	12000 FC 2250 DY	54-551-02-01	54-551-02	0.50	443	423AL 424AR 425AL 426AR	0.90	GVI	AFT Torque Box - Right Nacelle Strut (GE90 Engine)
01045045	12000 FC 2250 DY	12000 FC 2250 DY	54-568-01-01	54-568-01	1.50	432	413AL 414AR 415AL 416AR	0.90	GVI	Forward Torque Box - Left Nacelle Strut
01045045	12000 FC 2250 DY	12000 FC 2250 DY	54-569-01-01	54-569-01	1.50	432	413AL 414AR 415AL 416AR 431ET 432AL 432AR 432BL 432CL 432CR	2.17	GVI	Forward Torque Box - Left Nacelle Strut
01045045	12000 FC 2250 DY	12000 FC 2250 DY	54-570-01-01	54-570-01	1.00	433	431ET 431FL 431FR 431GL 431GR 433AL 433AR 433BL 433BR 433CL 433CR	2.09	GVI	Aft Torque Box - Left Nacelle Strut
01045045	12000 FC 2250 DY	12000 FC 2250 DY	54-571-01-01	54-571-01	0.60	433	432CL 432CR 433AL 433AR 433BL 433BR 433CL 433CR	0.82	DET	Aft Torque Box - Left Nacelle Strut
01045045	12000 FC 2250 DY	12000 FC 2250 DY	54-572-01-01	54-572-01	0.40	432	413AL 414AR 415AL 415HB 415JB 416AR 432AL 432AR 432BL 432CL 432CR 432DR	1.73	DET	Strut Forward - Left Torque Box
01045045	12000 FC 2250 DY	12000 FC 2250 DY	54-573-01-01	54-573-01	1.00	433	413AL 414AR 415AL 416AR 417AL 418AR	1.08	GVI	Aft Torque Box - Left Nacelle Strut
01045045	12000 FC 2250 DY	12000 FC 2250 DY	54-576-02-01	54-576-02	1.50	442	423AL 424AR 425AL 426AR	0.90	GVI	Forward Torque Box - Right Nacelle Strut



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01045045	12000 FC 2250 DY	12000 FC 2250 DY	54-577-02-01	54-577-02	1.50	442	423AL 424AR 425AL 426AR 441ET 442AL 442AR 442BL 442CL 442CR	1.81	GVI	Forward Torque Box - Right Nacelle Strut
01045045	12000 FC 2250 DY	12000 FC 2250 DY	54-578-02-01	54-578-02	1.00	443	441ET 441FL 441FR 441GL 441GR 443AL 443AR 443BL 443BR 443CL 443CR	1.12	GVI	Aft Torque Box - Right Nacelle Strut
01045045	12000 FC 2250 DY	12000 FC 2250 DY	54-579-02-01	54-579-02	0.60	443	442CL 442CR 443AL 443AR 443BL 443BR 443CL 443CR	0.66	DET	Aft Torque Box - Right Nacelle Strut
01045045	12000 FC 2250 DY	12000 FC 2250 DY	54-580-02-01	54-580-02	0.40	442	423AL 424AR 425AL 425HB 425JB 426AR 442AL 442AR 442BL 442CL 442CR 442DR	1.89	DET	Strut Forward - Right Torque Box
01045045	12000 FC 2250 DY	12000 FC 2250 DY	54-581-02-01	54-581-02	1.00	443	423AL 424AR 425AL 426AR 427AL 428AR	1.26	GVI	Aft Torque Box - Right Nacelle Strut
01045045	16000 FC 2250 DY	16000 FC 2250 DY	57-800-00-01	57-800-00	1.50	133 134	139AL 139AZ	0.59	GVI	Wing Center Section
01047042	18000 FC 3375 DY	16000 FC 3000 DY	53-543-00-01	53-543-00	0.30	193	193AL 193BL 193CL 193DL	1.35	GVI	Overwing Wing-To-Body Fairings, Left
01047042	18000 FC 3375 DY	16000 FC 3000 DY	53-544-00-01	53-544-00	0.30	194	194AR 194BR 194CR 194DR	1.35	GVI	Overwing Wing-To-Body Fairings, Right
01047042	16000 FC 3375 DY	16000 FC 3000 DY	53-820-00-01	53-820-00	3.00	121 122	821	0.10	GVI	Forward Cargo Compartment
01047042	16000 FC 3375 DY	16000 FC 3000 DY	53-828-00-01	53-828-00	1.50	131 132		0.00	GVI	Area Above Wing Center Section
01048048	48000 FH	48000 FH	28-010-00-01	28-010-00	1.00	541 543 641 643	541QB 543CB 641QB 643CB	0.84	OPC	Fuel Vent Float Valves



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01048048	24000 FH	24000 FH	35-110-00-01	35-110-00	1.00	152 162 215 216 220 230 240 250 260		0.00	OPC	Passenger Gaseous Oxygen System Pressure Lines
01049042	16000 FC 3500 DY	16000 FC 3000 DY	55-818-00-01	55-818-00	0.50	324	324AL 324BL 324CL 324DL 324EL 324FL 324GL 324HL 324JL 324KL	6.54	GVI	Vertical Stabilizer - Rear Spar to Trailing Edge
01049042	16000 FC 3500 DY	16000 FC 3000 DY	55-819-00-01	55-819-00	0.50	324	324AL 324CXL 324DXL 324GL 324HL 324JXL	5.29	GVI	Vertical Stabilizer - Rear Spar to Trailing Edge
01051051	16000 FC 10 YR	16000 FC 10 YR	32-220-00-01	32-220-00	48.00	143 144 731 741	551BB 551DB 551DT 551EB 551FB 552BB 651BB 651DB 651DT 651EB 651FB 652BB	5.94	RST	Main Landing Gear
01051051	16000 FC 10 YR	16000 FC 10 YR	32-230-00-01	32-230-00	32.00	113 114 711	117AL	0.02	RST	Nose Landing Gear
01052031	3750 DY	2250 DY	20-420-00-01	20-420-00	0.25	111	111AL	0.13	FNC	HIRF/Lightning Localizer Tracking, VOR/Localizer Antenna COAX
01052031	3750 DY	2250 DY	20-440-00-01	20-440-00	0.25	322 327	322DL 322EL 327	3.37	FNC	HIRF/Lightning VOR/Localizer Capture Antenna COAX
01052042	16000 FC 3750 DY	16000 FC 3000 DY	52-503-00-01	52-503-00	1.00	821	821 821AW 821DW 821FW 821JW	0.19	DET	Forward Large Cargo Door
01052042	16000 FC 3750 DY	16000 FC 3000 DY	52-508-00-01	52-508-00	1.00	825	825 825AW 825BW 825CW 825DW	0.46	GVI	Bulk Cargo Door
01052042	16000 FC 3750 DY	16000 FC 3000 DY	57-523-01-01	57-523-01	2.00	567		0.00	GVI	Left Wing Outboard Flap
01052042	16000 FC 3750 DY	16000 FC 3000 DY	57-556-02-01	57-556-02	2.00	667		0.00	GVI	Right Wing Outboard Flap



# 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01052052	3750 DY	3750 DY	28-120-00-01	28-120-00	2.00	125 126 133 134 135 136 191 192 511 521 526 531 532 533 541 542 543 551 552 611 621 626 631 632 633 641 642 643 651 652	191SL 192SR 195EL 196ER 511FB 511PB 511QB 551DB 552HB 611FB 611PB 611QB 651DB 652HB	5.40	DET	Out-of-Tank Wire Bundle Cushion Clamps and Teflon Sleeving
01052052	18000 FC 3750 DY	18000 FC 3750 DY	52-250-00-01	52-250-00	0.25	112 117	112AL 117AL	0.04	DET	Equipment Compartment Exterior Door Latch Mechanisms
01056014	24000 FC 4500 DY	8000 FC 1500 DY	53-545-01-01	53-545-01	1.00	191	191AL 191BL 191CL 191DL 191EL 191FL 191GL 191HL 191JL 191KL 191LL 191ML 191NL 191PL 191QL 191RL 191SL	6.46	DET	Forward Wing-To-Body Fairings - Left



# 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01056014	24000 FC 4500 DY	8000 FC 1500 DY	53-545-02-01	53-545-02	1.00	192	192AR 192BR 192CR 192DR 192ER 192FR 192GR 192HR 192JR 192KR 192LR 192MR 192NR 192PR 192QR 192RR 192SR	6.46	DET	Forward Wing-To-Body Fairings - Right
01056014	24000 FC 4500 DY	8000 FC 1500 DY	53-547-01-01	53-547-01	2.50	197	197AL 197BL 197CL 197DL 197EL 197FL 197GL 197HL 197JL 197KL 197LL 197ML 197PL 197RL 197SL 197UL 197XL	6.53	DET	Aft Wing-To-Body Fairings - Left
01056014	24000 FC 4500 DY	8000 FC 1500 DY	53-547-02-01	53-547-02	2.50	198	198AR 198BR 198CR 198DR 198ER 198FR 198GR 198HR 198JR 198KR 198MR 198NR 198PR 198QR 198RR 198SR 198TR 198UR 198VR 198WR	9.69	DET	Aft Wing-To-Body Fairings - Right
01056014	24000 FC 4500 DY	8000 FC 1500 DY	53-620-00-01	53-620-00	1.00	191 192	191AL 191BL 191CL 191DL 191EL 191FL 191GL 191HL 191JL 191KL 191LL 191ML 191NL 191PL 191QL 191RL 191SL 192AR 192BR 192CR 192DR 192ER 192FR 192GR 192HR 192JR 192KR 192LR 192MR 192NR 192PR 192QR 192RR 192SR	12.92	DET	Forward Wing-To-Body Fairings - Left



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01056014	24000 FC 4500 DY	8000 FC 1500 DY	53-620-00-02	53-620-00	1.00	191 192	191AL 191BL 191CL 191DL 191EL 191FL 191GL 191HL 191JL 191KL 191LL 191ML 191NL 191PL 191QL 191RL 191SL 192AR 192BR 192CR 192DR 192ER 192FR 192GR 192HR 192JR 192KR 192LR 192MR 192NR 192PR 192QR 192RR 192SR	12.92	DET	Forward Wing-To-Body Fairings - Right
01056014	4500 DY 24000 FC	1500 DY 8000 FC	53-621-00-01	53-621-00	1.00	197 198	197AL 197BL 197CL 197DL 197EL 198AR 198BR 198CR 198DR 198ER	3.04	DET	Aft Wing-To-Body Fairings - Left
01056014	4500 DY 24000 FC	1500 DY 8000 FC	53-621-00-02	53-621-00	1.00	197 198	197AL 197BL 197CL 197DL 197EL 198AR 198BR 198CR 198DR 198ER	3.04	DET	Aft Wing-To-Body Fairings - Right
01056056	24000 FC 4500 DY	24000 FC 4500 DY	20-640-10-01	20-640-10	2.00	133 134	139AL 139AZ	0.59	DET	Wing Center Section Fuel Tank (SFAR 88)
01056056	24000 FC 4500 DY	24000 FC 4500 DY	20-641-00-01	20-641-00	0.15	135 136	195BL 195CL 195DL 195EL 195JL 195QL 196BR 196CR 196DR 196ER 196JR 196NR 196QR	1.51	GVI	ECS Bay Installed EWIS
01056056	24000 FC 4500 DY	24000 FC 4500 DY	20-672-00-01	20-672-00	0.50	165 166		0.00	RST	Area Behind the Bulk Cargo Compartment
01056056	24000 FC 4500 DY	24000 FC 4500 DY	20-796-00-01	20-796-00	0.50	830 840	831BW 832BW 833BW 834BW 835BW 841BW 842BW 843BW 844BW 845BW	2.50	RST	Main Deck Entry Doors





## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01056056	24000 FC 4500 DY	24000 FC 4500 DY	20-856-11-01	20-856-11	1.00	531	531AB 531BB 531CB	0.63	DET	Center Fuel Tank (Rib 1 to Rib 8) - Left Wing (SFAR 88)
01056056	24000 FC 4500 DY	24000 FC 4500 DY	20-856-12-01	20-856-12	1.00	631	631AB 631BB 631CB	0.63	DET	Center Fuel Tank (Rib 1 to Rib 8) - Right Wing (SFAR 88)
01056056	24000 FC 4500 DY	24000 FC 4500 DY	20-858-11-01	20-858-11	1.00	533	533AB 533BB 533CB 533DB 533EB 533FB 533GB	1.47	DET	Main Tank (Rib 8 to Rib 17) - Left Wing (SFAR 88)
01056056	24000 FC 4500 DY	24000 FC 4500 DY	20-858-12-01	20-858-12	1.00	633	633AB 633BB 633CB 633DB 633EB 633FB 633GB	1.47	DET	Main Tank (Rib 8 to Rib 17) - Right Wing (SFAR 88)
01056056	24000 FC 4500 DY	24000 FC 4500 DY	20-860-11-01	20-860-11	2.00	541	541AB 541BB 541CB 541DB 541EB 541FB 541GB 541HB 541JB 541KB 541LB 541MB 541NB 541PB 541QB	3.15	DET	Main Tank (Rib 17 to Rib 32) - Left Wing (SFAR 88)
01056056	24000 FC 4500 DY	24000 FC 4500 DY	20-860-12-01	20-860-12	1.00	641	641AB 641BB 641CB 641DB 641EB 641FB 641GB 641HB 641JB 641KB 641LB 641MB 641NB 641PB 641QB	3.15	DET	Main Tank (Rib 17 to Rib 32) - Right Wing (SFAR 88)
01056056	24000 FC 4500 DY	24000 FC 4500 DY	20-866-00-01	20-866-00	0.25	573	573AB 573BB 573CL 573CR 573EB	2.05	GVI	Flap Support No. 3
01056056	24000 FC 4500 DY	24000 FC 4500 DY	20-868-00-01	20-868-00	0.25	673	673AB 673BB 673CL 673CR 673EB	2.05	GVI	Flap Support No. 6
01056056	4500 DY	4500 DY	28-011-00-01	28-011-00	0.25	533 551 633 651	533CB 551CB 633CB 633DB 651CB	1.25	FNC	Left Wing



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01056056	4500 DY	4500 DY	28-011-00-02	28-011-00	0.25	533 551 633 651	533CB 551CB 633CB 633DB 651CB	1.25	FNC	Right Wing
01056056	4500 DY	4500 DY	28-013-20-01	28-013-20	0.25	542 543 642 643	542AB 543DB 642AB 643DB	0.42	FNC	Left Wing Pressure Relief Valve (SFAR 88)
01056056	4500 DY	4500 DY	28-013-20-02	28-013-20	0.25	542 543 642 643	542AB 543DB 642AB 643DB	0.42	FNC	Right Wing Pressure Relief Valve (SFAR 88)
01056056	4500 DY	4500 DY	28-013-30-01	28-013-30	0.25	542 543 642 643	521SB 521XB 621SB 621XB	1.86	FNC	Left Wing Overfill Float Switch. (SFAR 88)
01056056	4500 DY	4500 DY	28-013-30-02	28-013-30	0.25	542 543 642 643	521SB 521XB 621SB 621XB	1.86	FNC	Right wing Overfill Float Switch. (SFAR 88)
01056056	4500 DY	4500 DY	28-013-40-01	28-013-40	0.25	542 543 642 643	542BB 544BB 642BB 644BB	0.80	FNC	Left Wing Vent Scoop Upper Duct. (SFAR 88)
01056056	4500 DY	4500 DY	28-013-40-02	28-013-40	0.25	542 543 642 643	542BB 544BB 642BB 644BB	0.80	FNC	Right Wing Vent Scoop Upper Duct. (SFAR 88)



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01056056	4500 DY	4500 DY	28-021-10-01	28-021-10	0.50	133 134 151 152 531 533 541 542 543 544 551 631 633 641 642 643 644	139AZ 531AB 531BB 531CB 533AB 533BB 533CB 533DB 533EB 533FB 533GB 541AB 541BB 541CB 541DB 541EB 541FB 541GB 541HB 541JB 541KB 541LB 541MB 541NB 541PB 541QB 542AB 542BB 543AB 543BB 543CB 543DB 544AB 544BB 544CB 631AB 631BB 631CB 633AB 633BB 633CB 633DB 633EB 633FB 633GB 641AB 641BB 641CB 641DB 641EB 641FB 641GB 641HB 641JB 641KB 641LB 641MB 641NB 641PB 641QB 642AB 642BB 643AB 643BB 643CB 643DB 644AB 644BB 644CB	14.17	DET	Left Wing in-Tank Tubing, Equipment Static Ground Straps and Clamps (SFAR 88)



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01056056	4500 DY	4500 DY	28-021-10-02	28-021-10	0.50	133 134 151 152 531 533 541 542 543 544 551 631 633 641 642 643 644	139AZ 531AB 531BB 531CB 533AB 533BB 533CB 533DB 533EB 533FB 533GB 541AB 541BB 541CB 541DB 541EB 541FB 541GB 541HB 541JB 541KB 541LB 541MB 541NB 541PB 541QB 542AB 542BB 543AB 543BB 543CB 543DB 544AB 544BB 544CB 631AB 631BB 631CB 633AB 633BB 633CB 633DB 633EB 633FB 633GB 641AB 641BB 641CB 641DB 641EB 641FB 641GB 641HB 641JB 641KB 641LB 641MB 641NB 641PB 641QB 642AB 642BB 643AB 643BB 643CB 643DB 644AB 644BB 644CB	14.17	DET	Right Wing in-Tank Tubing, Equipment Static Ground Straps and Clamps (SFAR 88)



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01056056	4500 DY	4500 DY	28-021-10-03	28-021-10	0.50	133 134 151 152 531 533 541 542 543 544 551 631 633 641 642 643 644	139AZ 531AB 531BB 531CB 533AB 533BB 533CB 533DB 533EB 533FB 533GB 541AB 541BB 541CB 541DB 541EB 541FB 541GB 541HB 541JB 541KB 541LB 541MB 541NB 541PB 541QB 542AB 542BB 543AB 543BB 543CB 543DB 544AB 544BB 544CB 631AB 631BB 631CB 633AB 633BB 633CB 633DB 633EB 633FB 633GB 641AB 641BB 641CB 641DB 641EB 641FB 641GB 641HB 641JB 641KB 641LB 641MB 641NB 641PB 641QB 642AB 642BB 643AB 643BB 643CB 643DB 644AB 644BB 644CB	14.17	DET	Center Main Tank tubing, equipment static ground straps and clamps. (SFAR 88)



# 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01056056	4500 DY	4500 DY	28-021-10-04	28-021-10	0.50	133 134 151 152 531 533 541 542 543 544 551 631 633 641 642 643 644	139AZ 531AB 531BB 531CB 533AB 533BB 533CB 533DB 533EB 533FB 533GB 541AB 541BB 541CB 541DB 541EB 541FB 541GB 541HB 541JB 541KB 541LB 541MB 541NB 541PB 541QB 542AB 542BB 543AB 543BB 543CB 543DB 544AB 544BB 544CB 631AB 631BB 631CB 633AB 633BB 633CB 633DB 633EB 633FB 633GB 641AB 641BB 641CB 641DB 641EB 641FB 641GB 641HB 641JB 641KB 641LB 641MB 641NB 641PB 641QB 642AB 642BB 643AB 643BB 643CB 643DB 644AB 644BB 644CB	14.17	DET	Auxiliary Tank Tubing and Equipment Static Ground Straps and Clamps
01056056	4500 DY	4500 DY	28-021-20-01	28-021-20	0.25	531 533 541 631 633 641	531BB 533AB 541HB 631BB 633AB 641HB	1.26	FNC	Left Wing Fueling Shutoff Valve



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01056056	4500 DY	4500 DY	28-021-20-02	28-021-20	0.25	531 533 541 631 633 641	531BB 533AB 541HB 631BB 633AB 641HB	1.26	FNC	Right Wing Fueling Shutoff Valve
01056056	4500 DY	4500 DY	28-021-30-01	28-021-30	0.25	521 621	521DB 621DB	0.04	FNC	Left Wing Fueling Receptacle. (SFAR 88)
01056056	4500 DY	4500 DY	28-021-30-02	28-021-30	0.25	521 621	521DB 621DB	0.04	FNC	Right Wing Fueling Receptacle. (SFAR 88)
01056056	4500 DY	4500 DY	28-022-30-01	28-022-30	0.16	151 152 531 533 551 631 633 651	531CB 533BB 631CB 633BB	0.84	FNC	Left wing Pump Housing. (SFAR 88)
01056056	4500 DY	4500 DY	28-022-30-02	28-022-30	0.17	151 152 531 533 551 631 633 651	531CB 533BB 631CB 633BB	0.84	FNC	Right wing Pump Housing. (SFAR 88)
01056056	4500 DY	4500 DY	28-022-30-03	28-022-30	0.17	151 152 531 533 551 631 633 651	531CB 533BB 631CB 633BB	0.84	FNC	Pump Housing (AUX TANK)



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01056056	4500 DY	4500 DY	28-022-40-01	28-022-40	0.16	117 133 134 531 533 551 631 633 651	551DB 552HB 651DB 652HB	1.84	FNC	Left Wing Boost and Jettison Pumps. (SFAR 88)
01056056	4500 DY	4500 DY	28-022-40-02	28-022-40	0.17	117 133 134 531 533 551 631 633 651	551DB 552HB 651DB 652HB	1.84	FNC	Right Wing Boost and Jettison Pumps. (SFAR 88)
01056056	4500 DY	4500 DY	28-022-40-03	28-022-40	0.17	117 133 134 531 533 551 631 633 651	551DB 552HB 651DB 652HB	1.84	FNC	Wing Center Section Override/Jettison Pumps. (SFAR 88)
01056056	4500 DY	4500 DY	28-022-50-01	28-022-50	0.16	151 152 531 533 551 633 651	551DB 651DB	0.04	FNC	Left Wing Motor Operated Valve. (SFAR 88)
01056056	4500 DY	4500 DY	28-022-50-02	28-022-50	0.17	151 152 531 533 551 633 651	551DB 651DB	0.04	FNC	Right Wing Motor Operated Valve. (SFAR 88)





## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01056056	4500 DY	4500 DY	28-022-50-03	28-022-50	0.17	151 152 531 533 551 633 651	551DB 651DB	0.04	FNC	Motor Operated Valve (AUX TANK)
01056056	4500 DY	4500 DY	28-025-20-01	28-025-20	0.50	531		0.00	FNC	APU DC Fuel Pump (SFAR 88)
01056056	4500 DY	4500 DY	28-025-30-01	28-025-30	0.50	531		0.00	FNC	APU Fuel Shutoff Valve (SFAR 88)
01056056	4500 DY	4500 DY	28-025-40-01	28-025-40	0.50	531		0.00	FNC	APU Isolation Valve (SFAR 88)
01056056	4500 DY	4500 DY	28-026-10-01	28-026-10	0.50	631		0.00	FNC	Defuel Valve (SFAR 88)
01056056	4500 DY	4500 DY	28-031-20-01	28-031-20	0.25	543 561 643 661	543AB 561GB 643AB 661GB	1.22	FNC	Left Wing Jettison Nozzle Valve. (SFAR 88)
01056056	4500 DY	4500 DY	28-031-20-02	28-031-20	0.25	543 561 643 661	543AB 561GB 643AB 661GB	1.22	FNC	Right Wing Jettison Nozzle Valve. (SFAR 88)
01056056	4500 DY	4500 DY	28-031-30-01	28-031-30	0.25	531 631		0.00	FNC	Left Wing Jettison Isolation Valve. (SFAR 88)
01056056	4500 DY	4500 DY	28-031-30-02	28-031-30	0.25	531 631		0.00	FNC	Right Wing Jettison Isolation Valve. (SFAR 88)
01056056	4500 DY	4500 DY	28-031-40-01	28-031-40	0.25	543 643	561JB 561JT 661JB 661JT	1.72	FNC	Left Wing Jettison Nozzle Manifold. (SFAR 88)
01056056	4500 DY	4500 DY	28-031-40-02	28-031-40	0.25	543 643	561JB 561JT 661JB 661JT	1.72	FNC	Right Wing Jettison Nozzle Manifold. (SFAR 88)



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01056056	4500 DY	4500 DY	28-041-10-01	28-041-10	0.63	133 134 139 151 152 531 533 541 542 543 544 631 633 641 642 643 644	139AZ 531AB 531BB 533AB 533BB 533CB 533DB 533EB 533FB 533GB 541AB 541BB 541CB 541DB 541EB 541FB 541GB 541HB 541JB 541KB 541LB 541MB 541NB 541PB 631AB 631BB 633AB 633BB 633CB 633DB 633EB 633FB 633GB 641AB 641BB 641CB 641DB 641EB 641FB 641GB 641HB 641JB 641KB 641LB 641MB 641NB 641PB	9.96	DET	Left Wing Main Tank FQIS Wiring. (SFAR 88)



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01056056	4500 DY	4500 DY	28-041-10-02	28-041-10	0.63	133 134 139 151 152 531 533 541 542 543 544 631 633 641 642 643 644	139AZ 531AB 531BB 533AB 533BB 533CB 533DB 533EB 533FB 533GB 541AB 541BB 541CB 541DB 541EB 541FB 541GB 541HB 541JB 541KB 541LB 541MB 541NB 541PB 631AB 631BB 633AB 633BB 633CB 633DB 633EB 633FB 633GB 641AB 641BB 641CB 641DB 641EB 641FB 641GB 641HB 641JB 641KB 641LB 641MB 641NB 641PB	9.96	DET	Right Wing Main Tank FQIS Wiring. (SFAR 88)



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01056056	4500 DY	4500 DY	28-041-10-03	28-041-10	0.62	133 134 139 151 152 531 533 541 542 543 544 631 633 641 642 643 644	139AZ 531AB 531BB 533AB 533BB 533CB 533DB 533EB 533FB 533GB 541AB 541BB 541CB 541DB 541EB 541FB 541GB 541HB 541JB 541KB 541LB 541MB 541NB 541PB 631AB 631BB 633AB 633BB 633CB 633DB 633EB 633FB 633GB 641AB 641BB 641CB 641DB 641EB 641FB 641GB 641HB 641JB 641KB 641LB 641MB 641NB 641PB	9.96	DET	Wing Center Tank FQIS Wiring. (SFAR 88)



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01056056	4500 DY	4500 DY	28-041-10-04	28-041-10	0.62	133 134 139 151 152 531 533 541 542 543 544 631 633 641 642 643 644	139AZ 531AB 531BB 533AB 533BB 533CB 533DB 533EB 533FB 533GB 541AB 541BB 541CB 541DB 541EB 541FB 541GB 541HB 541JB 541KB 541LB 541MB 541NB 541PB 631AB 631BB 633AB 633BB 633CB 633DB 633EB 633FB 633GB 641AB 641BB 641CB 641DB 641EB 641FB 641GB 641HB 641JB 641KB 641LB 641MB 641NB 641PB	9.96	DET	FQIS Wiring. (AUX TANK)



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01056056	4500 DY	4500 DY	28-041-20-01	28-041-20	0.37	133 134 151 152 531 533 541 631 633 641	139AZ 531AB 531BB 533AB 533BB 533CB 533DB 533EB 533FB 533GB 541AB 541BB 541CB 541DB 541EB 541FB 541GB 541HB 541JB 541KB 541LB 541MB 541NB 541PB 541QB 631AB 631BB 633AB 633BB 633CB 633DB 633EB 633FB 633GB 641AB 641BB 641CB 641DB 641EB 641FB 641GB 641HB 641JB 641KB 641LB 641MB 641NB 641PB 641QB	10.38	DET	Left Wing Main Tank FQIS Equipment. (SFAR 88)



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01056056	4500 DY	4500 DY	28-041-20-02	28-041-20	0.37	133 134 151 152 531 533 541 631 633 641	139AZ 531AB 531BB 533AB 533BB 533CB 533DB 533EB 533FB 533GB 541AB 541BB 541CB 541DB 541EB 541FB 541GB 541HB 541JB 541KB 541LB 541MB 541NB 541PB 541QB 631AB 631BB 633AB 633BB 633CB 633DB 633EB 633FB 633GB 641AB 641BB 641CB 641DB 641EB 641FB 641GB 641HB 641JB 641KB 641LB 641MB 641NB 641PB 641QB	10.38	DET	Right Wing Main Tank FQIS Equipment. (SFAR 88)



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01056056	4500 DY	4500 DY	28-041-20-03	28-041-20	0.38	133 134 151 152 531 533 541 631 633 641	139AZ 531AB 531BB 533AB 533BB 533CB 533DB 533EB 533FB 533GB 541AB 541BB 541CB 541DB 541EB 541FB 541GB 541HB 541JB 541KB 541LB 541MB 541NB 541PB 541QB 631AB 631BB 633AB 633BB 633CB 633DB 633EB 633FB 633GB 641AB 641BB 641CB 641DB 641EB 641FB 641GB 641HB 641JB 641KB 641LB 641MB 641NB 641PB 641QB	10.38	DET	Wing Center Tank FQIS Equipment. (SFAR 88)





## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01056056	4500 DY	4500 DY	28-041-20-04	28-041-20	0.38	133 134 151 152 531 533 541 631 633 641	139AZ 531AB 531BB 533AB 533BB 533CB 533DB 533EB 533FB 533GB 541AB 541BB 541CB 541DB 541EB 541FB 541GB 541HB 541JB 541KB 541LB 541MB 541NB 541PB 541QB 631AB 631BB 633AB 633BB 633CB 633DB 633EB 633FB 633GB 641AB 641BB 641CB 641DB 641EB 641FB 641GB 641HB 641JB 641KB 641LB 641MB 641NB 641PB 641QB	10.38	DET	FQIS Equipment (AUX TANK)
01056056	4500 DY	4500 DY	28-041-30-01	28-041-30	0.50	510 550 610 650	511FB 551DB 611FB 651DB	2.42	FNC	Fuel Quantity Indicating System (FQIS) - Out Of Tank Wiring Lightning Shield to Ground Termination
01056056	24000 FC 4500 DY	24000 FC 4500 DY	54-537-01-01	54-537-01	1.00	430	431FL 431GL 431GR 434BL 434EL	1.34	SDI	Left Nacelle Strut
01056056	24000 FC 4500 DY	24000 FC 4500 DY	54-545-02-01	54-545-02	1.00	440	441FR 441GL 441GR 444BR 444ER	1.06	SDI	Right Nacelle Strut
01056056	24000 FC 4500 DY	24000 FC 4500 DY	55-656-01-01	55-656-01	0.60	332	332BL 332CL 332DL 332EL	6.28	GVI	Left Horizontal Stabilizer Leading Edge
01056056	24000 FC 4500 DY	24000 FC 4500 DY	55-660-02-01	55-660-02	1.50	342	342BR 342CR 342DR 342ER	5.95	GVI	Right Horizontal Stabilizer Leading Edge
01056056	24000 FC 4500 DY	24000 FC 4500 DY	55-806-00-01	55-806-00	1.50	321	321A 321B 321C 321D 321E 321F	9.28	GVI	Vertical Stabilizer Leading Edge



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01060060	16000 FC 3000 DY	16000 FC 3000 DY	20-724-00-01	20-724-00	0.25	221 222 251 252		0.00	DET	Rat Cabin and Galley Power Feeders in the Passenger Compartment
01063015	4500 DY	1125 DY	33-076-00-01	33-076-00	2.00	200		0.00	FNC	Cabin ceiling lighting intensity
01063021	16000 FC 4500 DY	8000 FC 1500 DY	53-508-00-01	53-508-00	0.70	117 118	117AL	0.02	GVI	Main Equipment Center
01063021	16000 FC 4500 DY	8000 FC 1500 DY	53-520-00-01	53-520-00	0.70	141 142		0.00	GVI	Area Above Main Landing Gear Wheel Well
01063021	16000 FC 4500 DY	8000 FC 1500 DY	53-546-01-01	53-546-01	0.60	193	193AL 193BL 193CL 193DL 193EL 193FL 193GL 193HL	2.86	GVI	Overwing Wing-To-Body Fairings - Left
01063021	16000 FC 4500 DY	8000 FC 1500 DY	53-546-02-01	53-546-02	0.60	194	194AR 194BR 194CR 194DR 194ER 194FR 194GR 194HR	2.86	GVI	Overwing Wing-To-Body Fairings - Right
01063021	24000 FC 4500 DY	8000 FC 1500 DY	53-547-03-01	53-547-03	2.50	197	197AAL 197BAL 197CL 197DL 197EL 197FAL 197FBL 197GL 197HL 197JL 197KL 197LL 197ML 197PL 197RL 197SL 197UL 197VL 197XL	6.97	DET	Aft Wing-To-Body Fairings - Left
01063021	24000 FC 4500 DY	8000 FC 1500 DY	53-547-04-01	53-547-04	2.50	198	198AAR 198BAR 198CR 198DR 198ER 198FAR 198FBR 198GAR 198HR 198JR 198KR 198MR 198NR 198PR 198QR 198RR 198SR 198TR 198UR 198VR 198WR	9.08	DET	Aft Wing-To-Body Fairings - Right



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01063026	4500 DY	1875 DY	20-200-00-01	20-200-00	2.50	121 122 211 212	821	0.10	FNC	HIRF/L AFDC Task for ILS, RA, AIMS, Backdrive and Cross Channel
01063026	4500 DY	1875 DY	20-300-00-01	20-300-00	4.00	117 118	117AL	0.02	FNC	HIRF/Arlinc 629 Buses for Flight Controls, Couplers to EE Racks
01063026	4500 DY	1875 DY	20-400-00-01	20-400-00	2.00	117 118	117AL	0.02	FNC	HIRF/Lightning Glide Slope and Localizer Antenna Coax
01063042	16000 FC 4500 DY	16000 FC 3000 DY	52-511-00-01	52-511-00	1.00	824	824 824AW 824DW 824FW 824JW	0.19	DET	Aft Large Cargo Door
01063042	16000 FC 4500 DY	16000 FC 3000 DY	53-503-00-01	53-503-00	0.40	115	117AL	0.02	DET	Left Area Outboard and Above Nose Landing Gear Wheel Well
01063042	16000 FC 4500 DY	16000 FC 3000 DY	53-504-00-01	53-504-00	0.40	116	117AL	0.02	DET	Right Area Outboard and Above Nose Landing Gear Wheel Well
01063042	16000 FC 4500 DY	16000 FC 3000 DY	53-506-00-01	53-506-00	0.40	117	117AL	0.02	DET	Main Equipment Center
01063042	16000 FC 4500 DY	16000 FC 3000 DY	53-507-00-01	53-507-00	0.40	118	117AL	0.02	DET	Main Equipment Center
01063042	16000 FC 4500 DY	16000 FC 3000 DY	53-511-00-01	53-511-00	0.40	121	821	0.10	DET	Forward Cargo Compartment
01063042	16000 FC 4500 DY	16000 FC 3000 DY	53-524-00-01	53-524-00	0.40	151		0.00	DET	Aft Cargo Compartment
01063042	16000 FC 4500 DY	16000 FC 3000 DY	53-536-00-01	53-536-00	0.40	161	825	0.09	DET	Bulk Cargo Compartment
01063042	16000 FC 4500 DY	16000 FC 3000 DY	53-539-00-01	53-539-00	0.40	165	825	0.09	DET	Area Aft of Bulk Cargo Compartment
01063042	16000 FC 4500 DY	16000 FC 3000 DY	53-540-00-01	53-540-00	0.40	166	825	0.09	DET	Area Aft of Bulk Cargo Compartment
01063042	16000 FC 4500 DY	16000 FC 3000 DY	53-548-00-01	53-548-00	3.50	212		0.00	SDI	Flight Compartment
01063042	16000 FC 4500 DY	16000 FC 3000 DY	53-549-00-01	53-549-00	2.00	111 211 212	111AL	0.13	DET	Flight Compartment
01063042	16000 FC 4500 DY	16000 FC 3000 DY	53-559-00-01	53-559-00	3.00	215 221	831	0.04	DET	Main Deck Compartment



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01063042	16000 FC 4500 DY	16000 FC 3000 DY	53-560-00-01	53-560-00	4.00	216 222	841	0.04	DET	Main Deck Compartment
01063042	16000 FC 4500 DY	16000 FC 3000 DY	53-570-00-01	53-570-00	3.00	231	832	0.04	DET	Passenger Compartment - Left
01063042	16000 FC 4500 DY	16000 FC 3000 DY	53-571-00-01	53-571-00	3.00	232	842	0.04	DET	Passenger Compartment - Right
01063042	16000 FC 4500 DY	16000 FC 3000 DY	53-592-00-01	53-592-00	3.00	251	834	0.04	DET	Passenger Compartment
01063042	16000 FC 4500 DY	16000 FC 3000 DY	53-593-00-01	53-593-00	4.50	252	844	0.04	DET	Passenger Compartment
01063042	16000 FC 4500 DY	16000 FC 3000 DY	53-608-00-01	53-608-00	3.00	261	835	0.04	DET	Passenger Compartment
01063042	16000 FC 4500 DY	16000 FC 3000 DY	53-609-00-01	53-609-00	3.00	262	845	0.04	DET	Passenger Compartment
01063042	16000 FC 4500 DY	16000 FC 3000 DY	55-504-00-01	55-504-00	0.50	311 312 313 314	311BL	0.04	DET	Area Aft of Bulkhead Stabilizer Torsion Box Compartment
01063042	16000 FC 4500 DY	16000 FC 3000 DY	55-508-00-01	55-508-00	1.50	310	311BL	0.04	SDI	Fuselage - BS 2150-2570.3 (Section 48)
01063042	16000 FC 4500 DY	16000 FC 3000 DY	55-510-00-01	55-510-00	0.60	322	322AAL 322AAR 322ABL 322ABR	0.50	DET	Vertical Stabilizer - Auxiliary Spar to Front Spar
01063042	16000 FC 4500 DY	16000 FC 3000 DY	55-510-00-02	55-510-00	0.60	322	322AAL 322AAR 322ABL 322ABR	0.50	DET	Vertical Stabilizer - Auxiliary Spar to Front Spar
01063042	16000 FC 4500 DY	16000 FC 3000 DY	55-512-00-01	55-512-00	6.00	323	311AZ 311BL 322BL 322CL 322DL 322EL 322FL 322GL 322HL 322HXL 324BL 324CL 324CXL 324DL 324DXL 324EL 324FL 324GL 324HL 324JL 324JXL 324KL	17.69	GVI	Vertical Stabilizer - Front Spar to Rear Spar



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01063042	16000 FC 4500 DY	16000 FC 3000 DY	55-513-00-01	55-513-00	10.00	323	322BL 322CL 322DL 322EL 322FL 322GL 322HL	7.23	DET	Vertical Stabilizer - Front Spar to Rear Spar
01063042	16000 FC 4500 DY	16000 FC 3000 DY	55-513-01-01	55-513-01	10.00	323	322BL 322CL 322DL 322EL 322FL 322HXL	6.85	DET	Vertical Stabilizer - Front Spar to Rear Spar
01063042	16000 FC 4500 DY	16000 FC 3000 DY	55-516-00-01	55-516-00	0.60	324	324AL 324AR 324BL 324BR	1.96	DET	Vertical Stabilizer - Rear Spar to Trailing Edge
01063042	16000 FC 4500 DY	16000 FC 3000 DY	55-516-01-01	55-516-01	0.60	324	324AL 324AR 324CXL 324CXR	3.36	DET	Vertical Stabilizer - Rear Spar to Trailing Edge
01063042	16000 FC 4500 DY	16000 FC 3000 DY	55-520-00-01	55-520-00	0.90	325	324FL	0.35	DET	Rudder
01063042	16000 FC 4500 DY	16000 FC 3000 DY	55-520-01-01	55-520-01	0.90	325	324DXL	0.46	DET	Rudder
01063042	16000 FC 4500 DY	16000 FC 3000 DY	55-523-00-01	55-523-00	0.50	326	326EZ	0.04	DET	Rudder Tab
01063042	16000 FC 4500 DY	16000 FC 3000 DY	55-526-00-01	55-526-00	0.40	323	311AZ 311BL	0.07	GVI	Vertical Stabilizer - Front Spar to Rear Spar
01063042	16000 FC 4500 DY	16000 FC 3000 DY	55-532-01-01	55-532-01	2.00	334	333BB 333CB 333DB 333EB 333FB 335CB 335DB 335EXB 335GXB 335JB 335KB	11.47	GVI	Left Horizontal Stabilizer - Front Spar to Rear Spar
01063042	16000 FC 4500 DY	16000 FC 3000 DY	55-533-01-01	55-533-01	2.50	331 334	311BL 333BB 333CB 333DB 333EB 333FB 335CB 335DB 335EXB 335GXB 335JB 335KB	11.51	DET	Left Horizontal Stabilizer - Front Spar to Rear Spar
01063042	16000 FC 4500 DY	16000 FC 3000 DY	55-536-01-01	55-536-01	0.50	336	335EB	0.33	DET	Left Elevator
01063042	16000 FC 4500 DY	16000 FC 3000 DY	55-536-03-01	55-536-03	0.50	336	335EXB	0.58	DET	Left Elevator



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01063042	16000 FC 4500 DY	16000 FC 3000 DY	55-543-02-01	55-543-02	2.00	344	343BB 343CB 343DB 343EB 343FB 345CB 345DB 345EXB 345GXB 345JB 345KB	11.00	GVI	Right Horizontal Stabilizer - Front Spar to Rear Spar
01063042	16000 FC 4500 DY	16000 FC 3000 DY	55-544-02-01	55-544-02	2.50	341 344	311BL 343BB 343CB 343DB 343EB 343FB 345CB 345DB 345EXB 345GXB 345JB 345KB	11.04	DET	Right Horizontal Stabilizer - Front Spar to Rear Spar
01063042	16000 FC 4500 DY	16000 FC 3000 DY	55-547-02-01	55-547-02	0.50	346	345EB	0.33	DET	Right Elevator
01063042	16000 FC 4500 DY	16000 FC 3000 DY	55-547-04-01	55-547-04	0.50	346	345EXB	0.45	DET	Right Elevator
01063042	16000 FC 4500 DY	16000 FC 3000 DY	55-810-00-01	55-810-00	2.00	322	322AL 322BL 322CL 322DL 322EL 322FL 322GL 322HL	7.50	GVI	Vertical Stabilizer - Auxiliary Spar to Front Spar
01063042	16000 FC 4500 DY	16000 FC 3000 DY	55-811-00-01	55-811-00	2.00	322	322ABL 322BL 322CL 322DL 322EL 322FL 322HXL	6.85	GVI	Vertical Stabilizer - Auxiliary Spar / Front Spar
01063042	16000 FC 4500 DY	16000 FC 3000 DY	55-826-00-01	55-826-00	0.30	327	327	1.27	GVI	Vertical Stabilizer Forward Tip
01063042	16000 FC 4500 DY	16000 FC 3000 DY	55-834-01-01	55-834-01	0.60	333	333BB 333CB 333DB 333EB 333FB	6.93	GVI	Left Horizontal Stabilizer - Auxiliary Spar to Front Spar
01063042	16000 FC 4500 DY	16000 FC 3000 DY	55-842-01-01	55-842-01	1.50	335	335CB 335DB 335EB 335FB 335GB 335HB 335JB 335KB	4.84	GVI	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
01063042	16000 FC 4500 DY	16000 FC 3000 DY	55-843-00-01	55-843-00	1.50	335	335CB 335DB 335EXB 335GXB 335JB 335KB	4.54	GVI	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
01063042	16000 FC 4500 DY	16000 FC 3000 DY	55-854-02-01	55-854-02	0.60	343	343BB 343CB 343DB 343EB 343FB	6.93	GVI	Right Horizontal Stabilizer Auxiliary Spar to Front Spar



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01063042	16000 FC 4500 DY	16000 FC 3000 DY	55-862-02-01	55-862-02	1.50	345	345CB 345DB 345EB 345FB 345GB 345HB 345JB 345KB	4.84	GVI	Right Horizontal Stabilizer - Rear Spar to Trailing Edge
01063042	16000 FC 4500 DY	16000 FC 3000 DY	55-863-00-01	55-863-00	1.50	345	345CB 345DB 345EXB 345GXB 345JB 345KB	4.07	GVI	Right Horizontal Stabilizer - Rear Spar to Trailing Edge
01063042	16000 FC 4500 DY	16000 FC 3000 DY	57-503-01-01	57-503-01	1.50	512	512AB 512BB 512CB 512DB 512EB 512FB 512GB	3.99	GVI	Slat Number 7
01063042	16000 FC 4500 DY	16000 FC 3000 DY	57-516-01-01	57-516-01	2.50	555	555AT 555BT 555CT 555DL 555EL 555FL 555GL 555HL 555JL 555KL	3.30	GVI	Left Wing Inboard Main Flap
01063042	16000 FC 4500 DY	16000 FC 3000 DY	57-517-01-01	57-517-01	2.50	555	555AT 555BT 555CT 555DL 555EL 555FL 555GL 555HL 555JL 555KL	3.30	DET	Left Wing Inboard Main Flap
01063042	16000 FC 4500 DY	16000 FC 3000 DY	57-518-01-01	57-518-01	1.50	556	556AT 556BT 556CL	2.90	GVI	Left Wing Inboard Aft Flap
01063042	16000 FC 4500 DY	16000 FC 3000 DY	57-524-01-01	57-524-01	3.50	567	567FB 567GB 567HB 567JB 567LB 567MB 567NB 567PB	0.64	DET	Left Wing Outboard Flap
01063042	16000 FC 4500 DY	16000 FC 3000 DY	57-531-01-01	57-531-01	0.30	572	572AB 572BB	0.54	GVI	Inboard Flap Center Track Fairing - Left Wing
01063042	16000 FC 4500 DY	16000 FC 3000 DY	57-536-02-01	57-536-02	1.50	612	612AB 612BB 612CB 612DB 612EB 612FB 612GB	3.99	GVI	Slat Number 8
01063042	16000 FC 4500 DY	16000 FC 3000 DY	57-551-02-01	57-551-02	2.50	655	655AT 655BT 655CT 655DR 655ER 655FR 655GR 655HR 655JR 655KR	3.30	GVI	Right Wing Inboard Main Flap



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01063042	16000 FC 4500 DY	16000 FC 3000 DY	57-552-02-01	57-552-02	2.50	655	655AT 655BT 655CT 655DR 655ER 655FR 655GR 655HR 655JR 655KR	3.30	DET	Right Wing Inboard Main Flap
01063042	16000 FC 4500 DY	16000 FC 3000 DY	57-553-02-01	57-553-02	1.50	656	656AT 656BT 656CR	2.89	GVI	Right Wing Inboard Aft Flap
01063042	16000 FC 4500 DY	16000 FC 3000 DY	57-557-02-01	57-557-02	3.50	667	667FB 667GB 667HB 667JB 667LB 667MB 667NB 667PB	0.64	DET	Right Wing Outboard Flap
01063042	16000 FC 4500 DY	16000 FC 3000 DY	57-561-02-01	57-561-02	0.30	672	672AB 672BB	0.54	GVI	Inboard Flap Center Track Fairing - Right Wing
01063042	16000 FC 4500 DY	16000 FC 3000 DY	57-607-01-01	57-607-01	2.00	500		0.00	GVI	Left Wing
01063042	16000 FC 4500 DY	16000 FC 3000 DY	57-620-02-01	57-620-02	2.00	600		0.00	GVI	Right Wing
01063042	16000 FC 4500 DY	16000 FC 3000 DY	57-820-01-01	57-820-01	0.40	522	522AB 522CB 522DB 522EB 522FB 522GB 522HB 522IB 522JB 522KB	1.40	GVI	Slat Number 6
01063042	16000 FC 4500 DY	16000 FC 3000 DY	57-822-01-01	57-822-01	0.40	523	523BB 523CB 523DB 523EB 523FB 523GB 523HB 523IB 523JB	1.26	GVI	Slat Number 5
01063042	16000 FC 4500 DY	16000 FC 3000 DY	57-824-01-01	57-824-01	0.40	524	524BB 524CB 524DB 524EB 524FB 524GB 524HB 524IB 524JB 524KB	1.40	GVI	Slat Number 4
01063042	16000 FC 4500 DY	16000 FC 3000 DY	57-826-01-01	57-826-01	0.40	525	525BB 525CB 525DB 525EB 525FB 525GB 525HB 525IB 525JB 525KB	1.40	GVI	Slat Number 3





## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01063042	16000 FC 4500 DY	16000 FC 3000 DY	57-828-01-01	57-828-01	0.40	526	526AB 526BB 526CB 526DB 526EB 526FB 526GB	1.05	GVI	Slat Number 2
01063042	16000 FC 4500 DY	16000 FC 3000 DY	57-830-01-01	57-830-01	0.40	527	527AB 527BB 527CB 527DB 527EB 527FB 527GB 527HB 527IB 527JB	1.40	GVI	Slat Number 1
01063042	16000 FC 4500 DY	16000 FC 3000 DY	57-831-01-01	57-831-01	0.70	527	527AB 527BB 527CB 527DB 527EB 527FB 527GB 527HB 527IB 527JB 527KB 527LB 527MB	1.82	GVI	Slat Number 1
01063042	16000 FC 4500 DY	16000 FC 3000 DY	57-834-01-01	57-834-01	0.60	531	531AB 531BB 531CB	0.63	GVI	Center Fuel Tank - Rib 1 to Rib 8 - Left Wing
01063042	16000 FC 4500 DY	16000 FC 3000 DY	57-838-01-01	57-838-01	0.80	533	533AB 533BB 533CB 533DB 533EB 533FB 533GB	1.47	GVI	Main Tank - Rib 8 to Rib 17 - Left Wing
01063042	16000 FC 4500 DY	16000 FC 3000 DY	57-842-01-01	57-842-01	1.50	541	541AB 541BB 541CB 541DB 541EB 541FB 541GB 541HB 541JB 541KB 541LB 541MB 541NB 541PB 541QB	3.15	GVI	Main Tank - Rib 17 to Rib 32 - Left Wing
01063042	16000 FC 4500 DY	16000 FC 3000 DY	57-844-01-01	57-844-01	0.30	542	542AB 542BB	0.42	GVI	Left Wing Surge Tank - Rib 32 to Rib 34
01063042	16000 FC 4500 DY	16000 FC 3000 DY	57-846-01-01	57-846-01	0.75	543 544	543AB 543BB 543CB 543DB 544AB 544BB 544CB 544DB 544EB 544FB 544GB 544HB 544JB	2.11	GVI	Inspar Area - Rib 34 to Wing Tip - Left Wing
01063042	16000 FC 4500 DY	16000 FC 3000 DY	57-850-01-01	57-850-01	0.20	545	545AB 545BB	0.14	GVI	Left Wing Tip



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01063042	16000 FC 4500 DY	16000 FC 3000 DY	57-912-02-01	57-912-02	0.40	622	622AB 622CB 622DB 622EB 622FB 622GB 622HB 622IB 622JB 622KB	1.40	GVI	Slat Number 9
01063042	16000 FC 4500 DY	16000 FC 3000 DY	57-914-02-01	57-914-02	0.40	623	623BB 623CB 623DB 623EB 623FB 623GB 623HB 623IB 623JB	1.26	GVI	Slat Number 10
01063042	16000 FC 4500 DY	16000 FC 3000 DY	57-916-02-01	57-916-02	0.40	624	624BB 624CB 624DB 624EB 624FB 624GB 624HB 624IB 624JB 624KB	1.40	GVI	Slat Number 11
01063042	16000 FC 4500 DY	16000 FC 3000 DY	57-918-02-01	57-918-02	0.40	625	625BB 625CB 625DB 625EB 625FB 625GB 625HB 625IB 625JB 625KB	1.40	GVI	Slat Number 12
01063042	16000 FC 4500 DY	16000 FC 3000 DY	57-920-02-01	57-920-02	0.40	626	626AB 626BB 626CB 626DB 626EB 626FB 626GB	1.05	GVI	Slat Number 13
01063042	16000 FC 4500 DY	16000 FC 3000 DY	57-922-02-01	57-922-02	0.40	627	627AB 627BB 627CB 627DB 627EB 627FB 627GB 627HB 627IB 627JB	1.40	GVI	Slat Number 14
01063042	16000 FC 4500 DY	16000 FC 3000 DY	57-923-02-01	57-923-02	0.50	627	627AB 627BB 627CB 627DB 627EB 627FB 627GB 627HB 627IB 627JB 627KB 627LB 627MB	1.82	GVI	Slat Number 14
01063042	16000 FC 4500 DY	16000 FC 3000 DY	57-926-02-01	57-926-02	0.60	631	631AB 631BB 631CB	0.63	GVI	Center Fuel Tank - Rib 1 to Rib 8 - Right Wing
01063042	16000 FC 4500 DY	16000 FC 3000 DY	57-930-02-01	57-930-02	0.80	633	633AB 633BB 633CB 633DB 633EB 633FB 633GB	1.47	GVI	Main Tank - Rib 8 to Rib 17 - Right Wing



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01063042	16000 FC 4500 DY	16000 FC 3000 DY	57-934-02-01	57-934-02	1.50	641	641AB 641BB 641CB 641DB 641EB 641FB 641GB 641HB 641JB 641KB 641LB 641MB 641NB 641PB 641QB	3.15	GVI	Main Tank - Rib 17 to Rib 32 - Right Wing
01063042	16000 FC 4500 DY	16000 FC 3000 DY	57-936-02-01	57-936-02	0.30	642	642AB 642BB	0.42	GVI	Right Wing Surge Tank - Rib 32 to Rib 34
01063042	16000 FC 4500 DY	16000 FC 3000 DY	57-938-02-01	57-938-02	0.75	643 644	643AB 643BB 643CB 643DB 644AB 644BB 644CB 644DB 644EB 644FB 644GB 644HB 644JB	2.33	GVI	Inspar Area - Rib 34 to Wing Tip - Right Wing
01063042	16000 FC 4500 DY	16000 FC 3000 DY	57-942-02-01	57-942-02	0.20	645	645AB 645BB	0.14	GVI	Right Wing Tip
01063063	4500 DY	4500 DY	20-445-00-01	20-445-00	0.25	327		0.00	DET	Fin Tip Diverter Strip
01063063	4500 DY	4500 DY	20-470-00-01	20-470-00	1.00	135 136	195QL 196NR 196QR	0.33	FNC	HIRF/Lightning Protection - Air Supply Isolation Valves
01063063	4500 DY	4500 DY	28-015-20-01	28-015-20	0.16	133 134 139 531 533 551 631 633 651	551DB 651DB	0.04	FNC	Left Wing Scavenge Jet Pumps. (SFAR 88)
01063063	4500 DY	4500 DY	28-015-20-02	28-015-20	0.17	133 134 139 531 533 551 631 633 651	551DB 651DB	0.04	FNC	Right Wing Scavenge Jet Pumps. (SFAR 88)



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01063063	4500 DY	4500 DY	28-015-20-03	28-015-20	0.17	133 134 139 531 533 551 631 633 651	551DB 651DB	0.04	FNC	Wing Center Section Water Scavenge Jet Pumps. (SFAR 88)
01063063	4500 DY	4500 DY	28-015-20-04	28-015-20	0.17	133 134 139 531 533 551 631 633 651	551DB 651DB	0.04	FNC	Wing Center Section Fuel Scavenge Jet Pumps. (SFAR 88)
01063063	4500 DY	4500 DY	28-015-20-05	28-015-20	0.17	133 134 139 531 533 551 631 633 651	551DB 651DB	0.04	FNC	Wing Center Section Fuel Scavenge Jet Pumps. (SFAR 88)



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01063063	4500 DY	4500 DY	28-021-10-05	28-021-10	0.50	133 134 151 152 531 533 541 542 543 544 551 631 633 641 642 643 644	139AZ 531AB 531BB 531CB 533AB 533BB 533CB 533DB 533EB 533FB 533GB 541AB 541BB 541CB 541DB 541EB 541FB 541GB 541HB 541JB 541KB 541LB 541MB 541NB 541PB 541QB 542AB 542BB 543AB 543BB 543CB 543DB 544AB 544BB 544CB 631AB 631BB 631CB 633AB 633BB 633CB 633DB 633EB 633FB 633GB 641AB 641BB 641CB 641DB 641EB 641FB 641GB 641HB 641JB 641KB 641LB 641MB 641NB 641PB 641QB 642AB 642BB 643AB 643BB 643CB 643DB 644AB 644BB 644CB	14.17	DET	Left Wing in-Tank Tubing, Equipment Static Ground Straps and Clamps (SFAR 88)



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01063063	4500 DY	4500 DY	28-021-10-06	28-021-10	0.50	133 134 151 152 531 533 541 542 543 544 551 631 633 641 642 643 644	139AZ 531AB 531BB 531CB 533AB 533BB 533CB 533DB 533EB 533FB 533GB 541AB 541BB 541CB 541DB 541EB 541FB 541GB 541HB 541JB 541KB 541LB 541MB 541NB 541PB 541QB 542AB 542BB 543AB 543BB 543CB 543DB 544AB 544BB 544CB 631AB 631BB 631CB 633AB 633BB 633CB 633DB 633EB 633FB 633GB 641AB 641BB 641CB 641DB 641EB 641FB 641GB 641HB 641JB 641KB 641LB 641MB 641NB 641PB 641QB 642AB 642BB 643AB 643BB 643CB 643DB 644AB 644BB 644CB	14.17	DET	Right Wing in-Tank Tubing, Equipment Static Ground Straps and Clamps (SFAR 88)
01063063	16000 FC 4500 DY	16000 FC 4500 DY	55-537-01-01	55-537-01	0.20	337		0.00	GVI	Left Horizontal Stabilizer Tip
01063063	16000 FC 4500 DY	16000 FC 4500 DY	55-548-02-01	55-548-02	0.20	347		0.00	GVI	Right Horizontal Stabilizer Tip
01063999	16000 FC 4500 DY	0 FC 0 DY	53-557-00-01	53-557-00	5.00	215 221	831	0.04	GVI	Main Deck Compartment
01063999	16000 FC 4500 DY	0 FC 0 DY	53-558-00-01	53-558-00	4.00	216 222	841	0.04	GVI	Main Deck Compartment



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01063999	16000 FC 4500 DY	0 FC 0 DY	53-580-00-01	53-580-00	0.60	243 244		0.00	GVI	Area Above Main Deck Compartment Ceiling
01063999	16000 FC 4500 DY	0 FC 0 DY	53-589-00-01	53-589-00	4.00	251	834	0.04	GVI	Passenger Compartment
01063999	16000 FC 4500 DY	0 FC 0 DY	53-590-00-01	53-590-00	6.50	252	844	0.04	GVI	Passenger Compartment
01063999	16000 FC 4500 DY	0 FC 0 DY	53-606-00-01	53-606-00	4.00	261	835	0.04	GVI	Passenger Compartment
01063999	16000 FC 4500 DY	0 FC 0 DY	53-607-00-01	53-607-00	4.00	262	845	0.04	GVI	Passenger Compartment
01070010	12000 FC 2250 DY 28000 FC 5250 DY	12000 FC 2250 DY 4000 FC 750 DY	53-574-00-01	53-574-00	0.40	233 234		0.00	GVI	Area Above Main Deck Compartment Ceiling
01070010	12000 FC 2250 DY 28000 FC 5250 DY	12000 FC 2250 DY 4000 FC 750 DY	53-579-00-01	53-579-00	3.50	243 244		0.00	GVI	Area Above Main Deck Compartment Ceiling
01070010	12000 FC 2250 DY 28000 FC 5250 DY	12000 FC 2250 DY 4000 FC 750 DY	53-596-00-01	53-596-00	4.00	253 254		0.00	GVI	Area above Main Deck Compartment Ceiling
01070010	28000 FC 5250 DY	4000 FC 750 DY	54-536-01-01	54-536-01	1.50	430	431FL 431GL 431GR 434BL 434CL 434DL 434EL	1.38	DET	Left Nacelle Strut
01070010	28000 FC 5250 DY	4000 FC 750 DY	54-544-02-01	54-544-02	1.50	440	441FR 441GL 441GR 444BR 444CR 444DR 444ER	1.10	DET	Right Nacelle Strut
01070014	28000 FC 5250 DY	8000 FC 1500 DY	52-527-01-01	52-527-01	0.20	831	831	0.04	DET	Left #1 Entry Door
01070014	28000 FC 5250 DY	8000 FC 1500 DY	52-528-01-01	52-528-01	0.20	832	832	0.04	DET	Left #2 Passenger Entry Door
01070014	28000 FC 5250 DY	8000 FC 1500 DY	52-529-01-01	52-529-01	0.20	833	833	0.04	DET	Left #3 Overwing Door



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01070014	28000 FC 5250 DY	8000 FC 1500 DY	52-531-01-01	52-531-01	0.20	834	834	0.04	DET	Left #4 Passenger Entry Door
01070014	28000 FC 5250 DY	8000 FC 1500 DY	52-533-01-01	52-533-01	0.20	835	835	0.04	DET	Left #5 Passenger Entry Door
01070014	28000 FC 5250 DY	8000 FC 1500 DY	52-542-02-01	52-542-02	0.20	841	841	0.04	DET	Right #1 Entry Door
01070014	28000 FC 5250 DY	8000 FC 1500 DY	52-543-02-01	52-543-02	0.20	842	842	0.04	DET	Right #2 Passenger Entry Door
01070014	28000 FC 5250 DY	8000 FC 1500 DY	52-544-02-01	52-544-02	0.20	843	843	0.04	DET	Right #3 Overwing Door
01070014	28000 FC 5250 DY	8000 FC 1500 DY	52-546-02-01	52-546-02	0.20	844	844	0.04	DET	Right #4 Passenger Entry Door
01070014	28000 FC 5250 DY	8000 FC 1500 DY	52-548-02-01	52-548-02	0.20	845	845	0.04	DET	Right #5 Passenger Entry Door
01076076	15 YR	15 YR	25-071-00-01	25-071-00	0.50	197 198 833 843	197EL 198ER	0.66	DIS	Off - Wing Slide Reservoir
01076076	15 YR	15 YR	25-071-00-02	25-071-00	0.50	197 198 833 843	197EL 198ER	0.66	DIS	Off - Wing Slide Reservoir
01078026	5625 DY	1875 DY	20-330-00-01	20-330-00	0.50	151 152 261 262	823 824	0.20	FNC	HIRF/Lightning ACE Disconnects to Modal Suppression Transducers
01078026	5625 DY	1875 DY	20-460-00-01	20-460-00	0.50	117 118	117AL	0.02	FNC	HIRF/Lightning GPS Antenna to Left and Right MMR
01084000	32000 FC 6000 DY	0 FC 0 DY	53-612-00-01	53-612-00	0.40	231 232		0.00	GVI	Passenger Compartment Left and Right
01084000	32000 FC 6000 DY	0 FC 0 DY	53-613-00-01	53-613-00	0.40	233 234		0.00	GVI	Area above Passenger Compartment Ceiling
01084000	32000 FC 6000 DY	0 FC 0 DY	53-618-00-01	53-618-00	0.80	251 252		0.00	GVI	Passenger Compartment Left and Right





## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01084042	32000 FC 6000 DY	16000 FC 3000 DY	20-706-00-01	20-706-00	1.00	221 222 251 252		0.00	DET	APU, RAT, Galley and Cabin Power Feeders in Passenger Compartment
01084042	32000 FC 6000 DY	16000 FC 3000 DY	52-504-00-01	52-504-00	12.00	821	821	0.10	DET	Forward Large Cargo Door
01084042	32000 FC 6000 DY	16000 FC 3000 DY	52-512-00-01	52-512-00	12.00	824	824	0.10	DET	Aft Large Cargo Door
01084042	32000 FC 6000 DY	16000 FC 3000 DY	53-550-00-01	53-550-00	5.00	211 212		0.00	GVI	Flight Compartment
01084042	32000 FC 6000 DY	16000 FC 3000 DY	53-561-00-01	53-561-00	0.80	223 224		0.00	GVI	Area Above Main Deck Compartment Ceiling
01084042	32000 FC 6000 DY	16000 FC 3000 DY	53-572-00-01	53-572-00	4.00	231		0.00	GVI	Passenger Compartment - Left
01084042	32000 FC 6000 DY	16000 FC 3000 DY	53-573-00-01	53-573-00	4.00	232		0.00	GVI	Passenger Compartment - Right
01084042	32000 FC 6000 DY	16000 FC 3000 DY	53-575-00-01	53-575-00	3.00	233 234		0.00	GVI	Area Above Main Deck Compartment Ceiling
01084042	32000 FC 6000 DY	16000 FC 3000 DY	53-581-00-01	53-581-00	0.80	243 244		0.00	GVI	Area Above Main Deck Compartment Ceiling
01084042	32000 FC 6000 DY	16000 FC 3000 DY	53-598-00-01	53-598-00	0.80	253 254		0.00	GVI	Area above Main Deck Compartment Ceiling
01084042	32000 FC 6000 DY	16000 FC 3000 DY	53-624-00-01	53-624-00	1.00	233 234		0.00	SDI	Main Deck Compartment Ceiling
01084042	32000 FC 6000 DY	16000 FC 3000 DY	53-625-00-01	53-625-00	2.00	233 234		0.00	GVI	Main Deck Compartment Ceiling
01084042	32000 FC 6000 DY	16000 FC 3000 DY	53-671-00-01	53-671-00	0.30	151 152 161 162 165 166	824 825	0.19	GVI	Lower Fuselage - Subzone 150 and 160
01084042	32000 FC 6000 DY	16000 FC 3000 DY	53-675-00-01	53-675-00	1.50	221 222 223 224		0.00	GVI	Subzone 220 BS 246 to 655 (Section 41)



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01084042	32000 FC 6000 DY	16000 FC 3000 DY	53-676-00-01	53-676-00	0.70	231 232 233 234		0.00	GVI	Subzone 230 BS 655 to 1035 (Section 43)
01084042	32000 FC 6000 DY	16000 FC 3000 DY	53-677-00-01	53-677-00	2.25	241 242 243 244		0.00	GVI	Subzone 240 BS 1035 to 1434 (Section 44)
01084042	32000 FC 6000 DY	16000 FC 3000 DY	53-678-00-01	53-678-00	2.00	251 252 253 254		0.00	GVI	Subzone 250 BS 1434 to 1832 (Section 46)
01084042	32000 FC 6000 DY	16000 FC 3000 DY	53-679-00-01	53-679-00	2.00	261 262 263 264		0.00	GVI	Subzone 260 BS 1832 to 2195.75 (Section 47)
01084042	32000 FC 6000 DY	16000 FC 3000 DY	57-606-00-01	57-606-00	0.56	135 136 139 195 196	139AL 139BL 139CL 139DL 195AL 195BL 195CL 195DL 195EL 195FL 195GL 195HL 195JL 195KL 195LL 195ML 195NL 195PL 195QL 196AR 196BR 196CR 196DR 196ER 196FR 196GR 196HR 196JR 196KR 196LR 196MR 196NR 196PR 196QR	7.53	GVI	Left Side - Environmental Control Systems Bay and Underwing Fairings



# 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01084042	32000 FC 6000 DY	16000 FC 3000 DY	57-606-00-02	57-606-00	0.57	135 136 139 195 196	139AL 139BL 139CL 139DL 195AL 195BL 195CL 195DL 195EL 195FL 195GL 195HL 195JL 195KL 195LL 195ML 195NL 195PL 195QL 196AR 196BR 196CR 196DR 196ER 196FR 196GR 196HR 196JR 196KR 196LR 196MR 196NR 196PR 196QR	7.53	GVI	Lower Fuselage - Forward Keel Beam Area
01084042	32000 FC 6000 DY	16000 FC 3000 DY	57-606-00-03	57-606-00	0.57	135 136 139 195 196	139AL 139BL 139CL 139DL 195AL 195BL 195CL 195DL 195EL 195FL 195GL 195HL 195JL 195KL 195LL 195ML 195NL 195PL 195QL 196AR 196BR 196CR 196DR 196ER 196FR 196GR 196HR 196JR 196KR 196LR 196MR 196NR 196PR 196QR	7.53	GVI	Right Side - Environmental Control Systems Bay and Underwing Fairings



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
01084084	16000 FC	16000 FC	27-460-01-01	27-460-01	6.00	555 567 571 573 576 577 655 667 671 673 676 677		0.00	FNC	TRAILING EDGE FLAP SUPPORT LINKAGE PIN FREEPLAY
01084084	32000 FC 6000 DY	32000 FC 6000 DY	52-505-00-01	52-505-00	2.00	821	821	0.10	DET	Forward Large Cargo Door
01084084	32000 FC 6000 DY	32000 FC 6000 DY	52-513-00-01	52-513-00	2.00	824	824	0.10	DET	Aft Large Cargo Door
01084084	16000 FC	16000 FC	55-528-01-01	55-528-01	1.20	331	313AL	0.04	DET	Left Horizontal Stabilizer Center Section
01084084	16000 FC	16000 FC	55-539-02-01	55-539-02	1.20	341	313AL	0.04	DET	Right Horizontal Stabilizer Center Section
01084084	16000 FC	16000 FC	57-510-01-01	57-510-01	0.80	541	541DB 541NB	0.42	SDI	Main Tank - Rib 17 to Rib 32 - Left Wing
01084084	16000 FC	16000 FC	57-511-01-01	57-511-01	0.30	541	541DB 541NB	0.42	DET	Main Tank - Rib 17 to Rib 32 - Left Wing
01084084	16000 FC	16000 FC	57-514-00-01	57-514-00	3.50	555 567 655 667		0.00	SDI	Wing Inboard and Outboard Main Flap Attach Bolts
01084084	16000 FC	16000 FC	57-530-01-01	57-530-01	1.50	571	571AB 571BB	0.46	SDI	Flap Support Fairing Number 4
01084084	16000 FC	16000 FC	57-532-01-01	57-532-01	1.50	573	573AB 573EB	1.80	SDI	Left Wing Flap Support Fairing Number 3
01084084	16000 FC	16000 FC	57-545-02-01	57-545-02	0.80	641	641DB 641NB	0.42	SDI	Main Tank - Rib17 to Rib 32 - Right Wing
01084084	16000 FC	16000 FC	57-546-02-01	57-546-02	0.30	641	641DB 641NB	0.42	DET	Main Tank - Rib 17 to Rib 32 - Right Wing
01084084	16000 FC	16000 FC	57-560-02-01	57-560-02	1.50	671	671AB 671BB	0.46	SDI	Right Wing Flap Support Fairing Number 5
01084084	16000 FC	16000 FC	57-562-02-01	57-562-02	1.50	673	673AB 673EB	1.80	SDI	Right Wing Flap Support Fairing Number 6
01108108	108000 FH	108000 FH	47-135-00-01	47-135-00	0.50	196	196BR	0.42	FNC	Functional Check of the NGS thermal switch
02010090	24000 FC 4500 DY	24000 FC 4500 DY	54-508-01-01	54-508-01	1.00	430	431FL 431GL 431GR 434BL 434EL	1.34	SDI	Left Nacelle Strut



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
02010090	24000 FC 4500 DY	24000 FC 4500 DY	54-516-02-01	54-516-02	1.00	440	441FR 441GL 441GR 444BR 444ER	1.06	SDI	Right Nacelle Strut
02010090	24000 FC 4500 DY	24000 FC 4500 DY	54-567-01-01	54-567-01	1.00	430	431FL 431GL 431GR 434BL 434EL	1.34	SDI	Left Nacelle Strut
02010090	24000 FC 4500 DY	24000 FC 4500 DY	54-575-02-01	54-575-02	1.00	440	441FR 441GL 441GR 444BR 444ER	1.06	SDI	Right Nacelle Strut
02025015	28000 FC 5250 DY	4000 FC 750 DY	54-507-01-01	54-507-01	1.50	430	431FL 431GL 431GR 434BL 434CL 434DL 434EL	1.38	DET	Left Nacelle Strut
02025015	28000 FC 5250 DY	4000 FC 750 DY	54-515-02-01	54-515-02	1.00	440	441FR 441GL 441GR 444BR 444CR 444DR 444ER	1.10	DET	Right Nacelle Strut
02025015	28000 FC 5250 DY	4000 FC 750 DY	54-566-01-01	54-566-01	1.50	430	431FL 431GL 431GR 434BL 434CL 434DL 434EL	1.38	DET	Left Nacelle Strut
02025015	28000 FC 5250 DY	4000 FC 750 DY	54-574-02-01	54-574-02	0.70	440	441FR 441GL 441GR 444BR 444CR 444DR 444ER	1.10	DET	Right Nacelle Strut
02025030	28000 FC 5250 DY	8000 FC 1500 DY	52-530-01-01	52-530-01	0.20	834	834	0.04	DET	Left #3 Passenger Entry Door
02025030	28000 FC 5250 DY	8000 FC 1500 DY	52-532-01-01	52-532-01	0.20	835	835	0.04	DET	Left #4 Passenger Entry Door
02025030	28000 FC 5250 DY	8000 FC 1500 DY	52-545-02-01	52-545-02	0.20	844	844	0.04	DET	Right #3 Passenger Entry Door
02025030	28000 FC 5250 DY	8000 FC 1500 DY	52-547-02-01	52-547-02	0.20	845	845	0.04	DET	Right #4 Passenger Entry Door
02040060	32000 FC 6000 DY	16000 FC 3000 DY	20-728-00-01	20-728-00	0.50	221 222 251 252		0.00	DET	Rat and Cabin Power Feeder Bundles in Passenger Compartment



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
02045022	30000 FC	4000 FC	54-704-03-01	54-704-03	1.00	432 433 442 443		0.00	SDI	Lower Spar Chord (PW)
02045022	30000 FC	4000 FC	54-714-03-01	54-714-03	1.00	432 433 442 443		0.00	SDI	Upper Spar (GE)
02045044	30000 FC	8000 FC	54-702-03-01	54-702-03	3.00	432 433 442 443		0.00	SDI	Strut Upper Spar (PW)
02045044	30000 FC	8000 FC	54-702-04-01	54-702-04	3.00	432 433 442 443		0.00	SDI	Strut Upper Spar (PW)
02045044	30000 FC	8000 FC	54-703-05-01	54-703-05	2.00	432 433 442 443		0.00	SDI	Strut Side Skin (PW)
02045044	30000 FC	8000 FC	54-705-03-01	54-705-03	4.00	432 433		0.00	SDI	Lower Spar (PW)
02045044	30000 FC	8000 FC	54-781-03-01	54-781-03	1.00	432 433 442 443		0.00	SDI	Aluminum Aft Strut Bulkhead (RR)
02045067	30000 FC	12000 FC	54-704-04-01	54-704-04	1.00	432 433 442 443		0.00	SDI	Lower Spar Chord (PW)
02045067	30000 FC	12000 FC	54-779-03-01	54-779-03	1.00	432 433 442 443		0.00	SDI	Aft Engine Mount Bulkhead (RR)
02045067	30000 FC	12000 FC	55-704-03-01	55-704-03	1.00	331 341	311BL	0.04	SDI	Pivot Fitting Straps (Both Pairs - Upper and Lower) L/N 41 and on
02045067	30000 FC	12000 FC	55-704-04-01	55-704-04	1.00	331 341	311BL	0.04	SDI	Pivot Fitting Straps (Both Pairs - Upper and Lower) L/N 41 and on



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
02045089	30000 FC	16000 FC	54-706-04-01	54-706-04	1.50	432 433 442 443	433CL 433CR 434BL 434BR	0.00	SDI	Strut Lower Spar (PW)
02045089	30000 FC	16000 FC	54-708-01-01	54-708-01	1.50	410 420 433 434		0.40	SDI	Strut Aft Engine Mount Bulkhead Assembly (PW)
02045089	30000 FC	16000 FC	54-777-02-01	54-777-02	1.00	432 433 442 443		0.00	SDI	Aft Lower Chord at Aft Engine Mount Bulkhead (RR)
02045089	30000 FC	16000 FC	54-779-02-01	54-779-02	1.00	432 433 442 443		0.00	SDI	Aft Engine Mount Bulkhead (RR)
02045089	30000 FC	16000 FC	54-780-01-01	54-780-01	1.00	432 433 442 443		0.00	SDI	Strut Aft Bulkhead (RR)
02045089	30000 FC	16000 FC	54-780-02-01	54-780-02	1.00	432 433 442 443		0.00	SDI	Aluminum Aft Strut Bulkhead (RR)
02045089	30000 FC	16000 FC	57-737-06-01	57-737-06	5.00	521 621	831 832 834 835 841 842 844 845	0.00	SDI	Wing Outboard Upper Panel, Rear Spar Upper Chord
02101011	40000 FC	2000 FC	52-701-01-01	52-701-01	0.50	831 832 834 835 841 842 844 845		0.32	GVI	Passenger Entry Doors - Outer Skin and Structure



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

PHASE	THRESH	REPEAT	CARD NO.	MPD ITEM NO.	MHRS	ZONES	ACCESS PANELS	PANELS MHRS	TASK	TITLE
02101022	40000 FC	4000 FC	52-701-03-01	52-701-03	1.00	831 832 834 835 841 842 844 845	831 832 834 835 841 842 844 845	0.32	DET	Passenger Entry Doors - Outer Skin and Structure
02101022	40000 FC	4000 FC	57-711-11-01	57-711-11	2.00	133 134	139AZ	0.30	SDI	Wing Center Section, Lower Rear Spar Chord, Lower Chord
02101022	40000 FC	4000 FC	57-790-03-01	57-790-03	3.00	551 651		0.00	SDI	MLG Beam Outboard Support Fitting, Lower Skin Flange
02101044	40000 FC	8000 FC	53-751-01-01	53-751-01	1.00	241 242		0.00	SDI	Passenger Entry Overwing Door #3 - Cutout
02101044	40000 FC	8000 FC	57-761-04-01	57-761-04	2.00	573 673	573AB 573EB 673AB 673EB	3.60	DET	No. 3 and No. 6 Inboard Flap Support Forward Tension Link
02101089	40000 FC	16000 FC	53-725-07-01	53-725-07	1.50	113 114		0.00	SDI	Nose Wheel Well Cutout Structure (L/N 1 to 40)
02101089	40000 FC	16000 FC	57-729-06-01	57-729-06	1.00	521 621		0.00	SDI	Wing Outboard, Typical Stringer Attachment at Nacelle Fitting





# 777-200/300 MAINTENANCE PLANNING DOCUMENT

## LABOR HOURS

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
12-002-01	2.45	0.50	2.95	335EB 335EXB 335FB 345EB 345EXB 345FB
12-004-00	2.36	1.10	3.46	324DL 324DXL 324EL 324FL 324NL 324PLX
12-006-00	0.04	0.30	0.34	311BL
12-008-00	16.67	2.80	19.47	511AB 511CB 511GB 511MB 513AT 513BT 521AAB 521AB 521ACB 521AFB 521BB 521DB 521EB 521FB 521GB 521HB 521JB 521KB 521LB 521MB 521PB 521QB 521RB 521TB 521UB 521VB 521WB 521YB 521ZB 611AB 611CB 611GB 611MB 613AT 613BT 621AAB 621AB 621ACB 621AFB 621BB 621CAB 621DAB 621DB 621EB 621FB 621GB 621HB 621JB 621KB 621LB 621MB 621PB 621QB 621RB 621TB 621UB 621VB 621WB 621YB 621ZB
12-008-01	0.00	1.10	1.10	
12-010-00	0.00	0.20	0.20	
12-012-00	0.00	0.46	0.46	
12-014-00	11.88	2.60	14.48	511CB 511EB 511GB 511JB 511LB 511MB 521AAB 521ACB 521AFB 521BB 521EB 521GB 521JB 521MB 521PB 521RB 521TB 521WB 521YB 611CB 611EB 611GB 611JB 611LB 611MB 621AAB 621ACB 621AFB 621BB 621DAB 621EB 621GB 621JB 621MB 621PB 621RB 621TB 621WB 621YB
12-018-00	0.00	0.20	0.20	



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
12-020-00	1.12	0.40	1.52	552BB 552FB 652BB 652FB
12-022-00	0.00	0.80	0.80	
12-024-00	2.16	1.00	3.16	561KAB 561MB 561NB 561PB 561QAB 561QBB 561RAB 661KAB 661MB 661NB 661PB 661QAB 661QBB 661RAB
12-026-00	0.00	0.40	0.40	
12-030-00	0.00	3.50	3.50	
12-034-00	0.00	3.30	3.30	
12-050-00	2.34	4.70	7.04	573AB 573BB 573CL 573CR 576BB 577BB 673AB 673BB 673CL 673CR 676BB 677BB
12-070-00	0.08	2.05	2.13	713 714
12-074-00	0.08	0.60	0.68	713 714
12-080-00	0.04	6.60	6.64	551DB 651DB
12-081-00	0.00	0.10	0.10	
12-082-00	0.94	0.20	1.14	551BB 551DB 651BB 651DB
12-086-00	0.08	1.20	1.28	732 742
12-088-00	0.04	1.20	1.24	551DB 651DB
12-090-00	0.00	0.20	0.20	
12-092-00	0.00	0.20	0.20	
12-094-00	0.10	0.70	0.80	821
12-096-00	0.10	0.70	0.80	824
12-100-00	0.10	0.40	0.50	821
12-102-00	0.00	0.40	0.40	
12-104-00	0.00	0.30	0.30	



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
12-106-00	0.40	0.35	0.75	831 832 833 834 835 841 842 843 844 845
12-108-00	0.00	0.20	0.20	
12-110-00	0.02	0.10	0.12	112AL
12-112-00	0.02	0.10	0.12	117AL
12-114-00	1.10	0.15	1.25	198HR
12-118-00	2.46	1.20	3.66	431GL 431GR 434ER 441GL 441GR 444EL 513BT 613BT
12-122-00	0.00	0.20	0.20	
20-010-00	0.04	3.00	3.04	112AL 117AL
20-012-00	0.04	1.50	1.54	112AL 117AL
20-015-00	0.04	5.00	5.04	112AL 117AL
20-018-00	0.04	2.50	2.54	112AL 117AL
20-070-00	0.08	1.00	1.08	732 742
20-110-00	8.14	2.80	10.94	311BL 551AB 551BB 551DB 551EB 552HB 552LB 561AB 561BB 561CB 651AB 651BB 651DB 651EB 652HB 652LB 661AB 661BB 661CB
20-200-00	0.10	2.50	2.60	821
20-250-10	10.30	0.80	11.10	413AL 414AR 415AL 416AR 431BL 431BR 431CL 431CR 431FR 431FT 511AB 511CB 511DB 511EB 511FB 511GB 511HB 511JB 511KB 511LB 511MB 511NB 511PB 511QB



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
20-250-20	9.93	0.80	10.73	423AL 424AR 425AL 426AR 441BL 441CL 441FL 441FR 441FT 611AB 611CB 611DB 611EB 611FB 611GB 611HB 611JB 611KB 611LB 611MB 611NB 611PB 611QB
20-251-10	9.93	0.80	10.73	413AL 414AR 415AL 416AR 431DT 431ET 431FL 431FR 431FT 511AB 511CB 511DB 511EB 511FB 511GB 511HB 511JB 511KB 511LB 511MB 511NB 511PB 511QB
20-251-20	9.69	0.80	10.49	423AL 424AR 425AL 426AR 441DT 441ET 441FL 441FR 441FT 611AB 611CB 611DB 611EB 611FB 611GB 611HB 611JB 611KB 611LB 611MB 611NB 611PB 611QB
20-252-10	10.00	0.80	10.80	413AL 414AR 415AL 416AR 431CT 431ET 431FL 431FR 431FT 511AB 511CB 511DB 511EB 511FB 511GB 511HB 511JB 511KB 511LB 511MB 511NB 511PB 511QB
20-252-20	9.67	0.80	10.47	423AL 424AR 425AL 426AR 441CT 441ET 441FL 441FR 441FT 611AB 611CB 611DB 611EB 611FB 611GB 611HB 611JB 611KB 611LB 611MB 611NB 611PB 611QB
20-260-00	0.00	1.00	1.00	
20-270-01	3.59	7.00	10.59	544BB 544CB 544DB 551DB 552AB 552BB 552FB 552HB 552LB 561LB 561NB 561PB



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
20-270-02	3.59	7.00	10.59	644BB 644CB 644DB 651DB 652AB 652BB 652FB 652HB 652LB 661LB 661NB 661PB
20-280-00	11.68	2.00	13.68	311BL 313AL 324CL 324CXL 324DL 324DXL 324EL 324FL 324GL 335DB 335EB 335EXB 335FB 335GB 335GXB 345DB 345EB 345EXB 345FB 345GB 345GXB 825
20-290-00	0.12	5.00	5.12	117AL 821
20-300-00	0.02	4.00	4.02	117AL
20-310-01	2.34	6.00	8.34	511EB 511LB 511NB 521ABB 526CB 543DB 544BB 544EB 544FB
20-310-02	2.36	6.00	8.36	611EB 611LB 611NB 621ABB 621DB 626CB 643DB 644BB 644EB 644FB
20-320-00	0.00	1.00	1.00	
20-330-00	0.20	0.50	0.70	823 824
20-340-00	0.00	1.00	1.00	
20-400-00	0.02	2.00	2.02	117AL
20-410-00	0.00	0.50	0.50	
20-420-00	0.13	0.25	0.38	111AL
20-430-00	0.08	0.25	0.33	715 716
20-440-00	3.37	0.25	3.62	322DL 322EL 327
20-445-00	0.00	0.25	0.25	
20-450-00	0.10	2.00	2.10	821
20-451-00	0.10	2.00	2.10	821



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
20-460-00	0.02	0.50	0.52	117AL
20-470-00	0.33	1.00	1.33	195QL 196NR 196QR
20-471-00	0.04	1.00	1.04	742
20-472-00	0.04	1.00	1.04	742
20-473-01	1.31	1.50	2.81	552HB 552LB 732
20-473-02	0.94	1.50	2.44	652HB 742
20-474-01	0.06	1.50	1.56	551DB 732
20-474-02	0.06	1.50	1.56	651DB 742
20-475-00	0.08	1.00	1.08	732 742
20-476-01	0.51	1.50	2.01	551BB 551DB 732
20-476-02	0.94	1.50	2.44	651AB 651BB 742
20-477-01	0.90	1.00	1.90	552HB
20-477-02	0.90	1.00	1.90	652HB
20-478-01	0.61	1.00	1.61	543AB 561GB
20-478-02	0.61	1.00	1.61	643AB 661GB
20-479-01	0.40	1.00	1.40	561GB
20-479-02	0.40	1.00	1.40	661GB
20-500-01	1.89	0.50	2.39	413AL 414AR 415AL 416AR 431AT 431BT
20-500-02	1.14	0.50	1.64	423AL 424AR 425AL 426AR 441AT 441BT
20-520-01	0.90	0.50	1.40	413AL 414AR 415AL 416AR
20-520-02	0.90	0.50	1.40	423AL 424AR 425AL 426AR
20-540-01	0.90	0.50	1.40	413AL 414AR 415AL 416AR



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
20-540-02	0.90	0.50	1.40	423AL 424AR 425AL 426AR
20-560-01	1.21	1.00	2.21	511FB 551DB
20-560-02	1.21	1.00	2.21	611FB 651DB
20-600-00	0.04	0.10	0.14	112AL 117AL
20-602-00	0.04	0.30	0.34	112AL 117AL
20-640-10	0.59	2.00	2.59	139AL 139AZ
20-641-00	1.51	0.15	1.66	195BL 195CL 195DL 195EL 195JL 195QL 196BR 196CR 196DR 196ER 196JR 196NR 196QR
20-642-00	0.04	0.10	0.14	732
20-644-00	0.04	0.10	0.14	742
20-648-00	0.10	0.50	0.60	821
20-650-00	0.10	0.50	0.60	821
20-651-00	0.00	0.50	0.50	
20-652-00	0.10	0.25	0.35	821
20-654-00	0.10	0.50	0.60	821
20-656-00	0.00	0.50	0.50	
20-658-00	0.00	0.25	0.25	121EZ 121FZ 121TW
20-659-00	0.00	0.20	0.20	121EZ 121FZ 121TW
20-660-00	0.20	0.25	0.45	823 824
20-662-00	0.20	0.50	0.70	823 824
20-664-00	0.20	0.50	0.70	823 824
20-665-00	0.20	0.50	0.70	823 824
20-668-00	0.00	0.25	0.25	



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
20-670-00	0.00	0.25	0.25	117AL 821 117AL 821 118AF
20-672-00	0.00	0.50	0.50	
20-700-00	0.00	0.25	0.25	
20-701-00	0.00	0.25	0.25	
20-702-00	0.00	0.50	0.50	
20-704-00	0.00	0.20	0.20	
20-705-00	0.00	0.20	0.20	
20-706-00	0.00	1.00	1.00	
20-708-00	0.00	0.70	0.70	
20-712-00	0.00	1.00	1.00	
20-714-00	0.00	0.50	0.50	
20-716-00	0.00	0.15	0.15	
20-724-00	0.00	0.25	0.25	
20-728-00	0.00	0.50	0.50	
20-730-00	0.12	0.50	0.62	
20-732-00	0.12	0.50	0.62	
20-734-00	0.00	0.50	0.50	
20-736-00	0.00	0.10	0.10	
20-737-00	0.00	0.25	0.25	
20-738-00	0.00	0.25	0.25	
20-740-00	0.00	0.25	0.25	
20-742-00	0.00	0.25	0.25	
20-744-00	0.00	0.25	0.25	





## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
20-746-00	0.00	0.20	0.20	
20-748-00	0.00	0.20	0.20	
20-750-00	0.00	0.25	0.25	
20-752-00	0.00	0.25	0.25	
20-754-00	0.00	0.25	0.25	
20-756-00	0.00	0.25	0.25	
20-758-00	0.00	0.20	0.20	
20-760-00	0.00	0.20	0.20	
20-762-00	0.00	0.25	0.25	
20-764-00	0.00	0.25	0.25	
20-766-00	0.00	0.25	0.25	
20-768-00	0.00	0.50	0.50	
20-770-00	0.00	0.20	0.20	
20-772-00	0.00	0.20	0.20	
20-774-00	0.00	0.20	0.20	
20-776-00	0.00	0.20	0.20	
20-778-00	0.00	0.25	0.25	
20-780-00	0.00	0.25	0.25	
20-782-00	0.00	0.20	0.20	
20-784-00	0.00	0.20	0.20	
20-790-00	0.04	0.50	0.54	311BL
20-792-00	0.08	0.50	0.58	311BL 313AL
20-794-00	0.18	0.50	0.68	315AL 315BL 316AR 316BR



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
20-796-00	2.50	0.50	3.00	831BW 832BW 833BW 834BW 835BW 841BW 842BW 843BW 844BW 845BW
20-800-00	0.90	0.25	1.15	413AL 414AR 415AL 416AR
20-802-00	0.90	0.25	1.15	423AL 424AR 425AL 426AR
20-840-01	5.75	0.25	6.00	511AB 511CB 511DB 511FB 511HB 511JB 511KB 511LB 511NB 511PB 511QB
20-840-02	5.79	0.25	6.04	611AB 611CB 611DB 611FB 611HB 611JB 611KB 611LB 611NB 611PB 611QB
20-842-00	1.10	0.50	1.60	513BT 613BT
20-844-00	1.10	0.20	1.30	513BT 613BT
20-850-00	0.46	0.20	0.66	521CB 521DB 521EB
20-851-00	0.46	0.20	0.66	621CB 621DB 621EB
20-852-00	2.10	1.00	3.10	542AB 542BB 543AB 543BB 543CB 642AB 642BB 643AB 643BB 643CB
20-856-11	0.63	1.00	1.63	531AB 531BB 531CB
20-856-12	0.63	1.00	1.63	631AB 631BB 631CB
20-858-11	1.47	1.00	2.47	533AB 533BB 533CB 533DB 533EB 533FB 533GB
20-858-12	1.47	1.00	2.47	633AB 633BB 633CB 633DB 633EB 633FB 633GB
20-860-11	3.15	2.00	5.15	541AB 541BB 541CB 541DB 541EB 541FB 541GB 541HB 541JB 541KB 541LB 541MB 541NB 541PB 541QB



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
20-860-12	3.15	1.00	4.15	641AB 641BB 641CB 641DB 641EB 641FB 641GB 641HB 641JB 641KB 641LB 641MB 641NB 641PB 641QB
20-866-00	2.05	0.25	2.30	573AB 573BB 573CL 573CR 573EB
20-868-00	2.05	0.25	2.30	673AB 673BB 673CL 673CR 673EB
21-010-00	0.00	1.00	1.00	
21-020-00	0.10	0.50	0.60	821
21-030-00	0.00	0.20	0.20	
21-033-00	0.00	0.25	0.25	
21-034-00	0.00	0.10	0.10	
21-036-00	0.00	1.00	1.00	
21-037-00	0.00	0.30	0.30	
21-048-00	0.00	0.25	0.25	
21-050-00	0.00	0.50	0.50	
21-052-00	0.02	0.50	0.52	117AL
21-054-00	0.00	0.30	0.30	
21-055-00	0.00	1.00	1.00	
21-060-00	0.00	1.00	1.00	
21-065-00	0.00	1.00	1.00	
21-070-00	0.00	2.00	2.00	
21-075-00	0.00	1.00	1.00	
21-080-00	0.00	0.25	0.25	
21-090-00	0.00	0.50	0.50	



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
21-100-00	0.02	1.00	1.02	117AL
21-105-00	0.11	0.50	0.61	117AL 825
21-110-00	0.00	1.50	1.50	
21-120-00	0.00	0.50	0.50	
21-130-00	0.00	0.10	0.10	
21-131-00	0.00	1.00	1.00	
21-132-00	0.00	0.10	0.10	
21-133-00	0.00	0.10	0.10	
21-134-00	0.00	1.00	1.00	
21-140-00	0.00	0.50	0.50	
21-150-00	0.14	2.00	2.14	195EL 196ER
21-160-00	0.14	2.00	2.14	195EL 196ER
21-170-00	0.14	1.00	1.14	195EL 196ER
21-180-00	0.26	1.50	1.76	195BL 195CL 195EL 196CR 196ER
21-190-00	0.00	0.20	0.20	
21-200-00	0.00	0.10	0.10	
21-210-00	0.00	0.10	0.10	
21-220-00	0.00	0.10	0.10	
21-230-00	0.14	0.50	0.64	195EL 196ER
21-240-00	0.14	0.50	0.64	195EL 196ER
21-250-00	0.00	0.50	0.50	
21-260-00	0.10	0.50	0.60	821
22-040-00	0.00	0.25	0.25	



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
23-010-00	0.00	1.50	1.50	
23-020-00	0.00	0.50	0.50	
23-030-00	0.00	0.50	0.50	
23-040-00	0.00	0.10	0.10	
23-050-00	0.00	0.10	0.10	
23-060-00	0.00	2.00	2.00	
23-070-00	0.00	1.00	1.00	
23-080-00	0.00	1.00	1.00	
23-085-00	0.00	0.40	0.40	
23-090-00	0.00	1.00	1.00	
23-100-00	0.00	1.00	1.00	
23-110-00	0.00	0.01	0.01	
23-120-00	0.00	0.05	0.05	
23-180-00	0.13	0.30	0.43	111AL
23-190-00	0.13	0.50	0.63	111AL
24-010-00	0.04	0.50	0.54	415JB 425JB
24-011-00	0.04	0.50	0.54	413BL 423BL
24-012-00	0.04	0.50	0.54	415MB 425MB
24-030-00	0.00	0.50	0.50	
24-040-00	0.90	1.00	1.90	413AL 415AL 423AL 425AL
24-041-00	0.36	1.00	1.36	413AL 423AL
24-042-00	0.90	1.00	1.90	413AL 415AL 423AL 425AL
24-050-00	1.26	1.00	2.26	413AL 414AR 415AL 423AL 424AR 425AL



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
24-060-00	0.90	1.00	1.90	413AL 415AL 423AL 425AL
24-061-00	0.36	1.00	1.36	413AL 423AL
24-062-00	0.90	1.00	1.90	413AL 415AL 423AL 425AL
24-070-00	0.90	1.00	1.90	413AL 415AL 423AL 425AL
24-071-00	0.36	1.00	1.36	413AL 423AL
24-072-00	0.90	1.00	1.90	413AL 415AL 423AL 425AL
24-075-00	0.00	0.10	0.10	
24-080-00	0.00	0.40	0.40	
24-090-00	0.90	1.00	1.90	413AL 415AL 423AL 425AL
24-091-00	0.36	1.00	1.36	413AL 423AL
24-092-00	0.90	1.00	1.90	413AL 415AL 423AL 425AL
24-100-00	0.00	2.00	2.00	
24-120-00	0.00	0.40	0.40	
24-160-00	0.00	2.00	2.00	
24-160-01	0.00	2.00	2.00	
24-170-00	0.00	2.00	2.00	
24-170-01	0.00	2.00	2.00	
24-190-00	0.12	1.00	1.12	117AL 821
24-200-00	0.02	0.30	0.32	118AR
24-201-00	0.02	0.10	0.12	118AR
24-210-00	0.02	0.30	0.32	118AR
25-010-00	0.00	0.25	0.25	
25-020-00	0.00	0.10	0.10	



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
25-020-02	0.00	0.20	0.20	833  197DL 198DR  197EL 198ER
25-020-04	0.00	0.20	0.20	
25-020-06	0.00	0.10	0.10	
25-030-00	0.00	2.40	2.40	
25-040-00	0.00	1.00	1.00	
25-045-00	0.00	0.20	0.20	
25-050-00	0.00	1.00	1.00	
25-055-00	0.00	0.40	0.40	
25-056-00	0.00	1.00	1.00	
25-057-00	0.00	4.00	4.00	
25-058-00	0.00	12.00	12.00	
25-059-00	0.00	3.00	3.00	
25-060-00	0.00	1.00	1.00	
25-062-00	0.04	0.25	0.29	
25-065-00	0.00	2.50	2.50	
25-066-00	0.12	0.10	0.22	
25-067-00	0.00	0.50	0.50	
25-069-00	0.00	2.00	2.00	
25-070-00	0.00	1.00	1.00	
25-071-00	0.66	1.00	1.66	
25-085-00	0.00	1.00	1.00	
25-090-00	0.00	0.10	0.10	
25-095-00	0.00	0.25	0.25	



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
25-100-00	0.00	0.10	0.10	
25-105-00	0.00	0.01	0.01	
25-110-00	0.00	1.00	1.00	
25-115-00	0.00	1.00	1.00	
25-120-00	0.00	0.10	0.10	
25-125-00	0.00	0.10	0.10	
25-130-00	0.00	0.50	0.50	
25-135-00	0.00	0.02	0.02	
25-140-00	0.00	0.10	0.10	
25-145-00	0.00	0.01	0.01	
25-150-00	0.00	0.25	0.25	
25-160-00	0.00	0.25	0.25	
25-170-00	0.00	0.50	0.50	
25-180-00	0.00	0.50	0.50	
25-190-00	0.00	0.25	0.25	
25-200-00	0.00	0.10	0.10	
25-210-00	0.00	1.00	1.00	
25-230-00	0.00	0.50	0.50	
25-240-00	0.00	1.00	1.00	
25-250-00	0.00	0.10	0.10	
25-260-00	0.00	0.20	0.20	
25-270-00	0.00	0.20	0.20	
25-290-00	0.00	1.00	1.00	





## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
25-320-00	0.00	0.25	0.25	117AL
26-010-00	0.00	0.10	0.10	
26-014-01	0.00	1.00	1.00	
26-014-02	0.00	1.00	1.00	
26-014-03	0.00	1.00	1.00	
26-015-00	0.00	0.10	0.10	
26-020-00	0.00	0.10	0.10	
26-030-00	0.00	0.30	0.30	
26-035-00	0.00	2.00	2.00	
26-040-00	0.00	1.50	1.50	
26-045-00	0.02	1.00	1.02	
26-050-00	0.00	0.10	0.10	
26-060-00	0.00	0.10	0.10	
26-061-00	0.00	0.40	0.40	
26-062-00	0.00	0.50	0.50	
26-064-00	0.00	0.50	0.50	
26-066-00	0.20	1.00	1.20	821 824
26-067-00	0.20	0.75	0.95	821 824
26-068-00	0.00	0.20	0.20	117AL 821
26-069-00	0.00	0.50	0.50	
26-070-00	0.12	1.00	1.12	
26-090-00	0.12	1.00	1.12	117AL 821



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
26-100-00	1.90	2.00	3.90	413AL 414AR 415AL 416AR 423AL 424AR 425AL 426AR 821
26-120-00	0.10	0.10	0.20	821
26-130-00	0.12	1.00	1.12	117AL 821
26-140-00	0.06	0.50	0.56	117AL 313AL
26-150-00	0.15	1.00	1.15	117AL 313AL 825
26-170-00	0.04	0.50	0.54	313AL
26-180-00	0.06	1.00	1.06	117AL 313AL
26-190-00	0.12	0.50	0.62	117AL 821
26-200-00	0.32	1.00	1.32	117AL 821 823 824
26-201-00	0.02	0.70	0.72	117AL
26-210-00	0.32	2.00	2.32	117AL 821 823 824
26-220-00	0.10	0.50	0.60	821
26-235-00	0.10	1.00	1.10	821
26-240-00	0.12	1.00	1.12	117AL 821
26-250-00	0.10	1.50	1.60	821
26-260-00	0.12	1.00	1.12	117AL 821
26-270-00	0.00	1.00	1.00	
26-272-00	0.00	0.50	0.50	
26-274-00	0.00	1.00	1.00	
26-276-00	0.00	0.10	0.10	
26-277-00	0.00	1.00	1.00	
26-278-00	0.00	1.00	1.00	



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
26-290-00	0.00	0.10	0.10	
26-300-00	0.00	0.20	0.20	
27-010-00	0.04	0.20	0.24	311BL
27-020-00	0.39	1.00	1.39	511AB
27-030-00	7.67	1.00	8.67	511CB 511MB 521AAB 521ACB 521AFB 521BB 521EB 521GB 521JB 521MB 521PB 521RB 521TB 521WB 521YB 611CB 611MB 621AAB 621ACB 621AFB 621BB 621EB 621GB 621JB 621MB 621PB 621RB 621TB 621WB 621YB
27-040-00	0.00	1.00	1.00	
27-050-00	0.00	1.00	1.00	
27-055-00	0.00	1.00	1.00	
27-060-00	0.00	1.00	1.00	
27-140-00	0.00	0.20	0.20	
27-150-00	0.00	0.10	0.10	
27-160-00	0.00	0.20	0.20	
27-170-00	1.68	3.00	4.68	311BL 552HB 552LB 652LB
27-180-00	0.04	0.30	0.34	311BL
27-190-00	0.00	0.40	0.40	
27-200-00	0.00	0.30	0.30	
27-210-00	0.00	0.30	0.30	
27-220-00	2.45	0.50	2.95	335EB 335EXB 335FB 345EB 345EXB 345FB
27-230-00	0.00	0.30	0.30	



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
27-240-00	0.02	2.00	2.02	112AL
27-250-00	0.00	0.20	0.20	
27-260-00	0.00	0.10	0.10	
27-270-00	0.04	1.00	1.04	311BL
27-280-00	0.00	2.50	2.50	
27-290-00	0.00	3.50	3.50	
27-300-00	0.04	0.20	0.24	311BL
27-305-00	0.04	0.50	0.54	311BL
27-310-00	0.00	0.30	0.30	
27-320-00	0.00	3.00	3.00	
27-330-00	0.00	0.30	0.30	
27-340-00	8.81	16.00	24.81	511CB 511EB 511LB 511MB 521AAB 521ACB 521AFB 521BB 521EB 521GB 521JB 521MB 521PB 521RB 521TB 521WB 521YB 611CB 611EB 611LB 611MB 621AAB 621ACB 621AFB 621BB 621EB 621GB 621JB 621MB 621PB 621RB 621TB 621WB 621YB
27-350-00	0.02	2.00	2.02	117AL
27-360-00	0.42	1.00	1.42	526CB 626CB
27-370-00	0.94	2.00	2.94	552CB 652CB
27-380-00	0.94	2.00	2.94	552CB 652CB
27-400-00	0.00	2.00	2.00	
27-410-00	0.00	2.00	2.00	
27-415-00	0.00	2.00	2.00	



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
27-420-00	0.00	0.50	0.50	
27-430-00	0.00	2.00	2.00	
27-440-00	0.04	3.00	3.04	311BL
27-450-00	0.04	0.20	0.24	311BL
27-460-00	0.00	6.00	6.00	
27-460-01	0.00	6.00	6.00	
27-701-01	0.04	0.50	0.54	311BL
28-010-00	0.84	1.00	1.84	541QB 543CB 641QB 643CB
28-011-00	1.25	0.50	1.75	533CB 551CB 633CB 633DB 651CB
28-012-00	0.00	0.10	0.10	
28-013-20	0.42	0.50	0.92	542AB 543DB 642AB 643DB
28-013-30	1.86	0.50	2.36	521SB 521XB 621SB 621XB
28-013-40	0.80	0.50	1.30	542BB 544BB 642BB 644BB
28-015-00	0.80	1.00	1.80	542BB 544BB 642BB 644BB
28-015-20	0.04	0.84	0.88	551DB 651DB
28-020-00	0.00	1.00	1.00	



# 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
28-021-10	14.17	3.00	17.17	139AZ 531AB 531BB 531CB 533AB 533BB 533CB 533DB 533EB 533FB 533GB 541AB 541BB 541CB 541DB 541EB 541FB 541GB 541HB 541JB 541KB 541LB 541MB 541NB 541PB 541QB 542AB 542BB 543AB 543BB 543CB 543DB 544AB 544BB 544CB 631AB 631BB 631CB 633AB 633BB 633CB 633DB 633EB 633FB 633GB 641AB 641BB 641CB 641DB 641EB 641FB 641GB 641HB 641JB 641KB 641LB 641MB 641NB 641PB 641QB 642AB 642BB 643AB 643BB 643CB 643DB 644AB 644BB 644CB
28-021-20	1.26	0.50	1.76	531BB 533AB 541HB 631BB 633AB 641HB
28-021-30	0.04	0.50	0.54	521DB 621DB
28-022-30	0.84	0.50	1.34	531CB 533BB 631CB 633BB
28-022-40	1.84	0.50	2.34	551DB 552HB 651DB 652HB
28-022-50	0.04	0.50	0.54	551DB 651DB
28-022-60	0.00	0.30	0.30	
28-022-65	1.82	1.00	2.82	521DB 552HB 652HB
28-023-00	0.00	0.10	0.10	
28-024-00	0.00	0.20	0.20	
28-025-00	0.00	0.50	0.50	
28-025-20	0.00	0.50	0.50	
28-025-30	0.00	0.50	0.50	



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
28-025-40	0.00	0.50	0.50	
28-026-10	0.00	0.50	0.50	
28-030-00	0.00	2.00	2.00	
28-031-20	1.22	0.50	1.72	543AB 561GB 643AB 661GB
28-031-30	0.00	0.50	0.50	
28-031-40	1.72	0.50	2.22	561JB 561JT 661JB 661JT
28-040-00	0.02	0.50	0.52	521DB
28-041-10	9.96	2.50	12.46	139AZ 531AB 531BB 533AB 533BB 533CB 533DB 533EB 533FB 533GB 541AB 541BB 541CB 541DB 541EB 541FB 541GB 541HB 541JB 541KB 541LB 541MB 541NB 541PB 631AB 631BB 633AB 633BB 633CB 633DB 633EB 633FB 633GB 641AB 641BB 641CB 641DB 641EB 641FB 641GB 641HB 641JB 641KB 641LB 641MB 641NB 641PB
28-041-20	10.38	1.50	11.88	139AZ 531AB 531BB 533AB 533BB 533CB 533DB 533EB 533FB 533GB 541AB 541BB 541CB 541DB 541EB 541FB 541GB 541HB 541JB 541KB 541LB 541MB 541NB 541PB 541QB 631AB 631BB 633AB 633BB 633CB 633DB 633EB 633FB 633GB 641AB 641BB 641CB 641DB 641EB 641FB 641GB 641HB 641JB 641KB 641LB 641MB 641NB 641PB 641QB
28-041-30	2.42	0.50	2.92	511FB 551DB 611FB 651DB



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
28-045-00	0.00	0.20	0.20	117AL 521DB
28-045-10	0.00	0.20	0.20	
28-045-20	0.00	0.20	0.20	
28-050-00	0.04	1.00	1.04	
28-050-10	0.00	1.00	1.00	
28-060-00	0.00	0.10	0.10	
28-070-00	0.00	0.10	0.10	
28-080-00	0.00	0.10	0.10	139AL 139AZ 531AB 531BB 631AB 631BB
28-085-00	1.43	2.00	3.43	
28-090-00	0.04	0.50	0.54	195GAL 196GAR
28-111-00	0.00	1.00	1.00	191SL 192SR 195EL 196ER 511FB 511PB 511QB 551DB 552HB 611FB 611PB 611QB 651DB 652HB
28-112-00	0.00	0.50	0.50	
28-113-00	0.00	0.50	0.50	
28-120-00	5.40	2.00	7.40	
29-010-00	0.09	0.10	0.19	
29-030-00	0.00	1.50	1.50	197JL
29-040-00	0.12	0.70	0.82	434CL 434CR 434DR 444CL 444CR 444DR
29-050-00	0.04	0.10	0.14	434DR 444DR
29-060-00	0.04	0.10	0.14	434CR 444CR
29-070-00	0.12	0.50	0.62	434CL 434CR 434DR 444CL 444CR 444DR





## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
29-080-00	0.04	0.10	0.14	434DR 444DR
29-090-00	0.08	1.00	1.08	434CR 434DR 444CR 444DR
29-100-00	0.05	0.10	0.15	197DL
29-110-00	0.05	0.50	0.55	197DL
29-120-00	0.09	0.20	0.29	197JL
29-130-00	0.00	2.00	2.00	
29-140-00	0.08	2.00	2.08	434CL 434CR 444CL 444CR
29-150-00	1.10	2.00	3.10	198HR
29-160-00	1.10	0.10	1.20	198HR
29-170-00	0.00	0.20	0.20	
29-180-00	0.04	0.50	0.54	313AL
30-010-00	0.00	0.10	0.10	
31-010-00	0.00	0.25	0.25	
31-020-00	0.00	1.00	1.00	
31-030-00	0.00	1.00	1.00	
31-040-00	0.00	0.25	0.25	
31-050-00	0.00	0.10	0.10	
31-060-00	0.00	0.40	0.40	
31-070-00	0.00	0.10	0.10	
31-080-00	0.00	0.10	0.10	
31-090-00	0.00	0.10	0.10	
31-100-00	0.00	0.40	0.40	
32-010-00	0.00	0.20	0.20	



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
32-011-00	0.00	0.30	0.30	198LR
32-012-00	0.00	0.30	0.30	
32-020-00	0.00	0.10	0.10	
32-120-00	0.02	0.50	0.52	
32-130-00	0.00	0.50	0.50	
32-140-00	0.00	0.50	0.50	
32-150-00	0.00	0.20	0.20	112AL 551DB 651DB
32-160-00	0.00	2.00	2.00	
32-170-00	0.02	0.50	0.52	
32-180-00	0.04	3.00	3.04	
32-190-00	0.00	0.10	0.10	
32-200-00	0.00	0.10	0.10	
32-210-00	0.00	0.20	0.20	551BB 551DB 551DT 551EB 551FB 552BB 651BB 651DB 651DT 651EB 651FB 652BB 117AL
32-220-00	5.94	48.00	53.94	
32-230-00	0.02	32.00	32.02	
32-240-00	0.00	0.10	0.10	
32-250-00	0.00	0.30	0.30	
32-260-00	0.00	0.30	0.30	
32-270-00	0.00	0.05	0.05	
32-280-00	0.00	0.15	0.15	
32-300-00	0.00	0.50	0.50	
32-310-00	0.00	0.50	0.50	



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
32-320-00	0.00	0.05	0.05	
32-330-00	0.00	0.05	0.05	
32-800-00	0.16	0.30	0.46	713 714 715 716
32-802-00	0.16	1.00	1.16	713 714 715 716
32-804-01	0.65	0.50	1.15	732 733 734 735
32-806-01	0.65	1.50	2.15	732 733 734 735
32-808-02	0.65	0.50	1.15	742 743 744 745
32-810-02	0.65	1.50	2.15	742 743 744 745
33-010-00	0.00	0.25	0.25	
33-020-00	0.00	0.25	0.25	
33-030-00	0.00	0.25	0.25	
33-040-00	0.00	0.10	0.10	
33-060-00	0.00	0.10	0.10	
33-070-00	0.00	0.50	0.50	
33-075-00	0.00	0.25	0.25	
33-076-00	0.00	2.00	2.00	
33-080-00	0.00	0.75	0.75	
33-090-00	0.00	5.00	5.00	
33-095-00	0.00	0.30	0.30	
33-100-00	0.00	0.50	0.50	
33-105-00	0.00	0.06	0.06	
33-110-00	0.00	0.50	0.50	
33-115-00	0.00	0.20	0.20	



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
33-120-00	0.00	1.50	1.50	117AL
34-020-00	0.00	1.60	1.60	
35-020-00	0.02	0.25	0.27	
35-040-00	0.00	0.25	0.25	
35-050-00	0.00	0.25	0.25	
35-060-00	0.00	1.50	1.50	
35-070-00	0.00	2.00	2.00	
35-071-00	0.00	0.20	0.20	
35-080-00	0.00	1.00	1.00	
35-081-00	0.00	0.20	0.20	
35-090-00	0.00	2.00	2.00	
35-110-00	0.00	2.00	2.00	
35-120-00	0.00	1.00	1.00	
35-130-00	0.00	1.00	1.00	
35-140-00	0.00	2.00	2.00	
35-160-00	0.00	0.30	0.30	
35-161-00	0.00	0.10	0.10	
35-162-00	0.00	0.30	0.30	
35-163-00	0.00	0.10	0.10	
35-164-00	0.00	0.10	0.10	
35-220-00	0.00	1.50	1.50	
35-230-00	0.00	0.50	0.50	
35-240-00	0.00	1.00	1.00	



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
35-250-00	0.00	1.00	1.00	
35-260-00	0.00	0.25	0.25	
35-270-00	0.00	0.50	0.50	
35-280-00	0.00	0.30	0.30	
36-010-00	0.00	2.00	2.00	
36-020-00	1.80	1.00	2.80	413AL 414AR 415AL 416AR 423AL 424AR 425AL 426AR
36-022-00	1.26	1.00	2.26	413AL 414AR 416AR 423AL 424AR 426AR
36-024-00	0.90	1.00	1.90	413AL 415AL 423AL 425AL
36-030-00	0.00	0.10	0.10	
38-010-00	0.04	1.00	1.04	122CR 154AR
38-020-00	0.02	0.25	0.27	122CR
38-030-00	0.23	2.00	2.23	122DR 163AL 821 825
38-050-00	0.10	1.50	1.60	821
38-070-00	0.19	0.50	0.69	821 825
38-080-00	0.10	0.10	0.20	821
38-090-00	0.09	0.10	0.19	825
38-100-00	0.09	0.70	0.79	825
38-110-00	0.09	1.00	1.09	825
38-120-00	0.09	1.00	1.09	825
38-130-00	0.09	0.25	0.34	825
38-140-00	0.00	0.50	0.50	
47-100-00	0.39	1.50	1.89	191NL



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
47-110-00	0.36	2.50	2.86	191QL
47-120-00	0.36	2.50	2.86	191QL
47-130-00	0.04	1.50	1.54	196CR
47-135-00	0.42	0.50	0.92	196BR
47-140-00	0.45	0.50	0.95	192LR
47-150-00	1.90	3.00	4.90	192NR 192PR 192QR 611AB 611CB
47-160-00	0.21	0.50	0.71	542AB 543DB
49-010-00	0.14	0.50	0.64	315AL 316AR
49-020-00	0.18	0.00	0.18	315AL 315BL 316AR 316BR
49-030-00	0.18	0.00	0.18	315AL 315BL 316AR 316BR
49-040-00	0.18	0.00	0.18	315AL 315BL 316AR 316BR
49-060-00	0.14	0.00	0.14	315AL 316AR
52-009-00	0.00	0.50	0.50	
52-009-10	0.00	0.50	0.50	
52-010-00	0.32	1.00	1.32	831 832 834 835 841 842 844 845
52-015-00	0.00	0.25	0.25	
52-020-00	0.10	0.40	0.50	821
52-025-00	0.10	0.40	0.50	824
52-030-00	0.00	0.40	0.40	
52-032-00	0.00	0.50	0.50	
52-032-10	0.00	0.50	0.50	
52-032-20	0.00	1.00	1.00	



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
52-032-30	0.00	1.00	1.00	825 112AL 117AL
52-032-40	0.00	0.50	0.50	
52-040-00	0.09	0.30	0.39	
52-050-00	0.02	0.25	0.27	
52-060-00	0.02	0.25	0.27	
52-070-00	0.00	1.00	1.00	
52-070-01	0.00	1.00	1.00	
52-070-02	0.00	0.25	0.25	
52-075-00	0.00	0.25	0.25	
52-090-00	0.00	0.20	0.20	
52-090-01	0.00	0.20	0.20	
52-090-02	0.00	0.05	0.05	
52-091-00	0.00	1.00	1.00	
52-091-01	0.00	1.00	1.00	
52-091-02	0.00	0.25	0.25	
52-095-00	0.00	0.10	0.10	
52-096-00	0.00	0.60	0.60	
52-100-00	0.00	0.40	0.40	
52-100-01	0.00	0.40	0.40	
52-100-02	0.00	0.05	0.05	
52-110-00	0.00	0.20	0.20	
52-110-01	0.00	0.20	0.20	
52-110-02	0.00	0.05	0.05	



# 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
52-115-00	0.00	0.05	0.05	
52-120-00	0.00	1.00	1.00	
52-120-01	0.00	1.00	1.00	
52-120-02	0.00	0.25	0.25	
52-125-00	0.00	0.25	0.25	
52-130-00	0.00	1.00	1.00	
52-130-01	0.00	1.00	1.00	
52-130-02	0.00	0.25	0.25	
52-135-00	0.00	0.25	0.25	
52-140-00	0.00	1.00	1.00	
52-140-01	0.00	1.00	1.00	
52-140-02	0.00	0.25	0.25	
52-145-00	0.00	0.25	0.25	
52-150-00	0.00	2.00	2.00	
52-150-01	0.00	2.00	2.00	
52-150-02	0.00	0.50	0.50	
52-155-00	0.00	0.50	0.50	
52-160-00	0.00	2.00	2.00	
52-165-00	1.60	0.75	2.35	
52-166-00	0.00	0.25	0.25	
52-167-00	2.28	0.75	3.03	
52-170-00	0.00	2.00	2.00	197EL 198ER 552CB 652CB  197DL 198DR 552CB 552DB 652CB 652DB
52-170-01	0.00	2.00	2.00	





## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
52-170-02	0.00	0.25	0.25	
52-175-00	0.00	0.50	0.50	
52-180-00	0.10	2.00	2.10	821
52-185-00	0.10	2.00	2.10	824
52-190-00	0.10	2.00	2.10	821
52-195-00	0.10	2.00	2.10	824
52-200-00	0.10	1.00	1.10	821
52-205-00	0.10	1.00	1.10	824
52-210-00	0.10	0.50	0.60	821
52-215-00	0.10	0.50	0.60	824
52-220-00	0.00	3.00	3.00	
52-230-00	0.00	2.00	2.00	
52-240-00	0.09	0.25	0.34	825
52-250-00	0.04	0.25	0.29	112AL 117AL
52-255-00	0.00	0.10	0.10	
52-260-00	0.00	0.10	0.10	
52-265-00	0.00	0.10	0.10	
52-301-00	0.00	1.00	1.00	
52-305-00	0.00	0.50	0.50	
52-310-00	0.00	0.50	0.50	
52-315-00	0.00	0.25	0.25	
52-320-00	0.00	0.50	0.50	
52-501-00	0.10	0.10	0.20	821



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
52-502-00	0.10	0.30	0.40	821
52-503-00	0.19	1.00	1.19	821 821AW 821DW 821FW 821JW
52-504-00	0.10	12.00	12.10	821
52-505-00	0.10	2.00	2.10	821
52-506-00	0.10	0.10	0.20	823
52-507-00	0.09	0.10	0.19	825
52-508-00	0.46	1.00	1.46	825 825AW 825BW 825CW 825DW
52-509-00	0.10	0.10	0.20	824
52-510-00	0.10	0.30	0.40	824
52-511-00	0.19	1.00	1.19	824 824AW 824DW 824FW 824JW
52-512-00	0.10	12.00	12.10	824
52-513-00	0.10	2.00	2.10	824
52-520-01	0.04	0.10	0.14	831
52-521-01	0.04	0.10	0.14	832
52-522-01	0.04	0.10	0.14	833
52-523-01	0.04	0.10	0.14	834
52-524-01	0.04	0.10	0.14	834
52-525-01	0.04	0.10	0.14	835
52-526-01	0.04	0.10	0.14	835
52-527-01	0.04	0.20	0.24	831
52-528-01	0.04	0.20	0.24	832
52-529-01	0.04	0.20	0.24	833



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
52-530-01	0.04	0.20	0.24	834
52-531-01	0.04	0.20	0.24	834
52-532-01	0.04	0.20	0.24	835
52-533-01	0.04	0.20	0.24	835
52-535-02	0.04	0.10	0.14	841
52-536-02	0.04	0.10	0.14	842
52-537-02	0.04	0.10	0.14	843
52-538-02	0.04	0.10	0.14	844
52-539-02	0.04	0.10	0.14	844
52-540-02	0.04	0.10	0.14	845
52-541-02	0.04	0.10	0.14	845
52-542-02	0.04	0.20	0.24	841
52-543-02	0.04	0.20	0.24	842
52-544-02	0.04	0.20	0.24	843
52-545-02	0.04	0.20	0.24	844
52-546-02	0.04	0.20	0.24	844
52-547-02	0.04	0.20	0.24	845
52-548-02	0.04	0.20	0.24	845
52-549-00	0.20	0.20	0.40	836
52-550-00	0.20	0.50	0.70	836
52-551-00	0.20	0.30	0.50	836
52-552-00	0.20	1.00	1.20	836
52-553-00	0.20	0.10	0.30	836



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
52-554-00	0.20	0.50	0.70	836
52-701-01	0.32	0.50	0.82	831 832 834 835 841 842 844 845
52-701-03	0.32	1.00	1.32	831 832 834 835 841 842 844 845
52-702-01	0.48	1.00	1.48	821 821BW 821EW 821KW
52-703-01	0.48	1.00	1.48	821 821BW 821EW 821KW
52-704-01	0.48	3.00	3.48	821 821BW 821EW 821KW
52-705-01	0.48	1.00	1.48	821 821BW 821EW 821KW
52-706-01	0.48	1.00	1.48	824 824BW 824EW 824KW
52-707-01	0.48	1.00	1.48	824 824BW 824EW 824KW
52-708-01	0.48	3.00	3.48	824 824BW 824EW 824KW
52-709-01	0.48	1.00	1.48	824 824BW 824EW 824KW
52-730-00	0.00	0.20	0.20	
52-802-00	0.10	0.50	0.60	821
52-804-00	0.65	1.00	1.65	821 821AW 821BW 821CW 821DW 821EW 821FW 821GW 821JW 821KW 821LW
52-806-00	0.10	0.40	0.50	823
52-808-00	0.45	0.75	1.20	823 823AW 823BW 823CW 823DW 823EW
52-810-00	0.10	0.50	0.60	824
52-812-00	0.65	1.00	1.65	824 824AW 824BW 824CW 824DW 824EW 824FW 824GW 824JW 824KW 824LW
52-814-00	0.09	0.20	0.29	825
52-816-01	0.04	0.40	0.44	831



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
52-818-01	0.70	0.60	1.30	831 831AW 831BW 831CW
52-820-01	0.04	0.40	0.44	832
52-822-01	0.70	0.40	1.10	832 832AW 832BW 832CW
52-824-01	0.04	0.40	0.44	833
52-825-01	0.70	0.60	1.30	833 833AW 833BW 833CW
52-826-01	0.04	0.40	0.44	834
52-827-01	0.04	0.40	0.44	834
52-828-01	0.70	0.60	1.30	834 834AW 834BW 834CW
52-829-01	0.70	0.60	1.30	834 834AW 834BW 834CW
52-830-01	0.04	0.40	0.44	835
52-831-01	0.04	0.40	0.44	835
52-832-01	0.70	0.60	1.30	835 835AW 835BW 835CW
52-833-01	0.70	0.60	1.30	835 835AW 835BW 835CW
52-834-02	0.04	0.40	0.44	841
52-836-02	0.70	0.60	1.30	841 841AW 841BW 841CW
52-840-02	0.04	0.40	0.44	842
52-842-02	0.69	0.60	1.29	842 842AW 842BW 842CW
52-844-02	0.04	0.40	0.44	843
52-846-02	0.70	0.60	1.30	843 843AW 843BW 843CW
52-848-02	0.04	0.40	0.44	844
52-849-02	0.04	0.40	0.44	844
52-850-02	0.70	0.60	1.30	844 844AW 844BW 844CW
52-851-02	0.70	0.60	1.30	844 844AW 844BW 844CW



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
52-852-02	0.04	0.40	0.44	845
52-853-02	0.04	0.40	0.44	845
52-854-02	0.70	0.60	1.30	845 845AW 845BW 845CW
52-855-02	0.70	0.60	1.30	845 845AW 845BW 845CW
52-856-00	0.20	2.00	2.20	836
52-858-00	0.20	0.10	0.30	836
53-501-00	0.02	1.30	1.32	112AL
53-502-00	0.02	2.00	2.02	117AL
53-503-00	0.02	0.40	0.42	117AL
53-504-00	0.02	0.40	0.42	117AL
53-505-00	0.02	1.30	1.32	117AL
53-506-00	0.02	0.40	0.42	117AL
53-507-00	0.02	0.40	0.42	117AL
53-508-00	0.02	0.70	0.72	117AL
53-509-00	0.10	0.20	0.30	821
53-509-01	0.10	0.20	0.30	821
53-511-00	0.10	0.40	0.50	821
53-512-00	0.10	0.70	0.80	821
53-512-01	0.10	0.70	0.80	821
53-513-00	0.10	0.20	0.30	821
53-514-00	0.00	0.30	0.30	
53-515-00	0.10	0.70	0.80	821
53-516-00	0.10	0.80	0.90	121EZ 121FZ 121TW 821



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
53-516-01	0.10	0.80	0.90	121EZ 121FZ 821
53-517-00	0.00	0.50	0.50	
53-518-00	0.04	0.20	0.24	732
53-519-00	0.04	0.20	0.24	742
53-520-00	0.00	0.70	0.70	
53-520-01	0.00	0.70	0.70	
53-521-00	0.10	0.40	0.50	823
53-522-00	0.10	0.30	0.40	823
53-522-01	0.10	0.30	0.40	823
53-523-00	0.10	0.30	0.40	824
53-523-01	0.10	0.30	0.40	824
53-524-00	0.00	0.40	0.40	
53-525-00	0.10	1.20	1.30	823
53-526-00	0.10	0.70	0.80	824
53-526-01	0.10	0.70	0.80	824
53-527-00	0.10	0.10	0.20	823
53-528-00	0.10	0.20	0.30	824
53-529-00	0.10	0.10	0.20	823
53-529-01	0.10	0.10	0.20	823
53-530-00	0.10	0.50	0.60	824
53-530-01	0.10	0.50	0.60	824
53-532-00	0.10	0.70	0.80	823
53-532-01	0.10	0.70	0.80	823



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
53-533-00	0.10	0.60	0.70	824
53-533-01	0.10	0.60	0.70	824
53-534-00	0.00	0.30	0.30	
53-535-00	0.09	0.30	0.39	825
53-536-00	0.09	0.40	0.49	825
53-537-00	0.09	1.00	1.09	825
53-537-01	0.09	1.00	1.09	825
53-538-00	0.09	0.40	0.49	825
53-539-00	0.09	0.40	0.49	825
53-540-00	0.09	0.40	0.49	825
53-541-00	0.00	0.50	0.50	
53-542-00	0.00	0.50	0.50	
53-543-00	1.35	0.30	1.65	193AL 193BL 193CL 193DL
53-544-00	1.35	0.30	1.65	194AR 194BR 194CR 194DR
53-545-01	6.46	1.00	7.46	191AL 191BL 191CL 191DL 191EL 191FL 191GL 191HL 191JL 191KL 191LL 191ML 191NL 191PL 191QL 191RL 191SL
53-545-02	6.46	1.00	7.46	192AR 192BR 192CR 192DR 192ER 192FR 192GR 192HR 192JR 192KR 192LR 192MR 192NR 192PR 192QR 192RR 192SR
53-546-01	2.86	0.60	3.46	193AL 193BL 193CL 193DL 193EL 193FL 193GL 193HL
53-546-02	2.86	0.60	3.46	194AR 194BR 194CR 194DR 194ER 194FR 194GR 194HR





## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
53-547-01	6.53	2.50	9.03	197AL 197BL 197CL 197DL 197EL 197FL 197GL 197HL 197JL 197KL 197LL 197ML 197PL 197RL 197SL 197UL 197XL
53-547-02	9.69	2.50	12.19	198AR 198BR 198CR 198DR 198ER 198FR 198GR 198HR 198JR 198KR 198MR 198NR 198PR 198QR 198RR 198SR 198TR 198UR 198VR 198WR
53-547-03	6.97	2.50	9.47	197AAL 197BAL 197CL 197DL 197EL 197FAL 197FBL 197GL 197HL 197JL 197KL 197LL 197ML 197PL 197RL 197SL 197UL 197VL 197XL
53-547-04	9.08	2.50	11.58	198AAR 198BAR 198CR 198DR 198ER 198FAR 198FBR 198GAR 198HR 198JR 198KR 198MR 198NR 198PR 198QR 198RR 198SR 198TR 198UR 198VR 198WR
53-548-00	0.00	3.50	3.50	
53-549-00	0.13	2.00	2.13	111AL
53-550-00	0.00	5.00	5.00	
53-551-00	0.04	0.10	0.14	831
53-551-01	0.04	0.10	0.14	831
53-552-00	0.04	0.10	0.14	841
53-552-01	0.04	0.10	0.14	841
53-553-00	0.04	0.40	0.44	831
53-553-01	0.04	0.40	0.44	831
53-554-00	0.04	0.60	0.64	841



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
53-554-01	0.04	0.60	0.64	841
53-557-00	0.04	5.00	5.04	831
53-558-00	0.04	4.00	4.04	841
53-559-00	0.04	3.00	3.04	831
53-560-00	0.04	4.00	4.04	841
53-561-00	0.00	0.80	0.80	
53-562-00	0.04	0.50	0.54	832
53-563-00	0.04	0.50	0.54	842
53-564-00	0.04	0.20	0.24	832
53-565-00	0.04	0.20	0.24	842
53-568-00	0.04	5.00	5.04	832
53-568-01	0.04	5.00	5.04	832
53-569-00	0.04	4.00	4.04	842
53-569-01	0.04	4.00	4.04	842
53-570-00	0.04	3.00	3.04	832
53-571-00	0.04	3.00	3.04	842
53-572-00	0.00	4.00	4.00	
53-572-01	0.00	4.00	4.00	
53-573-00	0.00	4.00	4.00	
53-573-01	0.00	4.00	4.00	
53-574-00	0.00	0.40	0.40	
53-575-00	0.00	3.00	3.00	
53-576-00	0.00	0.60	0.60	



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
53-577-00	0.00	0.50	0.50	
53-578-00	0.00	0.50	0.50	
53-579-00	0.00	3.50	3.50	
53-580-00	0.00	0.60	0.60	
53-581-00	0.00	0.80	0.80	
53-582-00	0.04	0.50	0.54	834
53-583-00	0.04	0.50	0.54	844
53-584-00	0.04	0.20	0.24	834
53-585-00	0.04	0.30	0.34	844
53-586-00	0.04	0.30	0.34	844
53-586-01	0.10	0.30	0.40	824
53-587-00	0.20	0.30	0.50	836
53-588-00	0.00	0.40	0.40	
53-589-00	0.04	4.00	4.04	834
53-590-00	0.04	6.50	6.54	844
53-591-00	0.04	7.00	7.04	844
53-591-01	0.04	7.00	7.04	844
53-592-00	0.04	3.00	3.04	834
53-593-00	0.04	4.50	4.54	844
53-594-00	0.04	5.00	5.04	844
53-594-01	0.04	5.00	5.04	844
53-595-00	0.00	0.40	0.40	
53-596-00	0.00	4.00	4.00	



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
53-597-00	0.00	0.60	0.60	
53-598-00	0.00	0.80	0.80	
53-599-00	0.04	0.50	0.54	835
53-601-00	0.04	0.50	0.54	845
53-602-00	0.04	0.20	0.24	835
53-603-00	0.04	0.20	0.24	845
53-606-00	0.04	4.00	4.04	835
53-607-00	0.04	4.00	4.04	845
53-608-00	0.04	3.00	3.04	835
53-609-00	0.04	3.00	3.04	845
53-610-00	0.00	0.40	0.40	
53-611-00	0.00	0.70	0.70	
53-612-00	0.00	0.40	0.40	
53-613-00	0.00	0.40	0.40	
53-614-00	0.08	0.50	0.58	833 843
53-615-00	0.08	0.60	0.68	833 843
53-616-00	0.08	1.50	1.58	833 843
53-617-00	0.08	1.00	1.08	833 843
53-618-00	0.00	0.80	0.80	
53-619-00	0.00	0.60	0.60	



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
53-620-00	12.92	2.00	14.92	191AL 191BL 191CL 191DL 191EL 191FL 191GL 191HL 191JL 191KL 191LL 191ML 191NL 191PL 191QL 191RL 191SL 192AR 192BR 192CR 192DR 192ER 192FR 192GR 192HR 192JR 192KR 192LR 192MR 192NR 192PR 192QR 192RR 192SR
53-621-00	3.04	2.00	5.04	197AL 197BL 197CL 197DL 197EL 198AR 198BR 198CR 198DR 198ER
53-623-00	0.00	0.50	0.50	
53-624-00	0.00	1.00	1.00	
53-625-00	0.00	2.00	2.00	
53-626-00	0.00	3.00	3.00	
53-627-00	0.00	1.00	1.00	
53-628-00	0.00	2.00	2.00	
53-629-00	0.00	2.00	2.00	
53-631-00	0.00	2.00	2.00	
53-632-00	0.00	2.00	2.00	
53-633-00	0.00	2.00	2.00	
53-634-00	0.00	2.00	2.00	
53-635-00	0.00	2.00	2.00	
53-637-00	0.00	2.00	2.00	
53-638-00	0.00	2.00	2.00	
53-639-00	0.00	2.00	2.00	
53-640-00	0.20	2.00	2.20	836



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
53-641-00	0.20	2.00	2.20	836
53-645-00	0.00	2.00	2.00	
53-646-00	0.00	2.00	2.00	
53-647-00	0.00	2.00	2.00	
53-648-00	0.00	2.00	2.00	
53-671-00	0.19	0.30	0.49	824 825 195BL 195CL 195EL 196BR 196CR 196ER
53-673-00	0.68	0.30	0.98	
53-674-01	0.00	0.80	0.80	
53-675-00	0.00	1.50	1.50	
53-675-01	0.00	1.50	1.50	
53-676-00	0.00	0.70	0.70	
53-677-00	0.00	2.25	2.25	
53-678-00	0.00	2.00	2.00	
53-679-00	0.00	2.00	2.00	
53-701-01	0.00	1.00	1.00	
53-702-01	0.00	1.00	1.00	



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
53-703-01	33.65	0.50	34.15	191AL 191BL 191DL 191FL 191GL 191HL 191JL 191LL 191ML 191NL 191PL 191QL 191RL 191SL 192AR 192BR 192DR 192FR 192GR 192HR 192JR 192LR 192MR 192NR 192PR 192QR 192RR 192SR 197AAL 197AL 197BAL 197BL 197CL 197DL 197EL 197FAL 197FBL 197FCL 197FL 197GL 197HL 197JL 197KL 197LL 197ML 197PL 197QL 197RL 197SL 197UL 197VL 197XL 198AAR 198AR 198BAR 198BR 198CR 198DR 198ER 198FAR 198FBR 198FR 198GAR 198GR 198HR 198JR 198KR 198MR 198NR 198PR 198QR 198RR 198SR 198TR 198UR 198VR 198WR 321A 321AL 321AR 322ABL 322ABR 322AL 322AR
53-704-01	0.00	1.00	1.00	
53-705-01	0.00	2.00	2.00	
53-706-01	0.00	2.00	2.00	
53-707-01	0.00	0.30	0.30	
53-708-01	0.00	0.40	0.40	
53-709-01	0.00	8.00	8.00	
53-710-01	0.00	7.00	7.00	
53-711-01	0.00	1.00	1.00	
53-712-01	0.00	1.00	1.00	
53-713-01	0.00	1.00	1.00	



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
53-714-01	0.00	1.00	1.00	821
53-715-01	0.10	1.00	1.10	
53-716-01	0.00	1.00	1.00	
53-717-01	0.00	4.00	4.00	
53-718-01	0.00	4.00	4.00	112AL
53-719-01	0.02	2.00	2.02	
53-720-01	0.02	2.00	2.02	117AL
53-721-01	0.00	0.50	0.50	117AL
53-722-01	0.00	2.00	2.00	
53-723-01	0.00	1.00	1.00	
53-724-01	0.02	1.00	1.02	
53-724-02	0.02	3.00	3.02	117AL
53-725-01	0.00	0.50	0.50	112AL
53-725-02	0.00	1.50	1.50	
53-725-03	0.00	0.50	0.50	
53-725-04	0.00	1.50	1.50	
53-725-05	0.00	0.50	0.50	112AL
53-725-06	0.00	1.50	1.50	
53-725-07	0.00	1.50	1.50	112AL
53-726-01	0.02	1.50	1.52	
53-726-02	0.02	1.50	1.52	112AL
53-727-01	0.00	1.00	1.00	112AL
53-728-01	0.00	1.00	1.00	





## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
53-728-02	0.00	1.00	1.00	
53-730-01	0.00	1.50	1.50	
53-731-01	0.00	1.50	1.50	
53-731-02	0.00	1.50	1.50	
53-733-01	0.00	6.00	6.00	
53-733-02	0.00	3.00	3.00	
53-733-03	0.00	3.00	3.00	
53-733-04	0.00	6.00	6.00	
53-733-05	0.00	3.00	3.00	
53-733-06	0.00	3.00	3.00	
53-734-01	0.00	8.00	8.00	
53-734-02	0.00	8.00	8.00	
53-734-03	0.00	8.00	8.00	
53-735-01	0.00	3.00	3.00	
53-736-01	0.00	1.50	1.50	
53-737-01	0.00	1.50	1.50	
53-739-01	0.00	1.50	1.50	
53-740-01	0.00	1.50	1.50	
53-741-01	0.00	1.50	1.50	
53-742-01	0.00	1.50	1.50	
53-742-02	0.00	1.00	1.00	
53-743-01	0.00	8.00	8.00	
53-743-02	0.00	8.00	8.00	



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
53-743-03	0.00	8.00	8.00	833 843
53-743-04	0.00	8.00	8.00	
53-744-01	0.00	3.00	3.00	
53-745-01	0.00	3.00	3.00	
53-746-01	0.00	6.00	6.00	
53-746-02	0.00	1.00	1.00	
53-746-03	0.00	1.00	1.00	
53-747-01	0.00	1.00	1.00	
53-748-01	0.00	0.50	0.50	
53-748-02	0.00	1.00	1.00	
53-749-01	0.00	2.00	2.00	
53-750-01	0.00	1.00	1.00	
53-751-01	0.00	1.00	1.00	
53-752-01	0.08	1.00	1.08	
53-753-01	0.00	3.00	3.00	
53-753-02	0.00	1.00	1.00	
53-753-03	0.00	10.00	10.00	
53-753-04	0.00	2.00	2.00	
53-753-05	0.00	10.00	10.00	
53-753-06	0.00	1.00	1.00	
53-753-07	0.00	1.00	1.00	
53-754-01	0.00	4.00	4.00	
53-754-02	0.00	12.00	12.00	



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
53-754-03	0.00	3.00	3.00	
53-754-04	0.00	12.00	12.00	
53-754-05	0.00	6.00	6.00	
53-754-06	0.00	3.00	3.00	
53-754-07	0.00	12.00	12.00	
53-755-01	0.00	8.00	8.00	
53-755-02	0.00	8.00	8.00	
53-755-03	0.00	8.00	8.00	
53-756-01	0.00	2.00	2.00	
53-757-01	0.00	1.00	1.00	
53-757-02	0.00	1.00	1.00	
53-757-03	0.00	1.00	1.00	
53-757-04	0.00	1.00	1.00	
53-758-01	0.00	1.50	1.50	
53-759-01	0.00	1.00	1.00	
53-760-01	0.00	1.00	1.00	
53-761-01	0.00	1.00	1.00	
53-762-01	0.00	0.50	0.50	
53-763-01	0.00	2.50	2.50	
53-764-01	0.00	1.00	1.00	
53-765-01	0.00	1.00	1.00	
53-766-01	0.00	0.50	0.50	
53-767-01	0.00	2.00	2.00	



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
53-767-02	0.00	1.00	1.00	
53-768-01	0.00	1.50	1.50	
53-769-01	0.00	1.00	1.00	
53-770-01	0.00	1.50	1.50	
53-774-01	0.00	8.00	8.00	
53-774-02	0.00	8.00	8.00	
53-774-03	0.00	8.00	8.00	
53-775-01	0.00	2.00	2.00	
53-776-01	0.00	1.00	1.00	
53-777-01	0.00	1.00	1.00	
53-778-01	0.00	1.00	1.00	
53-779-01	0.00	1.00	1.00	
53-780-01	0.00	1.00	1.00	
53-781-01	0.00	6.00	6.00	
53-781-02	0.00	4.00	4.00	
53-781-03	0.00	2.00	2.00	
53-781-04	0.00	2.00	2.00	
53-781-05	0.00	2.00	2.00	
53-782-01	0.04	2.00	2.04	311BL
53-783-01	0.04	8.00	8.04	311BL
53-783-02	0.04	8.00	8.04	311BL
53-784-01	0.04	1.00	1.04	311BL
53-785-01	0.04	1.00	1.04	311BL



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
53-786-01	0.04	3.00	3.04	311BL
53-787-01	0.04	2.00	2.04	311BL
53-800-00	0.13	3.50	3.63	112AL 117AL 825
53-804-00	0.13	0.25	0.38	111AL
53-806-00	0.02	0.70	0.72	112AL
53-808-00	0.08	0.20	0.28	713 714
53-810-00	0.16	1.00	1.16	713 714 715 716
53-812-00	0.04	0.60	0.64	112AL 117AL
53-814-00	0.02	1.00	1.02	117AL
53-816-00	0.10	1.00	1.10	821
53-818-00	0.10	2.00	2.10	821
53-820-00	0.10	3.00	3.10	821
53-822-00	0.00	1.00	1.00	
53-824-00	0.10	1.50	1.60	821
53-826-00	0.10	0.50	0.60	121EZ 121FZ 121TW 821
53-828-00	0.00	1.50	1.50	
53-830-00	1.80	1.00	2.80	195BL 195CL 195DL 195EL 195JL 195NL 195QL 196BR 196CR 196DR 196ER 196JR 196NR 196QR
53-832-00	0.93	0.60	1.53	139AL 139BL 139CL 139DL
53-834-00	0.00	1.50	1.50	
53-836-00	0.04	0.30	0.34	732
53-838-00	0.04	1.50	1.54	732
53-840-00	0.04	0.30	0.34	742



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
53-842-00	0.04	1.50	1.54	742
53-844-00	0.55	0.60	1.15	149AL 149BL 149CL
53-846-00	0.10	1.00	1.10	823
53-848-00	0.10	1.00	1.10	824
53-850-00	0.02	0.50	0.52	252XF
53-852-00	0.10	1.50	1.60	823
53-852-01	0.10	1.50	1.60	823
53-854-00	0.10	1.50	1.60	824
53-856-00	0.10	2.00	2.10	823
53-858-00	0.10	2.00	2.10	824
53-860-00	0.10	1.50	1.60	823
53-862-00	0.10	1.50	1.60	824
53-864-00	0.10	1.00	1.10	823
53-866-00	0.10	1.00	1.10	824
53-868-00	0.09	0.75	0.84	825
53-870-00	0.00	1.00	1.00	
53-872-00	0.09	1.50	1.59	825
53-874-00	0.09	1.50	1.59	825
53-876-00	0.09	0.75	0.84	825
53-878-00	0.09	1.50	1.59	825
53-880-00	1.82	1.00	2.82	191GL 191JL 191KL 191PL 191RL
53-882-00	1.80	1.00	2.80	192DR 192GR 192NR 192PR
53-884-00	0.00	0.20	0.20	



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
53-886-00	0.00	0.20	0.20	
53-888-00	0.32	0.75	1.07	195DL 195EL 195JL
53-890-00	0.32	0.75	1.07	196DR 196ER 196JR
53-892-00	1.30	1.00	2.30	197DL 197EL 197GL 197JL 197RL
53-894-00	2.73	1.00	3.73	198HR 198JR 198KR 198VR
53-896-00	0.00	3.50	3.50	
53-898-00	0.00	0.40	0.40	
53-900-00	0.14	1.00	1.14	211AL 212AR
53-902-00	0.00	2.00	2.00	
53-904-00	0.08	2.00	2.08	831 841
53-906-00	0.00	2.00	2.00	
53-907-00	0.00	0.50	0.50	
53-908-00	0.08	2.00	2.08	832 842
53-910-00	0.00	2.00	2.00	
53-912-00	0.00	2.00	2.00	
53-914-00	0.00	2.00	2.00	
53-916-00	0.08	2.00	2.08	834 844
53-918-00	0.00	2.00	2.00	
53-919-00	0.00	0.50	0.50	
53-920-00	0.08	2.00	2.08	835 845
53-922-00	0.00	2.00	2.00	
53-924-00	0.00	1.00	1.00	
53-926-00	0.04	1.50	1.54	311BL



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
53-928-00	0.18	1.20	1.38	315AL 315BL 316AR 316BR
53-930-00	0.18	1.00	1.18	315AL 315BL 316AR 316BR
53-932-00	0.00	0.20	0.20	
53-934-00	0.00	2.00	2.00	
53-936-00	0.00	3.00	3.00	
53-937-00	0.00	2.00	2.00	
53-938-00	0.20	0.20	0.40	836
54-005-01	0.00	1.00	1.00	
54-005-02	0.00	1.00	1.00	
54-205-01	0.00	0.50	0.50	
54-205-02	0.00	0.50	0.50	
54-210-01	0.48	0.50	0.98	414AR 416AR 432BR
54-210-02	0.48	0.50	0.98	424AR 426AR 442BR
54-350-01	0.00	0.50	0.50	
54-350-02	0.00	0.50	0.50	
54-501-01	0.90	0.40	1.30	413AL 414AR 415AL 416AR
54-502-01	0.00	0.60	0.60	
54-504-02	0.90	0.40	1.30	423AL 424AR 425AL 426AR
54-505-02	0.00	0.60	0.60	
54-507-01	1.38	1.50	2.88	431FL 431GL 431GR 434BL 434CL 434DL 434EL
54-508-01	1.34	1.00	2.34	431FL 431GL 431GR 434BL 434EL
54-509-01	0.90	1.50	2.40	413AL 414AR 415AL 416AR





## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
54-510-01	2.71	1.50	4.21	413AL 414AR 415AL 416AR 431DL 431DR 432AL 432AR 432BL 432BR 432CL 432CR
54-511-01	2.60	1.00	3.60	431DL 431DR 431FL 431FR 431GL 431GR 433AL 433AR 433BL 433BR 433CL 433CR
54-512-01	0.82	0.60	1.42	432CL 432CR 433AL 433AR 433BL 433BR 433CL 433CR
54-513-01	0.99	0.40	1.39	413AL 414AR 415AL 415LB 415MB 415NB 416AR 432BR
54-514-01	0.90	1.00	1.90	413AL 414AR 415AL 416AR
54-515-02	1.10	1.00	2.10	441FR 441GL 441GR 444BR 444CR 444DR 444ER
54-516-02	1.06	1.00	2.06	441FR 441GL 441GR 444BR 444ER
54-517-02	0.90	1.50	2.40	423AL 424AR 425AL 426AR
54-518-02	2.97	1.50	4.47	424AR 425AL 426AR 432AL 441DL 441DR 442AL 442AR 442BL 442BR 442CL 442CR
54-519-02	2.16	1.00	3.16	441DL 441DR 441FL 441FR 441GL 441GR 443AL 443AR 443BL 443BR 443CL 443CR
54-520-02	0.66	0.60	1.26	442CL 442CR 443AL 443AR 443BL 443BR 443CL 443CR
54-521-02	0.99	0.40	1.39	423AL 424AR 425AL 425LB 425MB 425NB 426AR 442BR
54-522-02	0.90	1.00	1.90	423AL 424AR 425AL 426AR
54-530-01	0.90	0.40	1.30	413AL 414AR 415AL 416AR
54-531-01	0.00	0.60	0.60	
54-533-02	0.90	0.40	1.30	423AL 424AR 425AL 426AR



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
54-534-02	0.00	0.60	0.60	
54-536-01	1.38	1.50	2.88	431FL 431GL 431GR 434BL 434CL 434DL 434EL
54-537-01	1.34	1.00	2.34	431FL 431GL 431GR 434BL 434EL
54-538-01	0.90	1.50	2.40	413AL 414AR 415AL 416AR
54-539-01	2.41	1.50	3.91	413AL 414AR 415AL 416AR 431DT 431ET 432BL 432CL 432CR
54-540-01	1.88	1.00	2.88	431ET 431FL 431FR 431GL 431GR 433BR 433CL 433DR 433EL
54-541-01	0.15	0.60	0.75	433BR 433CL 433CR 433DL 433DR
54-542-01	1.75	0.40	2.15	413AL 414AR 415AL 415HB 415JB 415KB 416AR 432AL 432AR 432BL 432CL 432CR 432DR
54-543-01	0.90	1.00	1.90	413AL 414AR 415AL 416AR
54-544-02	1.10	1.50	2.60	441FR 441GL 441GR 444BR 444CR 444DR 444ER
54-545-02	1.06	1.00	2.06	441FR 441GL 441GR 444BR 444ER
54-546-02	0.90	1.50	2.40	423AL 424AR 425AL 426AR
54-547-02	1.71	1.50	3.21	424AR 425AL 426AR 441DT 441ET 442BL 442CL 442CR
54-548-02	1.08	1.00	2.08	441ET 441FL 441FR 441GL 441GR 443BR 443CL 443CR 443EL
54-549-02	0.16	0.60	0.76	443BR 443CL 443CR 443DL 443DR



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
54-550-02	1.91	0.40	2.31	423AL 424AR 425AL 425HB 425JB 425KB 426AR 442AL 442AR 442BL 442CL 442CR 442DR
54-551-02	0.90	1.00	1.90	423AL 424AR 425AL 426AR
54-560-01	0.90	0.40	1.30	413AL 414AR 415AL 416AR
54-561-01	0.00	0.60	0.60	
54-563-02	0.90	0.40	1.30	423AL 424AR 425AL 426AR
54-564-02	0.00	0.60	0.60	
54-566-01	1.38	1.50	2.88	431FL 431GL 431GR 434BL 434CL 434DL 434EL
54-567-01	1.34	1.00	2.34	431FL 431GL 431GR 434BL 434EL
54-568-01	0.90	1.50	2.40	413AL 414AR 415AL 416AR
54-569-01	2.17	1.50	3.67	413AL 414AR 415AL 416AR 431ET 432AL 432AR 432BL 432CL 432CR
54-570-01	2.09	1.00	3.09	431ET 431FL 431FR 431GL 431GR 433AL 433AR 433BL 433BR 433CL 433CR
54-571-01	0.82	0.60	1.42	432CL 432CR 433AL 433AR 433BL 433BR 433CL 433CR
54-572-01	1.73	0.40	2.13	413AL 414AR 415AL 415HB 415JB 416AR 432AL 432AR 432BL 432CL 432CR 432DR
54-573-01	1.08	1.00	2.08	413AL 414AR 415AL 416AR 417AL 418AR
54-574-02	1.10	0.70	1.80	441FR 441GL 441GR 444BR 444CR 444DR 444ER



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
54-575-02	1.06	1.00	2.06	441FR 441GL 441GR 444BR 444ER
54-576-02	0.90	1.50	2.40	423AL 424AR 425AL 426AR
54-577-02	1.81	1.50	3.31	423AL 424AR 425AL 426AR 441ET 442AL 442AR 442BL 442CL 442CR
54-578-02	1.12	1.00	2.12	441ET 441FL 441FR 441GL 441GR 443AL 443AR 443BL 443BR 443CL 443CR
54-579-02	0.66	0.60	1.26	442CL 442CR 443AL 443AR 443BL 443BR 443CL 443CR
54-580-02	1.89	0.40	2.29	423AL 424AR 425AL 425HB 425JB 426AR 442AL 442AR 442BL 442CL 442CR 442DR
54-581-02	1.26	1.00	2.26	423AL 424AR 425AL 426AR 427AL 428AR
54-582-01	3.99	1.50	5.49	413AL 414AR 415AL 416AR 431AT 431CL 431CR 431DT 431ET 431FT 432AL 432AR 432BL 432FR
54-583-02	3.44	1.50	4.94	423AL 424AR 425AL 426AR 441AT 441CL 441CR 441DT 441ET 441FT 442AL 442AR 442BL 442FR
54-701-02	0.00	1.00	1.00	
54-702-02	0.00	3.00	3.00	
54-702-03	0.00	3.00	3.00	
54-702-04	0.00	3.00	3.00	
54-703-02	0.00	2.00	2.00	
54-703-03	0.00	2.00	2.00	



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
54-703-04	0.00	2.00	2.00	433CL 433CR 434BL 434BR
54-703-05	0.00	2.00	2.00	
54-704-02	0.00	1.00	1.00	
54-704-03	0.00	1.00	1.00	
54-704-04	0.00	1.00	1.00	
54-705-01	0.00	2.00	2.00	
54-705-03	0.00	4.00	4.00	
54-706-01	0.00	2.00	2.00	
54-706-03	0.00	2.00	2.00	
54-706-04	0.00	1.50	1.50	
54-707-01	0.00	1.00	1.00	
54-707-03	0.00	1.00	1.00	
54-707-04	0.00	1.00	1.00	
54-707-05	0.00	1.00	1.00	
54-708-01	0.40	1.50	1.90	
54-709-01	0.00	1.00	1.00	
54-710-02	0.00	1.00	1.00	
54-710-03	0.00	1.00	1.00	
54-710-04	0.00	1.00	1.00	
54-711-02	0.00	1.50	1.50	
54-711-03	0.00	1.50	1.50	
54-711-04	0.00	1.50	1.50	
54-712-02	0.00	1.50	1.50	



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
54-712-03	0.00	1.50	1.50	
54-712-04	0.00	1.50	1.50	
54-713-02	0.00	1.50	1.50	
54-713-03	0.00	1.50	1.50	
54-713-04	0.00	1.50	1.50	
54-714-02	0.00	1.00	1.00	
54-714-03	0.00	1.00	1.00	
54-715-02	0.00	2.00	2.00	
54-716-01	0.00	2.50	2.50	
54-716-02	0.00	2.50	2.50	
54-716-03	0.00	2.50	2.50	
54-717-02	0.00	1.00	1.00	
54-717-03	0.00	1.00	1.00	
54-717-04	0.00	1.00	1.00	
54-718-02	0.00	1.00	1.00	
54-719-02	0.00	1.00	1.00	
54-720-01	0.00	1.00	1.00	
54-720-03	0.00	1.00	1.00	
54-721-01	0.00	1.00	1.00	
54-773-01	0.00	1.00	1.00	
54-774-01	0.00	1.00	1.00	
54-775-01	0.00	1.00	1.00	
54-776-01	0.00	1.00	1.00	



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
54-777-01	0.00	1.00	1.00	
54-777-02	0.00	1.00	1.00	
54-778-01	0.00	1.00	1.00	
54-779-01	0.00	1.00	1.00	
54-779-02	0.00	1.00	1.00	
54-779-03	0.00	1.00	1.00	
54-780-01	0.00	1.00	1.00	
54-780-02	0.00	1.00	1.00	
54-781-01	0.00	1.00	1.00	
54-781-02	0.00	1.00	1.00	
54-781-03	0.00	1.00	1.00	
54-800-01	0.00	0.50	0.50	
54-802-01	4.83	0.30	5.13	
54-804-01	0.96	0.30	1.26	431AT 431BL 431BR 431CL 431CR 431DL 431DR 431FL 431FR 431FT 431GL 431GR
54-806-01	1.70	0.40	2.10	413AL 414AR 415AL 415LB 415MB 415NB 416AR
54-808-01	1.41	0.40	1.81	413AL 414AR 415AL 415LB 415MB 415NB 416AR 432AR 432BL 432BR 432CR 433AL 433CL
54-810-02	0.00	0.50	0.50	434BL 434BR 434CL 434CR 434DL 434DR 434EL 434ER 434FB
54-812-02	4.27	0.30	4.57	441AT 441BL 441BR 441CL 441CR 441DL 441DR 441FL 441FR 441FT 441GL 441GR



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
54-814-02	0.96	0.30	1.26	423AL 424AR 425AL 425LB 425MB 425NB 426AR
54-816-02	1.69	0.40	2.09	423AL 424AR 425AL 425LB 425NB 426AR 442AR 442BL 442BR 442CR 443AL 443CL
54-818-02	1.46	0.40	1.86	444BL 444BR 444CL 444CR 444DL 444DR 444EL 444ER 444FB
54-820-01	0.00	0.50	0.50	
54-822-01	4.20	0.30	4.50	431AT 431BT 431CL 431CR 431DT 431ET 431FL 431FR 431FT 431GL 431GR
54-824-01	0.96	0.30	1.26	413AL 414AR 415AL 415HB 415JB 415KB 416AR
54-826-01	2.36	0.40	2.76	413AL 414AR 415AL 415HB 415JB 415KB 416AR 432AL 432AR 432BL 432CL 432CR 432DR 432EL 432FR 432GL 433BR 433CL 433CR 433DL 433DR
54-828-01	1.41	0.40	1.81	434BL 434BR 434CL 434CR 434DL 434DR 434EL 434ER 434FB
54-830-02	0.00	0.50	0.50	
54-832-02	2.73	0.30	3.03	441AT 441BT 441CL 441CR 441DT 441ET 441FL 441FR 441FT 441GL 441GR
54-834-02	0.96	0.30	1.26	423AL 424AR 425AL 425HB 425JB 425KB 426AR





## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
54-836-02	2.19	0.40	2.59	423AL 424AR 425AL 425HB 425JB 425KB 426AR 442AL 442AR 442BL 442CL 442CR 442DR 442EL 442FR 442GL 443BR 443CL 443CR 443DL 443DR
54-838-02	1.46	0.40	1.86	444BL 444BR 444CL 444CR 444DL 444DR 444EL 444ER 444FB
54-840-01	0.00	0.50	0.50	
54-842-01	3.23	0.30	3.53	431AT 431CT 431ET 431FL 431FR 431FT 431GL 431GR
54-844-01	2.77	0.30	3.07	413AL 414AR 415AL 415HB 415JB 416AR 432AL 432AR 432CL 432CR 432EL 432ER 433AL 433AR 433BL 433BR
54-846-01	3.08	0.40	3.48	413AL 414AR 415AL 415HB 415JB 416AR 432AL 432AR 432BL 432CL 432CR 432DR 432EL 432ER 432FL 432GR 433AL 433AR 433BL 433BR 433CL 433CR
54-848-01	1.41	0.40	1.81	434BL 434BR 434CL 434CR 434DL 434DR 434EL 434ER 434FB
54-850-02	0.00	0.50	0.50	
54-852-02	2.14	0.30	2.44	441AT 441CT 441ET 441FL 441FR 441FT 441GL 441GR
54-854-02	2.44	0.30	2.74	423AL 424AR 425AL 425HB 425JB 426AR 442AL 442AR 442CL 442CR 442EL 442ER 443AR 443BL 443BR



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
54-856-02	2.74	0.40	3.14	423AL 424AR 425AL 425HB 425JB 426AR 442AL 442AR 442BL 442CL 442CR 442DR 442EL 442ER 442FL 442GR 443AL 443AR 443BL 443BR 443CL 443CR
54-858-02	1.46	0.40	1.86	444BL 444BR 444CL 444CR 444DL 444DR 444EL 444ER 444FB
55-501-00	0.04	1.00	1.04	311BL
55-502-00	0.04	0.40	0.44	311BL
55-503-00	0.04	0.70	0.74	311BL
55-504-00	0.04	0.50	0.54	311BL
55-505-00	0.04	0.60	0.64	311BL
55-507-00	0.04	6.50	6.54	311BL
55-508-00	0.04	1.50	1.54	311BL
55-509-00	0.00	0.40	0.40	
55-510-00	0.50	1.20	1.70	322AAL 322AAR 322ABL 322ABR
55-511-00	0.00	1.20	1.20	
55-512-00	17.69	6.00	23.69	311AZ 311BL 322BL 322CL 322DL 322EL 322FL 322GL 322HL 322HXL 324BL 324CL 324CXL 324DL 324DXL 324EL 324FL 324GL 324HL 324JL 324JXL 324KL
55-513-00	7.23	10.00	17.23	322BL 322CL 322DL 322EL 322FL 322GL 322HL
55-513-01	6.85	10.00	16.85	322BL 322CL 322DL 322EL 322FL 322HXL



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
55-514-00	1.39	3.00	4.39	311AZ 311BL 324BL 324BR
55-514-01	2.87	3.00	5.87	311AZ 311BL 324AZ 324CXL 324CXR
55-515-00	1.07	2.00	3.07	324DL 324EL 324FL
55-515-01	0.46	2.00	2.46	324DXL
55-516-00	1.96	0.60	2.56	324AL 324AR 324BL 324BR
55-516-01	3.36	0.60	3.96	324AL 324AR 324CXL 324CXR
55-517-00	1.07	0.50	1.57	324DL 324EL 324FL
55-517-01	0.46	0.50	0.96	324DXL
55-518-00	1.07	1.00	2.07	324DL 324EL 324FL
55-518-01	0.46	1.00	1.46	324DXL
55-519-00	1.56	0.80	2.36	325AAR 325AR 325BAR 325BR 325CAR 325CR 326AR 326BR 326CR
55-520-00	0.35	0.90	1.25	324FL
55-520-01	0.46	0.90	1.36	324DXL
55-521-00	0.00	0.40	0.40	
55-522-00	1.56	1.20	2.76	325AAR 325AR 325BAR 325BR 325CAR 325CR 326AR 326BR 326CR
55-523-00	0.04	0.50	0.54	326EZ
55-524-00	2.32	0.60	2.92	321A 321AL 321AR 321B
55-524-01	1.24	0.60	1.84	321A 321AL 321AR
55-525-00	1.04	0.60	1.64	322AAL 322AAR 322AL 322AR
55-525-01	0.00	0.60	0.60	322ABL 322ABR
55-526-00	0.07	0.40	0.47	311AZ 311BL



# 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
55-527-01	0.04	0.80	0.84	311BL
55-528-01	0.04	1.20	1.24	313AL
55-528-03	0.04	1.20	1.24	313AL
55-528-05	0.04	10.00	10.04	313AL
55-529-01	0.43	1.80	2.23	311BL 331AZ 331BZ
55-530-01	0.10	1.10	1.20	311BL 331BZ 331CZ 331DZ
55-531-01	0.12	0.60	0.72	311BL 331BZ 331CZ 331DZ 331EZ
55-532-01	11.47	2.00	13.47	333BB 333CB 333DB 333EB 333FB 335CB 335DB 335EXB 335GXB 335JB 335KB
55-533-01	11.51	2.50	14.01	311BL 333BB 333CB 333DB 333EB 333FB 335CB 335DB 335EXB 335GXB 335JB 335KB
55-534-01	0.71	0.80	1.51	335EB 335FB
55-534-03	0.58	0.80	1.38	335EXB
55-535-01	2.25	2.50	4.75	335CB 335DB 335EB 335FB
55-535-03	2.12	2.50	4.62	335CB 335DB 335EXB
55-536-01	0.33	0.50	0.83	335EB
55-536-03	0.58	0.50	1.08	335EXB
55-537-01	0.00	0.20	0.20	
55-538-02	0.04	0.80	0.84	311BL
55-539-02	0.04	1.20	1.24	313AL
55-539-04	0.04	1.20	1.24	313AL
55-539-06	0.04	10.00	10.04	313AL
55-540-02	0.43	1.80	2.23	311BL 341AZ 341BZ



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
55-541-02	0.10	1.10	1.20	311BL 341BZ 341CZ 341DZ
55-542-02	0.12	0.60	0.72	311BL 341BZ 341CZ 341DZ 341EZ
55-543-02	11.00	2.00	13.00	343BB 343CB 343DB 343EB 343FB 345CB 345DB 345EXB 345GXB 345JB 345KB
55-544-02	11.04	2.50	13.54	311BL 343BB 343CB 343DB 343EB 343FB 345CB 345DB 345EXB 345GXB 345JB 345KB
55-545-02	0.71	0.80	1.51	345EB 345FB
55-545-04	0.45	0.80	1.25	345EXB
55-546-02	2.25	2.50	4.75	345CB 345DB 345EB 345FB
55-546-04	1.99	2.50	4.49	345CB 345DB 345EXB
55-547-02	0.33	0.50	0.83	345EB
55-547-04	0.45	0.50	0.95	345EXB
55-548-02	0.00	0.20	0.20	
55-549-00	0.07	15.00	15.07	311AZ 311BL
55-550-00	0.00	1.00	1.00	
55-550-01	0.00	1.00	1.00	
55-551-00	0.00	1.00	1.00	
55-552-00	0.00	1.00	1.00	
55-656-01	6.28	0.60	6.88	332BL 332CL 332DL 332EL
55-660-02	5.95	1.50	7.45	342BR 342CR 342DR 342ER
55-701-01	0.04	0.50	0.54	311BL
55-702-01	0.04	1.00	1.04	311BL
55-703-01	0.04	0.50	0.54	311BL



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
55-704-01	0.04	1.00	1.04	311BL
55-704-02	0.04	1.00	1.04	311BL
55-704-03	0.04	1.00	1.04	311BL
55-704-04	0.04	1.00	1.04	311BL
55-705-01	0.04	1.00	1.04	311BL
55-706-01	0.04	2.00	2.04	311BL
55-707-01	0.00	1.00	1.00	
55-800-00	0.08	2.00	2.08	311BL 313AL
55-804-00	0.00	0.60	0.60	
55-806-00	9.28	1.50	10.78	321A 321B 321C 321D 321E 321F
55-808-00	0.00	0.50	0.50	
55-810-00	7.50	2.00	9.50	322AL 322BL 322CL 322DL 322EL 322FL 322GL 322HL
55-811-00	6.85	2.00	8.85	322ABL 322BL 322CL 322DL 322EL 322FL 322HXL
55-812-00	1.96	0.10	2.06	322EL 322FL
55-814-00	0.00	0.50	0.50	
55-816-00	4.38	1.00	5.38	324AL 324BL 324CL 324DL 324EL 324FL 324GL
55-817-00	3.20	1.00	4.20	324AL 324CXL 324DXL 324GL
55-818-00	6.54	0.50	7.04	324AL 324BL 324CL 324DL 324EL 324FL 324GL 324HL 324JL 324KL
55-819-00	5.29	0.50	5.79	324AL 324CXL 324DXL 324GL 324HL 324JXL
55-820-00	0.00	0.60	0.60	



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
55-822-00	0.00	0.30	0.30	
55-824-00	0.00	0.30	0.30	
55-826-00	1.27	0.30	1.57	327
55-828-01	0.08	0.40	0.48	311BL 313AL
55-830-01	0.00	0.30	0.30	
55-832-01	0.00	0.50	0.50	
55-834-01	6.93	0.60	7.53	333BB 333CB 333DB 333EB 333FB
55-836-01	0.56	0.20	0.76	335GB
55-838-01	0.00	0.40	0.40	
55-838-03	0.97	0.20	1.17	335GXB
55-840-01	2.81	1.00	3.81	335CB 335DB 335EB 335FB 335GB
55-841-00	3.09	1.00	4.09	335CB 335DB 335EXB 335GXB
55-842-01	4.84	1.50	6.34	335CB 335DB 335EB 335FB 335GB 335HB 335JB 335KB
55-843-00	4.54	1.50	6.04	335CB 335DB 335EXB 335GXB 335JB 335KB
55-844-01	0.00	0.60	0.60	
55-846-01	0.00	0.20	0.20	
55-848-02	0.08	0.40	0.48	311BL 313AL
55-850-02	0.00	0.30	0.30	
55-852-02	0.00	0.50	0.50	
55-854-02	6.93	0.60	7.53	343BB 343CB 343DB 343EB 343FB



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
55-856-02	0.56	0.20	0.76	345GB
55-856-04	0.63	0.20	0.83	345GXB
55-858-02	0.00	0.40	0.40	
55-860-02	2.81	1.00	3.81	345CB 345DB 345EB 345FB 345GB
55-861-00	2.62	1.00	3.62	345CB 345DB 345EXB 345GXB
55-862-02	4.84	1.50	6.34	345CB 345DB 345EB 345FB 345GB 345HB 345JB 345KB
55-863-00	4.07	1.50	5.57	345CB 345DB 345EXB 345GXB 345JB 345KB
55-864-02	0.00	0.60	0.60	
55-866-02	0.00	0.20	0.20	
56-010-00	0.00	0.25	0.25	
56-020-00	0.00	0.50	0.50	
56-030-00	0.00	0.30	0.30	
57-501-00	1.19	0.40	1.59	133AZ 133BZ 133CZ 139AL 139AZ
57-502-01	0.00	0.20	0.20	
57-503-01	3.99	1.50	5.49	512AB 512BB 512CB 512DB 512EB 512FB 512GB
57-504-01	0.00	2.00	2.00	
57-505-01	0.00	1.50	1.50	
57-506-01	2.31	1.00	3.31	531AB 531BB 531CB 532AB 533AB 533BB 533CB 533DB 533EB 533FB 533GB
57-507-01	0.00	2.00	2.00	





## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
57-508-01	3.57	1.40	4.97	541AB 541BB 541CB 541DB 541EB 541FB 541GB 541HB 541JB 541KB 541LB 541MB 541NB 541PB 541QB 542AB 542BB
57-509-01	2.63	1.20	3.83	543AB 543BB 543CB 543DB 544AB 544BB 544CB 544DB 544EB 544FB 544GB 544HB 544JB 544KB 544LB 544MB
57-510-01	0.42	0.80	1.22	541DB 541NB
57-511-01	0.42	0.30	0.72	541DB 541NB
57-512-00	0.00	0.40	0.40	
57-514-00	0.00	3.50	3.50	
57-515-01	0.00	0.60	0.60	
57-516-01	3.30	2.50	5.80	555AT 555BT 555CT 555DL 555EL 555FL 555GL 555HL 555JL 555KL
57-517-01	3.30	2.50	5.80	555AT 555BT 555CT 555DL 555EL 555FL 555GL 555HL 555JL 555KL
57-518-01	2.90	1.50	4.40	556AT 556BT 556CL
57-519-01	0.60	0.20	0.80	557AT 557BB 557CT 557DB 557EB
57-520-01	0.60	0.20	0.80	557AT 557BB 557CT 557DB 557EB
57-521-00	2.78	12.00	14.78	555AT 655AT
57-523-01	0.00	2.00	2.00	
57-524-01	0.64	3.50	4.14	567FB 567GB 567HB 567JB 567LB 567MB 567NB 567PB
57-530-01	0.46	1.50	1.96	571AB 571BB



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
57-531-01	0.54	0.30	0.84	572AB 572BB
57-532-01	1.80	1.50	3.30	573AB 573EB
57-533-01	0.46	0.50	0.96	575AB 575BB
57-535-02	0.00	0.20	0.20	
57-536-02	3.99	1.50	5.49	612AB 612BB 612CB 612DB 612EB 612FB 612GB
57-538-02	0.00	2.00	2.00	
57-539-00	0.00	0.40	0.40	
57-540-02	0.00	1.50	1.50	
57-541-02	2.31	1.00	3.31	631AB 631BB 631CB 632AB 633AB 633BB 633CB 633DB 633EB 633FB 633GB
57-542-02	0.00	2.00	2.00	
57-543-02	3.57	1.40	4.97	641AB 641BB 641CB 641DB 641EB 641FB 641GB 641HB 641JB 641KB 641LB 641MB 641NB 641PB 641QB 642AB 642BB
57-544-02	2.84	1.20	4.04	643AB 643BB 643CB 643DB 644AB 644BB 644CB 644DB 644EB 644FB 644GB 644HB 644JB 644KB 644LB 644MB
57-545-02	0.42	0.80	1.22	641DB 641NB
57-546-02	0.42	0.30	0.72	641DB 641NB
57-550-02	0.00	0.60	0.60	
57-551-02	3.30	2.50	5.80	655AT 655BT 655CT 655DR 655ER 655FR 655GR 655HR 655JR 655KR



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
57-552-02	3.30	2.50	5.80	655AT 655BT 655CT 655DR 655ER 655FR 655GR 655HR 655JR 655KR
57-553-02	2.89	1.50	4.39	656AT 656BT 656CR
57-554-02	0.60	0.20	0.80	657AT 657BB 657CT 657DB 657EB
57-555-02	0.60	0.20	0.80	657AT 657BB 657CT 657DB 657EB
57-556-02	0.00	2.00	2.00	
57-557-02	0.64	3.50	4.14	667FB 667GB 667HB 667JB 667LB 667MB 667NB 667PB
57-560-02	0.46	1.50	1.96	671AB 671BB
57-561-02	0.54	0.30	0.84	672AB 672BB
57-562-02	1.80	1.50	3.30	673AB 673EB
57-563-02	0.46	0.50	0.96	675AB 675BB
57-606-00	7.53	1.70	9.23	139AL 139BL 139CL 139DL 195AL 195BL 195CL 195DL 195EL 195FL 195GL 195HL 195JL 195KL 195LL 195ML 195NL 195PL 195QL 196AR 196BR 196CR 196DR 196ER 196FR 196GR 196HR 196JR 196KR 196LR 196MR 196NR 196PR 196QR
57-607-01	0.00	2.00	2.00	
57-608-01	0.00	0.40	0.40	
57-620-02	0.00	2.00	2.00	
57-621-02	0.00	2.50	2.50	
57-630-00	0.00	1.50	1.50	



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
57-701-02	0.00	2.00	2.00	139AZ
57-701-03	0.00	2.00	2.00	
57-702-02	0.00	4.00	4.00	
57-702-03	0.00	4.00	4.00	
57-703-02	0.30	4.00	4.30	
57-703-03	0.00	4.00	4.00	
57-704-01	0.00	1.00	1.00	
57-704-02	0.00	1.00	1.00	
57-704-03	0.00	1.00	1.00	
57-706-02	0.00	1.00	1.00	
57-706-03	0.00	1.00	1.00	
57-706-04	0.00	1.00	1.00	
57-708-02	0.00	1.50	1.50	
57-708-03	0.00	1.00	1.00	
57-709-02	0.30	1.50	1.80	139AZ
57-709-03	0.30	1.50	1.80	139AZ
57-710-02	0.30	1.50	1.80	139AZ
57-711-02	0.30	0.40	0.70	139AZ
57-711-03	0.30	0.40	0.70	139AZ
57-711-04	0.30	6.00	6.30	139AZ
57-711-05	0.30	1.00	1.30	139AZ
57-711-06	0.30	0.40	0.70	139AZ
57-711-07	0.30	6.00	6.30	139AZ



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
57-711-08	0.30	1.00	1.30	139AZ
57-711-09	0.30	0.40	0.70	139AZ
57-711-10	0.30	6.00	6.30	139AZ
57-711-11	0.30	2.00	2.30	139AZ
57-711-12	0.30	2.00	2.30	139AZ
57-712-02	1.70	0.40	2.10	195LL 195NL 195PL 195QL 196LR 196NR 196PR 196QR
57-712-03	1.70	0.40	2.10	195LL 195NL 195PL 195QL 196LR 196NR 196PR 196QR
57-712-04	1.70	0.40	2.10	195LL 195NL 195PL 195QL 196LR 196NR 196PR 196QR
57-712-05	1.70	0.40	2.10	195LL 195NL 195PL 195QL 196LR 196NR 196PR 196QR
57-712-06	1.70	6.00	7.70	195LL 195NL 195PL 195QL 196LR 196NR 196PR 196QR
57-713-02	0.30	0.20	0.50	139AZ
57-713-03	0.30	6.00	6.30	139AZ
57-713-04	0.30	6.00	6.30	139AZ
57-713-05	0.30	6.00	6.30	139AZ
57-714-02	0.30	6.00	6.30	139AZ
57-714-03	0.30	0.20	0.50	139AZ
57-716-02	3.36	10.00	13.36	531AB 531BB 531CB 533AB 533BB 533CB 533DB 533EB 631AB 631BB 631CB 633AB 633BB 633CB 633DB 633EB



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
57-716-03	3.36	1.00	4.36	531AB 531BB 531CB 533AB 533BB 533CB 533DB 533EB 631AB 631BB 631CB 633AB 633BB 633CB 633DB 633EB
57-716-04	3.36	10.00	13.36	531AB 531BB 531CB 533AB 533BB 533CB 533DB 533EB 631AB 631BB 631CB 633AB 633BB 633CB 633DB 633EB
57-716-05	3.36	10.00	13.36	531AB 531BB 531CB 533AB 533BB 533CB 533DB 533EB 631AB 631BB 631CB 633AB 633BB 633CB 633DB 633EB
57-719-02	11.34	4.00	15.34	531AB 531BB 531CB 533AB 533BB 533CB 533DB 533EB 533FB 533GB 541AB 541BB 541CB 541DB 541EB 541FB 541GB 541HB 541JB 541KB 541LB 541MB 541PB 541QB 542AB 543BB 543CB 543DB 631AB 631BB 631CB 633AB 633BB 633CB 633DB 633EB 633FB 633GB 641AB 641BB 641CB 641DB 641EB 641FB 641GB 641HB 641JB 641KB 641LB 641MB 641PB 641QB 642AB 643BB 643CB 643DB



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
57-719-03	11.34	4.00	15.34	531AB 531BB 531CB 533AB 533BB 533CB 533DB 533EB 533FB 533GB 541AB 541BB 541CB 541DB 541EB 541FB 541GB 541HB 541JB 541KB 541LB 541MB 541PB 541QB 542AB 543BB 543CB 543DB 631AB 631BB 631CB 633AB 633BB 633CB 633DB 633EB 633FB 633GB 641AB 641BB 641CB 641DB 641EB 641FB 641GB 641HB 641JB 641KB 641LB 641MB 641PB 641QB 642AB 643BB 643CB 643DB
57-719-04	11.34	4.00	15.34	531AB 531BB 531CB 533AB 533BB 533CB 533DB 533EB 533FB 533GB 541AB 541BB 541CB 541DB 541EB 541FB 541GB 541HB 541JB 541KB 541LB 541MB 541PB 541QB 542AB 543BB 543CB 543DB 631AB 631BB 631CB 633AB 633BB 633CB 633DB 633EB 633FB 633GB 641AB 641BB 641CB 641DB 641EB 641FB 641GB 641HB 641JB 641KB 641LB 641MB 641PB 641QB 642AB 643BB 643CB 643DB
57-721-01	2.94	1.50	4.44	533DB 533EB 533FB 541DB 541EB 541NB 541PB 633DB 633EB 633FB 641DB 641EB 641NB 641PB
57-721-02	2.94	1.50	4.44	533DB 533EB 533FB 541DB 541EB 541NB 541PB 633DB 633EB 633FB 641DB 641EB 641NB 641PB



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
57-721-03	2.94	1.50	4.44	533DB 533EB 533FB 541DB 541EB 541NB 541PB 633DB 633EB 633FB 641DB 641EB 641NB 641PB
57-722-01	0.00	1.00	1.00	
57-722-02	3.36	10.00	13.36	531AB 531BB 531CB 533AB 533BB 533CB 533DB 533EB 631AB 631BB 631CB 633AB 633BB 633CB 633DB 633EB
57-722-03	3.36	10.00	13.36	531AB 531BB 531CB 533AB 533BB 533CB 533DB 533EB 631AB 631BB 631CB 633AB 633BB 633CB 633DB 633EB
57-722-04	3.36	1.00	4.36	531AB 531BB 531CB 533AB 533BB 533CB 533DB 533EB 631AB 631BB 631CB 633AB 633BB 633CB 633DB 633EB
57-722-05	3.36	1.00	4.36	531AB 531BB 531CB 533AB 533BB 533CB 533DB 533EB 631AB 631BB 631CB 633AB 633BB 633CB 633DB 633EB
57-722-06	3.36	10.00	13.36	531AB 531BB 531CB 533AB 533BB 533CB 533DB 533EB 631AB 631BB 631CB 633AB 633BB 633CB 633DB 633EB
57-722-07	0.00	1.00	1.00	
57-724-02	1.26	6.00	7.26	532AB 533DB 533EB 632AB 633DB 633EB
57-728-02	0.00	3.00	3.00	
57-729-01	0.84	4.00	4.84	533DB 533EB 633DB 633EB
57-729-02	0.00	0.20	0.20	
57-729-03	0.00	4.00	4.00	





## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
57-729-04	0.00	1.00	1.00	532AB 632AB  532AB 632AB  531AB 531BB 531CB 532AB 533AB 533BB 533CB 533DB 533EB 533FB 533GB 541AB 541BB 541CB 541DB 541EB 541FB 541GB 541HB 541JB 541KB 541LB 541MB 541NB 541PB 541QB 542AB 542BB 543AB 543BB 543CB 543DB 544AB 544BB 544CB 544DB 544EB 544FB 544GB 544HB 544JB 544KB 544LB 544MB 631AB 631BB 631CB 632AB 633AB 633BB 633CB 633DB 633EB 633FB 633GB 641AB 641BB 641CB 641DB 641EB 641FB 641GB 641HB 641JB 641KB 641LB 641MB 641NB 641PB 641QB 642AB 642BB 643AB 643BB 643CB 643DB 644AB 644BB 644CB 644DB 644EB 644FB 644GB 644HB 644JB 644KB 644LB 644MB
57-729-05	0.00	4.00	4.00	
57-729-06	0.00	1.00	1.00	
57-730-01	0.00	1.00	1.00	
57-734-01	0.00	3.00	3.00	
57-735-01	0.42	0.40	0.82	
57-735-03	0.42	4.00	4.42	
57-735-04	17.23	0.40	17.63	
57-737-01	0.00	5.00	5.00	
57-737-03	0.00	5.00	5.00	
57-737-04	0.00	5.00	5.00	



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
57-737-05	0.00	5.00	5.00	
57-737-06	0.00	5.00	5.00	
57-739-01	2.10	0.40	2.50	533AB 533BB 533CB 533DB 533EB 633AB 633BB 633CB 633DB 633EB
57-739-03	2.10	0.40	2.50	533AB 533BB 533CB 533DB 533EB 633AB 633BB 633CB 633DB 633EB
57-739-04	17.23	0.40	17.63	531AB 531BB 531CB 532AB 533AB 533BB 533CB 533DB 533EB 533FB 533GB 541AB 541BB 541CB 541DB 541EB 541FB 541GB 541HB 541JB 541KB 541LB 541MB 541NB 541PB 541QB 542AB 542BB 543AB 543BB 543CB 543DB 544AB 544BB 544CB 544DB 544EB 544FB 544GB 544HB 544JB 544KB 544LB 544MB 631AB 631BB 631CB 632AB 633AB 633BB 633CB 633DB 633EB 633FB 633GB 641AB 641BB 641CB 641DB 641EB 641FB 641GB 641HB 641JB 641KB 641LB 641MB 641NB 641PB 641QB 642AB 642BB 643AB 643BB 643CB 643DB 644AB 644BB 644CB 644DB 644EB 644FB 644GB 644HB 644JB 644KB 644LB 644MB
57-740-01	1.19	0.50	1.69	434BL 434CL 434DL 434EL 444BL 444CL 444DL 444EL
57-743-01	0.00	5.00	5.00	
57-743-03	0.00	5.00	5.00	



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
57-751-01	0.18	1.00	1.18	555EL 655ER
57-752-01	0.00	1.00	1.00	
57-753-01	2.78	12.00	14.78	555AT 655AT
57-754-01	0.00	0.50	0.50	
57-755-01	0.00	2.00	2.00	
57-755-03	0.00	2.00	2.00	
57-755-04	0.00	1.00	1.00	
57-756-01	0.00	1.00	1.00	
57-757-01	1.40	0.50	1.90	573AB 673AB
57-758-01	1.40	0.50	1.90	573AB 673AB
57-759-01	3.60	1.00	4.60	573AB 573EB 673AB 673EB
57-760-01	3.60	0.20	3.80	573AB 573EB 673AB 673EB
57-760-03	3.60	0.70	4.30	573AB 573EB 673AB 673EB
57-761-01	3.60	0.70	4.30	573AB 573EB 673AB 673EB
57-761-03	3.60	2.00	5.60	573AB 573EB 673AB 673EB
57-761-04	3.60	2.00	5.60	573AB 573EB 673AB 673EB
57-762-01	3.60	0.70	4.30	573AB 573EB 673AB 673EB
57-763-01	3.60	1.00	4.60	573AB 573EB 673AB 673EB
57-764-01	3.60	1.50	5.10	573AB 573EB 673AB 673EB
57-764-03	3.60	1.50	5.10	573AB 573EB 673AB 673EB
57-765-01	3.60	1.50	5.10	573AB 573EB 673AB 673EB
57-765-03	3.60	0.50	4.10	573AB 573EB 673AB 673EB
57-765-04	3.60	0.50	4.10	573AB 573EB 673AB 673EB



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
57-766-01	3.60	0.75	4.35	573AB 573EB 673AB 673EB
57-767-01	3.60	0.75	4.35	573AB 573EB 673AB 673EB
57-768-01	3.60	1.00	4.60	573AB 573EB 673AB 673EB
57-768-03	3.60	1.00	4.60	573AB 573EB 673AB 673EB
57-769-01	3.60	0.50	4.10	573AB 573EB 673AB 673EB
57-769-03	0.00	0.50	0.50	
57-771-01	3.60	0.50	4.10	573AB 573EB 673AB 673EB
57-771-03	3.60	2.00	5.60	573AB 573EB 673AB 673EB
57-772-01	3.60	0.50	4.10	573AB 573EB 673AB 673EB
57-773-01	3.60	0.50	4.10	573AB 573EB 673AB 673EB
57-774-01	3.60	1.00	4.60	573AB 573EB 673AB 673EB
57-775-01	3.60	1.00	4.60	573AB 573EB 673AB 673EB
57-776-01	3.60	0.50	4.10	573AB 573EB 673AB 673EB
57-777-01	3.60	0.50	4.10	573AB 573EB 673AB 673EB
57-778-01	0.92	1.00	1.92	571AB 571BB 671AB 671BB
57-779-01	0.92	1.00	1.92	571AB 571BB 671AB 671BB
57-780-01	0.92	1.00	1.92	571AB 571BB 671AB 671BB
57-781-01	0.92	1.00	1.92	571AB 571BB 671AB 671BB
57-782-01	0.92	1.00	1.92	571AB 571BB 671AB 671BB
57-783-01	0.92	1.00	1.92	571AB 571BB 671AB 671BB
57-784-01	0.92	0.50	1.42	571AB 571BB 671AB 671BB
57-785-01	0.00	1.00	1.00	
57-786-01	0.90	2.00	2.90	551BB 651BB



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
57-787-01	0.00	0.30	0.30	
57-788-01	0.00	0.30	0.30	
57-788-02	0.00	0.30	0.30	
57-788-03	0.00	0.30	0.30	
57-788-04	0.00	1.00	1.00	
57-788-05	0.00	1.00	1.00	
57-790-01	0.00	0.30	0.30	
57-790-02	0.00	0.30	0.30	
57-790-03	0.00	3.00	3.00	
57-793-01	0.00	1.00	1.00	
57-793-02	0.00	1.00	1.00	
57-794-01	0.00	6.00	6.00	
57-795-01	0.00	5.00	5.00	
57-796-01	0.00	0.30	0.30	
57-800-00	0.59	1.50	2.09	
57-802-00	1.19	1.50	2.69	
57-804-01	5.75	1.00	6.75	
57-806-01	0.00	0.50	0.50	
57-808-01	0.00	0.10	0.10	
57-810-01	0.00	0.20	0.20	
57-812-01	0.00	0.10	0.10	
57-814-01	0.00	0.50	0.50	



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
57-816-01	5.42	1.50	6.92	521AAB 521AB 521ABB 521ACB 521AEB 521BB 521DB 521EB 521GB 521HB 521JB 521MB 521NB 521PB 521RB 521SB 521TB 521WB 521XB 521YB
57-817-01	5.54	1.50	7.04	521AAB 521AB 521ABB 521ACB 521AFB 521AHB 521BB 521DB 521EB 521GB 521HB 521JB 521MB 521NB 521PB 521RB 521SB 521TB 521WB 521XB 521YB
57-818-01	0.00	0.60	0.60	
57-820-01	1.40	0.40	1.80	522AB 522CB 522DB 522EB 522FB 522GB 522HB 522IB 522JB 522KB
57-822-01	1.26	0.40	1.66	523BB 523CB 523DB 523EB 523FB 523GB 523HB 523IB 523JB
57-824-01	1.40	0.40	1.80	524BB 524CB 524DB 524EB 524FB 524GB 524HB 524IB 524JB 524KB
57-826-01	1.40	0.40	1.80	525BB 525CB 525DB 525EB 525FB 525GB 525HB 525IB 525JB 525KB
57-828-01	1.05	0.40	1.45	526AB 526BB 526CB 526DB 526EB 526FB 526GB
57-830-01	1.40	0.40	1.80	527AB 527BB 527CB 527DB 527EB 527FB 527GB 527HB 527IB 527JB
57-831-01	1.82	0.70	2.52	527AB 527BB 527CB 527DB 527EB 527FB 527GB 527HB 527IB 527JB 527KB 527LB 527MB



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
57-832-01	0.00	0.50	0.50	
57-834-01	0.63	0.60	1.23	531AB 531BB 531CB
57-836-01	0.21	0.30	0.51	532AB
57-838-01	1.47	0.80	2.27	533AB 533BB 533CB 533DB 533EB 533FB 533GB
57-840-01	0.00	0.75	0.75	
57-842-01	3.15	1.50	4.65	541AB 541BB 541CB 541DB 541EB 541FB 541GB 541HB 541JB 541KB 541LB 541MB 541NB 541PB 541QB
57-844-01	0.42	0.30	0.72	542AB 542BB
57-845-01	0.42	0.30	0.72	542AB 542BB
57-846-01	2.11	0.75	2.86	543AB 543BB 543CB 543DB 544AB 544BB 544CB 544DB 544EB 544FB 544GB 544HB 544JB
57-847-01	2.63	1.00	3.63	543AB 543BB 543CB 543DB 544AB 544BB 544CB 544DB 544EB 544FB 544GB 544HB 544JB 544KB 544LB 544MB
57-848-01	0.00	0.10	0.10	
57-850-01	0.14	0.20	0.34	545AB 545BB
57-851-01	0.35	0.20	0.55	545CB 545EB 545FL 545GL 545HB
57-852-01	0.00	0.30	0.30	
57-854-01	2.73	0.60	3.33	551AB 551BB 551CB 551DB 551EB 551FB
57-856-01	4.42	0.40	4.82	552AB 552BB 552CB 552DB 552EB 552FB 552GB 552HB 552JB 552LB



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
57-858-01	0.00	0.20	0.20	561AB 561BB 561CB 561DB 561EB 561FB 561GB 561HB 561JB 561KB 561LB 561MB 561NB 561PB 561QB 561RB 561SB
57-860-01	0.00	0.40	0.40	
57-862-01	0.00	0.20	0.20	
57-864-01	0.00	0.50	0.50	
57-866-01	6.39	1.50	7.89	
57-868-01	0.00	0.50	0.50	571AB 571BB
57-870-01	0.00	0.50	0.50	
57-872-01	0.00	0.30	0.30	
57-874-01	0.00	0.10	0.10	
57-876-01	0.46	0.15	0.61	
57-878-01	0.00	0.10	0.10	573AB 573BB 573CL 573CR 573EB
57-880-01	0.00	0.25	0.25	
57-882-01	2.05	0.80	2.85	
57-884-01	0.00	0.10	0.10	
57-886-01	0.00	0.20	0.20	
57-888-01	2.19	0.70	2.89	576AB 576BB 576CL 576CR 576DB 576EB 576GL
57-890-01	0.00	0.20	0.20	
57-892-01	2.09	0.70	2.79	
57-894-01	0.00	0.10	0.10	





## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
57-896-02	5.79	1.00	6.79	611AB 611CB 611DB 611FB 611HB 611JB 611KB 611LB 611NB 611PB 611QB
57-898-02	0.00	0.50	0.50	
57-900-02	0.00	0.10	0.10	
57-902-02	0.00	0.20	0.20	
57-904-02	0.00	0.10	0.10	
57-906-02	0.00	0.50	0.50	
57-908-02	5.45	1.50	6.95	621AAB 621AB 621ABB 621ACB 621AEB 621BB 621DB 621EB 621GB 621HB 621JB 621MB 621NB 621PB 621RB 621SB 621TB 621WB 621XB 621YB
57-909-02	5.57	1.50	7.07	621AAB 621AB 621ABB 621ACB 621AFB 621AHB 621BB 621DB 621EB 621GB 621HB 621JB 621MB 621NB 621PB 621RB 621SB 621TB 621WB 621XB 621YB
57-910-02	0.00	0.60	0.60	
57-912-02	1.40	0.40	1.80	622AB 622CB 622DB 622EB 622FB 622GB 622HB 622IB 622JB 622KB
57-914-02	1.26	0.40	1.66	623BB 623CB 623DB 623EB 623FB 623GB 623HB 623IB 623JB
57-916-02	1.40	0.40	1.80	624BB 624CB 624DB 624EB 624FB 624GB 624HB 624IB 624JB 624KB



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
57-918-02	1.40	0.40	1.80	625BB 625CB 625DB 625EB 625FB 625GB 625HB 625IB 625JB 625KB
57-920-02	1.05	0.40	1.45	626AB 626BB 626CB 626DB 626EB 626FB 626GB
57-922-02	1.40	0.40	1.80	627AB 627BB 627CB 627DB 627EB 627FB 627GB 627HB 627IB 627JB
57-923-02	1.82	0.50	2.32	627AB 627BB 627CB 627DB 627EB 627FB 627GB 627HB 627IB 627JB 627KB 627LB 627MB
57-924-02	0.00	0.50	0.50	
57-926-02	0.63	0.60	1.23	631AB 631BB 631CB
57-928-02	0.21	0.30	0.51	632AB
57-930-02	1.47	0.80	2.27	633AB 633BB 633CB 633DB 633EB 633FB 633GB
57-932-02	0.00	0.75	0.75	
57-934-02	3.15	1.50	4.65	641AB 641BB 641CB 641DB 641EB 641FB 641GB 641HB 641JB 641KB 641LB 641MB 641NB 641PB 641QB
57-936-02	0.42	0.30	0.72	642AB 642BB
57-937-02	0.42	0.30	0.72	642AB 642BB
57-938-02	2.33	0.75	3.08	643AB 643BB 643CB 643DB 644AB 644BB 644CB 644DB 644EB 644FB 644GB 644HB 644JB



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
57-939-02	2.84	1.00	3.84	643AB 643BB 643CB 643DB 644AB 644BB 644CB 644DB 644EB 644FB 644GB 644HB 644JB 644KB 644LB 644MB
57-940-02	0.00	0.10	0.10	
57-942-02	0.14	0.20	0.34	645AB 645BB
57-943-02	0.35	0.20	0.55	645CB 645EB 645FR 645GR 645HB
57-944-02	0.00	0.30	0.30	
57-946-02	2.73	0.60	3.33	651AB 651BB 651CB 651DB 651EB 651FB
57-948-02	4.42	0.40	4.82	652AB 652BB 652CB 652DB 652EB 652FB 652GB 652HB 652JB 652LB
57-950-02	0.00	0.20	0.20	
57-952-02	0.00	0.40	0.40	
57-954-02	0.00	0.20	0.20	
57-956-02	0.00	0.50	0.50	
57-958-02	6.39	1.50	7.89	661AB 661BB 661CB 661DB 661EB 661FB 661GB 661HB 661JB 661KB 661LB 661MB 661NB 661PB 661QB 661RB 661SB
57-960-02	0.00	0.50	0.50	
57-962-02	0.00	0.50	0.50	
57-964-02	0.00	0.30	0.30	
57-966-02	0.00	0.10	0.10	
57-968-02	0.46	0.15	0.61	671AB 671BB



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
57-970-02	0.00	0.10	0.10	673AB 673BB 673CL 673CR 673EB
57-972-02	0.00	0.25	0.25	
57-974-02	2.05	0.10	2.15	
57-976-02	0.00	0.10	0.10	
57-978-02	0.00	0.20	0.20	
57-980-02	2.19	0.70	2.89	676AB 676BB 676CL 676CR 676DB 676EB 676GR
57-982-02	0.00	0.20	0.20	677AB 677BB 677CB 677DL 677DR 677EB 677GR
57-984-02	2.09	0.70	2.79	
57-986-02	0.00	0.10	0.10	413AL 414AR 415AL 415LB 415NB 416AR
71-205-01	0.94	0.50	1.44	
71-205-02	0.94	0.50	1.44	423AL 424AR 425AL 425LB 425NB 426AR
71-210-01	0.94	0.50	1.44	413AL 414AR 415AL 415LB 415NB 416AR
71-210-02	0.94	0.50	1.44	423AL 424AR 425AL 425LB 425NB 426AR
71-350-01	0.90	0.50	1.40	413AL 414AR 415AL 416AR
71-350-02	0.90	0.50	1.40	423AL 424AR 425AL 426AR
71-355-01	0.90	0.50	1.40	413AL 414AR 415AL 416AR
71-355-02	0.90	0.50	1.40	423AL 424AR 425AL 426AR
71-800-01	0.00	0.50	0.50	413AL 414AR 415AL 415LB 415NB 416AR
71-802-01	0.96	2.00	2.96	



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
71-804-01	0.36	0.25	0.61	413AL 414AR
71-806-01	0.36	0.50	0.86	413AL 414AR
71-808-01	0.96	0.50	1.46	413AL 414AR 415AL 415LB 415MB 415NB 416AR
71-810-01	0.00	0.25	0.25	
71-812-02	0.00	0.50	0.50	
71-814-02	0.96	2.00	2.96	423AL 424AR 425AL 425LB 425MB 425NB 426AR
71-816-02	0.36	0.25	0.61	423AL 424AR
71-818-02	0.36	0.50	0.86	423AL 424AR
71-820-02	0.96	0.50	1.46	423AL 424AR 425AL 425LB 425MB 425NB 426AR
71-822-02	0.00	0.25	0.25	
71-830-01	0.00	0.20	0.20	
71-832-01	0.00	0.50	0.50	
71-834-01	0.96	2.00	2.96	413AL 414AR 415AL 415HB 415JB 415KB 416AR
71-836-01	0.36	0.25	0.61	413AL 414AR
71-838-01	0.36	0.50	0.86	413AL 414AR
71-840-01	0.96	0.50	1.46	413AL 414AR 415AL 415HB 415JB 415KB 416AR
71-842-01	0.00	0.25	0.25	
71-844-02	0.00	0.20	0.20	
71-846-02	0.00	0.50	0.50	
71-848-02	0.96	2.00	2.96	423AL 424AR 425AL 425HB 425JB 425KB 426AR



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
71-850-02	0.36	0.25	0.61	423AL 424AR
71-852-02	0.36	0.50	0.86	423AL 424AR
71-854-02	0.96	0.50	1.46	423AL 424AR 425AL 425HB 425JB 425KB 426AR
71-856-02	0.00	0.50	0.50	
71-860-01	0.00	0.20	0.20	
71-862-01	0.00	0.50	0.50	
71-864-01	0.94	2.00	2.94	413AL 414AR 415AL 415HB 415JB 416AR
71-866-01	0.36	0.25	0.61	413AL 414AR
71-868-01	0.36	0.50	0.86	413AL 414AR
71-870-01	0.94	0.50	1.44	413AL 414AR 415AL 415HB 415JB 416AR
71-872-01	0.00	0.25	0.25	
71-874-02	0.00	0.20	0.20	
71-876-02	0.00	0.50	0.50	
71-878-02	0.94	2.00	2.94	423AL 424AR 425AL 425HB 425JB 426AR
71-880-02	0.36	0.25	0.61	423AL 424AR
71-882-02	0.36	0.50	0.86	423AL 424AR
71-884-02	0.94	0.50	1.44	423AL 424AR 425AL 425HB 425JB 426AR
71-886-02	0.00	0.25	0.25	
72-001-00	0.00	1.00	1.00	
72-005-01	0.00	2.00	2.00	
72-005-02	0.00	2.00	2.00	



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
72-010-00	0.00	0.00	0.00	
72-015-00	0.00	0.00	0.00	
72-020-01	0.96	0.20	1.16	413AL 414AR 415AL 415HB 415JB 415KB 416AR
72-020-02	0.96	0.20	1.16	423AL 424AR 425AL 425HB 425JB 425KB 426AR
72-021-01	0.96	0.30	1.26	413AL 414AR 415AL 415HB 415JB 415KB 416AR
72-021-02	0.96	0.30	1.26	423AL 424AR 425AL 425HB 425JB 425KB 426AR
72-025-01	0.00	0.50	0.50	
72-025-02	0.00	0.50	0.50	
72-030-01	0.00	0.40	0.40	
72-030-02	0.00	0.40	0.40	
72-035-00	0.00	0.00	0.00	
72-040-00	0.00	0.00	0.00	
72-045-00	0.00	0.00	0.00	
72-050-00	0.00	0.00	0.00	
72-055-00	0.00	0.00	0.00	
72-060-01	0.96	3.00	3.96	413AL 414AR 415AL 415HB 415JB 415KB 416AR
72-060-02	0.96	3.00	3.96	423AL 424AR 425AL 425HB 425JB 425KB 426AR
72-065-01	0.96	3.00	3.96	413AL 414AR 415AL 415HB 415JB 415KB 416AR
72-065-02	0.96	3.00	3.96	423AL 424AR 425AL 425HB 425JB 425KB 426AR



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
72-070-00	0.00	0.00	0.00	
72-075-00	0.00	0.00	0.00	
72-080-01	0.96	0.25	1.21	413AL 414AR 415AL 415HB 415JB 415KB 416AR
72-080-02	0.96	0.25	1.21	423AL 424AR 425AL 425HB 425JB 425KB 426AR
72-083-01	0.96	0.25	1.21	413AL 414AR 415AL 415HB 415JB 415KB 416AR
72-083-02	0.96	0.25	1.21	423AL 424AR 425AL 425HB 425JB 425KB 426AR
72-090-01	0.96	0.50	1.46	413AL 414AR 415AL 415HB 415JB 415KB 416AR
72-090-02	0.96	0.50	1.46	423AL 424AR 425AL 425HB 425JB 425KB 426AR
72-206-01	0.94	3.00	3.94	413AL 414AR 415AL 415LB 415NB 416AR
72-206-02	0.94	3.00	3.94	423AL 424AR 425AL 425LB 425NB 426AR
72-207-01	0.94	3.00	3.94	413AL 414AR 415AL 415LB 415NB 416AR
72-207-02	0.94	3.00	3.94	423AL 424AR 425AL 425LB 425NB 426AR
72-211-01	0.94	1.00	1.94	413AL 414AR 415AL 415LB 415NB 416AR
72-211-02	0.94	1.00	1.94	423AL 424AR 425AL 425LB 425NB 426AR
72-212-01	0.94	1.00	1.94	413AL 414AR 415AL 415LB 415NB 416AR
72-212-02	0.94	1.00	1.94	423AL 424AR 425AL 425LB 425NB 426AR





## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
72-220-01	0.00	2.00	2.00	413AL 414AR 423AL 424AR 413AL 414AR 415AL 415LB 415MB 415NB 416AR 423AL 424AR 425AL 425LB 425MB 425NB 426AR  413BL 423BL 413AL 414AR 415AL 415HB 415JB 415KB 416AR 423AL 424AR 425AL 425HB 425JB 426AR
72-220-02	0.00	2.00	2.00	
72-225-00	0.00	0.00	0.00	
72-235-01	0.00	0.10	0.10	
72-235-02	0.00	0.10	0.10	
72-240-01	0.36	0.50	0.86	
72-240-02	0.36	0.50	0.86	
72-245-01	0.96	0.50	1.46	
72-245-02	0.96	0.50	1.46	
72-250-00	0.00	0.00	0.00	
72-255-00	0.00	0.00	0.00	
72-260-00	0.00	0.00	0.00	
72-265-00	0.00	0.00	0.00	
72-270-01	0.02	0.50	0.52	
72-270-02	0.02	0.50	0.52	
72-280-01	0.96	0.20	1.16	
72-280-02	0.94	0.20	1.14	
72-345-01	0.00	2.00	2.00	
72-345-02	0.00	2.00	2.00	
72-346-01	0.00	2.00	2.00	
72-346-02	0.00	2.00	2.00	



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
72-350-01	0.00	2.00	2.00	413AL 414AR 415AL 416AR 423AL 424AR 425AL 426AR  414CR 424CR 414CR 424CR  413AL 414AR 423AL 424AR 413AL 414AR 415AL 416AR 423AL 424AR 425AL 426AR 413AL 414AR 415AL 416AR 423AL 424AR 425AL 426AR  413AL 414AR 415AL 416AR 423AL 424AR 425AL 426AR
72-350-02	0.00	2.00	2.00	
72-355-00	0.00	0.00	0.00	
72-360-00	0.00	0.00	0.00	
72-365-00	0.00	0.00	0.00	
72-370-01	0.90	0.50	1.40	
72-370-02	0.90	0.50	1.40	
72-375-01	0.00	0.25	0.25	
72-375-02	0.00	0.25	0.25	
72-376-01	0.02	0.25	0.27	
72-376-02	0.02	0.25	0.27	
72-377-01	0.02	0.25	0.27	
72-377-02	0.02	0.25	0.27	
72-380-00	0.00	0.00	0.00	
72-385-01	0.36	0.50	0.86	
72-385-02	0.36	0.50	0.86	
72-390-01	0.90	0.20	1.10	
72-390-02	0.90	0.20	1.10	
72-400-01	0.90	0.20	1.10	
72-400-02	0.90	0.20	1.10	
72-405-00	0.00	0.00	0.00	
72-410-01	0.90	1.50	2.40	
72-410-02	0.90	1.50	2.40	



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
72-415-01	0.90	1.50	2.40	413AL 414AR 415AL 416AR
72-415-02	0.90	1.50	2.40	423AL 424AR 425AL 426AR
72-420-00	0.00	0.00	0.00	
72-425-00	0.00	0.00	0.00	
72-430-00	0.00	0.00	0.00	
72-435-00	0.00	0.00	0.00	
72-440-00	0.00	0.00	0.00	
72-445-01	0.90	1.50	2.40	413AL 414AR 415AL 416AR
72-445-02	0.90	1.50	2.40	423AL 424AR 425AL 426AR
73-010-01	0.00	0.30	0.30	
73-010-02	0.00	0.30	0.30	
73-011-00	0.00	0.50	0.50	
73-055-01	0.00	0.20	0.20	
73-055-02	0.00	0.20	0.20	
73-210-01	0.94	1.00	1.94	413AL 414AR 415AL 415LB 415NB 416AR
73-210-02	0.94	1.00	1.94	423AL 424AR 425AL 425LB 425NB 426AR
73-350-01	0.36	1.00	1.36	413AL 414AR
73-350-02	0.36	1.00	1.36	423AL 424AR
77-005-01	0.00	0.20	0.20	
77-005-02	0.00	0.20	0.20	
78-005-01	0.96	0.30	1.26	413AL 414AR 415AL 415HB 415JB 415KB 416AR



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
78-005-02	0.96	0.30	1.26	423AL 424AR 425AL 425HB 425JB 425KB 426AR
78-010-01	0.36	1.60	1.96	413AL 414AR
78-010-02	0.36	1.60	1.96	423AL 424AR
78-015-01	0.36	0.50	0.86	413AL 414AR
78-015-02	0.36	0.50	0.86	423AL 424AR
78-020-01	0.38	0.20	0.58	413AL 414AR 434CL
78-020-02	0.38	0.20	0.58	423AL 424AR 444CL
78-025-01	0.38	2.00	2.38	413AL 414AR 434CL
78-025-02	0.38	2.00	2.38	423AL 424AR 444CL
78-030-01	0.00	0.40	0.40	
78-030-02	0.00	0.40	0.40	
78-205-01	0.36	0.70	1.06	413AL 414AR
78-205-02	0.36	0.70	1.06	423AL 424AR
78-210-01	0.38	3.00	3.38	413AL 414AR 434CL
78-210-02	0.38	3.00	3.38	423AL 424AR 444CL
78-215-01	0.00	0.50	0.50	
78-215-02	0.00	0.50	0.50	
78-220-01	0.38	3.00	3.38	413AL 414AR 434CL
78-220-02	0.38	3.00	3.38	423AL 424AR 444CL
78-225-01	0.36	1.60	1.96	413AL 414AR
78-225-02	0.36	1.60	1.96	423AL 424AR
78-350-01	0.36	1.60	1.96	413AL 414AR
78-350-02	0.36	1.60	1.96	423AL 424AR



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
78-355-01	0.36	0.40	0.76	413AL 414AR
78-355-02	0.36	0.40	0.76	423AL 424AR
78-360-01	0.36	1.50	1.86	413AL 414AR
78-360-02	0.36	1.50	1.86	423AL 424AR
78-365-01	0.36	0.75	1.11	413AL 414AR
78-365-02	0.36	0.75	1.11	423AL 424AR
78-370-01	0.00	0.75	0.75	
78-370-02	0.00	0.75	0.75	
78-375-01	0.90	0.30	1.20	413AL 414AR 415AL 416AR
78-375-02	0.90	0.30	1.20	423AL 424AR 425AL 426AR
78-380-01	0.90	0.30	1.20	413AL 414AR 415AL 416AR
78-380-02	0.90	0.30	1.20	423AL 424AR 425AL 426AR
78-385-01	0.90	8.00	8.90	413AL 414AR 415AL 416AR
78-385-02	0.90	8.00	8.90	423AL 424AR 425AL 426AR
78-390-01	0.90	1.00	1.90	413AL 414AR 415AL 416AR
78-390-02	0.90	1.00	1.90	423AL 424AR 425AL 426AR
79-010-01	0.45	1.00	1.45	414AR 416AR
79-010-02	0.45	1.00	1.45	424AR 426AR
79-385-01	0.36	1.00	1.36	413AL 414AR
79-385-02	0.36	1.00	1.36	423AL 424AR
79-390-01	0.36	1.00	1.36	413AL 414AR
79-390-02	0.36	1.00	1.36	423AL 424AR
80-005-01	0.96	0.50	1.46	413AL 414AR 415AL 415HB 415JB 415KB 416AR



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

MPD ITEM NUMBER	ACCESS LABOR HOURS (INCLUDES BOTH OPEN AND CLOSE TIMES)	TASK LABOR HOURS	TOTAL LABOR HOURS	ACCESS PANEL
80-005-02	0.96	0.50	1.46	423AL 424AR 425AL 425HB 425JB 425KB 426AR
80-205-01	0.94	1.00	1.94	413AL 414AR 415AL 415LB 415NB 416AR
80-205-02	0.94	1.00	1.94	423AL 424AR 425AL 425LB 425NB 426AR
80-210-01	0.94	0.50	1.44	413AL 414AR 415AL 415LB 415NB 416AR
80-210-02	0.94	0.50	1.44	423AL 424AR 425AL 425LB 425NB 426AR
80-350-01	0.18	1.00	1.18	413AL
80-350-02	0.18	1.00	1.18	423AL
80-355-01	0.18	0.50	0.68	413AL
80-355-02	0.18	0.50	0.68	423AL



### A. C-CHECK TASK LISTING

At the request of airplane leasing companies, a representative scheduled maintenance program was developed using the concept of block maintenance.

The block maintenance program consists of scheduled maintenance requirements organized into base maintenance and line maintenance. The block maintenance program shown in this appendix is based on an average fleet utilization of 5.6 FH/cycle and 14 hours per day. Airplane fleets operating above or below this average fleet utilization should be aware the content of the tasks in each package will be different compared to the block maintenance program provided in this appendix and may need a different scheduled maintenance program developed.

In the block maintenance program, individual maintenance tasks have their original maintenance intervals but are also assigned to a standard check package such as an A or C check. The use of a standard check package provides convenience for planning and work monitoring.

The line maintenance consists of the maintenance packages: 1A through 14A that must be performed between the C-checks. The line maintenance tasks do not require special access, special setup, extensive downtime, extensive labor or extensive materials. The line maintenance tasks are intended to be performed outside of the hangar and suitable for gate operations.

The 1A check frequency occurs at 1000 FH. Each successive A-check frequency is a multiple of the 1A check frequency. For example, the 3A check frequency occurs at 3000 FH.

The base maintenance consists of the maintenance packages: 1C through 8C. The maintenance tasks contained in each C-check may require special access, special setup, extensive downtime, extensive labor and extensive materials. The base maintenance tasks are intended to be performed in the hangar. In this block maintenance program, structures tasks originally at a maintenance interval between two C-check intervals, were moved (de-escalated) to the appropriate C-check interval package in order to facilitate base maintenance.

Due to packaging requirement, "1C" interval were de-escalated which resulted in the "1C" check frequency occurs at 14000 FH/1000 days. Each successive C-check frequency is a multiple of the 1C check frequency. For example, the 3C check frequency occurs at 42000 FH/3000 days.

### B. 1C CHECK

1C CHECK	
TASK CARD NUMBER	TASK TITLE
12-008-00-01	Left Wing Inboard Leading Edge Torque Tube Supports and Couplings
12-008-00-02	Right Wing Inboard Leading Edge Torque Tube Supports and Couplings
12-008-00-11	Left Wing Outboard Leading Edge Torque Tube Supports and Couplings
12-008-00-12	Right Wing Outboard Leading Edge Torque Tube Supports and Couplings
12-008-01-01	Forward Cargo Compartment Torque Tube Supports and Couplings
12-018-00-01	Left Wing Krueger Flap Drive Arm Bearing



1C CHECK	
TASK CARD NUMBER	TASK TITLE
12-018-00-02	Right Wing Krueger Flap Drive Arm Bearing
12-030-00-01	Left Wing Trailing Edge Torque Tube and Torque Tube Supports
12-030-00-02	Right Wing Trailing Edge Torque Tube and Torque Tube Supports
12-106-00-01	Passenger Entry Door Mechanisms
12-110-00-01	Forward Access Door Latch Pin
12-112-00-01	Main Equipment Center Access Door Latch Pin
20-010-00-01	Primary Flight Control and Brake Control Cables Turns
20-010-00-02	Primary Flight Control and Brake Control Cables
20-010-00-03	Primary Flight Control and Brake Control Cable Turns
20-010-00-04	Primary Flight Control Cable Turns
20-010-00-05	Primary Flight Control Cable Turns
20-012-00-01	Nose Gear Steering Control Cable Turns
20-012-00-02	Nose Gear Steering Control Cable Turns
20-015-00-01	Primary Flight Control and Brake Control Cables - straight runs
20-015-00-02	Primary Flight Control and Brake Control Cables - straight runs
20-015-00-03	Primary Flight Control and Brake Control Cables - Straight Runs
20-015-00-04	Primary Flight Control and Brake Control Cables - Straight Runs
20-015-00-05	Primary Flight Control and Brake Control Cable - Straight Runs
20-015-00-06	Primary Flight Control and Brake Control Cable - Straight Runs
20-015-00-07	Primary Flight Control Cables - Straight Runs
20-015-00-08	Primary Flight Control Cables - Straight Runs
20-015-00-09	Primary Flight Control Cables in Fuselage - Straight Runs
20-018-00-01	Nose Gear Steering Control Cables - straight runs
20-018-00-02	Nose Gear Steering Control Cables - straight runs
20-110-00-01	Primary Flight Control Cables - Protected Unpressurized Areas
20-110-00-02	Primary Flight Control Cables - Protected Unpressurized Areas





1C CHECK	
TASK CARD NUMBER	TASK TITLE
20-110-00-03	Primary Flight Control Cables - Protected Unpressurized Areas
20-110-00-04	Primary Flight Control Cables - Protected Unpressurized Areas
20-110-00-05	Primary Flight Control Cables - PROTECTED/UNPROTECTED UNPRESSURIZED AREAS
20-251-10-01	FOIL/MESH PANELS; ENGINE COWLS, STRUT, LEADING EDGE
20-251-20-01	FOIL/MESH PANELS; ENGINE COWLS, STRUT, LEADING EDGE
20-260-00-01	Ram Air Turbine (RAT) Wire Shielding Functional Check
20-270-01-01	PFCS Wire Shielding Functional Check - Left Wing
20-270-02-01	PFCS Wire Shielding Functional Check - Right Wing
20-280-00-01	PFCS Wire Shielding Functional Check - Empennage
20-310-01-01	Functional Check Wire Bundle Inspection Left Flaps, Slats, Skew Sensors
20-310-02-01	Functional Check Wire Bundle Right Flaps, Slats, Skew Sensors
20-320-00-01	Gust Suppression Transducers Wire Shielding Functional Check
20-642-00-01	Forward Bulkhead Left Main Landing Gear Wheel Well
20-644-00-01	Forward Bulkhead Right Main Landing Gear Wheel Well
20-648-00-01	Forward Cargo Power Drive Unit Wire Bundles
20-650-00-01	Areas Behind the FWD Cargo Compartment Sidewalls
20-658-00-01	Area Behind the Forward Cargo Compartment
20-665-00-01	Aft Cargo Power Drive Unit Wire Bundles
20-700-00-01	Areas Behind the Passenger Compartment Air Grilles
20-704-00-01	Wiring Behind Passenger Compartment Air Grilles
20-716-00-01	Area Around the Video Control Center
20-734-00-01	External Power Receptacle in the Main Equipment Center.
20-742-00-01	Areas Behind the Passenger Compartment Air Grilles
20-750-00-01	Wiring Behind Passenger Compartment Air Grilles



1C CHECK	
TASK CARD NUMBER	TASK TITLE
20-754-00-01	Areas Behind the Passenger Compartment Air Grilles
20-758-00-01	Wiring Behind Passenger Compartment Air Grilles
20-766-00-01	Areas Behind the Passenger Compartment Air Grilles
20-774-00-01	Wiring Behind Passenger Compartment Air Grilles
20-778-00-01	Areas Behind the Passenger Compartment Air Grilles
20-782-00-01	Wiring Behind Passenger Compartment Air Grilles
20-794-00-01	APU and APU Starter Power Feeders
20-800-00-01	Engine and Backup Generator Power Feeders - Left Engine
20-802-00-01	Engine and Backup Generator Power Feeders - Right Engine
21-040-00-01	Chiller Boost Fan
21-048-00-01	E/E Cooling System Override Switch
21-055-00-01	Condenser/Reheater
21-110-00-01	Cabin Positive Pressure Relief Valves
21-110-00-02	Cabin Positive Pressure Relief Valves
21-120-00-01	Cabin Positive Pressure Relief Filters
21-130-00-01	AFT and Bulk Cargo Temperature Selector Switches
21-131-00-01	AFT/Bulk Cargo Overheat Protection Switch & Relay
21-180-00-01	AC Pack Conditioned Air Check Valves
21-180-00-02	AC Pack Conditioned Air Check Valves
21-240-00-01	Ozone Converters
23-010-00-01	Passenger Address System
23-010-00-02	Personnel Address System
23-060-00-01	Static Dischargers
23-080-00-01	Voice Recorder System - Four Channel Operation
23-100-00-01	Voice Recorder System - Under Water Locator Beacon
23-100-00-02	Voice Recorder System - Under Water Locator Beacon



1C CHECK	
TASK CARD NUMBER	TASK TITLE
24-200-00-01	External Power Receptacles (Wear Check)
24-210-00-01	External Power Receptacles (Inspection)
25-055-00-01	Passenger Compartment Articulating Seats
25-062-00-01	Life Raft
25-067-00-01	Off-Wing Slide Compartment Door Lock/Latch System
25-068-00-01	Off-Wing Escape Slide Compartment Door Indication System
25-240-00-01	Passenger Entry Door Emergency Escape Slide
25-240-00-02	Overwing Door Emergency Escape Slide
26-090-00-01	Engine Fire Switches
26-090-00-02	Engine Fire Switches
26-090-00-03	Engine Fire Switches
26-100-00-01	Engine Fire Extinguishing Distribution Lines
26-100-00-02	Engine Fire Extinguishing Distribution Lines
26-100-00-03	Engine Fire Extinguishing Distribution Lines
26-150-00-01	APU Fire Switch
26-200-00-01	Cargo Fire Extinguishing Arm & Discharge Switches
26-210-00-01	Cargo Fire Extinguishing Tubing
27-150-00-01	Primary Flight Computer Disconnect Switch
27-170-00-01	Left Wing Aileron and Flaperon System Hydraulic Fuses
27-170-00-02	Right Wing Aileron and Flaperon System Hydraulic Fuses
27-170-00-03	Rudder System Hydraulic Fuse
27-180-00-01	Rudder Check Valve
27-190-00-01	Wheel Jam Breakout Mechanism
27-200-00-01	Rudder Power Control Units



1C CHECK	
TASK CARD NUMBER	TASK TITLE
27-210-00-01	Control Column Breakout Mechanism
27-220-00-01	Elevator Power Control Units
27-240-00-01	Elevator Power Control Unit Bearings
27-270-00-01	Stabilizer Secondary Brakes
27-280-00-01	Stabilizer Trim Limit Switches
27-320-00-01	Left Wing TE Flap No-Back Brakes
27-320-00-02	Right Wing TE Flap No-Back Brakes
27-330-00-01	Auto Speedbrake Function
27-340-00-01	Left Leading Edge Slat No-Back Brakes
27-340-00-02	Right Leading Edge Slat No-Back Brakes
27-350-00-01	Autoslat Priority Valves - Main Landing Gear
27-360-00-01	Left Leading Edge Slat Skew/Loss Cable
27-360-00-02	Right Leading Edge Slat Skew/Loss Cable
27-400-00-01	Aileron Trim Inhibit Operational Check
27-420-00-01	Rudder Pedal Pogo
27-430-00-01	Rudder Power Control Unit
27-440-00-01	Stabilizer Freeplay
28-010-00-01	Fuel Vent Float Valves
28-015-00-01	Left Fuel Surge Tank FLAME ARRESTORS. Zone 542
28-015-00-02	Right Fuel Surge Tank FLAME ARRESTORS. Zone 642
28-022-00-01	Engine Fuel Spar Valve Battery Circuit
28-022-60-01	GFI Relay Check
28-022-60-02	GFI Relay Check
28-025-00-01	Left Engine Fuel Spar Valve
28-025-00-02	Right Engine Fuel Spar Valve
28-030-00-01	APU Fuel Supply Line And Shroud



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

1C CHECK	
TASK CARD NUMBER	TASK TITLE
28-040-00-01	Defuel Valve Actuator
28-050-00-01	Fuel Jettison System
29-030-00-01	Hydraulic System Gross Internal Leakage
29-140-00-01	Center Hydraulic System Reservoir Pressurization Module
29-140-00-02	Left Hydraulic System Reservoir Pressurization Module
29-140-00-03	Right Hydraulic System Reservoir Pressurization Module
31-010-00-01	Flight Data Recorder System
31-010-00-02	Flight Data Recorder System
31-010-00-03	Flight Data Recorder System
31-010-00-04	Flight Data Recorder System
31-030-00-01	Flight Data Recorder Underwater Locator Beacon (ULB)
31-030-00-02	Flight Data Recorder Underwater Locator Beacon (ULB)
32-160-00-01	Brake Accumulator
32-170-00-01	Normal and Alternate Brake Systems
32-180-00-01	Left Main Landing Gear Antiskid Module Hydraulic Fuses
32-180-00-02	Right Main Landing Gear Antiskid Module Hydraulic Fuses
32-300-00-01	Left Main Landing Gear Mechanisms
32-300-00-02	Right Main Landing Gear Mechanisms
32-310-00-01	Left Main Landing Gear Door Mechanisms
32-310-00-02	Right Main Landing Gear Door Mechanisms
32-320-00-01	Nose Landing Gear Mechanisms
32-330-00-01	Nose Landing Gear Door Mechanisms
32-802-00-01	Nose Landing Gear and Landing Gear Doors
32-806-01-01	Left Main Landing Gear and Landing Gear Doors



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

1C CHECK	
TASK CARD NUMBER	TASK TITLE
32-810-02-01	Right Main Landing Gear and Landing Gear Doors
35-060-00-01	Passenger Oxygen System Door Latch/Actuator
35-060-00-02	Passenger Oxygen System Door Latch/Actuator
35-060-00-03	Passenger Oxygen System Door Latch/Actuator
35-060-00-04	Passenger Oxygen System Door Latch/Actuator
35-140-00-01	Passenger Gaseous Oxygen System Flow Control Units
35-180-00-01	Door Latch/Actuator and Decompression Horns
35-180-00-02	Door Latch/Actuator and Decompression Horns
35-180-00-03	Crew Rest Decompression Alarm Test
36-010-00-01	Engine Air Supply Manifold
38-020-00-01	Potable Water Isolation Valves and Cables
38-020-00-02	Potable Water Isolation Valves and Cables
38-030-00-01	Waste Drain Ball Valve & Fitting Seals (Not applicable to the 777F)
38-120-00-01	Potable Water Pressure Relief Valve
47-100-00-01	Restore the Ozone Converter (off-aircraft).
47-110-00-01	Clean the Primary Heat Exchanger (off-aircraft).
47-120-00-01	Functionally check the Regenerative Heat Exchanger (off-aircraft).
47-130-00-01	Restore the Filter Differential Pressure Sensor Switch (off-aircraft).
47-140-00-01	Visually Check for Fluid Accumulation Through the Drain Valve or Drain Cap.
47-150-00-01	Inspect (detailed) the Nitrogen Enriched Air (NEA) distribution lines
52-120-01-01	Passenger Entry Door Flight Lock Mechanism
52-125-00-01	No. 3 Over-Wing Door Flight Lock Mechanism
52-130-01-01	Passenger Entry Door Girt Bar Mechanism Interlock
52-135-00-01	No. 3 Over-Wing Door Latch Torque Tube Interlock
52-150-01-01	Passenger Entry Door EPAS Tubing
52-155-00-01	No. 3 Over-Wing Doors EPAS Tubing



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

1C CHECK	
TASK CARD NUMBER	TASK TITLE
52-160-00-01	Passenger Entry Door EPAS Circuitry
52-160-00-02	Passenger Entry Door EPAS Circuitry
52-160-00-03	Passenger Entry Door EPAS Circuitry
52-160-00-04	Passenger Entry Door EPAS Circuitry
52-170-01-01	Passenger Entry Door Mechanisms
52-175-00-01	No. 3 Over-Wing Door Mechanisms
52-180-00-01	Forward Large Cargo Door Manual Drive Mechanism & Lift PDU Brake
52-185-00-01	AFT Large Cargo Door Manual Drive Mechanism & Lift PDU Brake
52-210-00-01	Forward Large Cargo Door Ditching Interlock Mechanism
52-215-00-01	AFT Large Cargo Door Ditching Interlock Mechanism
52-220-00-01	AFT Small Cargo Door Hinge Power Drive Unit and Manual Drive Mechanism
52-240-00-01	Bulk Cargo Door Latch Mechanism
52-260-00-01	Passenger Entry Door Closed Proximity Sensors
52-265-00-01	No. 3 Over-Wing Doors Closed Proximity Sensors
52-270-00-01	Bulk Cargo Door Latch Microswitch
52-280-00-01	Forward Access Door Latched Proximity Sensor
52-290-00-01	Main Equip Center Door Latched Proximity Sensor
52-310-00-01	Flight Deck Door Pressure Sensor
52-330-00-01	Flight Deck Door Deny Time Delay
52-502-00-01	Forward Large Cargo Door
52-510-00-01	Aft Large Cargo Door
52-802-00-01	Forward Large Cargo Door
52-806-00-01	Aft Small Cargo Door
52-810-00-01	Aft Large Cargo Door



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

1C CHECK	
TASK CARD NUMBER	TASK TITLE
52-814-00-01	Bulk Cargo Door
52-816-01-01	Left No. 1 Passenger Entry Door - Section 41
52-820-01-01	Left No. 2 Passenger Entry Door - Section 43
52-824-01-01	Left No. 3 Overwing Door - Section 44
52-827-01-01	Left No. 4 Passenger Entry Door - Section 46
52-831-01-01	Left No. 5 Passenger Entry Door - Section 47
52-834-02-01	Right No. 1 Passenger/Crew Entry Door - Section 41
52-840-02-01	Right No. 2 Passenger Entry Door - Section 43
52-844-02-01	Right No. 3 Overwing Door - Section 44
52-849-02-01	Right No. 4 Passenger Entry Door - Section 46
52-853-02-01	Right No. 5 Passenger Entry Door - Section 47
53-509-01-01	Forward Cargo Compartment
53-518-00-01	Main Landing Gear Wheel Well, Left
53-519-00-01	Main Landing Gear Wheel Well, Right
53-522-01-01	Aft Cargo Compartment
53-523-01-01	Aft Cargo Compartment
53-529-01-01	Area Below Aft Cargo Compartment
53-530-01-01	Area Below Aft Cargo Compartment
53-532-00-01	Area Below Aft Cargo Compartment
53-533-00-01	Area Below Aft Cargo Compartment
53-543-00-01	Overwing Wing-To-Body Fairings, Left
53-544-00-01	Overwing Wing-To-Body Fairings, Right
53-553-00-01	Passenger Compartment - Left
53-554-00-01	Passenger Compartment - Right
53-564-00-01	Passenger Compartment - Left
53-565-00-01	Passenger Compartment - Right





1C CHECK	
TASK CARD NUMBER	TASK TITLE
53-584-00-01	Passenger Compartment
53-585-00-01	Passenger Compartment
53-586-00-01	Passenger Compartment
53-602-00-01	Passenger Compartment
53-603-00-01	Passenger Compartment
53-611-00-01	Area above Wing Center Section
53-614-00-01	Passenger Compartment Left
53-614-00-02	Passenger Compartment Right
53-666-01-01	MAIN LANDING GEAR WHEEL WELL AREA
53-800-00-01	Left Fuselage Lower Half - Section 41 & 43 - STA 92.5 to STA 867
53-800-00-02	Right Fuselage Lower Half - Section 41 & 43 - STA 92.5 to STA 867
53-800-00-03	Lower Left Fuselage & Wing to Body Fairing - STA 858 to STA 1655
53-800-00-04	Lower Right Fuselage & Wing to Body Fairing - STA 858 to STA 1655
53-800-00-05	Lower Left Fuselage - STA 1655 to STA 2196
53-800-00-06	Lower Right Fuselage - STA 1655 to STA 2196
53-804-00-01	Radome
53-806-00-01	Area Forward of Nose Landing Gear Wheel Well
53-810-00-01	Nose Gear Wheel Well (Inspection Accomplished from Within Wheel Well)
53-812-00-01	Area Above and Outboard of the Nose Landing Gear Wheel Well
53-814-00-01	Main Equipment Center
53-832-00-01	Forward Keel Beam
53-838-00-01	Left Main Landing Gear Wheel Well (Inspection accomplished within WW)
53-842-00-01	Right Main Landing Gear Wheel Well (Inspection accomplished Within WW)
53-844-00-01	Aft Keel Beam



1C CHECK	
TASK CARD NUMBER	TASK TITLE
53-852-00-01	Aft Cargo Compartment
53-876-00-01	Area Aft of the Bulk Cargo Compartment
53-880-00-01	Forward Wing-To-Body Fairings - Left
53-882-00-01	Forward Wing-To-Body Fairings - Right
53-898-00-01	Left Upper Fuselage - Flight Compartment - STA 92.5 to STA 246
53-898-00-02	Right Upper Fuselage - Flight Compartment - STA 92.5 to STA 246
53-900-00-01	Flight Compartment
53-904-00-01	Passenger Compartment - Section 41
53-908-00-01	Passenger Compartment - Section 43
53-912-00-01	Passenger Compartment - Section 44
53-916-00-01	Passenger Compartment - Section 46
53-920-00-01	Passenger Compartment - Section 47
53-926-00-01	Fuselage Area Aft of Bulkhead - Inspection Accomplished within Fuselage
54-822-01-01	Forward Strut Fairing - Left Nacelle Strut
54-824-01-01	Forward and Aft Torque Box - Left Nacelle Strut - Cowls Opened
54-826-01-01	Forward and Aft Torque Box - Left Nacelle Strut
54-828-01-01	Aft Strut Fairing - Left Nacelle Strut
54-832-02-01	Forward Strut Fairing - Right Nacelle Strut
54-834-02-01	Forward and Aft Torque Box - Right Nacelle Strut - Fan Cowls Opened
54-836-02-01	Forward and Aft Torque Box - Right Nacelle Strut
54-838-02-01	Aft Strut Fairing - Right Nacelle Strut
55-501-00-01	Horizontal Stabilizer Center Section
55-800-00-01	Stabilizer Torsion Box Compartment - Left and Right Sides
55-804-00-01	Vertical Stabilizer Leading Edge
55-812-00-01	Vertical Stabilizer - Front Spar to Rear Spar - Between Ribs 8 and 9
55-814-00-01	Vertical Stabilizer - Rear Spar to Trailing Edge



1C CHECK	
TASK CARD NUMBER	TASK TITLE
55-817-00-01	Vertical Stabilizer - Rear Spar to Trailing Edge
55-820-00-01	Rudder
55-822-00-01	Rudder Tab
55-824-00-01	Vertical Stabilizer Forward Tip
55-830-01-01	Left Horizontal Stabilizer - Leading Edge
55-838-01-01	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
55-838-03-02	Left Horizontal Stabilizer - Front Spar to Rear Spar
55-841-00-01	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
55-844-01-01	Left Elevator
55-846-01-01	Left Horizontal Stabilizer Tip
55-850-02-01	Right Horizontal Stabilizer - Leading Edge
55-856-04-01	Right Horizontal Stabilizer - Front Spar to Rear Spar
55-858-02-01	Right Horizontal Stabilizer - Rear Spar to Trailing Edge
55-861-00-01	Right Horizontal Stabilizer - Rear Spar to Trailing Edge
55-864-02-01	Right Elevator
55-866-02-01	Right Horizontal Stabilizer Tip
56-010-00-01	Flight Deck #2 Windows MICROSWITCH
56-020-00-01	Flight Deck Number 2 Windows Guide Bearings
56-030-00-01	Flight Deck Number 2 Windows Open/Close Function
57-630-00-01	Area Above Wing Center Section
57-804-01-01	Leading Edge to Front Spar - Inboard of Nacelle Strut - Left Wing
57-806-01-01	Leading Edge to Front Spar - Inboard of Nacelle Strut - Left Wing
57-808-01-01	Slat No. 7
57-810-01-01	Krueger Seal Flap/Nacelle Gap Cover Area - Left Wing



1C CHECK	
TASK CARD NUMBER	TASK TITLE
57-812-01-01	Krueger Seal Flap/Nacelle Gap Cover Area - Left Wing
57-814-01-01	Leading Edge to Front Spar - Outboard of Nacelle Strut - Left Wing
57-817-01-01	Leading Edge to Front Spar - Outboard of Nacelle Strut - Left Wing
57-818-01-01	Left Wing Outboard Leading Edge Slats Number 1 through 6
57-836-01-01	Left Wing Dry Bay
57-848-01-01	Left Wing Tip
57-852-01-01	Left Wing Fixed T.E. - Aft of Rear Spar, Inbd of Outbd Support Fairing
57-854-01-01	Rear Spar to Landing Gear Support Beam - Left Wing
57-856-01-01	Landing Gear Support Beam and Rear Spar to Trailing Edge - Left Wing
57-858-01-01	Inboard Spoilers Numbers 6 and 7
57-860-01-01	Inboard Trailing Edge Flaps - Left Wing
57-862-01-01	Left Wing Flaperon
57-864-01-01	Rear Spar to Trailing Edge - Outboard of Flaperon - Left Wing
57-866-01-01	Rear Spar to Trailing Edge - Outboard of Flaperon - Left Wing
57-868-01-01	Outboard Spoilers Numbers 1 through 5
57-870-01-01	Left Wing Outboard Flap
57-872-01-01	Left Wing Aileron
57-874-01-01	Flap Support Fairing No. 4
57-876-01-01	Flap Support Fairing No. 4
57-878-01-01	Inboard Flap Center Track Fairing - Left Wing
57-880-01-01	Flap Support Fairing No. 3 and Inboard Flaperon Support Fairing
57-882-01-01	Flap Support Fairing No. 3 and Inboard Flaperon Support Fairing
57-884-01-01	Outboard Flaperon Support Fairing - Left Wing
57-886-01-01	Flap Support Fairing No. 2
57-888-01-01	Flap Support Fairing No. 2
57-890-01-01	Flap Support Fairing No. 1



1C CHECK	
TASK CARD NUMBER	TASK TITLE
57-892-01-01	Flap Support Fairing No. 1
57-894-01-01	Outboard Auxiliary Support Fairing - Left Wing
57-896-02-01	Leading Edge to Front Spar - Inboard of Nacelle Strut - Right Wing
57-898-02-01	Leading Edge to Front Spar - Inboard of Nacelle Strut - Right Wing
57-900-02-01	Slat No. 8
57-902-02-01	Krueger Seal Flap/Nacelle Gap Cover Area - Right Wing
57-904-02-01	Krueger Seal Flap/Nacelle Gap Cover Area - Right Wing
57-906-02-01	Leading Edge to Front Spar - Outboard of Nacelle Strut - Right Wing
57-909-02-01	Leading Edge to Front Spar - Outboard of Nacelle Strut - Right Wing
57-910-02-01	Outboard Leading Edge Slats Number 9 through 14
57-928-02-01	Right Wing Dry Bay
57-940-02-01	Right Wing Tip
57-944-02-01	Right Wing Fixed T.E. - Aft of Rear Spar, Inbd of Outbd Support Fairing
57-946-02-01	Rear Spar to Landing Gear Support Beam - Right Wing
57-948-02-01	Landing Gear Support Beam and Rear Spar to Trailing Edge - Right Wing
57-950-02-01	Inboard Spoilers Numbers 8 and 9
57-952-02-01	Inboard Trailing Edge Flaps - Right Wing
57-954-02-01	Right Wing Flaperon
57-956-02-01	Rear Spar to Trailing Edge - Outboard of Flaperon - Right Wing
57-958-02-01	Rear Spar to Trailing Edge - Outboard of Flaperon - Right Wing
57-960-02-01	Outboard Spoilers Numbers 10 through 14
57-962-02-01	Right Wing Outboard Flap
57-964-02-01	Right Wing Aileron
57-966-02-01	Flap Support Fairing No. 5



1C CHECK	
TASK CARD NUMBER	TASK TITLE
57-968-02-01	Flap Support Fairing No. 5
57-970-02-01	Inboard Flap Center Track Fairing - Right Wing
57-972-02-01	Flap Support Fairing No. 6 and Inbd Flaperon Support Fairing
57-974-02-01	Flap Support Fairing No. 6 and Inbd Flaperon Support Fairing
57-976-02-01	Outboard Flaperon Support Fairing - Right Wing
57-978-02-01	Flap Support Fairing No. 7
57-980-02-01	Flap Support Fairing No. 7
57-982-02-01	Flap Support Fairing No. 8
57-984-02-01	Flap Support Fairing No. 8
57-986-02-01	Outboard Auxiliary Support Fairing - Right Wing

**C. 2C CHECK**

2C CHECK	
TASK CARD NUMBER	TASK TITLE
12-008-00-01	Left Wing Inboard Leading Edge Torque Tube Supports and Couplings
12-008-00-02	Right Wing Inboard Leading Edge Torque Tube Supports and Couplings
12-008-00-11	Left Wing Outboard Leading Edge Torque Tube Supports and Couplings
12-008-00-12	Right Wing Outboard Leading Edge Torque Tube Supports and Couplings
12-008-01-01	Forward Cargo Compartment Torque Tube Supports and Couplings
12-018-00-01	Left Wing Krueger Flap Drive Arm Bearing
12-018-00-02	Right Wing Krueger Flap Drive Arm Bearing
12-030-00-01	Left Wing Trailing Edge Torque Tube and Torque Tube Supports
12-030-00-02	Right Wing Trailing Edge Torque Tube and Torque Tube Supports
12-100-00-01	Forward Large Cargo Door, Door Mechanisms
12-102-00-01	Aft Large Cargo Door, Door Mechanisms
12-104-00-01	Aft Small Cargo Door Hinge Arms and Adjustment Rods



2C CHECK	
TASK CARD NUMBER	TASK TITLE
12-106-00-01	Passenger Entry Door Mechanisms
12-110-00-01	Forward Access Door Latch Pin
12-112-00-01	Main Equipment Center Access Door Latch Pin
20-010-00-01	Primary Flight Control and Brake Control Cables Turns
20-010-00-02	Primary Flight Control and Brake Control Cables
20-010-00-03	Primary Flight Control and Brake Control Cable Turns
20-010-00-04	Primary Flight Control Cable Turns
20-010-00-05	Primary Flight Control Cable Turns
20-012-00-01	Nose Gear Steering Control Cable Turns
20-012-00-02	Nose Gear Steering Control Cable Turns
20-015-00-01	Primary Flight Control and Brake Control Cables - straight runs
20-015-00-02	Primary Flight Control and Brake Control Cables - straight runs
20-015-00-03	Primary Flight Control and Brake Control Cables - Straight Runs
20-015-00-04	Primary Flight Control and Brake Control Cables - Straight Runs
20-015-00-05	Primary Flight Control and Brake Control Cable - Straight Runs
20-015-00-06	Primary Flight Control and Brake Control Cable - Straight Runs
20-015-00-07	Primary Flight Control Cables - Straight Runs
20-015-00-08	Primary Flight Control Cables - Straight Runs
20-015-00-09	Primary Flight Control Cables in Fuselage - Straight Runs
20-018-00-01	Nose Gear Steering Control Cables - straight runs
20-018-00-02	Nose Gear Steering Control Cables - straight runs
20-110-00-01	Primary Flight Control Cables - Protected Unpressurized Areas
20-110-00-02	Primary Flight Control Cables - Protected Unpressurized Areas
20-110-00-03	Primary Flight Control Cables - Protected Unpressurized Areas



2C CHECK	
TASK CARD NUMBER	TASK TITLE
20-110-00-04	Primary Flight Control Cables - Protected Unpressurized Areas
20-110-00-05	Primary Flight Control Cables - PROTECTED/UNPROTECTED UNPRESSURIZED AREAS
20-251-10-01	FOIL/MESH PANELS; ENGINE COWLS, STRUT, LEADING EDGE
20-251-20-01	FOIL/MESH PANELS; ENGINE COWLS, STRUT, LEADING EDGE
20-260-00-01	Ram Air Turbine (RAT) Wire Shielding Functional Check
20-270-01-01	PFCS Wire Shielding Functional Check - Left Wing
20-270-02-01	PFCS Wire Shielding Functional Check - Right Wing
20-280-00-01	PFCS Wire Shielding Functional Check - Empennage
20-310-01-01	Functional Check Wire Bundle Inspection Left Flaps, Slats, Skew Sensors
20-310-02-01	Functional Check Wire Bundle Right Flaps, Slats, Skew Sensors
20-320-00-01	Gust Suppression Transducers Wire Shielding Functional Check
20-410-00-01	Radome Diverter Strips Detailed Visual Inspection
20-420-00-01	HIRF/Lightning Localizer Tracking, VOR/Localizer Antenna COAX
20-430-00-01	HIRF/Lightning Glide Slope Tracking Antenna COAX
20-440-00-01	HIRF/Lightning VOR/Localizer Capture Antenna COAX
20-445-00-01	Fin Tip Diverter Strip
20-560-01-01	HIRF/ L Functional Test for FQIS, Left Side
20-560-02-01	HIRF/ L Functional Test for FQIS, Right Side
20-642-00-01	Forward Bulkhead Left Main Landing Gear Wheel Well
20-644-00-01	Forward Bulkhead Right Main Landing Gear Wheel Well
20-648-00-01	Forward Cargo Power Drive Unit Wire Bundles
20-650-00-01	Areas Behind the FWD Cargo Compartment Sidewalls
20-651-00-01	Areas Below the AFT Cargo Compartment
20-658-00-01	Area Behind the Forward Cargo Compartment
20-664-00-01	Areas Behind the Aft Cargo Compartment Sidewalls
20-665-00-01	Aft Cargo Power Drive Unit Wire Bundles





2C CHECK	
TASK CARD NUMBER	TASK TITLE
20-668-00-01	APU Battery Installation and Power Feeders
20-670-00-01	Area Behind the Bulk Cargo Compartment Sidewalls
20-700-00-01	Areas Behind the Passenger Compartment Air Grilles
20-704-00-01	Wiring Behind Passenger Compartment Air Grilles
20-716-00-01	Area Around the Video Control Center
20-734-00-01	External Power Receptacle in the Main Equipment Center.
20-742-00-01	Areas Behind the Passenger Compartment Air Grilles
20-750-00-01	Wiring Behind Passenger Compartment Air Grilles
20-754-00-01	Areas Behind the Passenger Compartment Air Grilles
20-758-00-01	Wiring Behind Passenger Compartment Air Grilles
20-766-00-01	Areas Behind the Passenger Compartment Air Grilles
20-774-00-01	Wiring Behind Passenger Compartment Air Grilles
20-778-00-01	Areas Behind the Passenger Compartment Air Grilles
20-782-00-01	Wiring Behind Passenger Compartment Air Grilles
20-794-00-01	APU and APU Starter Power Feeders
20-800-00-01	Engine and Backup Generator Power Feeders - Left Engine
20-802-00-01	Engine and Backup Generator Power Feeders - Right Engine
20-840-01-01	IDG and Backup Power Feeders - Left Wing
20-840-02-01	IDG and Backup Power Feeders - Right Wing
20-842-00-01	EWIS within Nacelle Gap - Left
20-842-00-02	EWIS within Nacelle Gap - Right
20-844-00-01	IDG and Backup Power Feeders - Left Wing
20-844-00-02	IDG and Backup Power Feeders - Right Wing
21-040-00-01	Chiller Boost Fan



2C CHECK	
TASK CARD NUMBER	TASK TITLE
21-048-00-01	E/E Cooling System Override Switch
21-054-00-01	IFE Cooling System Air Supply Multi-holed Orifices
21-055-00-01	Condenser/Reheater
21-110-00-01	Cabin Positive Pressure Relief Valves
21-110-00-02	Cabin Positive Pressure Relief Valves
21-120-00-01	Cabin Positive Pressure Relief Filters
21-130-00-01	AFT and Bulk Cargo Temperature Selector Switches
21-131-00-01	AFT/Bulk Cargo Overheat Protection Switch & Relay
21-180-00-01	AC Pack Conditioned Air Check Valves
21-180-00-02	AC Pack Conditioned Air Check Valves
21-240-00-01	Ozone Converters
21-250-00-01	E/E Equipment Cooling Override Duct
23-010-00-01	Passenger Address System
23-010-00-02	Personnel Address System
23-060-00-01	Static Dischargers
23-080-00-01	Voice Recorder System - Four Channel Operation
23-100-00-01	Voice Recorder System - Under Water Locator Beacon
23-100-00-02	Voice Recorder System - Under Water Locator Beacon
24-200-00-01	External Power Receptacles (Wear Check)
24-210-00-01	External Power Receptacles (Inspection)
25-055-00-01	Passenger Compartment Articulating Seats
25-062-00-01	Life Raft
25-067-00-01	Off-Wing Slide Compartment Door Lock/Latch System
25-068-00-01	Off-Wing Escape Slide Compartment Door Indication System
25-240-00-01	Passenger Entry Door Emergency Escape Slide
25-240-00-02	Overwing Door Emergency Escape Slide



2C CHECK	
TASK CARD NUMBER	TASK TITLE
25-260-00-01	Overhead Crew Rest Secondary Egress System
25-260-00-02	Overhead Attendant Rests Secondary Egress System
25-270-00-01	Overhead Crew Rest Secondary Egress Grab Bar
25-270-00-02	Overhead Attendant Rest Secondary Egress Grab Bar
26-064-00-01	Lower Lobe Attendant Rest (LLAR) Smoke Detection System
26-090-00-01	Engine Fire Switches
26-090-00-02	Engine Fire Switches
26-090-00-03	Engine Fire Switches
26-100-00-01	Engine Fire Extinguishing Distribution Lines
26-100-00-02	Engine Fire Extinguishing Distribution Lines
26-100-00-03	Engine Fire Extinguishing Distribution Lines
26-150-00-01	APU Fire Switch
26-200-00-01	Cargo Fire Extinguishing Arm & Discharge Switches
26-210-00-01	Cargo Fire Extinguishing Tubing
27-150-00-01	Primary Flight Computer Disconnect Switch
27-170-00-01	Left Wing Aileron and Flaperon System Hydraulic Fuses
27-170-00-02	Right Wing Aileron and Flaperon System Hydraulic Fuses
27-170-00-03	Rudder System Hydraulic Fuse
27-180-00-01	Rudder Check Valve
27-190-00-01	Wheel Jam Breakout Mechanism
27-200-00-01	Rudder Power Control Units
27-210-00-01	Control Column Breakout Mechanism
27-220-00-01	Elevator Power Control Units
27-240-00-01	Elevator Power Control Unit Bearings



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

2C CHECK	
TASK CARD NUMBER	TASK TITLE
27-270-00-01	Stabilizer Secondary Brakes
27-280-00-01	Stabilizer Trim Limit Switches
27-320-00-01	Left Wing TE Flap No-Back Brakes
27-320-00-02	Right Wing TE Flap No-Back Brakes
27-330-00-01	Auto Speedbrake Function
27-340-00-01	Left Leading Edge Slat No-Back Brakes
27-340-00-02	Right Leading Edge Slat No-Back Brakes
27-350-00-01	Autoslat Priority Valves - Main Landing Gear
27-360-00-01	Left Leading Edge Slat Skew/Loss Cable
27-360-00-02	Right Leading Edge Slat Skew/Loss Cable
27-400-00-01	Aileron Trim Inhibit Operational Check
27-420-00-01	Rudder Pedal Pogo
27-430-00-01	Rudder Power Control Unit
27-440-00-01	Stabilizer Freeplay
27-460-00-01	TRAILING EDGE FLAP SUPPORT LINKAGE PIN FREEPLAY
28-010-00-01	Fuel Vent Float Valves
28-015-00-01	Left Fuel Surge Tank FLAME ARRESTORS. Zone 542
28-015-00-02	Right Fuel Surge Tank FLAME ARRESTORS. Zone 642
28-022-00-01	Engine Fuel Spar Valve Battery Circuit
28-022-60-01	GFI Relay Check
28-022-60-02	GFI Relay Check
28-023-00-01	Fuel Spar Valve Battery
28-025-00-01	Left Engine Fuel Spar Valve
28-025-00-02	Right Engine Fuel Spar Valve
28-030-00-01	APU Fuel Supply Line And Shroud
28-040-00-01	Defuel Valve Actuator



2C CHECK	
TASK CARD NUMBER	TASK TITLE
28-050-00-01	Fuel Jettison System
29-030-00-01	Hydraulic System Gross Internal Leakage
29-140-00-01	Center Hydraulic System Reservoir Pressurization Module
29-140-00-02	Left Hydraulic System Reservoir Pressurization Module
29-140-00-03	Right Hydraulic System Reservoir Pressurization Module
31-010-00-01	Flight Data Recorder System
31-010-00-02	Flight Data Recorder System
31-010-00-03	Flight Data Recorder System
31-010-00-04	Flight Data Recorder System
31-030-00-01	Flight Data Recorder Underwater Locator Beacon (ULB)
31-030-00-02	Flight Data Recorder Underwater Locator Beacon (ULB)
32-160-00-01	Brake Accumulator
32-170-00-01	Normal and Alternate Brake Systems
32-180-00-01	Left Main Landing Gear Antiskid Module Hydraulic Fuses
32-180-00-02	Right Main Landing Gear Antiskid Module Hydraulic Fuses
32-300-00-01	Left Main Landing Gear Mechanisms
32-300-00-02	Right Main Landing Gear Mechanisms
32-310-00-01	Left Main Landing Gear Door Mechanisms
32-310-00-02	Right Main Landing Gear Door Mechanisms
32-320-00-01	Nose Landing Gear Mechanisms
32-330-00-01	Nose Landing Gear Door Mechanisms
32-802-00-01	Nose Landing Gear and Landing Gear Doors
32-806-01-01	Left Main Landing Gear and Landing Gear Doors
32-810-02-01	Right Main Landing Gear and Landing Gear Doors



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

2C CHECK	
TASK CARD NUMBER	TASK TITLE
35-060-00-01	Passenger Oxygen System Door Latch/Actuator
35-060-00-02	Passenger Oxygen System Door Latch/Actuator
35-060-00-03	Passenger Oxygen System Door Latch/Actuator
35-060-00-04	Passenger Oxygen System Door Latch/Actuator
35-070-00-01	Passenger Chemical Oxygen Generators
35-070-00-02	Passenger Chemical Oxygen Generators
35-090-00-01	Passenger Oxygen Masks
35-090-00-02	Passenger Oxygen Masks
35-090-00-03	Passenger Oxygen Masks
35-092-00-01	Lower Lobe Attendant Rest Supplemental Oxygen System
35-096-00-01	Lower Lobe Attendant Rest Supplemental Oxygen System
35-120-00-01	Passenger Gaseous Oxygen System Pressure Regulator
35-120-00-02	Supernumerary Gaseous Oxygen System Pressure Regulator
35-140-00-01	Passenger Gaseous Oxygen System Flow Control Units
35-170-00-01	Oxygen Mask Assemblies
35-170-00-02	Oxygen Mask Assemblies
35-180-00-01	Door Latch/Actuator and Decompression Horns
35-180-00-02	Door Latch/Actuator and Decompression Horns
35-180-00-03	Crew Rest Decompression Alarm Test
35-190-00-01	OFCR/OFAR Oxygen Generators
36-010-00-01	Engine Air Supply Manifold
38-020-00-01	Potable Water Isolation Valves and Cables
38-020-00-02	Potable Water Isolation Valves and Cables
38-030-00-01	Waste Drain Ball Valve & Fitting Seals (Not applicable to the 777F)
38-120-00-01	Potable Water Pressure Relief Valve
47-100-00-01	Restore the Ozone Converter (off-aircraft).



2C CHECK	
TASK CARD NUMBER	TASK TITLE
47-110-00-01	Clean the Primary Heat Exchanger (off-aircraft).
47-120-00-01	Functionally check the Regenerative Heat Exchanger (off-aircraft).
47-130-00-01	Restore the Filter Differential Pressure Sensor Switch (off-aircraft).
47-140-00-01	Visually Check for Fluid Accumulation Through the Drain Valve or Drain Cap.
47-150-00-01	Inspect (detailed) the Nitrogen Enriched Air (NEA) distribution lines
47-160-00-01	Operationally check the center tank vent cross flow check valve.
52-120-01-01	Passenger Entry Door Flight Lock Mechanism
52-125-00-01	No. 3 Over-Wing Door Flight Lock Mechanism
52-130-01-01	Passenger Entry Door Girt Bar Mechanism Interlock
52-135-00-01	No. 3 Over-Wing Door Latch Torque Tube Interlock
52-140-01-01	Passenger Entry Door Mode Select Mechanism and Cables
52-145-00-01	No. 3 Over-Wing Doors Mode Select Mechanism and Pull Cable
52-150-01-01	Passenger Entry Door EPAS Tubing
52-155-00-01	No. 3 Over-Wing Doors EPAS Tubing
52-160-00-01	Passenger Entry Door EPAS Circuitry
52-160-00-02	Passenger Entry Door EPAS Circuitry
52-160-00-03	Passenger Entry Door EPAS Circuitry
52-160-00-04	Passenger Entry Door EPAS Circuitry
52-170-01-01	Passenger Entry Door Mechanisms
52-175-00-01	No. 3 Over-Wing Door Mechanisms
52-180-00-01	Forward Large Cargo Door Manual Drive Mechanism & Lift PDU Brake
52-185-00-01	AFT Large Cargo Door Manual Drive Mechanism & Lift PDU Brake
52-190-00-01	Forward Large Cargo Door Rotary Actuator No-Back
52-195-00-01	AFT Large Cargo Door Rotary Actuator No-Back



2C CHECK	
TASK CARD NUMBER	TASK TITLE
52-200-00-01	Forward Large Cargo Door Lock Handle Load Limiter
52-205-00-01	AFT Large Cargo Door Lock Handle Load Limiter
52-210-00-01	Forward Large Cargo Door Ditching Interlock Mechanism
52-215-00-01	AFT Large Cargo Door Ditching Interlock Mechanism
52-220-00-01	AFT Small Cargo Door Hinge Power Drive Unit and Manual Drive Mechanism
52-230-00-01	AFT Small Cargo Door Rotary Actuator
52-240-00-01	Bulk Cargo Door Latch Mechanism
52-250-00-01	Equipment Compartment Exterior Door Latch Mechanisms
52-260-00-01	Passenger Entry Door Closed Proximity Sensors
52-265-00-01	No. 3 Over-Wing Doors Closed Proximity Sensors
52-270-00-01	Bulk Cargo Door Latch Microswitch
52-280-00-01	Forward Access Door Latched Proximity Sensor
52-290-00-01	Main Equip Center Door Latched Proximity Sensor
52-310-00-01	Flight Deck Door Pressure Sensor
52-330-00-01	Flight Deck Door Deny Time Delay
52-502-00-01	Forward Large Cargo Door
52-510-00-01	Aft Large Cargo Door
52-802-00-01	Forward Large Cargo Door
52-804-00-01	Forward Large Cargo Door
52-806-00-01	Aft Small Cargo Door
52-808-00-01	Aft Small Cargo Door
52-810-00-01	Aft Large Cargo Door
52-812-00-01	Aft Large Cargo Door
52-814-00-01	Bulk Cargo Door
52-816-01-01	Left No. 1 Passenger Entry Door - Section 41
52-818-01-01	Left No. 1 Passenger/Crew Entry Door - Section 41





2C CHECK	
TASK CARD NUMBER	TASK TITLE
52-820-01-01	Left No. 2 Passenger Entry Door - Section 43
52-822-01-01	Left No. 2 Passenger Entry Door - Section 43
52-824-01-01	Left No. 3 Overwing Door - Section 44
52-825-01-01	Left No. 3 Overwing Door - Section 44
52-827-01-01	Left No. 4 Passenger Entry Door - Section 46
52-829-01-01	Left No. 4 Passenger Entry Door - Section 46
52-831-01-01	Left No. 5 Passenger Entry Door - Section 47
52-833-01-01	Left No. 5 Passenger Entry Door - Section 47
52-834-02-01	Right No. 1 Passenger/Crew Entry Door - Section 41
52-836-02-01	Right No. 1 Passenger/Crew Entry Door - Section 41
52-840-02-01	Right No. 2 Passenger Entry Door - Section 43
52-842-02-01	Right No. 2 Passenger Entry Door - Section 43
52-844-02-01	Right No. 3 Overwing Door - Section 44
52-846-02-01	Right No. 3 Overwing Door - Section 44
52-849-02-01	Right No. 4 Passenger Entry Door - Section 46
52-851-02-01	Right No. 4 Passenger Entry Door - Section 46
52-853-02-01	Right No. 5 Passenger Entry Door - Section 47
52-855-02-01	Right No. 5 Passenger Entry Door - Section 47
53-509-01-01	Forward Cargo Compartment
53-518-00-01	Main Landing Gear Wheel Well, Left
53-519-00-01	Main Landing Gear Wheel Well, Right
53-522-01-01	Aft Cargo Compartment
53-523-01-01	Aft Cargo Compartment
53-529-01-01	Area Below Aft Cargo Compartment



2C CHECK	
TASK CARD NUMBER	TASK TITLE
53-530-01-01	Area Below Aft Cargo Compartment
53-532-00-01	Area Below Aft Cargo Compartment
53-532-01-01	Area Below Aft Cargo Compartment
53-533-00-01	Area Below Aft Cargo Compartment
53-533-01-01	Area Below Aft Cargo Compartment
53-543-00-01	Overwing Wing-To-Body Fairings, Left
53-544-00-01	Overwing Wing-To-Body Fairings, Right
53-553-00-01	Passenger Compartment - Left
53-554-00-01	Passenger Compartment - Right
53-564-00-01	Passenger Compartment - Left
53-565-00-01	Passenger Compartment - Right
53-574-00-01	Area Above Main Deck Compartment Ceiling
53-579-00-01	Area Above Main Deck Compartment Ceiling
53-584-00-01	Passenger Compartment
53-585-00-01	Passenger Compartment
53-586-00-01	Passenger Compartment
53-595-00-01	Area above Main Deck Compartment Ceiling
53-596-00-01	Area above Main Deck Compartment Ceiling
53-602-00-01	Passenger Compartment
53-603-00-01	Passenger Compartment
53-611-00-01	Area above Wing Center Section
53-614-00-01	Passenger Compartment Left
53-614-00-02	Passenger Compartment Right
53-666-00-01	LEFT MAIN LANDING GEAR WHEEL WELL AREA
53-666-00-03	RIGHT MAIN LANDING GEAR WHEEL WELL AREA
53-666-01-01	MAIN LANDING GEAR WHEEL WELL AREA



2C CHECK	
TASK CARD NUMBER	TASK TITLE
53-800-00-01	Left Fuselage Lower Half - Section 41 & 43 - STA 92.5 to STA 867
53-800-00-02	Right Fuselage Lower Half - Section 41 & 43 - STA 92.5 to STA 867
53-800-00-03	Lower Left Fuselage & Wing to Body Fairing - STA 858 to STA 1655
53-800-00-04	Lower Right Fuselage & Wing to Body Fairing - STA 858 to STA 1655
53-800-00-05	Lower Left Fuselage - STA 1655 to STA 2196
53-800-00-06	Lower Right Fuselage - STA 1655 to STA 2196
53-804-00-01	Radome
53-806-00-01	Area Forward of Nose Landing Gear Wheel Well
53-810-00-01	Nose Gear Wheel Well (Inspection Accomplished from Within Wheel Well)
53-812-00-01	Area Above and Outboard of the Nose Landing Gear Wheel Well
53-814-00-01	Main Equipment Center
53-818-00-01	Forward Cargo Compartment
53-822-00-01	Area Below Forward Cargo
53-826-00-01	Area Aft of Forward Cargo Compartment
53-830-00-01	Left Environmental Control Systems Bay
53-830-00-02	Right Environmental Control Systems Bay
53-832-00-01	Forward Keel Beam
53-838-00-01	Left Main Landing Gear Wheel Well (Inspection accomplished within WW)
53-842-00-01	Right Main Landing Gear Wheel Well (Inspection accomplished Within WW)
53-844-00-01	Aft Keel Beam
53-852-00-01	Aft Cargo Compartment
53-852-01-01	Aft Cargo Compartment
53-854-00-01	Aft Cargo Compartment
53-864-00-01	Area Below Aft Cargo Compartment



2C CHECK	
TASK CARD NUMBER	TASK TITLE
53-866-00-01	Area Below Aft Cargo Compartment
53-870-00-01	Bulk Cargo Compartment
53-874-00-01	Area Below Bulk Cargo Compartment
53-876-00-01	Area Aft of the Bulk Cargo Compartment
53-880-00-01	Forward Wing-To-Body Fairings - Left
53-882-00-01	Forward Wing-To-Body Fairings - Right
53-884-00-01	Overwing Wing-To-Body Fairing - Left
53-886-00-01	Overwing Wing-To-Body Fairings - Right
53-888-00-01	Underwing Wing-to-Body Fairings - Left
53-890-00-01	Underwing Wing-To-Body Fairings - Right
53-892-00-01	Aft Wing-to-Body Fairings - Left
53-894-00-01	Aft Wing-To-Body Fairings - Right
53-896-00-01	Left Upper Fuselage - Body Sections 41 and 43 - STA 246 to STA 1035
53-896-00-02	Right Upper Fuselage - Body Sections 41 and 43 - STA 246 to STA 1035
53-896-00-03	Left Upper Fuselage - Body Section 44 - BS 1035 to 1434
53-896-00-04	Right Upper Fuselage - Body Section 44 - STA 1035 to STA 1434
53-896-00-05	Left Upper Fuselage - Body Section 46 and 47 - STA 1434 to STA 2150
53-896-00-06	Right Upper Fuselage - Body Sections 46 and 47 - STA 1434 to STA 2150
53-898-00-01	Left Upper Fuselage - Flight Compartment - STA 92.5 to STA 246
53-898-00-02	Right Upper Fuselage - Flight Compartment - STA 92.5 to STA 246
53-900-00-01	Flight Compartment
53-904-00-01	Passenger Compartment - Section 41
53-906-00-01	Area Above Passenger Compartment Ceiling - Section 41
53-908-00-01	Passenger Compartment - Section 43
53-910-00-01	Area Above Passenger Compartment Ceiling - Section 43
53-912-00-01	Passenger Compartment - Section 44



2C CHECK	
TASK CARD NUMBER	TASK TITLE
53-914-00-01	Area Above Passenger Compartment - Section 44
53-916-00-01	Passenger Compartment - Section 46
53-918-00-01	Area Above Passenger Compartment Ceiling - Section 46
53-920-00-01	Passenger Compartment - Section 47
53-922-00-01	Area Above Passenger Compartment Ceiling - Section 47
53-924-00-01	Body Section 48 - BS2150 to BS 2570
53-924-00-02	Body Section 48 - BS2150 to BS 2570
53-926-00-01	Fuselage Area Aft of Bulkhead - Inspection Accomplished within Fuselage
54-538-01-01	Forward Torque Box - Left Nacelle Strut
54-540-01-01	AFT Torque Box - Left Nacelle Strut
54-541-01-02	AFT Torque Box - Left Nacelle Strut (For GE90-100 series engines only)
54-542-01-02	Strut Forward Torque Box (For GE90-100 series engines only)
54-543-01-02	AFT Torque Box - Left Nacelle Strut (GE90-100)
54-546-02-01	Forward Torque Box - Right Nacelle Strut
54-548-02-01	AFT Torque Box - Right Nacelle Strut
54-549-02-02	AFT Torque Box - Right Nacelle Strut (For GE90-100 series engines only)
54-550-02-02	Strut Forward Torque Box (For GE90-100 series engines only)
54-551-02-02	AFT Torque Box - Right Nacelle Strut (GE90-100 Engine)
54-582-01-01	FORWARD TORQUE BOX - LEFT NACELLE STRUT (GE90-100 Only)
54-583-02-01	FORWARD TORQUE BOX - RIGHT NACELLE STRUT (GE90-100 Only)
54-822-01-01	Forward Strut Fairing - Left Nacelle Strut
54-824-01-01	Forward and Aft Torque Box - Left Nacelle Strut - Cowls Opened
54-826-01-01	Forward and Aft Torque Box - Left Nacelle Strut
54-828-01-01	Aft Strut Fairing - Left Nacelle Strut



2C CHECK	
TASK CARD NUMBER	TASK TITLE
54-832-02-01	Forward Strut Fairing - Right Nacelle Strut
54-834-02-01	Forward and Aft Torque Box - Right Nacelle Strut - Fan Cowls Opened
54-836-02-01	Forward and Aft Torque Box - Right Nacelle Strut
54-838-02-01	Aft Strut Fairing - Right Nacelle Strut
55-501-00-01	Horizontal Stabilizer Center Section
55-502-00-01	Horizontal Stabilizer Center Section
55-509-00-01	Vertical Stabilizer - Auxiliary Spar to Front Spar
55-511-00-01	Vertical Stabilizer - Front Spar to Rear Spar
55-515-00-01	Vertical Stabilizer - Rear Spar to Trailing Edge
55-515-01-01	Vertical Stabilizer - Rear Spar to Trailing Edge
55-517-00-01	Vertical Stabilizer - Rear Spar to Trailing Edge
55-517-01-01	Vertical Stabilizer - Rear Spar to Trailing Edge
55-518-00-01	Vertical Stabilizer - Rear Spar to Trailing Edge
55-518-01-01	Vertical Stabilizer - Rear Spar to Trailing Edge
55-521-00-01	Rudder Tab
55-522-00-01	Rudder Tab
55-527-01-01	Left Horizontal Stabilizer Center Section
55-534-01-01	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
55-534-03-01	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
55-535-01-01	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
55-535-03-01	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
55-538-02-01	Right Horizontal Stabilizer Center Section
55-545-02-01	Right Horizontal Stabilizer - Rear Spar to Trailing Edge
55-545-04-01	Right Horizontal Stabilizer - Rear Spar to Trailing Edge
55-546-02-01	Right Horizontal Stabilizer - Rear Spar to Trailing Edge
55-546-04-01	Right Horizontal Stabilizer - Rear Spar to Trailing Edge



2C CHECK	
TASK CARD NUMBER	TASK TITLE
55-800-00-01	Stabilizer Torsion Box Compartment - Left and Right Sides
55-804-00-01	Vertical Stabilizer Leading Edge
55-808-00-01	Vertical Stabilizer - Auxiliary Spar to Rear Spar
55-812-00-01	Vertical Stabilizer - Front Spar to Rear Spar - Between Ribs 8 and 9
55-814-00-01	Vertical Stabilizer - Rear Spar to Trailing Edge
55-817-00-01	Vertical Stabilizer - Rear Spar to Trailing Edge
55-820-00-01	Rudder
55-822-00-01	Rudder Tab
55-824-00-01	Vertical Stabilizer Forward Tip
55-828-01-01	Left Horizontal Stabilizer - Center Section
55-830-01-01	Left Horizontal Stabilizer - Leading Edge
55-832-01-01	Left Horizontal Stabilizer - Auxiliary Spar to Rear Spar
55-838-01-01	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
55-838-03-02	Left Horizontal Stabilizer - Front Spar to Rear Spar
55-841-00-01	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
55-844-01-01	Left Elevator
55-846-01-01	Left Horizontal Stabilizer Tip
55-848-02-01	Right Horizontal Stabilizer Center Section
55-850-02-01	Right Horizontal Stabilizer - Leading Edge
55-852-02-01	Right Horizontal Stabilizer - Auxiliary Spar to Rear Spar
55-856-04-01	Right Horizontal Stabilizer - Front Spar to Rear Spar
55-858-02-01	Right Horizontal Stabilizer - Rear Spar to Trailing Edge
55-861-00-01	Right Horizontal Stabilizer - Rear Spar to Trailing Edge
55-864-02-01	Right Elevator



2C CHECK	
TASK CARD NUMBER	TASK TITLE
55-866-02-01	Right Horizontal Stabilizer Tip
56-010-00-01	Flight Deck #2 Windows MICROSWITCH
56-020-00-01	Flight Deck Number 2 Windows Guide Bearings
56-030-00-01	Flight Deck Number 2 Windows Open/Close Function
57-501-00-01	Wing Center Section
57-505-01-01	Wing Inspar Area (Fuel Tanks) - Inboard of Wing Rib 17
57-507-01-01	Wing Inspar Area (Fuel Tanks) - Rib 17 to Wing Tip
57-515-01-01	Left Wing Inboard Main Flap
57-519-01-01	Left Wing Flaperon
57-520-01-01	Left Wing Flaperon
57-533-01-01	Outboard Flaperon Support Fairing - Left Wing
57-540-02-01	Wing Inspar Area (Fuel Tanks) - Inboard of Wing Rib 17
57-542-02-01	Wing Inspar Area (Fuel Tanks) - Rib 17 to Wing Tip
57-550-02-01	Right Wing Inboard Main Flap
57-554-02-01	Right Wing Flaperon
57-555-02-01	Right Wing Flaperon
57-563-02-01	Outboard Flaperon Support Fairing - Right Wing
57-630-00-01	Area Above Wing Center Section
57-804-01-01	Leading Edge to Front Spar - Inboard of Nacelle Strut - Left Wing
57-806-01-01	Leading Edge to Front Spar - Inboard of Nacelle Strut - Left Wing
57-808-01-01	Slat No. 7
57-810-01-01	Krueger Seal Flap/Nacelle Gap Cover Area - Left Wing
57-812-01-01	Krueger Seal Flap/Nacelle Gap Cover Area - Left Wing
57-814-01-01	Leading Edge to Front Spar - Outboard of Nacelle Strut - Left Wing
57-817-01-01	Leading Edge to Front Spar - Outboard of Nacelle Strut - Left Wing
57-818-01-01	Left Wing Outboard Leading Edge Slats Number 1 through 6





2C CHECK	
TASK CARD NUMBER	TASK TITLE
57-832-01-01	Lower Wing Inspar Area (Fuel Tanks) - Inboard of Wing Rib 17 - Left Wing
57-832-01-02	Upper Wing Inspar Area (Fuel Tanks) - Inboard of Wing Rib 17 - Left Wing
57-836-01-01	Left Wing Dry Bay
57-840-01-01	Wing Inspar Area - Rib 17 to Wing Tip - Left Wing Lower Surface
57-840-01-02	Wing Inspar Area - Rib 17 to Wing Tip - Left Wing Upper Surface
57-848-01-01	Left Wing Tip
57-852-01-01	Left Wing Fixed T.E. - Aft of Rear Spar, Inbd of Outbd Support Fairing
57-854-01-01	Rear Spar to Landing Gear Support Beam - Left Wing
57-856-01-01	Landing Gear Support Beam and Rear Spar to Trailing Edge - Left Wing
57-858-01-01	Inboard Spoilers Numbers 6 and 7
57-860-01-01	Inboard Trailing Edge Flaps - Left Wing
57-862-01-01	Left Wing Flaperon
57-864-01-01	Rear Spar to Trailing Edge - Outboard of Flaperon - Left Wing
57-866-01-01	Rear Spar to Trailing Edge - Outboard of Flaperon - Left Wing
57-868-01-01	Outboard Spoilers Numbers 1 through 5
57-870-01-01	Left Wing Outboard Flap
57-872-01-01	Left Wing Aileron
57-874-01-01	Flap Support Fairing No. 4
57-876-01-01	Flap Support Fairing No. 4
57-878-01-01	Inboard Flap Center Track Fairing - Left Wing
57-880-01-01	Flap Support Fairing No. 3 and Inboard Flaperon Support Fairing
57-882-01-01	Flap Support Fairing No. 3 and Inboard Flaperon Support Fairing
57-884-01-01	Outboard Flaperon Support Fairing - Left Wing
57-886-01-01	Flap Support Fairing No. 2



2C CHECK	
TASK CARD NUMBER	TASK TITLE
57-888-01-01	Flap Support Fairing No. 2
57-890-01-01	Flap Support Fairing No. 1
57-892-01-01	Flap Support Fairing No. 1
57-894-01-01	Outboard Auxiliary Support Fairing - Left Wing
57-896-02-01	Leading Edge to Front Spar - Inboard of Nacelle Strut - Right Wing
57-898-02-01	Leading Edge to Front Spar - Inboard of Nacelle Strut - Right Wing
57-900-02-01	Slat No. 8
57-902-02-01	Krueger Seal Flap/Nacelle Gap Cover Area - Right Wing
57-904-02-01	Krueger Seal Flap/Nacelle Gap Cover Area - Right Wing
57-906-02-01	Leading Edge to Front Spar - Outboard of Nacelle Strut - Right Wing
57-909-02-01	Leading Edge to Front Spar - Outboard of Nacelle Strut - Right Wing
57-910-02-01	Outboard Leading Edge Slats Number 9 through 14
57-924-02-01	Lower Wing Inspar Area (Fuel Tanks) - Inboard of Wing Rib 17 - Right Wing
57-924-02-02	Upper Wing Inspar Area (Fuel Tanks) - Inboard of Wing Rib 17 - Right Wing
57-928-02-01	Right Wing Dry Bay
57-932-02-01	Wing Inspar Area (Fuel Tanks) - Rib 17 to Wing Tip - Right Wing Lower Surface
57-932-02-02	Wing Inspar Area (Fuel Tanks) - Rib 17 to Wing Tip - Right Wing Upper Surface
57-940-02-01	Right Wing Tip
57-944-02-01	Right Wing Fixed T.E. - Aft of Rear Spar, Inbd of Outbd Support Fairing
57-946-02-01	Rear Spar to Landing Gear Support Beam - Right Wing
57-948-02-01	Landing Gear Support Beam and Rear Spar to Trailing Edge - Right Wing
57-950-02-01	Inboard Spoilers Numbers 8 and 9
57-952-02-01	Inboard Trailing Edge Flaps - Right Wing
57-954-02-01	Right Wing Flaperon
57-956-02-01	Rear Spar to Trailing Edge - Outboard of Flaperon - Right Wing
57-958-02-01	Rear Spar to Trailing Edge - Outboard of Flaperon - Right Wing



2C CHECK	
TASK CARD NUMBER	TASK TITLE
57-960-02-01	Outboard Spoilers Numbers 10 through 14
57-962-02-01	Right Wing Outboard Flap
57-964-02-01	Right Wing Aileron
57-966-02-01	Flap Support Fairing No. 5
57-968-02-01	Flap Support Fairing No. 5
57-970-02-01	Inboard Flap Center Track Fairing - Right Wing
57-972-02-01	Flap Support Fairing No. 6 and Inbd Flaperon Support Fairing
57-974-02-01	Flap Support Fairing No. 6 and Inbd Flaperon Support Fairing
57-976-02-01	Outboard Flaperon Support Fairing - Right Wing
57-978-02-01	Flap Support Fairing No. 7
57-980-02-01	Flap Support Fairing No. 7
57-982-02-01	Flap Support Fairing No. 8
57-984-02-01	Flap Support Fairing No. 8
57-986-02-01	Outboard Auxiliary Support Fairing - Right Wing

**D. 3C CHECK**

3C CHECK	
TASK CARD NUMBER	TASK TITLE
12-008-00-01	Left Wing Inboard Leading Edge Torque Tube Supports and Couplings
12-008-00-02	Right Wing Inboard Leading Edge Torque Tube Supports and Couplings
12-008-00-11	Left Wing Outboard Leading Edge Torque Tube Supports and Couplings
12-008-00-12	Right Wing Outboard Leading Edge Torque Tube Supports and Couplings
12-008-01-01	Forward Cargo Compartment Torque Tube Supports and Couplings
12-018-00-01	Left Wing Krueger Flap Drive Arm Bearing



3C CHECK	
TASK CARD NUMBER	TASK TITLE
12-018-00-02	Right Wing Krueger Flap Drive Arm Bearing
12-030-00-01	Left Wing Trailing Edge Torque Tube and Torque Tube Supports
12-030-00-02	Right Wing Trailing Edge Torque Tube and Torque Tube Supports
12-106-00-01	Passenger Entry Door Mechanisms
12-110-00-01	Forward Access Door Latch Pin
12-112-00-01	Main Equipment Center Access Door Latch Pin
20-010-00-01	Primary Flight Control and Brake Control Cables Turns
20-010-00-02	Primary Flight Control and Brake Control Cables
20-010-00-03	Primary Flight Control and Brake Control Cable Turns
20-010-00-04	Primary Flight Control Cable Turns
20-010-00-05	Primary Flight Control Cable Turns
20-012-00-01	Nose Gear Steering Control Cable Turns
20-012-00-02	Nose Gear Steering Control Cable Turns
20-015-00-01	Primary Flight Control and Brake Control Cables - straight runs
20-015-00-02	Primary Flight Control and Brake Control Cables - straight runs
20-015-00-03	Primary Flight Control and Brake Control Cables - Straight Runs
20-015-00-04	Primary Flight Control and Brake Control Cables - Straight Runs
20-015-00-05	Primary Flight Control and Brake Control Cable - Straight Runs
20-015-00-06	Primary Flight Control and Brake Control Cable - Straight Runs
20-015-00-07	Primary Flight Control Cables - Straight Runs
20-015-00-08	Primary Flight Control Cables - Straight Runs
20-015-00-09	Primary Flight Control Cables in Fuselage - Straight Runs
20-018-00-01	Nose Gear Steering Control Cables - straight runs
20-018-00-02	Nose Gear Steering Control Cables - straight runs
20-110-00-01	Primary Flight Control Cables - Protected Unpressurized Areas
20-110-00-02	Primary Flight Control Cables - Protected Unpressurized Areas



3C CHECK	
TASK CARD NUMBER	TASK TITLE
20-110-00-03	Primary Flight Control Cables - Protected Unpressurized Areas
20-110-00-04	Primary Flight Control Cables - Protected Unpressurized Areas
20-110-00-05	Primary Flight Control Cables - PROTECTED/UNPROTECTED UNPRESSURIZED AREAS
20-200-00-01	HIRF/L AFDC Task for ILS, RA, AIMS, Backdrive and Cross Channel
20-251-10-01	FOIL/MESH PANELS; ENGINE COWLS, STRUT, LEADING EDGE
20-251-20-01	FOIL/MESH PANELS; ENGINE COWLS, STRUT, LEADING EDGE
20-260-00-01	Ram Air Turbine (RAT) Wire Shielding Functional Check
20-270-01-01	PFCS Wire Shielding Functional Check - Left Wing
20-270-02-01	PFCS Wire Shielding Functional Check - Right Wing
20-280-00-01	PFCS Wire Shielding Functional Check - Empennage
20-290-00-01	HIRF/Lightning Ace Wire Bundle Shielding
20-300-00-01	HIRF/Arlinc 629 Buses for Flight Controls, Couplers to EE Racks
20-310-01-01	Functional Check Wire Bundle Inspection Left Flaps, Slats, Skew Sensors
20-310-02-01	Functional Check Wire Bundle Right Flaps, Slats, Skew Sensors
20-320-00-01	Gust Suppression Transducers Wire Shielding Functional Check
20-330-00-01	HIRF/Lightning ACE Disconnects to Modal Suppression Transducers
20-340-00-01	HIRF/lightning ACE disconnects to pitch rate sensors
20-400-00-01	HIRF/Lightning Glide Slope and Localizer Antenna Coax
20-430-00-01	HIRF/Lightning Glide Slope Tracking Antenna COAX
20-450-00-01	HIRF/Lightning Radio Altimeter Antenna to Transceiver Coax
20-460-00-01	HIRF/Lightning GPS Antenna to Left and Right MMR
20-600-00-01	Power Feeders connected to P100 and P200 Power Panels
20-602-00-01	Area Above Nose Landing Gear Wheel Well
20-642-00-01	Forward Bulkhead Left Main Landing Gear Wheel Well



3C CHECK	
TASK CARD NUMBER	TASK TITLE
20-644-00-01	Forward Bulkhead Right Main Landing Gear Wheel Well
20-648-00-01	Forward Cargo Power Drive Unit Wire Bundles
20-650-00-01	Areas Behind the FWD Cargo Compartment Sidewalls
20-652-00-01	Forward Cargo Compartment Power Feeders
20-656-00-01	Areas Below the FWD Cargo Compartment
20-658-00-01	Area Behind the Forward Cargo Compartment
20-659-00-01	Area Behind the Forward Cargo Compartment
20-660-00-01	Aft Cargo Compartment Power Feeders
20-665-00-01	Aft Cargo Power Drive Unit Wire Bundles
20-700-00-01	Areas Behind the Passenger Compartment Air Grilles
20-701-00-01	Areas Behind the Passenger Compartment Air Grilles
20-702-00-01	APU and RAT Power Feeders, and Galley and Cabin Power Feeders
20-704-00-01	Wiring Behind Passenger Compartment Air Grilles
20-705-00-01	Wiring Behind Passenger Compartment Air Grilles
20-708-00-01	Upper Surface of Ceiling Panels, Bins and Modules
20-712-00-01	Flight Deck EWIS
20-714-00-01	Flight Deck
20-716-00-01	Area Around the Video Control Center
20-730-00-01	Equipment Racks in Main Equipment Center.
20-732-00-01	APU, IDG, BAT. & CHGR and Ground Power Feeders in the Main Equipment Center
20-734-00-01	External Power Receptacle in the Main Equipment Center.
20-742-00-01	Areas Behind the Passenger Compartment Air Grilles
20-744-00-01	Areas Behind the Passenger Compartment Air Grilles
20-750-00-01	Wiring Behind Passenger Compartment Air Grilles
20-752-00-01	Wiring Behind Passenger Compartment Air Grilles
20-754-00-01	Areas Behind the Passenger Compartment Air Grilles



3C CHECK	
TASK CARD NUMBER	TASK TITLE
20-756-00-01	Areas Behind the Passenger Compartment Air Grilles
20-758-00-01	Wiring Behind Passenger Compartment Air Grilles
20-760-00-01	Wiring Behind Passenger Compartment Air Grilles
20-766-00-01	Areas Behind the Passenger Compartment Air Grilles
20-768-00-01	Areas Behind the Passenger Compartment Air Grilles
20-774-00-01	Wiring Behind Passenger Compartment Air Grilles
20-776-00-01	Wiring Behind Passenger Compartment Air Grilles
20-778-00-01	Areas Behind the Passenger Compartment Air Grilles
20-780-00-01	Areas Behind the Passenger Compartment Air Grilles
20-782-00-01	Wiring Behind Passenger Compartment Air Grilles
20-784-00-01	Wiring Behind Passenger Compartment Air Grilles
20-790-00-01	APU and APU Starter Power Feeders
20-792-00-01	APU and APU Starter Power Feeders
20-794-00-01	APU and APU Starter Power Feeders
20-800-00-01	Engine and Backup Generator Power Feeders - Left Engine
20-802-00-01	Engine and Backup Generator Power Feeders - Right Engine
20-850-00-01	Wing Leading Edge Wiring - Left Wing
20-851-00-01	Wing Leading Edge Wiring - Right Wing
20-852-00-01	FQIS Wiring in the Wing Main Tank - Left
20-852-00-02	FQIS Wiring in the Wing Main Tank - Right
21-040-00-01	Chiller Boost Fan
21-048-00-01	E/E Cooling System Override Switch
21-055-00-01	Condenser/Reheater
21-110-00-01	Cabin Positive Pressure Relief Valves



3C CHECK	
TASK CARD NUMBER	TASK TITLE
21-110-00-02	Cabin Positive Pressure Relief Valves
21-120-00-01	Cabin Positive Pressure Relief Filters
21-130-00-01	AFT and Bulk Cargo Temperature Selector Switches
21-131-00-01	AFT/Bulk Cargo Overheat Protection Switch & Relay
21-180-00-01	AC Pack Conditioned Air Check Valves
21-180-00-02	AC Pack Conditioned Air Check Valves
21-240-00-01	Ozone Converters
23-010-00-01	Passenger Address System
23-010-00-02	Personnel Address System
23-060-00-01	Static Dischargers
23-080-00-01	Voice Recorder System - Four Channel Operation
23-100-00-01	Voice Recorder System - Under Water Locator Beacon
23-100-00-02	Voice Recorder System - Under Water Locator Beacon
24-200-00-01	External Power Receptacles (Wear Check)
24-210-00-01	External Power Receptacles (Inspection)
25-055-00-01	Passenger Compartment Articulating Seats
25-062-00-01	Life Raft
25-067-00-01	Off-Wing Slide Compartment Door Lock/Latch System
25-068-00-01	Off-Wing Escape Slide Compartment Door Indication System
25-090-00-01	Flight Deck Escape Rope
25-095-00-01	Left Overwing Exit Door Lifeline
25-095-00-02	Right Overwing Exit Door Lifeline
25-240-00-01	Passenger Entry Door Emergency Escape Slide
25-240-00-02	Overwing Door Emergency Escape Slide
26-090-00-01	Engine Fire Switches
26-090-00-02	Engine Fire Switches





3C CHECK	
TASK CARD NUMBER	TASK TITLE
26-090-00-03	Engine Fire Switches
26-100-00-01	Engine Fire Extinguishing Distribution Lines
26-100-00-02	Engine Fire Extinguishing Distribution Lines
26-100-00-03	Engine Fire Extinguishing Distribution Lines
26-150-00-01	APU Fire Switch
26-200-00-01	Cargo Fire Extinguishing Arm & Discharge Switches
26-210-00-01	Cargo Fire Extinguishing Tubing
26-250-00-01	Cargo Fire Extinguishing System Filter/Regulator
26-274-00-01	Lower Lobe Attendant Rest Fire Extinguishing System
27-150-00-01	Primary Flight Computer Disconnect Switch
27-170-00-01	Left Wing Aileron and Flaperon System Hydraulic Fuses
27-170-00-02	Right Wing Aileron and Flaperon System Hydraulic Fuses
27-170-00-03	Rudder System Hydraulic Fuse
27-180-00-01	Rudder Check Valve
27-190-00-01	Wheel Jam Breakout Mechanism
27-200-00-01	Rudder Power Control Units
27-210-00-01	Control Column Breakout Mechanism
27-220-00-01	Elevator Power Control Units
27-240-00-01	Elevator Power Control Unit Bearings
27-270-00-01	Stabilizer Secondary Brakes
27-280-00-01	Stabilizer Trim Limit Switches
27-290-00-01	Stabilizer Ballscrew Safety Rod
27-300-00-01	Stabilizer Trim Actuator Gimbals
27-320-00-01	Left Wing TE Flap No-Back Brakes



3C CHECK	
TASK CARD NUMBER	TASK TITLE
27-320-00-02	Right Wing TE Flap No-Back Brakes
27-330-00-01	Auto Speedbrake Function
27-340-00-01	Left Leading Edge Slat No-Back Brakes
27-340-00-02	Right Leading Edge Slat No-Back Brakes
27-350-00-01	Autoslat Priority Valves - Main Landing Gear
27-360-00-01	Left Leading Edge Slat Skew/Loss Cable
27-360-00-02	Right Leading Edge Slat Skew/Loss Cable
27-380-00-01	Spoiler Auxiliary Retract Device (SARD) Operational Check
27-400-00-01	Aileron Trim Inhibit Operational Check
27-420-00-01	Rudder Pedal Pogo
27-430-00-01	Rudder Power Control Unit
27-440-00-01	Stabilizer Freeplay
28-010-00-01	Fuel Vent Float Valves
28-015-00-01	Left Fuel Surge Tank FLAME ARRESTORS. Zone 542
28-015-00-02	Right Fuel Surge Tank FLAME ARRESTORS. Zone 642
28-022-00-01	Engine Fuel Spar Valve Battery Circuit
28-022-60-01	GFI Relay Check
28-022-60-02	GFI Relay Check
28-025-00-01	Left Engine Fuel Spar Valve
28-025-00-02	Right Engine Fuel Spar Valve
28-030-00-01	APU Fuel Supply Line And Shroud
28-040-00-01	Defuel Valve Actuator
28-050-00-01	Fuel Jettison System
28-110-00-01	Fuel Quantity Indicating System (FQIS) - Out Of Tank Wiring Lightning Shield to Ground Termination
28-111-00-01	External Wires Over Center Fuel Tank
29-030-00-01	Hydraulic System Gross Internal Leakage



3C CHECK	
TASK CARD NUMBER	TASK TITLE
29-140-00-01	Center Hydraulic System Reservoir Pressurization Module
29-140-00-02	Left Hydraulic System Reservoir Pressurization Module
29-140-00-03	Right Hydraulic System Reservoir Pressurization Module
31-010-00-01	Flight Data Recorder System
31-010-00-02	Flight Data Recorder System
31-010-00-03	Flight Data Recorder System
31-010-00-04	Flight Data Recorder System
31-030-00-01	Flight Data Recorder Underwater Locator Beacon (ULB)
31-030-00-02	Flight Data Recorder Underwater Locator Beacon (ULB)
32-160-00-01	Brake Accumulator
32-170-00-01	Normal and Alternate Brake Systems
32-180-00-01	Left Main Landing Gear Antiskid Module Hydraulic Fuses
32-180-00-02	Right Main Landing Gear Antiskid Module Hydraulic Fuses
32-300-00-01	Left Main Landing Gear Mechanisms
32-300-00-02	Right Main Landing Gear Mechanisms
32-310-00-01	Left Main Landing Gear Door Mechanisms
32-310-00-02	Right Main Landing Gear Door Mechanisms
32-320-00-01	Nose Landing Gear Mechanisms
32-330-00-01	Nose Landing Gear Door Mechanisms
32-802-00-01	Nose Landing Gear and Landing Gear Doors
32-806-01-01	Left Main Landing Gear and Landing Gear Doors
32-810-02-01	Right Main Landing Gear and Landing Gear Doors
35-060-00-01	Passenger Oxygen System Door Latch/Actuator
35-060-00-02	Passenger Oxygen System Door Latch/Actuator



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

3C CHECK	
TASK CARD NUMBER	TASK TITLE
35-060-00-03	Passenger Oxygen System Door Latch/Actuator
35-060-00-04	Passenger Oxygen System Door Latch/Actuator
35-140-00-01	Passenger Gaseous Oxygen System Flow Control Units
35-180-00-01	Door Latch/Actuator and Decompression Horns
35-180-00-02	Door Latch/Actuator and Decompression Horns
35-180-00-03	Crew Rest Decompression Alarm Test
36-010-00-01	Engine Air Supply Manifold
38-020-00-01	Potable Water Isolation Valves and Cables
38-020-00-02	Potable Water Isolation Valves and Cables
38-030-00-01	Waste Drain Ball Valve & Fitting Seals (Not applicable to the 777F)
38-120-00-01	Potable Water Pressure Relief Valve
47-100-00-01	Restore the Ozone Converter (off-aircraft).
47-110-00-01	Clean the Primary Heat Exchanger (off-aircraft).
47-120-00-01	Functionally check the Regenerative Heat Exchanger (off-aircraft).
47-130-00-01	Restore the Filter Differential Pressure Sensor Switch (off-aircraft).
47-140-00-01	Visually Check for Fluid Accumulation Through the Drain Valve or Drain Cap.
47-150-00-01	Inspect (detailed) the Nitrogen Enriched Air (NEA) distribution lines
52-120-01-01	Passenger Entry Door Flight Lock Mechanism
52-125-00-01	No. 3 Over-Wing Door Flight Lock Mechanism
52-130-01-01	Passenger Entry Door Girt Bar Mechanism Interlock
52-135-00-01	No. 3 Over-Wing Door Latch Torque Tube Interlock
52-150-01-01	Passenger Entry Door EPAS Tubing
52-155-00-01	No. 3 Over-Wing Doors EPAS Tubing
52-160-00-01	Passenger Entry Door EPAS Circuitry
52-160-00-02	Passenger Entry Door EPAS Circuitry
52-160-00-03	Passenger Entry Door EPAS Circuitry



3C CHECK	
TASK CARD NUMBER	TASK TITLE
52-160-00-04	Passenger Entry Door EPAS Circuitry
52-170-01-01	Passenger Entry Door Mechanisms
52-175-00-01	No. 3 Over-Wing Door Mechanisms
52-180-00-01	Forward Large Cargo Door Manual Drive Mechanism & Lift PDU Brake
52-185-00-01	AFT Large Cargo Door Manual Drive Mechanism & Lift PDU Brake
52-210-00-01	Forward Large Cargo Door Ditching Interlock Mechanism
52-215-00-01	AFT Large Cargo Door Ditching Interlock Mechanism
52-220-00-01	AFT Small Cargo Door Hinge Power Drive Unit and Manual Drive Mechanism
52-240-00-01	Bulk Cargo Door Latch Mechanism
52-260-00-01	Passenger Entry Door Closed Proximity Sensors
52-265-00-01	No. 3 Over-Wing Doors Closed Proximity Sensors
52-270-00-01	Bulk Cargo Door Latch Microswitch
52-280-00-01	Forward Access Door Latched Proximity Sensor
52-290-00-01	Main Equip Center Door Latched Proximity Sensor
52-301-00-01	Flight Deck Door Strike Assembly
52-305-00-01	Flight Deck Door Decompression Panel Latches and Hinges
52-310-00-01	Flight Deck Door Pressure Sensor
52-320-00-01	Flight Deck Door Decompression Panel Trim Ring Seals
52-330-00-01	Flight Deck Door Deny Time Delay
52-502-00-01	Forward Large Cargo Door
52-503-00-01	Forward Large Cargo Door
52-508-00-01	Bulk Cargo Door
52-510-00-01	Aft Large Cargo Door
52-511-00-01	Aft Large Cargo Door



3C CHECK	
TASK CARD NUMBER	TASK TITLE
52-610-01-01	Left #1 Passenger Entry Door
52-611-01-01	Left #2 Passenger Entry Door
52-612-01-01	Left #3 Overwing Door
52-614-01-01	Left #4 Passenger Entry Door
52-616-01-01	Left #5 Passenger Entry Door
52-620-02-01	Right #1 Passenger Entry Door
52-621-02-01	Right #2 Passenger Entry Door
52-622-02-01	Right #3 Overwing Door
52-624-02-01	Right #4 Passenger Entry Door
52-626-02-01	Right #5 Passenger Entry Door
52-802-00-01	Forward Large Cargo Door
52-806-00-01	Aft Small Cargo Door
52-810-00-01	Aft Large Cargo Door
52-814-00-01	Bulk Cargo Door
52-816-01-01	Left No. 1 Passenger Entry Door - Section 41
52-820-01-01	Left No. 2 Passenger Entry Door - Section 43
52-824-01-01	Left No. 3 Overwing Door - Section 44
52-827-01-01	Left No. 4 Passenger Entry Door - Section 46
52-831-01-01	Left No. 5 Passenger Entry Door - Section 47
52-834-02-01	Right No. 1 Passenger/Crew Entry Door - Section 41
52-840-02-01	Right No. 2 Passenger Entry Door - Section 43
52-844-02-01	Right No. 3 Overwing Door - Section 44
52-849-02-01	Right No. 4 Passenger Entry Door - Section 46
52-853-02-01	Right No. 5 Passenger Entry Door - Section 47
53-501-00-01	Area Forward of Nose Landing Gear Wheel Well
53-502-00-01	Area Outboard and Above Nose Landing Gear Wheel Well



3C CHECK	
TASK CARD NUMBER	TASK TITLE
53-503-00-01	Left Area Outboard and Above Nose Landing Gear Wheel Well
53-504-00-01	Right Area Outboard and Above Nose Landing Gear Wheel Well
53-505-00-01	Main Equipment Center
53-506-00-01	Main Equipment Center
53-507-00-01	Main Equipment Center
53-508-00-01	Main Equipment Center
53-509-01-01	Forward Cargo Compartment
53-511-00-01	Forward Cargo Compartment
53-512-00-01	Forward Cargo Compartment
53-514-00-01	Area Below Forward Cargo Compartment
53-515-00-01	Area Below Forward Cargo Compartment
53-516-00-01	Area Aft of Forward Cargo Compartment
53-518-00-01	Main Landing Gear Wheel Well, Left
53-519-00-01	Main Landing Gear Wheel Well, Right
53-520-00-01	Area Above Main Landing Gear Wheel Well
53-522-01-01	Aft Cargo Compartment
53-523-01-01	Aft Cargo Compartment
53-524-00-01	Aft Cargo Compartment
53-525-00-01	Aft Cargo Compartment
53-526-00-01	Aft Cargo Compartment
53-529-01-01	Area Below Aft Cargo Compartment
53-530-01-01	Area Below Aft Cargo Compartment
53-532-00-01	Area Below Aft Cargo Compartment
53-533-00-01	Area Below Aft Cargo Compartment



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

3C CHECK	
TASK CARD NUMBER	TASK TITLE
53-534-00-01	Area Below Aft Cargo Compartment
53-536-00-01	Bulk Cargo Compartment
53-537-00-01	Bulk Cargo Compartment
53-538-00-01	Area Below Bulk Cargo Compartment
53-539-00-01	Area Aft of Bulk Cargo Compartment
53-540-00-01	Area Aft of Bulk Cargo Compartment
53-543-00-01	Overwing Wing-To-Body Fairings, Left
53-544-00-01	Overwing Wing-To-Body Fairings, Right
53-546-01-01	Overwing Wing-To-Body Fairings - Left
53-546-02-01	Overwing Wing-To-Body Fairings - Right
53-548-00-01	Flight Compartment
53-549-00-01	Flight Compartment
53-553-00-01	Passenger Compartment - Left
53-554-00-01	Passenger Compartment - Right
53-557-00-01	Main Deck Compartment
53-558-00-01	Main Deck Compartment
53-559-00-01	Main Deck Compartment
53-560-00-01	Main Deck Compartment
53-564-00-01	Passenger Compartment - Left
53-565-00-01	Passenger Compartment - Right
53-568-00-01	Passenger Compartment - Left
53-569-00-01	Passenger Compartment - Right
53-570-00-01	Passenger Compartment - Left
53-571-00-01	Passenger Compartment - Right
53-576-00-01	Area Above Main Deck Compartment Ceiling
53-577-00-01	Main Deck Compartment





3C CHECK	
TASK CARD NUMBER	TASK TITLE
53-578-00-01	Main Deck Compartment
53-580-00-01	Area Above Main Deck Compartment Ceiling
53-584-00-01	Passenger Compartment
53-585-00-01	Passenger Compartment
53-586-00-01	Passenger Compartment
53-589-00-01	Passenger Compartment
53-590-00-01	Passenger Compartment
53-591-00-01	Passenger Compartment
53-592-00-01	Passenger Compartment
53-593-00-01	Passenger Compartment
53-594-00-01	Passenger Compartment
53-597-00-01	Area above Main Deck Compartment Ceiling
53-602-00-01	Passenger Compartment
53-603-00-01	Passenger Compartment
53-606-00-01	Passenger Compartment
53-607-00-01	Passenger Compartment
53-608-00-01	Passenger Compartment
53-609-00-01	Passenger Compartment
53-610-00-01	Area above Wing Center Section
53-611-00-01	Area above Wing Center Section
53-614-00-01	Passenger Compartment Left
53-614-00-02	Passenger Compartment Right
53-615-00-01	Passenger Compartment Left and Right
53-616-00-01	Passenger Compartment Left and Right



3C CHECK	
TASK CARD NUMBER	TASK TITLE
53-619-00-01	Area above Passenger Compartment Ceiling
53-623-00-01	Passenger Compartment Ceiling
53-655-00-01	Lower Fuselage - Subzone 110
53-656-00-01	Nose Landing Gear Wheel Well
53-657-00-01	Area Aft of Forward Cargo Compartment
53-659-00-02	LOWER FUSELAGE -SUBZONE 120
53-666-01-01	MAIN LANDING GEAR WHEEL WELL AREA
53-668-00-01	Left Main Landing Gear Wheel Well
53-668-00-02	Right Main Landing Gear Wheel Well
53-670-00-01	Area Below Aft Cargo Compartment
53-672-00-01	Lower Fuselage - Subzone 160
53-673-00-01	Underwing Wing-To-Body Fairing - Left
53-673-00-02	Underwing Wing-To-Body Fairing - Right
53-682-00-01	Subzone 310 - Section 48
53-683-00-01	Subzone 310 - Section 48
53-800-00-01	Left Fuselage Lower Half - Section 41 & 43 - STA 92.5 to STA 867
53-800-00-02	Right Fuselage Lower Half - Section 41 & 43 - STA 92.5 to STA 867
53-800-00-03	Lower Left Fuselage & Wing to Body Fairing - STA 858 to STA 1655
53-800-00-04	Lower Right Fuselage & Wing to Body Fairing - STA 858 to STA 1655
53-800-00-05	Lower Left Fuselage - STA 1655 to STA 2196
53-800-00-06	Lower Right Fuselage - STA 1655 to STA 2196
53-804-00-01	Radome
53-806-00-01	Area Forward of Nose Landing Gear Wheel Well
53-810-00-01	Nose Gear Wheel Well (Inspection Accomplished from Within Wheel Well)
53-812-00-01	Area Above and Outboard of the Nose Landing Gear Wheel Well
53-814-00-01	Main Equipment Center



3C CHECK	
TASK CARD NUMBER	TASK TITLE
53-820-00-01	Forward Cargo Compartment
53-824-00-01	Area Below Forward Cargo Compartment
53-828-00-01	Area Above Wing Center Section
53-832-00-01	Forward Keel Beam
53-834-00-01	Area Above Main Landing Gear Wheel Well
53-838-00-01	Left Main Landing Gear Wheel Well (Inspection accomplished within WW)
53-842-00-01	Right Main Landing Gear Wheel Well (Inspection accomplished Within WW)
53-844-00-01	Aft Keel Beam
53-852-00-01	Aft Cargo Compartment
53-856-00-01	Aft Cargo Compartment
53-858-00-01	Aft Cargo Compartment
53-860-00-01	Area Below Aft Cargo Compartment
53-862-00-01	Area Below Aft Cargo Compartment
53-872-00-01	Bulk Cargo Compartment
53-876-00-01	Area Aft of the Bulk Cargo Compartment
53-878-00-01	Area Aft of the Bulk Cargo Compartment
53-880-00-01	Forward Wing-To-Body Fairings - Left
53-882-00-01	Forward Wing-To-Body Fairings - Right
53-898-00-01	Left Upper Fuselage - Flight Compartment - STA 92.5 to STA 246
53-898-00-02	Right Upper Fuselage - Flight Compartment - STA 92.5 to STA 246
53-900-00-01	Flight Compartment
53-902-00-01	Flight Compartment
53-904-00-01	Passenger Compartment - Section 41
53-906-00-01	Area Above Passenger Compartment Ceiling - Section 41



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

3C CHECK	
TASK CARD NUMBER	TASK TITLE
53-908-00-01	Passenger Compartment - Section 43
53-910-00-01	Area Above Passenger Compartment Ceiling - Section 43
53-912-00-01	Passenger Compartment - Section 44
53-914-00-01	Area Above Passenger Compartment - Section 44
53-916-00-01	Passenger Compartment - Section 46
53-918-00-01	Area Above Passenger Compartment Ceiling - Section 46
53-920-00-01	Passenger Compartment - Section 47
53-922-00-01	Area Above Passenger Compartment Ceiling - Section 47
53-926-00-01	Fuselage Area Aft of Bulkhead - Inspection Accomplished within Fuselage
53-932-00-01	Upper Fuselage - Left and Right - Section 43
54-610-01-01	Aft Torque Box - Left Nacelle Strut
54-612-02-01	Aft Torque Box - Right Nacelle Strut
54-822-01-01	Forward Strut Fairing - Left Nacelle Strut
54-824-01-01	Forward and Aft Torque Box - Left Nacelle Strut - Cowls Opened
54-826-01-01	Forward and Aft Torque Box - Left Nacelle Strut
54-828-01-01	Aft Strut Fairing - Left Nacelle Strut
54-832-02-01	Forward Strut Fairing - Right Nacelle Strut
54-834-02-01	Forward and Aft Torque Box - Right Nacelle Strut - Fan Cowls Opened
54-836-02-01	Forward and Aft Torque Box - Right Nacelle Strut
54-838-02-01	Aft Strut Fairing - Right Nacelle Strut
55-501-00-01	Horizontal Stabilizer Center Section
55-503-00-01	Area Aft of Bulkhead
55-504-00-01	Area Aft of Bulkhead Stabilizer Torsion Box Compartment
55-505-00-01	Stabilizer Torsion Box Compartment
55-507-00-01	Fuselage - BS 2150-2570.3 (Section 48)
55-508-00-01	Fuselage - BS 2150-2570.3 (Section 48)



3C CHECK	
TASK CARD NUMBER	TASK TITLE
55-510-00-01	Vertical Stabilizer - Auxiliary Spar to Front Spar
55-512-00-01	Vertical Stabilizer - Front Spar to Rear Spar
55-513-00-01	Vertical Stabilizer - Front Spar to Rear Spar
55-513-01-01	Vertical Stabilizer - Front Spar to Rear Spar
55-514-00-01	Vertical Stabilizer - Front Spar to Rear Spar
55-514-01-01	Vertical Stabilizer - Front Spar to Rear Spar
55-516-00-01	Vertical Stabilizer - Rear Spar to Trailing Edge
55-516-01-01	Vertical Stabilizer - Rear Spar to Trailing Edge
55-519-00-01	Rudder
55-520-00-01	Rudder
55-520-01-01	Rudder
55-523-00-01	Rudder Tab
55-524-00-01	Vertical Stabilizer Leading Edge
55-524-01-01	Vertical Stabilizer Leading Edge
55-525-00-01	Vertical Stabilizer - Auxiliary Spar to Front Spar
55-525-01-01	Vertical Stabilizer - Auxiliary Spar to Front Spar
55-526-00-01	Vertical Stabilizer - Front Spar to Rear Spar
55-529-01-01	Left Horizontal Stabilizer Center Section
55-530-01-01	Left Horizontal Stabilizer Center Section
55-531-01-01	Left Horizontal Stabilizer Center
55-532-01-01	Left Horizontal Stabilizer - Front Spar to Rear Spar
55-533-01-01	Left Horizontal Stabilizer - Front Spar to Rear Spar
55-536-01-01	Left Elevator
55-536-03-01	Left Elevator



3C CHECK	
TASK CARD NUMBER	TASK TITLE
55-537-01-01	Left Horizontal Stabilizer Tip
55-540-02-01	Right Horizontal Stabilizer Center Section
55-541-02-01	Right Horizontal Stabilizer Center Section
55-542-02-01	Right Horizontal Stabilizer Center Section
55-543-02-01	Right Horizontal Stabilizer - Front Spar to Rear Spar
55-544-02-01	Right Horizontal Stabilizer - Front Spar to Rear Spar
55-547-02-01	Right Elevator
55-547-04-01	Right Elevator
55-548-02-01	Right Horizontal Stabilizer Tip
55-549-00-01	Area Aft of Bulkhead and Stabilizer Torsion Box Compartment
55-550-00-01	Vertical Stabilizer - Front Spar to Rear Spar
55-551-00-01	Left Horizontal Stabilizer Tip
55-552-00-01	Right Horizontal Stabilizer Tip
55-800-00-01	Stabilizer Torsion Box Compartment - Left and Right Sides
55-804-00-01	Vertical Stabilizer Leading Edge
55-811-00-01	Vertical Stabilizer - Auxiliary Spar / Front Spar
55-812-00-01	Vertical Stabilizer - Front Spar to Rear Spar - Between Ribs 8 and 9
55-814-00-01	Vertical Stabilizer - Rear Spar to Trailing Edge
55-817-00-01	Vertical Stabilizer - Rear Spar to Trailing Edge
55-819-00-01	Vertical Stabilizer - Rear Spar to Trailing Edge
55-820-00-01	Rudder
55-822-00-01	Rudder Tab
55-824-00-01	Vertical Stabilizer Forward Tip
55-826-00-01	Vertical Stabilizer Forward Tip
55-830-01-01	Left Horizontal Stabilizer - Leading Edge
55-834-01-01	Left Horizontal Stabilizer - Auxiliary Spar to Front Spar

3C CHECK	
TASK CARD NUMBER	TASK TITLE
55-838-01-01	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
55-838-03-02	Left Horizontal Stabilizer - Front Spar to Rear Spar
55-841-00-01	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
55-843-00-01	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
55-844-01-01	Left Elevator
55-846-01-01	Left Horizontal Stabilizer Tip
55-850-02-01	Right Horizontal Stabilizer - Leading Edge
55-854-02-01	Right Horizontal Stabilizer Auxiliary Spar to Front Spar
55-856-04-01	Right Horizontal Stabilizer - Front Spar to Rear Spar
55-858-02-01	Right Horizontal Stabilizer - Rear Spar to Trailing Edge
55-861-00-01	Right Horizontal Stabilizer - Rear Spar to Trailing Edge
55-863-00-01	Right Horizontal Stabilizer - Rear Spar to Trailing Edge
55-864-02-01	Right Elevator
55-866-02-01	Right Horizontal Stabilizer Tip
56-010-00-01	Flight Deck #2 Windows MICROSWITCH
56-020-00-01	Flight Deck Number 2 Windows Guide Bearings
56-030-00-01	Flight Deck Number 2 Windows Open/Close Function
57-503-01-01	Slat Number 7
57-506-01-01	Wing Inspar Area (Fuel Tanks) - Inboard of Wing Rib 17
57-508-01-01	Wing Inspar Area (Fuel Tanks) - Rib 17 to Rib 34
57-509-01-01	Wing Inspar Area (Fuel Tanks) - Rib 34 to Wing Tip
57-512-00-01	Slats Number 1 Through 6 Cove Skin
57-516-01-01	Left Wing Inboard Main Flap
57-517-01-01	Left Wing Inboard Main Flap



3C CHECK	
TASK CARD NUMBER	TASK TITLE
57-518-01-01	Left Wing Inboard Aft Flap
57-521-00-01	Left Wing Inboard Trailing Edge Flap Torque Tube
57-521-00-02	Right Wing Inboard Trailing Edge Flap Torque Tube
57-523-01-01	Left Wing Outboard Flap
57-524-01-01	Left Wing Outboard Flap
57-531-01-01	Inboard Flap Center Track Fairing - Left Wing
57-536-02-01	Slat Number 8
57-539-00-01	Slats Number 9 Through 14 Cove Skin
57-541-02-01	Wing Inspar Area (Fuel Tanks) - Inboard of Wing Rib 17
57-543-02-01	Wing Inspar Area (Fuel Tanks) - Rib 17 to Rib 34
57-544-02-01	Wing Inspar Area (Fuel Tanks) - Rib 34 to Wing Tip
57-551-02-01	Right Wing Inboard Main Flap
57-552-02-01	Right Wing Inboard Main Flap
57-553-02-01	Right Wing Inboard Aft Flap
57-556-02-01	Right Wing Outboard Flap
57-557-02-01	Right Wing Outboard Flap
57-561-02-01	Inboard Flap Center Track Fairing - Right Wing
57-601-00-01	Wing Center Section
57-602-00-01	Area Above Wing Center Section
57-603-00-01	Underwing Wing-To-Body Fairing
57-605-00-01	Lower Fuselage - Subzone 130 and 140
57-607-01-01	Left Wing
57-608-01-01	Left Wing
57-609-01-01	Left Wing
57-610-01-01	Left Wing
57-612-01-01	Left Wing





3C CHECK	
TASK CARD NUMBER	TASK TITLE
57-613-01-01	Wing Leading Edge - Forward of Front Spar
57-614-01-01	Wing Trailing Edge - Aft of Rear Spar
57-620-02-01	Right Wing
57-621-02-01	Right Wing
57-622-02-01	Right Wing
57-623-02-01	Right Wing
57-625-02-01	Right Wing
57-626-02-01	Wing Leading Edge - Forward of Front Spar
57-627-02-01	Wing Trailing Edge - Aft of Rear Spar
57-630-00-01	Area Above Wing Center Section
57-633-01-01	Left Wing
57-634-02-01	Right Wing
57-802-00-01	Wing Center Section
57-804-01-01	Leading Edge to Front Spar - Inboard of Nacelle Strut - Left Wing
57-806-01-01	Leading Edge to Front Spar - Inboard of Nacelle Strut - Left Wing
57-808-01-01	Slat No. 7
57-810-01-01	Krueger Seal Flap/Nacelle Gap Cover Area - Left Wing
57-812-01-01	Krueger Seal Flap/Nacelle Gap Cover Area - Left Wing
57-814-01-01	Leading Edge to Front Spar - Outboard of Nacelle Strut - Left Wing
57-817-01-01	Leading Edge to Front Spar - Outboard of Nacelle Strut - Left Wing
57-818-01-01	Left Wing Outboard Leading Edge Slats Number 1 through 6
57-820-01-01	Slat Number 6
57-822-01-01	Slat Number 5
57-824-01-01	Slat Number 4



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

3C CHECK	
TASK CARD NUMBER	TASK TITLE
57-826-01-01	Slat Number 3
57-828-01-01	Slat Number 2
57-831-01-01	Slat Number 1
57-834-01-01	Center Fuel Tank - Rib 1 to Rib 8 - Left Wing
57-836-01-01	Left Wing Dry Bay
57-838-01-01	Main Tank - Rib 8 to Rib 17 - Left Wing
57-842-01-01	Main Tank - Rib 17 to Rib 32 - Left Wing
57-845-01-01	Main Tank Rib 32 to Rib 34 - Left Wing
57-847-01-01	Main Tank, Surge Tank, and Inspar Area - Left Wing
57-848-01-01	Left Wing Tip
57-851-01-01	Left Wing Tip
57-852-01-01	Left Wing Fixed T.E. - Aft of Rear Spar, Inbd of Outbd Support Fairing
57-854-01-01	Rear Spar to Landing Gear Support Beam - Left Wing
57-856-01-01	Landing Gear Support Beam and Rear Spar to Trailing Edge - Left Wing
57-858-01-01	Inboard Spoilers Numbers 6 and 7
57-860-01-01	Inboard Trailing Edge Flaps - Left Wing
57-862-01-01	Left Wing Flaperon
57-864-01-01	Rear Spar to Trailing Edge - Outboard of Flaperon - Left Wing
57-866-01-01	Rear Spar to Trailing Edge - Outboard of Flaperon - Left Wing
57-868-01-01	Outboard Spoilers Numbers 1 through 5
57-870-01-01	Left Wing Outboard Flap
57-872-01-01	Left Wing Aileron
57-874-01-01	Flap Support Fairing No. 4
57-876-01-01	Flap Support Fairing No. 4
57-878-01-01	Inboard Flap Center Track Fairing - Left Wing
57-880-01-01	Flap Support Fairing No. 3 and Inboard Flaperon Support Fairing



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

3C CHECK	
TASK CARD NUMBER	TASK TITLE
57-882-01-01	Flap Support Fairing No. 3 and Inboard Flaperon Support Fairing
57-884-01-01	Outboard Flaperon Support Fairing - Left Wing
57-886-01-01	Flap Support Fairing No. 2
57-888-01-01	Flap Support Fairing No. 2
57-890-01-01	Flap Support Fairing No. 1
57-892-01-01	Flap Support Fairing No. 1
57-894-01-01	Outboard Auxiliary Support Fairing - Left Wing
57-896-02-01	Leading Edge to Front Spar - Inboard of Nacelle Strut - Right Wing
57-898-02-01	Leading Edge to Front Spar - Inboard of Nacelle Strut - Right Wing
57-900-02-01	Slat No. 8
57-902-02-01	Krueger Seal Flap/Nacelle Gap Cover Area - Right Wing
57-904-02-01	Krueger Seal Flap/Nacelle Gap Cover Area - Right Wing
57-906-02-01	Leading Edge to Front Spar - Outboard of Nacelle Strut - Right Wing
57-909-02-01	Leading Edge to Front Spar - Outboard of Nacelle Strut - Right Wing
57-910-02-01	Outboard Leading Edge Slats Number 9 through 14
57-912-02-01	Slat Number 9
57-914-02-01	Slat Number 10
57-916-02-01	Slat Number 11
57-918-02-01	Slat Number 12
57-920-02-01	Slat Number 13
57-923-02-01	Slat Number 14
57-926-02-01	Center Fuel Tank - Rib 1 to Rib 8 - Right Wing
57-928-02-01	Right Wing Dry Bay
57-930-02-01	Main Tank - Rib 8 to Rib 17 - Right Wing



3C CHECK	
TASK CARD NUMBER	TASK TITLE
57-934-02-01	Main Tank - Rib 17 to Rib 32 - Right Wing
57-937-02-01	Main Tank - Rib 32 to Rib 34 - Right Wing
57-939-02-01	Main Tank, Surge Tank, and Inspar Area - Right Wing
57-940-02-01	Right Wing Tip
57-943-02-01	Right Wing Tip
57-944-02-01	Right Wing Fixed T.E. - Aft of Rear Spar, Inbd of Outbd Support Fairing
57-946-02-01	Rear Spar to Landing Gear Support Beam - Right Wing
57-948-02-01	Landing Gear Support Beam and Rear Spar to Trailing Edge - Right Wing
57-950-02-01	Inboard Spoilers Numbers 8 and 9
57-952-02-01	Inboard Trailing Edge Flaps - Right Wing
57-954-02-01	Right Wing Flaperon
57-956-02-01	Rear Spar to Trailing Edge - Outboard of Flaperon - Right Wing
57-958-02-01	Rear Spar to Trailing Edge - Outboard of Flaperon - Right Wing
57-960-02-01	Outboard Spoilers Numbers 10 through 14
57-962-02-01	Right Wing Outboard Flap
57-964-02-01	Right Wing Aileron
57-966-02-01	Flap Support Fairing No. 5
57-968-02-01	Flap Support Fairing No. 5
57-970-02-01	Inboard Flap Center Track Fairing - Right Wing
57-972-02-01	Flap Support Fairing No. 6 and Inbd Flaperon Support Fairing
57-974-02-01	Flap Support Fairing No. 6 and Inbd Flaperon Support Fairing
57-976-02-01	Outboard Flaperon Support Fairing - Right Wing
57-978-02-01	Flap Support Fairing No. 7
57-980-02-01	Flap Support Fairing No. 7
57-982-02-01	Flap Support Fairing No. 8
57-984-02-01	Flap Support Fairing No. 8



3C CHECK	
TASK CARD NUMBER	TASK TITLE
57-986-02-01	Outboard Auxiliary Support Fairing - Right Wing

**E. 4C CHECK**

4C CHECK	
TASK CARD NUMBER	TASK TITLE
12-008-00-01	Left Wing Inboard Leading Edge Torque Tube Supports and Couplings
12-008-00-02	Right Wing Inboard Leading Edge Torque Tube Supports and Couplings
12-008-00-11	Left Wing Outboard Leading Edge Torque Tube Supports and Couplings
12-008-00-12	Right Wing Outboard Leading Edge Torque Tube Supports and Couplings
12-008-01-01	Forward Cargo Compartment Torque Tube Supports and Couplings
12-018-00-01	Left Wing Krueger Flap Drive Arm Bearing
12-018-00-02	Right Wing Krueger Flap Drive Arm Bearing
12-030-00-01	Left Wing Trailing Edge Torque Tube and Torque Tube Supports
12-030-00-02	Right Wing Trailing Edge Torque Tube and Torque Tube Supports
12-100-00-01	Forward Large Cargo Door, Door Mechanisms
12-102-00-01	Aft Large Cargo Door, Door Mechanisms
12-104-00-01	Aft Small Cargo Door Hinge Arms and Adjustment Rods
12-106-00-01	Passenger Entry Door Mechanisms
12-110-00-01	Forward Access Door Latch Pin
12-112-00-01	Main Equipment Center Access Door Latch Pin
20-010-00-01	Primary Flight Control and Brake Control Cables Turns
20-010-00-02	Primary Flight Control and Brake Control Cables
20-010-00-03	Primary Flight Control and Brake Control Cable Turns
20-010-00-04	Primary Flight Control Cable Turns



4C CHECK	
TASK CARD NUMBER	TASK TITLE
20-010-00-05	Primary Flight Control Cable Turns
20-012-00-01	Nose Gear Steering Control Cable Turns
20-012-00-02	Nose Gear Steering Control Cable Turns
20-015-00-01	Primary Flight Control and Brake Control Cables - straight runs
20-015-00-02	Primary Flight Control and Brake Control Cables - straight runs
20-015-00-03	Primary Flight Control and Brake Control Cables - Straight Runs
20-015-00-04	Primary Flight Control and Brake Control Cables - Straight Runs
20-015-00-05	Primary Flight Control and Brake Control Cable - Straight Runs
20-015-00-06	Primary Flight Control and Brake Control Cable - Straight Runs
20-015-00-07	Primary Flight Control Cables - Straight Runs
20-015-00-08	Primary Flight Control Cables - Straight Runs
20-015-00-09	Primary Flight Control Cables in Fuselage - Straight Runs
20-018-00-01	Nose Gear Steering Control Cables - straight runs
20-018-00-02	Nose Gear Steering Control Cables - straight runs
20-110-00-01	Primary Flight Control Cables - Protected Unpressurized Areas
20-110-00-02	Primary Flight Control Cables - Protected Unpressurized Areas
20-110-00-03	Primary Flight Control Cables - Protected Unpressurized Areas
20-110-00-04	Primary Flight Control Cables - Protected Unpressurized Areas
20-110-00-05	Primary Flight Control Cables - PROTECTED/UNPROTECTED UNPRESSURIZED AREAS
20-200-00-01	HIRF/L AFDC Task for ILS, RA, AIMS, Backdrive and Cross Channel
20-251-10-01	FOIL/MESH PANELS; ENGINE COWLS, STRUT, LEADING EDGE
20-251-20-01	FOIL/MESH PANELS; ENGINE COWLS, STRUT, LEADING EDGE
20-260-00-01	Ram Air Turbine (RAT) Wire Shielding Functional Check
20-270-01-01	PFCS Wire Shielding Functional Check - Left Wing
20-270-02-01	PFCS Wire Shielding Functional Check - Right Wing
20-280-00-01	PFCS Wire Shielding Functional Check - Empennage



4C CHECK	
TASK CARD NUMBER	TASK TITLE
20-290-00-01	HIRF/Lightning Ace Wire Bundle Shielding
20-300-00-01	HIRF/Arlinc 629 Buses for Flight Controls, Couplers to EE Racks
20-310-01-01	Functional Check Wire Bundle Inspection Left Flaps, Slats, Skew Sensors
20-310-02-01	Functional Check Wire Bundle Right Flaps, Slats, Skew Sensors
20-320-00-01	Gust Suppression Transducers Wire Shielding Functional Check
20-330-00-01	HIRF/Lightning ACE Disconnects to Modal Suppression Transducers
20-340-00-01	HIRF/lightning ACE disconnects to pitch rate sensors
20-400-00-01	HIRF/Lightning Glide Slope and Localizer Antenna Coax
20-410-00-01	Radome Diverter Strips Detailed Visual Inspection
20-420-00-01	HIRF/Lightning Localizer Tracking, VOR/Localizer Antenna COAX
20-430-00-01	HIRF/Lightning Glide Slope Tracking Antenna COAX
20-440-00-01	HIRF/Lightning VOR/Localizer Capture Antenna COAX
20-445-00-01	Fin Tip Diverter Strip
20-450-00-01	HIRF/Lightning Radio Altimeter Antenna to Transceiver Coax
20-460-00-01	HIRF/Lightning GPS Antenna to Left and Right MMR
20-560-01-01	HIRF/ L Functional Test for FQIS, Left Side
20-560-02-01	HIRF/ L Functional Test for FQIS, Right Side
20-640-10-01	Wing Center Section Fuel Tank (SFAR 88)
20-641-00-01	ECS Bay Installed EWIS
20-642-00-01	Forward Bulkhead Left Main Landing Gear Wheel Well
20-644-00-01	Forward Bulkhead Right Main Landing Gear Wheel Well
20-648-00-01	Forward Cargo Power Drive Unit Wire Bundles
20-650-00-01	Areas Behind the FWD Cargo Compartment Sidewalls
20-651-00-01	Areas Below the AFT Cargo Compartment



4C CHECK	
TASK CARD NUMBER	TASK TITLE
20-658-00-01	Area Behind the Forward Cargo Compartment
20-664-00-01	Areas Behind the Aft Cargo Compartment Sidewalls
20-665-00-01	Aft Cargo Power Drive Unit Wire Bundles
20-668-00-01	APU Battery Installation and Power Feeders
20-670-00-01	Area Behind the Bulk Cargo Compartment Sidewalls
20-672-00-01	Area Behind the Bulk Cargo Compartment
20-700-00-01	Areas Behind the Passenger Compartment Air Grilles
20-704-00-01	Wiring Behind Passenger Compartment Air Grilles
20-716-00-01	Area Around the Video Control Center
20-734-00-01	External Power Receptacle in the Main Equipment Center.
20-742-00-01	Areas Behind the Passenger Compartment Air Grilles
20-750-00-01	Wiring Behind Passenger Compartment Air Grilles
20-754-00-01	Areas Behind the Passenger Compartment Air Grilles
20-758-00-01	Wiring Behind Passenger Compartment Air Grilles
20-766-00-01	Areas Behind the Passenger Compartment Air Grilles
20-774-00-01	Wiring Behind Passenger Compartment Air Grilles
20-778-00-01	Areas Behind the Passenger Compartment Air Grilles
20-782-00-01	Wiring Behind Passenger Compartment Air Grilles
20-794-00-01	APU and APU Starter Power Feeders
20-796-00-01	Main Deck Entry Doors
20-800-00-01	Engine and Backup Generator Power Feeders - Left Engine
20-802-00-01	Engine and Backup Generator Power Feeders - Right Engine
20-840-01-01	IDG and Backup Power Feeders - Left Wing
20-840-02-01	IDG and Backup Power Feeders - Right Wing
20-842-00-01	EWIS within Nacelle Gap - Left
20-842-00-02	EWIS within Nacelle Gap - Right





4C CHECK	
TASK CARD NUMBER	TASK TITLE
20-844-00-01	IDG and Backup Power Feeders - Left Wing
20-844-00-02	IDG and Backup Power Feeders - Right Wing
20-856-11-01	Center Fuel Tank (Rib 1 to Rib 8) - Left Wing (SFAR 88)
20-856-12-01	Center Fuel Tank (Rib 1 to Rib 8) - Right Wing (SFAR 88)
20-858-11-01	Main Tank (Rib 8 to Rib 17) - Left Wing (SFAR 88)
20-858-12-01	Main Tank (Rib 8 to Rib 17) - Right Wing (SFAR 88)
20-860-11-01	Main Tank (Rib 17 to Rib 32) - Left Wing (SFAR 88)
20-860-12-01	Main Tank (Rib 17 to Rib 32) - Right Wing (SFAR 88)
20-864-11-01	Surge Tank - Rib 38 to Rib 41 - Left Wing (SFAR 88)
20-864-12-01	Surge Tank - Rib 38 to Rib 41 - Right Wing (SFAR 88)
20-866-00-01	Flap Support No. 3
20-868-00-01	Flap Support No. 6
21-040-00-01	Chiller Boost Fan
21-048-00-01	E/E Cooling System Override Switch
21-054-00-01	IFE Cooling System Air Supply Multi-holed Orifices
21-055-00-01	Condenser/Reheater
21-110-00-01	Cabin Positive Pressure Relief Valves
21-110-00-02	Cabin Positive Pressure Relief Valves
21-120-00-01	Cabin Positive Pressure Relief Filters
21-130-00-01	AFT and Bulk Cargo Temperature Selector Switches
21-131-00-01	AFT/Bulk Cargo Overheat Protection Switch & Relay
21-180-00-01	AC Pack Conditioned Air Check Valves
21-180-00-02	AC Pack Conditioned Air Check Valves
21-240-00-01	Ozone Converters



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

4C CHECK	
TASK CARD NUMBER	TASK TITLE
21-250-00-01	E/E Equipment Cooling Override Duct
23-010-00-01	Passenger Address System
23-010-00-02	Personnel Address System
23-060-00-01	Static Dischargers
23-080-00-01	Voice Recorder System - Four Channel Operation
23-100-00-01	Voice Recorder System - Under Water Locator Beacon
23-100-00-02	Voice Recorder System - Under Water Locator Beacon
24-200-00-01	External Power Receptacles (Wear Check)
24-210-00-01	External Power Receptacles (Inspection)
25-055-00-01	Passenger Compartment Articulating Seats
25-062-00-01	Life Raft
25-067-00-01	Off-Wing Slide Compartment Door Lock/Latch System
25-068-00-01	Off-Wing Escape Slide Compartment Door Indication System
25-240-00-01	Passenger Entry Door Emergency Escape Slide
25-240-00-02	Overwing Door Emergency Escape Slide
25-260-00-01	Overhead Crew Rest Secondary Egress System
25-260-00-02	Overhead Attendant Rests Secondary Egress System
25-270-00-01	Overhead Crew Rest Secondary Egress Grab Bar
25-270-00-02	Overhead Attendant Rest Secondary Egress Grab Bar
26-064-00-01	Lower Lobe Attendant Rest (LLAR) Smoke Detection System
26-090-00-01	Engine Fire Switches
26-090-00-02	Engine Fire Switches
26-090-00-03	Engine Fire Switches
26-100-00-01	Engine Fire Extinguishing Distribution Lines
26-100-00-02	Engine Fire Extinguishing Distribution Lines
26-100-00-03	Engine Fire Extinguishing Distribution Lines



4C CHECK	
TASK CARD NUMBER	TASK TITLE
26-150-00-01	APU Fire Switch
26-200-00-01	Cargo Fire Extinguishing Arm & Discharge Switches
26-210-00-01	Cargo Fire Extinguishing Tubing
27-150-00-01	Primary Flight Computer Disconnect Switch
27-170-00-01	Left Wing Aileron and Flaperon System Hydraulic Fuses
27-170-00-02	Right Wing Aileron and Flaperon System Hydraulic Fuses
27-170-00-03	Rudder System Hydraulic Fuse
27-180-00-01	Rudder Check Valve
27-190-00-01	Wheel Jam Breakout Mechanism
27-200-00-01	Rudder Power Control Units
27-210-00-01	Control Column Breakout Mechanism
27-220-00-01	Elevator Power Control Units
27-240-00-01	Elevator Power Control Unit Bearings
27-270-00-01	Stabilizer Secondary Brakes
27-280-00-01	Stabilizer Trim Limit Switches
27-320-00-01	Left Wing TE Flap No-Back Brakes
27-320-00-02	Right Wing TE Flap No-Back Brakes
27-330-00-01	Auto Speedbrake Function
27-340-00-01	Left Leading Edge Slat No-Back Brakes
27-340-00-02	Right Leading Edge Slat No-Back Brakes
27-350-00-01	Autoslat Priority Valves - Main Landing Gear
27-360-00-01	Left Leading Edge Slat Skew/Loss Cable
27-360-00-02	Right Leading Edge Slat Skew/Loss Cable
27-400-00-01	Aileron Trim Inhibit Operational Check



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

4C CHECK	
TASK CARD NUMBER	TASK TITLE
27-420-00-01	Rudder Pedal Pogo
27-430-00-01	Rudder Power Control Unit
27-440-00-01	Stabilizer Freeplay
27-460-00-01	TRAILING EDGE FLAP SUPPORT LINKAGE PIN FREEPLAY
28-010-00-01	Fuel Vent Float Valves
28-011-00-01	Left Wing
28-011-00-02	Right Wing
28-013-20-01	Left Wing Pressure Relief Valve (SFAR 88)
28-013-20-02	Right Wing Pressure Relief Valve (SFAR 88)
28-013-30-01	Left Wing Overfill Float Switch. (SFAR 88)
28-013-30-02	Right wing Overfill Float Switch. (SFAR 88)
28-013-40-01	Left Wing Vent Scoop Lower Duct. (SFAR 88)
28-013-40-02	Right Wing Vent Scoop Lower Duct. (SFAR 88)
28-015-00-01	Left Fuel Surge Tank FLAME ARRESTORS. Zone 542
28-015-00-02	Right Fuel Surge Tank FLAME ARRESTORS. Zone 642
28-015-20-01	Left Wing Scavenge Jet Pumps. (SFAR 88)
28-015-20-02	Right Wing Scavenge Jet Pumps. (SFAR 88)
28-015-20-03	Wing Center Section Scavenge Jet Pumps. (SFAR 88)
28-021-10-01	Left Wing in-Tank tubing, equipment static ground straps and clamps. (SFAR 88)
28-021-10-02	Right Wing in-Tank tubing, equipment static ground straps and clamps. (SFAR 88)
28-021-10-03	Center Main Tank tubing, equipment static ground straps and clamps. (SFAR 88)
28-021-10-04	Auxiliary Tank Tubing and Equipment Static Ground Straps and Clamps
28-021-20-01	Left Wing Fueling Shutoff Valve
28-021-20-02	Right Wing Fueling Shutoff Valve
28-021-30-01	Left Wing Fueling Receptacle. (SFAR 88)
28-021-30-02	Right Wing Fueling Receptacle. (SFAR 88)



4C CHECK	
TASK CARD NUMBER	TASK TITLE
28-022-00-01	Engine Fuel Spar Valve Battery Circuit
28-022-30-01	Left wing Pump Housing. (SFAR 88)
28-022-30-02	Right wing Pump Housing. (SFAR 88)
28-022-30-03	Pump Housing (AUX TANK)
28-022-40-01	Left Wing Boost and Jettison Pumps. (SFAR 88)
28-022-40-02	Right Wing Boost and Jettison Pumps. (SFAR 88)
28-022-40-03	Wing Center Section Override/Jettison Pumps. (SFAR 88)
28-022-50-01	Left Wing Motor Operated Valve. (SFAR 88)
28-022-50-02	Right Wing Motor Operated Valve. (SFAR 88)
28-022-50-03	Motor Operated Valve (AUX TANK)
28-022-60-01	GFI Relay Check
28-022-60-02	GFI Relay Check
28-023-00-01	Fuel Spar Valve Battery
28-025-00-01	Left Engine Fuel Spar Valve
28-025-00-02	Right Engine Fuel Spar Valve
28-025-20-01	APU DC Fuel Pump (SFAR 88)
28-025-30-01	APU Fuel Shutoff Valve (SFAR 88)
28-025-40-01	APU Isolation Valve (SFAR 88)
28-026-10-01	Defuel Valve (SFAR 88)
28-030-00-01	APU Fuel Supply Line And Shroud
28-031-20-01	Left Wing Jettison Nozzle Valve. (SFAR 88)
28-031-20-02	Right Wing Jettison Nozzle Valve. (SFAR 88)
28-031-30-01	Left Wing Jettison Isolation Valve. (SFAR 88)
28-031-30-02	Right Wing Jettison Isolation Valve. (SFAR 88)



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

4C CHECK	
TASK CARD NUMBER	TASK TITLE
28-031-40-01	Left Wing Jettison Nozzle Manifold. (SFAR 88)
28-031-40-02	Right Wing Jettison Nozzle Manifold. (SFAR 88)
28-040-00-01	Defuel Valve Actuator
28-041-10-01	Left Wing Main Tank FQIS Wiring. (SFAR 88)
28-041-10-02	Right Wing Main Tank FQIS Wiring. (SFAR 88)
28-041-10-03	Wing Center Tank FQIS Wiring. (SFAR 88)
28-041-10-04	FQIS Wiring. (AUX TANK)
28-041-20-01	Left Wing Main Tank FQIS Equipment. (SFAR 88)
28-041-20-02	Right Wing Main Tank FQIS Equipment. (SFAR 88)
28-041-20-03	Wing Center Tank FQIS Equipment. (SFAR 88)
28-041-20-04	FQIS Equipment (AUX TANK)
28-041-30-01	Fuel Quantity Indicating System (FQIS) - Out Of Tank Wiring Lightning Shield to Ground Termination
28-050-00-01	Fuel Jettison System
29-030-00-01	Hydraulic System Gross Internal Leakage
29-140-00-01	Center Hydraulic System Reservoir Pressurization Module
29-140-00-02	Left Hydraulic System Reservoir Pressurization Module
29-140-00-03	Right Hydraulic System Reservoir Pressurization Module
31-010-00-01	Flight Data Recorder System
31-010-00-02	Flight Data Recorder System
31-010-00-03	Flight Data Recorder System
31-010-00-04	Flight Data Recorder System
31-030-00-01	Flight Data Recorder Underwater Locator Beacon (ULB)
31-030-00-02	Flight Data Recorder Underwater Locator Beacon (ULB)
32-160-00-01	Brake Accumulator
32-170-00-01	Normal and Alternate Brake Systems
32-180-00-01	Left Main Landing Gear Antiskid Module Hydraulic Fuses



4C CHECK	
TASK CARD NUMBER	TASK TITLE
32-180-00-02	Right Main Landing Gear Antiskid Module Hydraulic Fuses
32-300-00-01	Left Main Landing Gear Mechanisms
32-300-00-02	Right Main Landing Gear Mechanisms
32-310-00-01	Left Main Landing Gear Door Mechanisms
32-310-00-02	Right Main Landing Gear Door Mechanisms
32-320-00-01	Nose Landing Gear Mechanisms
32-330-00-01	Nose Landing Gear Door Mechanisms
32-802-00-01	Nose Landing Gear and Landing Gear Doors
32-806-01-01	Left Main Landing Gear and Landing Gear Doors
32-810-02-01	Right Main Landing Gear and Landing Gear Doors
35-060-00-01	Passenger Oxygen System Door Latch/Actuator
35-060-00-02	Passenger Oxygen System Door Latch/Actuator
35-060-00-03	Passenger Oxygen System Door Latch/Actuator
35-060-00-04	Passenger Oxygen System Door Latch/Actuator
35-070-00-01	Passenger Chemical Oxygen Generators
35-070-00-02	Passenger Chemical Oxygen Generators
35-090-00-01	Passenger Oxygen Masks
35-090-00-02	Passenger Oxygen Masks
35-090-00-03	Passenger Oxygen Masks
35-092-00-01	Lower Lobe Attendant Rest Supplemental Oxygen System
35-096-00-01	Lower Lobe Attendant Rest Supplemental Oxygen System
35-120-00-01	Passenger Gaseous Oxygen System Pressure Regulator
35-120-00-02	Supernumerary Gaseous Oxygen System Pressure Regulator
35-140-00-01	Passenger Gaseous Oxygen System Flow Control Units



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

4C CHECK	
TASK CARD NUMBER	TASK TITLE
35-170-00-01	Oxygen Mask Assemblies
35-170-00-02	Oxygen Mask Assemblies
35-180-00-01	Door Latch/Actuator and Decompression Horns
35-180-00-02	Door Latch/Actuator and Decompression Horns
35-180-00-03	Crew Rest Decompression Alarm Test
35-190-00-01	OFCR/OFAR Oxygen Generators
36-010-00-01	Engine Air Supply Manifold
38-020-00-01	Potable Water Isolation Valves and Cables
38-020-00-02	Potable Water Isolation Valves and Cables
38-030-00-01	Waste Drain Ball Valve & Fitting Seals (Not applicable to the 777F)
38-120-00-01	Potable Water Pressure Relief Valve
47-100-00-01	Restore the Ozone Converter (off-aircraft).
47-110-00-01	Clean the Primary Heat Exchanger (off-aircraft).
47-120-00-01	Functionally check the Regenerative Heat Exchanger (off-aircraft).
47-130-00-01	Restore the Filter Differential Pressure Sensor Switch (off-aircraft).
47-140-00-01	Visually Check for Fluid Accumulation Through the Drain Valve or Drain Cap.
47-150-00-01	Inspect (detailed) the Nitrogen Enriched Air (NEA) distribution lines
47-160-00-01	Operationally check the center tank vent cross flow check valve.
52-120-01-01	Passenger Entry Door Flight Lock Mechanism
52-125-00-01	No. 3 Over-Wing Door Flight Lock Mechanism
52-130-01-01	Passenger Entry Door Girt Bar Mechanism Interlock
52-135-00-01	No. 3 Over-Wing Door Latch Torque Tube Interlock
52-140-01-01	Passenger Entry Door Mode Select Mechanism and Cables
52-145-00-01	No. 3 Over-Wing Doors Mode Select Mechanism and Pull Cable
52-150-01-01	Passenger Entry Door EPAS Tubing
52-155-00-01	No. 3 Over-Wing Doors EPAS Tubing





4C CHECK	
TASK CARD NUMBER	TASK TITLE
52-160-00-01	Passenger Entry Door EPAS Circuitry
52-160-00-02	Passenger Entry Door EPAS Circuitry
52-160-00-03	Passenger Entry Door EPAS Circuitry
52-160-00-04	Passenger Entry Door EPAS Circuitry
52-170-01-01	Passenger Entry Door Mechanisms
52-175-00-01	No. 3 Over-Wing Door Mechanisms
52-180-00-01	Forward Large Cargo Door Manual Drive Mechanism & Lift PDU Brake
52-185-00-01	AFT Large Cargo Door Manual Drive Mechanism & Lift PDU Brake
52-190-00-01	Forward Large Cargo Door Rotary Actuator No-Back
52-195-00-01	AFT Large Cargo Door Rotary Actuator No-Back
52-200-00-01	Forward Large Cargo Door Lock Handle Load Limiter
52-205-00-01	AFT Large Cargo Door Lock Handle Load Limiter
52-210-00-01	Forward Large Cargo Door Ditching Interlock Mechanism
52-215-00-01	AFT Large Cargo Door Ditching Interlock Mechanism
52-220-00-01	AFT Small Cargo Door Hinge Power Drive Unit and Manual Drive Mechanism
52-230-00-01	AFT Small Cargo Door Rotary Actuator
52-240-00-01	Bulk Cargo Door Latch Mechanism
52-250-00-01	Equipment Compartment Exterior Door Latch Mechanisms
52-260-00-01	Passenger Entry Door Closed Proximity Sensors
52-265-00-01	No. 3 Over-Wing Doors Closed Proximity Sensors
52-270-00-01	Bulk Cargo Door Latch Microswitch
52-280-00-01	Forward Access Door Latched Proximity Sensor
52-290-00-01	Main Equip Center Door Latched Proximity Sensor
52-310-00-01	Flight Deck Door Pressure Sensor



4C CHECK	
TASK CARD NUMBER	TASK TITLE
52-330-00-01	Flight Deck Door Deny Time Delay
52-502-00-01	Forward Large Cargo Door
52-510-00-01	Aft Large Cargo Door
52-601-00-01	Forward Large Cargo Door
52-602-00-01	Aft Small Cargo Door
52-603-00-01	Bulk Cargo Door
52-604-00-01	Aft Large Cargo Door
52-802-00-01	Forward Large Cargo Door
52-804-00-01	Forward Large Cargo Door
52-806-00-01	Aft Small Cargo Door
52-808-00-01	Aft Small Cargo Door
52-810-00-01	Aft Large Cargo Door
52-812-00-01	Aft Large Cargo Door
52-814-00-01	Bulk Cargo Door
52-816-01-01	Left No. 1 Passenger Entry Door - Section 41
52-818-01-01	Left No. 1 Passenger/Crew Entry Door - Section 41
52-820-01-01	Left No. 2 Passenger Entry Door - Section 43
52-822-01-01	Left No. 2 Passenger Entry Door - Section 43
52-824-01-01	Left No. 3 Overwing Door - Section 44
52-825-01-01	Left No. 3 Overwing Door - Section 44
52-827-01-01	Left No. 4 Passenger Entry Door - Section 46
52-829-01-01	Left No. 4 Passenger Entry Door - Section 46
52-831-01-01	Left No. 5 Passenger Entry Door - Section 47
52-833-01-01	Left No. 5 Passenger Entry Door - Section 47
52-834-02-01	Right No. 1 Passenger/Crew Entry Door - Section 41
52-836-02-01	Right No. 1 Passenger/Crew Entry Door - Section 41



4C CHECK	
TASK CARD NUMBER	TASK TITLE
52-840-02-01	Right No. 2 Passenger Entry Door - Section 43
52-842-02-01	Right No. 2 Passenger Entry Door - Section 43
52-844-02-01	Right No. 3 Overwing Door - Section 44
52-846-02-01	Right No. 3 Overwing Door - Section 44
52-849-02-01	Right No. 4 Passenger Entry Door - Section 46
52-851-02-01	Right No. 4 Passenger Entry Door - Section 46
52-853-02-01	Right No. 5 Passenger Entry Door - Section 47
52-855-02-01	Right No. 5 Passenger Entry Door - Section 47
53-508-00-01	Main Equipment Center
53-509-01-01	Forward Cargo Compartment
53-518-00-01	Main Landing Gear Wheel Well, Left
53-519-00-01	Main Landing Gear Wheel Well, Right
53-520-00-01	Area Above Main Landing Gear Wheel Well
53-522-01-01	Aft Cargo Compartment
53-523-01-01	Aft Cargo Compartment
53-529-01-01	Area Below Aft Cargo Compartment
53-530-01-01	Area Below Aft Cargo Compartment
53-532-00-01	Area Below Aft Cargo Compartment
53-532-01-01	Area Below Aft Cargo Compartment
53-533-00-01	Area Below Aft Cargo Compartment
53-533-01-01	Area Below Aft Cargo Compartment
53-543-00-01	Overwing Wing-To-Body Fairings, Left
53-544-00-01	Overwing Wing-To-Body Fairings, Right
53-545-01-01	Forward Wing-To-Body Fairings - Left



4C CHECK	
TASK CARD NUMBER	TASK TITLE
53-545-02-01	Forward Wing-To-Body Fairings - Right
53-546-01-01	Overwing Wing-To-Body Fairings - Left
53-546-02-01	Overwing Wing-To-Body Fairings - Right
53-547-01-01	Aft Wing-To-Body Fairings - Left
53-547-02-01	Aft Wing-To-Body Fairings - Right
53-553-00-01	Passenger Compartment - Left
53-554-00-01	Passenger Compartment - Right
53-564-00-01	Passenger Compartment - Left
53-565-00-01	Passenger Compartment - Right
53-574-00-01	Area Above Main Deck Compartment Ceiling
53-579-00-01	Area Above Main Deck Compartment Ceiling
53-584-00-01	Passenger Compartment
53-585-00-01	Passenger Compartment
53-586-00-01	Passenger Compartment
53-595-00-01	Area above Main Deck Compartment Ceiling
53-596-00-01	Area above Main Deck Compartment Ceiling
53-602-00-01	Passenger Compartment
53-603-00-01	Passenger Compartment
53-611-00-01	Area above Wing Center Section
53-614-00-01	Passenger Compartment Left
53-614-00-02	Passenger Compartment Right
53-620-00-01	Forward Wing-To-Body Fairings - Left
53-620-00-02	Forward Wing-To-Body Fairings - Right
53-621-00-01	Aft Wing-To-Body Fairings - Left
53-621-00-02	Aft Wing-To-Body Fairings - Right
53-651-00-01	Forward Access Door



4C CHECK	
TASK CARD NUMBER	TASK TITLE
53-652-00-01	Main Equipment Center Access Door
53-656-00-01	Nose Landing Gear Wheel Well
53-666-00-01	LEFT MAIN LANDING GEAR WHEEL WELL AREA
53-666-00-03	RIGHT MAIN LANDING GEAR WHEEL WELL AREA
53-666-01-01	MAIN LANDING GEAR WHEEL WELL AREA
53-668-00-01	Left Main Landing Gear Wheel Well
53-668-00-02	Right Main Landing Gear Wheel Well
53-680-00-01	Horizontal Stabilizer Center Section
53-682-00-01	Subzone 310 - Section 48
53-683-00-01	Subzone 310 - Section 48
53-800-00-01	Left Fuselage Lower Half - Section 41 & 43 - STA 92.5 to STA 867
53-800-00-02	Right Fuselage Lower Half - Section 41 & 43 - STA 92.5 to STA 867
53-800-00-03	Lower Left Fuselage & Wing to Body Fairing - STA 858 to STA 1655
53-800-00-04	Lower Right Fuselage & Wing to Body Fairing - STA 858 to STA 1655
53-800-00-05	Lower Left Fuselage - STA 1655 to STA 2196
53-800-00-06	Lower Right Fuselage - STA 1655 to STA 2196
53-804-00-01	Radome
53-806-00-01	Area Forward of Nose Landing Gear Wheel Well
53-810-00-01	Nose Gear Wheel Well (Inspection Accomplished from Within Wheel Well)
53-812-00-01	Area Above and Outboard of the Nose Landing Gear Wheel Well
53-814-00-01	Main Equipment Center
53-818-00-01	Forward Cargo Compartment
53-822-00-01	Area Below Forward Cargo
53-826-00-01	Area Aft of Forward Cargo Compartment



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

4C CHECK	
TASK CARD NUMBER	TASK TITLE
53-830-00-01	Left Environmental Control Systems Bay
53-830-00-02	Right Environmental Control Systems Bay
53-832-00-01	Forward Keel Beam
53-838-00-01	Left Main Landing Gear Wheel Well (Inspection accomplished within WW)
53-842-00-01	Right Main Landing Gear Wheel Well (Inspection accomplished Within WW)
53-844-00-01	Aft Keel Beam
53-852-00-01	Aft Cargo Compartment
53-852-01-01	Aft Cargo Compartment
53-854-00-01	Aft Cargo Compartment
53-864-00-01	Area Below Aft Cargo Compartment
53-866-00-01	Area Below Aft Cargo Compartment
53-870-00-01	Bulk Cargo Compartment
53-874-00-01	Area Below Bulk Cargo Compartment
53-876-00-01	Area Aft of the Bulk Cargo Compartment
53-880-00-01	Forward Wing-To-Body Fairings - Left
53-882-00-01	Forward Wing-To-Body Fairings - Right
53-884-00-01	Overwing Wing-To-Body Fairing - Left
53-886-00-01	Overwing Wing-To-Body Fairings - Right
53-888-00-01	Underwing Wing-to-Body Fairings - Left
53-890-00-01	Underwing Wing-To-Body Fairings - Right
53-892-00-01	Aft Wing-to-Body Fairings - Left
53-894-00-01	Aft Wing-To-Body Fairings - Right
53-896-00-01	Left Upper Fuselage - Body Sections 41 and 43 - STA 246 to STA 1035
53-896-00-02	Right Upper Fuselage - Body Sections 41 and 43 - STA 246 to STA 1035
53-896-00-03	Left Upper Fuselage - Body Section 44 - BS 1035 to 1434
53-896-00-04	Right Upper Fuselage - Body Section 44 - STA 1035 to STA 1434



4C CHECK	
TASK CARD NUMBER	TASK TITLE
53-896-00-05	Left Upper Fuselage - Body Section 46 and 47 - STA 1434 to STA 2150
53-896-00-06	Right Upper Fuselage - Body Sections 46 and 47 - STA 1434 to STA 2150
53-898-00-01	Left Upper Fuselage - Flight Compartment - STA 92.5 to STA 246
53-898-00-02	Right Upper Fuselage - Flight Compartment - STA 92.5 to STA 246
53-900-00-01	Flight Compartment
53-904-00-01	Passenger Compartment - Section 41
53-906-00-01	Area Above Passenger Compartment Ceiling - Section 41
53-908-00-01	Passenger Compartment - Section 43
53-910-00-01	Area Above Passenger Compartment Ceiling - Section 43
53-912-00-01	Passenger Compartment - Section 44
53-914-00-01	Area Above Passenger Compartment - Section 44
53-916-00-01	Passenger Compartment - Section 46
53-918-00-01	Area Above Passenger Compartment Ceiling - Section 46
53-920-00-01	Passenger Compartment - Section 47
53-922-00-01	Area Above Passenger Compartment Ceiling - Section 47
53-924-00-01	Body Section 48 - BS2150 to BS 2570
53-924-00-02	Body Section 48 - BS2150 to BS 2570
53-926-00-01	Fuselage Area Aft of Bulkhead - Inspection Accomplished within Fuselage
54-537-01-01	Left Nacelle Strut
54-538-01-01	Forward Torque Box - Left Nacelle Strut
54-540-01-01	AFT Torque Box - Left Nacelle Strut
54-541-01-02	AFT Torque Box - Left Nacelle Strut (For GE90-100 series engines only)
54-542-01-02	Strut Forward Torque Box (For GE90-100 series engines only)
54-543-01-02	AFT Torque Box - Left Nacelle Strut (GE90-100)



4C CHECK	
TASK CARD NUMBER	TASK TITLE
54-545-02-01	Right Nacelle Strut
54-546-02-01	Forward Torque Box - Right Nacelle Strut
54-548-02-01	AFT Torque Box - Right Nacelle Strut
54-549-02-02	AFT Torque Box - Right Nacelle Strut (For GE90-100 series engines only)
54-550-02-02	Strut Forward Torque Box (For GE90-100 series engines only)
54-551-02-02	AFT Torque Box - Right Nacelle Strut (GE90-100 Engine)
54-582-01-01	FORWARD TORQUE BOX - LEFT NACELLE STRUT (GE90-100 Only)
54-583-02-01	FORWARD TORQUE BOX - RIGHT NACELLE STRUT (GE90-100 Only)
54-610-01-01	Aft Torque Box - Left Nacelle Strut
54-612-02-01	Aft Torque Box - Right Nacelle Strut
54-822-01-01	Forward Strut Fairing - Left Nacelle Strut
54-824-01-01	Forward and Aft Torque Box - Left Nacelle Strut - Cowls Opened
54-826-01-01	Forward and Aft Torque Box - Left Nacelle Strut
54-828-01-01	Aft Strut Fairing - Left Nacelle Strut
54-832-02-01	Forward Strut Fairing - Right Nacelle Strut
54-834-02-01	Forward and Aft Torque Box - Right Nacelle Strut - Fan Cowls Opened
54-836-02-01	Forward and Aft Torque Box - Right Nacelle Strut
54-838-02-01	Aft Strut Fairing - Right Nacelle Strut
55-501-00-01	Horizontal Stabilizer Center Section
55-502-00-01	Horizontal Stabilizer Center Section
55-509-00-01	Vertical Stabilizer - Auxiliary Spar to Front Spar
55-511-00-01	Vertical Stabilizer - Front Spar to Rear Spar
55-515-00-01	Vertical Stabilizer - Rear Spar to Trailing Edge
55-515-01-01	Vertical Stabilizer - Rear Spar to Trailing Edge
55-517-00-01	Vertical Stabilizer - Rear Spar to Trailing Edge
55-517-01-01	Vertical Stabilizer - Rear Spar to Trailing Edge





4C CHECK	
TASK CARD NUMBER	TASK TITLE
55-518-00-01	Vertical Stabilizer - Rear Spar to Trailing Edge
55-518-01-01	Vertical Stabilizer - Rear Spar to Trailing Edge
55-521-00-01	Rudder Tab
55-522-00-01	Rudder Tab
55-527-01-01	Left Horizontal Stabilizer Center Section
55-534-01-01	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
55-534-03-01	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
55-535-01-01	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
55-535-03-01	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
55-538-02-01	Right Horizontal Stabilizer Center Section
55-545-02-01	Right Horizontal Stabilizer - Rear Spar to Trailing Edge
55-545-04-01	Right Horizontal Stabilizer - Rear Spar to Trailing Edge
55-546-02-01	Right Horizontal Stabilizer - Rear Spar to Trailing Edge
55-546-04-01	Right Horizontal Stabilizer - Rear Spar to Trailing Edge
55-652-00-01	Vertical Stabilizer Leading Edge
55-653-00-01	Vertical Stabilizer - Auxiliary Spar to Front Spar
55-653-01-01	Vertical Stabilizer - Auxiliary Spar to Front Spar
55-654-00-01	Vertical Stabilizer - Rear Spar to Trailing Edge
55-654-01-01	Vertical Stabilizer - Rear Spar to Trailing Edge
55-655-00-01	Vertical Stabilizer Forward Tip
55-656-01-01	Left Horizontal Stabilizer Leading Edge
55-657-01-01	Left Horizontal Stabilizer - Auxiliary Spar to Front Spar
55-658-01-01	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
55-658-03-01	Left Horizontal Stabilizer - Rear Spar to Trailing Edge



4C CHECK	
TASK CARD NUMBER	TASK TITLE
55-659-01-01	Left Horizontal Stabilizer Tip
55-660-02-01	Right Horizontal Stabilizer Leading Edge
55-661-02-01	Right Horizontal Stabilizer - Auxiliary Spar to Front Spar
55-662-02-01	Right Horizontal Stabilizer - Rear Spar to Trailing Edge
55-662-04-01	Right Horizontal Stabilizer - Rear Spar to Trailing Edge
55-663-02-01	Right Horizontal Stabilizer Tip
55-800-00-01	Stabilizer Torsion Box Compartment - Left and Right Sides
55-804-00-01	Vertical Stabilizer Leading Edge
55-806-00-01	Vertical Stabilizer Leading Edge
55-808-00-01	Vertical Stabilizer - Auxiliary Spar to Rear Spar
55-812-00-01	Vertical Stabilizer - Front Spar to Rear Spar - Between Ribs 8 and 9
55-814-00-01	Vertical Stabilizer - Rear Spar to Trailing Edge
55-817-00-01	Vertical Stabilizer - Rear Spar to Trailing Edge
55-820-00-01	Rudder
55-822-00-01	Rudder Tab
55-824-00-01	Vertical Stabilizer Forward Tip
55-828-01-01	Left Horizontal Stabilizer - Center Section
55-830-01-01	Left Horizontal Stabilizer - Leading Edge
55-832-01-01	Left Horizontal Stabilizer - Auxiliary Spar to Rear Spar
55-838-01-01	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
55-838-03-02	Left Horizontal Stabilizer - Front Spar to Rear Spar
55-841-00-01	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
55-844-01-01	Left Elevator
55-846-01-01	Left Horizontal Stabilizer Tip
55-848-02-01	Right Horizontal Stabilizer Center Section
55-850-02-01	Right Horizontal Stabilizer - Leading Edge



4C CHECK	
TASK CARD NUMBER	TASK TITLE
55-852-02-01	Right Horizontal Stabilizer - Auxiliary Spar to Rear Spar
55-856-04-01	Right Horizontal Stabilizer - Front Spar to Rear Spar
55-858-02-01	Right Horizontal Stabilizer - Rear Spar to Trailing Edge
55-861-00-01	Right Horizontal Stabilizer - Rear Spar to Trailing Edge
55-864-02-01	Right Elevator
55-866-02-01	Right Horizontal Stabilizer Tip
56-010-00-01	Flight Deck #2 Windows MICROSWITCH
56-020-00-01	Flight Deck Number 2 Windows Guide Bearings
56-030-00-01	Flight Deck Number 2 Windows Open/Close Function
57-501-00-01	Wing Center Section
57-505-01-01	Wing Inspar Area (Fuel Tanks) - Inboard of Wing Rib 17
57-507-01-01	Wing Inspar Area (Fuel Tanks) - Rib 17 to Wing Tip
57-515-01-01	Left Wing Inboard Main Flap
57-519-01-01	Left Wing Flaperon
57-520-01-01	Left Wing Flaperon
57-533-01-01	Outboard Flaperon Support Fairing - Left Wing
57-540-02-01	Wing Inspar Area (Fuel Tanks) - Inboard of Wing Rib 17
57-542-02-01	Wing Inspar Area (Fuel Tanks) - Rib 17 to Wing Tip
57-550-02-01	Right Wing Inboard Main Flap
57-554-02-01	Right Wing Flaperon
57-555-02-01	Right Wing Flaperon
57-563-02-01	Outboard Flaperon Support Fairing - Right Wing
57-603-00-01	Underwing Wing-To-Body Fairing
57-614-01-01	Wing Trailing Edge - Aft of Rear Spar



4C CHECK	
TASK CARD NUMBER	TASK TITLE
57-627-02-01	Wing Trailing Edge - Aft of Rear Spar
57-630-00-01	Area Above Wing Center Section
57-804-01-01	Leading Edge to Front Spar - Inboard of Nacelle Strut - Left Wing
57-806-01-01	Leading Edge to Front Spar - Inboard of Nacelle Strut - Left Wing
57-808-01-01	Slat No. 7
57-810-01-01	Krueger Seal Flap/Nacelle Gap Cover Area - Left Wing
57-812-01-01	Krueger Seal Flap/Nacelle Gap Cover Area - Left Wing
57-814-01-01	Leading Edge to Front Spar - Outboard of Nacelle Strut - Left Wing
57-817-01-01	Leading Edge to Front Spar - Outboard of Nacelle Strut - Left Wing
57-818-01-01	Left Wing Outboard Leading Edge Slats Number 1 through 6
57-832-01-01	Lower Wing Inspar Area (Fuel Tanks) - Inboard of Wing Rib 17 - Left Wing
57-832-01-02	Upper Wing Inspar Area (Fuel Tanks) - Inboard of Wing Rib 17 - Left Wing
57-836-01-01	Left Wing Dry Bay
57-840-01-01	Wing Inspar Area - Rib 17 to Wing Tip - Left Wing Lower Surface
57-840-01-02	Wing Inspar Area - Rib 17 to Wing Tip - Left Wing Upper Surface
57-848-01-01	Left Wing Tip
57-852-01-01	Left Wing Fixed T.E. - Aft of Rear Spar, Inbd of Outbd Support Fairing
57-854-01-01	Rear Spar to Landing Gear Support Beam - Left Wing
57-856-01-01	Landing Gear Support Beam and Rear Spar to Trailing Edge - Left Wing
57-858-01-01	Inboard Spoilers Numbers 6 and 7
57-860-01-01	Inboard Trailing Edge Flaps - Left Wing
57-862-01-01	Left Wing Flaperon
57-864-01-01	Rear Spar to Trailing Edge - Outboard of Flaperon - Left Wing
57-866-01-01	Rear Spar to Trailing Edge - Outboard of Flaperon - Left Wing
57-868-01-01	Outboard Spoilers Numbers 1 through 5
57-870-01-01	Left Wing Outboard Flap



4C CHECK	
TASK CARD NUMBER	TASK TITLE
57-872-01-01	Left Wing Aileron
57-874-01-01	Flap Support Fairing No. 4
57-876-01-01	Flap Support Fairing No. 4
57-878-01-01	Inboard Flap Center Track Fairing - Left Wing
57-880-01-01	Flap Support Fairing No. 3 and Inboard Flaperon Support Fairing
57-882-01-01	Flap Support Fairing No. 3 and Inboard Flaperon Support Fairing
57-884-01-01	Outboard Flaperon Support Fairing - Left Wing
57-886-01-01	Flap Support Fairing No. 2
57-888-01-01	Flap Support Fairing No. 2
57-890-01-01	Flap Support Fairing No. 1
57-892-01-01	Flap Support Fairing No. 1
57-894-01-01	Outboard Auxiliary Support Fairing - Left Wing
57-896-02-01	Leading Edge to Front Spar - Inboard of Nacelle Strut - Right Wing
57-898-02-01	Leading Edge to Front Spar - Inboard of Nacelle Strut - Right Wing
57-900-02-01	Slat No. 8
57-902-02-01	Krueger Seal Flap/Nacelle Gap Cover Area - Right Wing
57-904-02-01	Krueger Seal Flap/Nacelle Gap Cover Area - Right Wing
57-906-02-01	Leading Edge to Front Spar - Outboard of Nacelle Strut - Right Wing
57-909-02-01	Leading Edge to Front Spar - Outboard of Nacelle Strut - Right Wing
57-910-02-01	Outboard Leading Edge Slats Number 9 through 14
57-924-02-01	Lower Wing Inspar Area (Fuel Tanks) - Inboard of Wing Rib 17 - Right Wing
57-924-02-02	Upper Wing Inspar Area (Fuel Tanks) - Inboard of Wing Rib 17 - Right Wing
57-928-02-01	Right Wing Dry Bay
57-932-02-01	Wing Inspar Area (Fuel Tanks) - Rib 17 to Wing Tip - Right Wing Lower Surface



4C CHECK	
TASK CARD NUMBER	TASK TITLE
57-932-02-02	Wing Inspar Area (Fuel Tanks) - Rib 17 to Wing Tip - Right Wing Upper Surface
57-940-02-01	Right Wing Tip
57-944-02-01	Right Wing Fixed T.E. - Aft of Rear Spar, Inbd of Outbd Support Fairing
57-946-02-01	Rear Spar to Landing Gear Support Beam - Right Wing
57-948-02-01	Landing Gear Support Beam and Rear Spar to Trailing Edge - Right Wing
57-950-02-01	Inboard Spoilers Numbers 8 and 9
57-952-02-01	Inboard Trailing Edge Flaps - Right Wing
57-954-02-01	Right Wing Flaperon
57-956-02-01	Rear Spar to Trailing Edge - Outboard of Flaperon - Right Wing
57-958-02-01	Rear Spar to Trailing Edge - Outboard of Flaperon - Right Wing
57-960-02-01	Outboard Spoilers Numbers 10 through 14
57-962-02-01	Right Wing Outboard Flap
57-964-02-01	Right Wing Aileron
57-966-02-01	Flap Support Fairing No. 5
57-968-02-01	Flap Support Fairing No. 5
57-970-02-01	Inboard Flap Center Track Fairing - Right Wing
57-972-02-01	Flap Support Fairing No. 6 and Inbd Flaperon Support Fairing
57-974-02-01	Flap Support Fairing No. 6 and Inbd Flaperon Support Fairing
57-976-02-01	Outboard Flaperon Support Fairing - Right Wing
57-978-02-01	Flap Support Fairing No. 7
57-980-02-01	Flap Support Fairing No. 7
57-982-02-01	Flap Support Fairing No. 8
57-984-02-01	Flap Support Fairing No. 8
57-986-02-01	Outboard Auxiliary Support Fairing - Right Wing

F. 5C CHECK

5C CHECK	
TASK CARD NUMBER	TASK TITLE
12-008-00-01	Left Wing Inboard Leading Edge Torque Tube Supports and Couplings
12-008-00-02	Right Wing Inboard Leading Edge Torque Tube Supports and Couplings
12-008-00-11	Left Wing Outboard Leading Edge Torque Tube Supports and Couplings
12-008-00-12	Right Wing Outboard Leading Edge Torque Tube Supports and Couplings
12-008-01-01	Forward Cargo Compartment Torque Tube Supports and Couplings
12-018-00-01	Left Wing Krueger Flap Drive Arm Bearing
12-018-00-02	Right Wing Krueger Flap Drive Arm Bearing
12-030-00-01	Left Wing Trailing Edge Torque Tube and Torque Tube Supports
12-030-00-02	Right Wing Trailing Edge Torque Tube and Torque Tube Supports
12-106-00-01	Passenger Entry Door Mechanisms
12-110-00-01	Forward Access Door Latch Pin
12-112-00-01	Main Equipment Center Access Door Latch Pin
20-010-00-01	Primary Flight Control and Brake Control Cables Turns
20-010-00-02	Primary Flight Control and Brake Control Cables
20-010-00-03	Primary Flight Control and Brake Control Cable Turns
20-010-00-04	Primary Flight Control Cable Turns
20-010-00-05	Primary Flight Control Cable Turns
20-012-00-01	Nose Gear Steering Control Cable Turns
20-012-00-02	Nose Gear Steering Control Cable Turns
20-015-00-01	Primary Flight Control and Brake Control Cables - straight runs
20-015-00-02	Primary Flight Control and Brake Control Cables - straight runs
20-015-00-03	Primary Flight Control and Brake Control Cables - Straight Runs
20-015-00-04	Primary Flight Control and Brake Control Cables - Straight Runs



5C CHECK	
TASK CARD NUMBER	TASK TITLE
20-015-00-05	Primary Flight Control and Brake Control Cable - Straight Runs
20-015-00-06	Primary Flight Control and Brake Control Cable - Straight Runs
20-015-00-07	Primary Flight Control Cables - Straight Runs
20-015-00-08	Primary Flight Control Cables - Straight Runs
20-015-00-09	Primary Flight Control Cables in Fuselage - Straight Runs
20-018-00-01	Nose Gear Steering Control Cables - straight runs
20-018-00-02	Nose Gear Steering Control Cables - straight runs
20-110-00-01	Primary Flight Control Cables - Protected Unpressurized Areas
20-110-00-02	Primary Flight Control Cables - Protected Unpressurized Areas
20-110-00-03	Primary Flight Control Cables - Protected Unpressurized Areas
20-110-00-04	Primary Flight Control Cables - Protected Unpressurized Areas
20-110-00-05	Primary Flight Control Cables - PROTECTED/UNPROTECTED UNPRESSURIZED AREAS
20-200-00-01	HIRF/L AFDC Task for ILS, RA, AIMS, Backdrive and Cross Channel
20-251-10-01	FOIL/MESH PANELS; ENGINE COWLS, STRUT, LEADING EDGE
20-251-20-01	FOIL/MESH PANELS; ENGINE COWLS, STRUT, LEADING EDGE
20-260-00-01	Ram Air Turbine (RAT) Wire Shielding Functional Check
20-270-01-01	PFCS Wire Shielding Functional Check - Left Wing
20-270-02-01	PFCS Wire Shielding Functional Check - Right Wing
20-280-00-01	PFCS Wire Shielding Functional Check - Empennage
20-290-00-01	HIRF/Lightning Ace Wire Bundle Shielding
20-300-00-01	HIRF/Arlinc 629 Buses for Flight Controls, Couplers to EE Racks
20-310-01-01	Functional Check Wire Bundle Inspection Left Flaps, Slats, Skew Sensors
20-310-02-01	Functional Check Wire Bundle Right Flaps, Slats, Skew Sensors
20-320-00-01	Gust Suppression Transducers Wire Shielding Functional Check
20-330-00-01	HIRF/Lightning ACE Disconnects to Modal Suppression Transducers
20-340-00-01	HIRF/lightning ACE disconnects to pitch rate sensors





5C CHECK	
TASK CARD NUMBER	TASK TITLE
20-400-00-01	HIRF/Lightning Glide Slope and Localizer Antenna Coax
20-430-00-01	HIRF/Lightning Glide Slope Tracking Antenna COAX
20-450-00-01	HIRF/Lightning Radio Altimeter Antenna to Transceiver Coax
20-460-00-01	HIRF/Lightning GPS Antenna to Left and Right MMR
20-642-00-01	Forward Bulkhead Left Main Landing Gear Wheel Well
20-644-00-01	Forward Bulkhead Right Main Landing Gear Wheel Well
20-648-00-01	Forward Cargo Power Drive Unit Wire Bundles
20-650-00-01	Areas Behind the FWD Cargo Compartment Sidewalls
20-658-00-01	Area Behind the Forward Cargo Compartment
20-665-00-01	Aft Cargo Power Drive Unit Wire Bundles
20-700-00-01	Areas Behind the Passenger Compartment Air Grilles
20-704-00-01	Wiring Behind Passenger Compartment Air Grilles
20-716-00-01	Area Around the Video Control Center
20-734-00-01	External Power Receptacle in the Main Equipment Center.
20-742-00-01	Areas Behind the Passenger Compartment Air Grilles
20-750-00-01	Wiring Behind Passenger Compartment Air Grilles
20-754-00-01	Areas Behind the Passenger Compartment Air Grilles
20-758-00-01	Wiring Behind Passenger Compartment Air Grilles
20-766-00-01	Areas Behind the Passenger Compartment Air Grilles
20-774-00-01	Wiring Behind Passenger Compartment Air Grilles
20-778-00-01	Areas Behind the Passenger Compartment Air Grilles
20-782-00-01	Wiring Behind Passenger Compartment Air Grilles
20-794-00-01	APU and APU Starter Power Feeders
20-800-00-01	Engine and Backup Generator Power Feeders - Left Engine



5C CHECK	
TASK CARD NUMBER	TASK TITLE
20-802-00-01	Engine and Backup Generator Power Feeders - Right Engine
21-040-00-01	Chiller Boost Fan
21-048-00-01	E/E Cooling System Override Switch
21-055-00-01	Condenser/Reheater
21-110-00-01	Cabin Positive Pressure Relief Valves
21-110-00-02	Cabin Positive Pressure Relief Valves
21-120-00-01	Cabin Positive Pressure Relief Filters
21-130-00-01	AFT and Bulk Cargo Temperature Selector Switches
21-131-00-01	AFT/Bulk Cargo Overheat Protection Switch & Relay
21-180-00-01	AC Pack Conditioned Air Check Valves
21-180-00-02	AC Pack Conditioned Air Check Valves
21-240-00-01	Ozone Converters
23-010-00-01	Passenger Address System
23-010-00-02	Personnel Address System
23-060-00-01	Static Dischargers
23-080-00-01	Voice Recorder System - Four Channel Operation
23-100-00-01	Voice Recorder System - Under Water Locator Beacon
23-100-00-02	Voice Recorder System - Under Water Locator Beacon
24-200-00-01	External Power Receptacles (Wear Check)
24-210-00-01	External Power Receptacles (Inspection)
25-055-00-01	Passenger Compartment Articulating Seats
25-062-00-01	Life Raft
25-067-00-01	Off-Wing Slide Compartment Door Lock/Latch System
25-068-00-01	Off-Wing Escape Slide Compartment Door Indication System
25-240-00-01	Passenger Entry Door Emergency Escape Slide
25-240-00-02	Overwing Door Emergency Escape Slide



5C CHECK	
TASK CARD NUMBER	TASK TITLE
26-090-00-01	Engine Fire Switches
26-090-00-02	Engine Fire Switches
26-090-00-03	Engine Fire Switches
26-100-00-01	Engine Fire Extinguishing Distribution Lines
26-100-00-02	Engine Fire Extinguishing Distribution Lines
26-100-00-03	Engine Fire Extinguishing Distribution Lines
26-150-00-01	APU Fire Switch
26-200-00-01	Cargo Fire Extinguishing Arm & Discharge Switches
26-210-00-01	Cargo Fire Extinguishing Tubing
27-150-00-01	Primary Flight Computer Disconnect Switch
27-170-00-01	Left Wing Aileron and Flaperon System Hydraulic Fuses
27-170-00-02	Right Wing Aileron and Flaperon System Hydraulic Fuses
27-170-00-03	Rudder System Hydraulic Fuse
27-180-00-01	Rudder Check Valve
27-190-00-01	Wheel Jam Breakout Mechanism
27-200-00-01	Rudder Power Control Units
27-210-00-01	Control Column Breakout Mechanism
27-220-00-01	Elevator Power Control Units
27-240-00-01	Elevator Power Control Unit Bearings
27-270-00-01	Stabilizer Secondary Brakes
27-280-00-01	Stabilizer Trim Limit Switches
27-320-00-01	Left Wing TE Flap No-Back Brakes
27-320-00-02	Right Wing TE Flap No-Back Brakes
27-330-00-01	Auto Speedbrake Function



5C CHECK	
TASK CARD NUMBER	TASK TITLE
27-340-00-01	Left Leading Edge Slat No-Back Brakes
27-340-00-02	Right Leading Edge Slat No-Back Brakes
27-350-00-01	Autoslat Priority Valves - Main Landing Gear
27-360-00-01	Left Leading Edge Slat Skew/Loss Cable
27-360-00-02	Right Leading Edge Slat Skew/Loss Cable
27-400-00-01	Aileron Trim Inhibit Operational Check
27-420-00-01	Rudder Pedal Pogo
27-430-00-01	Rudder Power Control Unit
27-440-00-01	Stabilizer Freeplay
28-010-00-01	Fuel Vent Float Valves
28-015-00-01	Left Fuel Surge Tank FLAME ARRESTORS. Zone 542
28-015-00-02	Right Fuel Surge Tank FLAME ARRESTORS. Zone 642
28-022-00-01	Engine Fuel Spar Valve Battery Circuit
28-022-60-01	GFI Relay Check
28-022-60-02	GFI Relay Check
28-025-00-01	Left Engine Fuel Spar Valve
28-025-00-02	Right Engine Fuel Spar Valve
28-030-00-01	APU Fuel Supply Line And Shroud
28-040-00-01	Defuel Valve Actuator
28-050-00-01	Fuel Jettison System
29-030-00-01	Hydraulic System Gross Internal Leakage
29-140-00-01	Center Hydraulic System Reservoir Pressurization Module
29-140-00-02	Left Hydraulic System Reservoir Pressurization Module
29-140-00-03	Right Hydraulic System Reservoir Pressurization Module
31-010-00-01	Flight Data Recorder System
31-010-00-02	Flight Data Recorder System



5C CHECK	
TASK CARD NUMBER	TASK TITLE
31-010-00-03	Flight Data Recorder System
31-010-00-04	Flight Data Recorder System
31-030-00-01	Flight Data Recorder Underwater Locator Beacon (ULB)
31-030-00-02	Flight Data Recorder Underwater Locator Beacon (ULB)
32-160-00-01	Brake Accumulator
32-170-00-01	Normal and Alternate Brake Systems
32-180-00-01	Left Main Landing Gear Antiskid Module Hydraulic Fuses
32-180-00-02	Right Main Landing Gear Antiskid Module Hydraulic Fuses
32-300-00-01	Left Main Landing Gear Mechanisms
32-300-00-02	Right Main Landing Gear Mechanisms
32-310-00-01	Left Main Landing Gear Door Mechanisms
32-310-00-02	Right Main Landing Gear Door Mechanisms
32-320-00-01	Nose Landing Gear Mechanisms
32-330-00-01	Nose Landing Gear Door Mechanisms
32-802-00-01	Nose Landing Gear and Landing Gear Doors
32-806-01-01	Left Main Landing Gear and Landing Gear Doors
32-810-02-01	Right Main Landing Gear and Landing Gear Doors
35-060-00-01	Passenger Oxygen System Door Latch/Actuator
35-060-00-02	Passenger Oxygen System Door Latch/Actuator
35-060-00-03	Passenger Oxygen System Door Latch/Actuator
35-060-00-04	Passenger Oxygen System Door Latch/Actuator
35-140-00-01	Passenger Gaseous Oxygen System Flow Control Units
35-180-00-01	Door Latch/Actuator and Decompression Horns
35-180-00-02	Door Latch/Actuator and Decompression Horns



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

5C CHECK	
TASK CARD NUMBER	TASK TITLE
35-180-00-03	Crew Rest Decompression Alarm Test
36-010-00-01	Engine Air Supply Manifold
38-020-00-01	Potable Water Isolation Valves and Cables
38-020-00-02	Potable Water Isolation Valves and Cables
38-030-00-01	Waste Drain Ball Valve & Fitting Seals (Not applicable to the 777F)
38-120-00-01	Potable Water Pressure Relief Valve
47-100-00-01	Restore the Ozone Converter (off-aircraft).
47-110-00-01	Clean the Primary Heat Exchanger (off-aircraft).
47-120-00-01	Functionally check the Regenerative Heat Exchanger (off-aircraft).
47-130-00-01	Restore the Filter Differential Pressure Sensor Switch (off-aircraft).
47-140-00-01	Visually Check for Fluid Accumulation Through the Drain Valve or Drain Cap.
47-150-00-01	Inspect (detailed) the Nitrogen Enriched Air (NEA) distribution lines
52-120-01-01	Passenger Entry Door Flight Lock Mechanism
52-125-00-01	No. 3 Over-Wing Door Flight Lock Mechanism
52-130-01-01	Passenger Entry Door Girt Bar Mechanism Interlock
52-135-00-01	No. 3 Over-Wing Door Latch Torque Tube Interlock
52-150-01-01	Passenger Entry Door EPAS Tubing
52-155-00-01	No. 3 Over-Wing Doors EPAS Tubing
52-160-00-01	Passenger Entry Door EPAS Circuitry
52-160-00-02	Passenger Entry Door EPAS Circuitry
52-160-00-03	Passenger Entry Door EPAS Circuitry
52-160-00-04	Passenger Entry Door EPAS Circuitry
52-170-01-01	Passenger Entry Door Mechanisms
52-175-00-01	No. 3 Over-Wing Door Mechanisms
52-180-00-01	Forward Large Cargo Door Manual Drive Mechanism & Lift PDU Brake
52-185-00-01	AFT Large Cargo Door Manual Drive Mechanism & Lift PDU Brake



5C CHECK	
TASK CARD NUMBER	TASK TITLE
52-210-00-01	Forward Large Cargo Door Ditching Interlock Mechanism
52-215-00-01	AFT Large Cargo Door Ditching Interlock Mechanism
52-220-00-01	AFT Small Cargo Door Hinge Power Drive Unit and Manual Drive Mechanism
52-240-00-01	Bulk Cargo Door Latch Mechanism
52-260-00-01	Passenger Entry Door Closed Proximity Sensors
52-265-00-01	No. 3 Over-Wing Doors Closed Proximity Sensors
52-270-00-01	Bulk Cargo Door Latch Microswitch
52-280-00-01	Forward Access Door Latched Proximity Sensor
52-290-00-01	Main Equip Center Door Latched Proximity Sensor
52-310-00-01	Flight Deck Door Pressure Sensor
52-330-00-01	Flight Deck Door Deny Time Delay
52-502-00-01	Forward Large Cargo Door
52-510-00-01	Aft Large Cargo Door
52-527-01-01	Left #1 Entry Door
52-528-01-01	Left #2 Passenger Entry Door
52-529-01-01	Left #3 Overwing Door
52-531-01-01	Left #4 Passenger Entry Door
52-533-01-01	Left #5 Passenger Entry Door
52-542-02-01	Right #1 Entry Door
52-543-02-01	Right #2 Passenger Entry Door
52-544-02-01	Right #3 Overwing Door
52-546-02-01	Right #4 Passenger Entry Door
52-548-02-01	Right #5 Passenger Entry Door
52-802-00-01	Forward Large Cargo Door



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

5C CHECK	
TASK CARD NUMBER	TASK TITLE
52-806-00-01	Aft Small Cargo Door
52-810-00-01	Aft Large Cargo Door
52-814-00-01	Bulk Cargo Door
52-816-01-01	Left No. 1 Passenger Entry Door - Section 41
52-820-01-01	Left No. 2 Passenger Entry Door - Section 43
52-824-01-01	Left No. 3 Overwing Door - Section 44
52-827-01-01	Left No. 4 Passenger Entry Door - Section 46
52-831-01-01	Left No. 5 Passenger Entry Door - Section 47
52-834-02-01	Right No. 1 Passenger/Crew Entry Door - Section 41
52-840-02-01	Right No. 2 Passenger Entry Door - Section 43
52-844-02-01	Right No. 3 Overwing Door - Section 44
52-849-02-01	Right No. 4 Passenger Entry Door - Section 46
52-853-02-01	Right No. 5 Passenger Entry Door - Section 47
53-508-00-01	Main Equipment Center
53-509-01-01	Forward Cargo Compartment
53-518-00-01	Main Landing Gear Wheel Well, Left
53-519-00-01	Main Landing Gear Wheel Well, Right
53-520-00-01	Area Above Main Landing Gear Wheel Well
53-522-01-01	Aft Cargo Compartment
53-523-01-01	Aft Cargo Compartment
53-529-01-01	Area Below Aft Cargo Compartment
53-530-01-01	Area Below Aft Cargo Compartment
53-532-00-01	Area Below Aft Cargo Compartment
53-533-00-01	Area Below Aft Cargo Compartment
53-543-00-01	Overwing Wing-To-Body Fairings, Left
53-544-00-01	Overwing Wing-To-Body Fairings, Right





## 777-200/300 MAINTENANCE PLANNING DOCUMENT

5C CHECK	
TASK CARD NUMBER	TASK TITLE
53-545-01-01	Forward Wing-To-Body Fairings - Left
53-545-02-01	Forward Wing-To-Body Fairings - Right
53-546-01-01	Overwing Wing-To-Body Fairings - Left
53-546-02-01	Overwing Wing-To-Body Fairings - Right
53-547-01-01	Aft Wing-To-Body Fairings - Left
53-547-02-01	Aft Wing-To-Body Fairings - Right
53-553-00-01	Passenger Compartment - Left
53-554-00-01	Passenger Compartment - Right
53-564-00-01	Passenger Compartment - Left
53-565-00-01	Passenger Compartment - Right
53-584-00-01	Passenger Compartment
53-585-00-01	Passenger Compartment
53-586-00-01	Passenger Compartment
53-602-00-01	Passenger Compartment
53-603-00-01	Passenger Compartment
53-611-00-01	Area above Wing Center Section
53-614-00-01	Passenger Compartment Left
53-614-00-02	Passenger Compartment Right
53-620-00-01	Forward Wing-To-Body Fairings - Left
53-620-00-02	Forward Wing-To-Body Fairings - Right
53-621-00-01	Aft Wing-To-Body Fairings - Left
53-621-00-02	Aft Wing-To-Body Fairings - Right
53-656-00-01	Nose Landing Gear Wheel Well
53-666-01-01	MAIN LANDING GEAR WHEEL WELL AREA



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

5C CHECK	
TASK CARD NUMBER	TASK TITLE
53-668-00-01	Left Main Landing Gear Wheel Well
53-668-00-02	Right Main Landing Gear Wheel Well
53-682-00-01	Subzone 310 - Section 48
53-683-00-01	Subzone 310 - Section 48
53-800-00-01	Left Fuselage Lower Half - Section 41 & 43 - STA 92.5 to STA 867
53-800-00-02	Right Fuselage Lower Half - Section 41 & 43 - STA 92.5 to STA 867
53-800-00-03	Lower Left Fuselage & Wing to Body Fairing - STA 858 to STA 1655
53-800-00-04	Lower Right Fuselage & Wing to Body Fairing - STA 858 to STA 1655
53-800-00-05	Lower Left Fuselage - STA 1655 to STA 2196
53-800-00-06	Lower Right Fuselage - STA 1655 to STA 2196
53-804-00-01	Radome
53-806-00-01	Area Forward of Nose Landing Gear Wheel Well
53-810-00-01	Nose Gear Wheel Well (Inspection Accomplished from Within Wheel Well)
53-812-00-01	Area Above and Outboard of the Nose Landing Gear Wheel Well
53-814-00-01	Main Equipment Center
53-832-00-01	Forward Keel Beam
53-838-00-01	Left Main Landing Gear Wheel Well (Inspection accomplished within WW)
53-842-00-01	Right Main Landing Gear Wheel Well (Inspection accomplished Within WW)
53-844-00-01	Aft Keel Beam
53-852-00-01	Aft Cargo Compartment
53-876-00-01	Area Aft of the Bulk Cargo Compartment
53-880-00-01	Forward Wing-To-Body Fairings - Left
53-882-00-01	Forward Wing-To-Body Fairings - Right
53-898-00-01	Left Upper Fuselage - Flight Compartment - STA 92.5 to STA 246
53-898-00-02	Right Upper Fuselage - Flight Compartment - STA 92.5 to STA 246
53-900-00-01	Flight Compartment



5C CHECK	
TASK CARD NUMBER	TASK TITLE
53-904-00-01	Passenger Compartment - Section 41
53-906-00-01	Area Above Passenger Compartment Ceiling - Section 41
53-908-00-01	Passenger Compartment - Section 43
53-910-00-01	Area Above Passenger Compartment Ceiling - Section 43
53-912-00-01	Passenger Compartment - Section 44
53-914-00-01	Area Above Passenger Compartment - Section 44
53-916-00-01	Passenger Compartment - Section 46
53-918-00-01	Area Above Passenger Compartment Ceiling - Section 46
53-920-00-01	Passenger Compartment - Section 47
53-922-00-01	Area Above Passenger Compartment Ceiling - Section 47
53-926-00-01	Fuselage Area Aft of Bulkhead - Inspection Accomplished within Fuselage
54-536-01-01	Left Nacelle Strut
54-544-02-01	Right Nacelle Strut
54-610-01-01	Aft Torque Box - Left Nacelle Strut
54-612-02-01	Aft Torque Box - Right Nacelle Strut
54-822-01-01	Forward Strut Fairing - Left Nacelle Strut
54-824-01-01	Forward and Aft Torque Box - Left Nacelle Strut - Cowls Opened
54-826-01-01	Forward and Aft Torque Box - Left Nacelle Strut
54-828-01-01	Aft Strut Fairing - Left Nacelle Strut
54-832-02-01	Forward Strut Fairing - Right Nacelle Strut
54-834-02-01	Forward and Aft Torque Box - Right Nacelle Strut - Fan Cowls Opened
54-836-02-01	Forward and Aft Torque Box - Right Nacelle Strut
54-838-02-01	Aft Strut Fairing - Right Nacelle Strut
55-501-00-01	Horizontal Stabilizer Center Section



5C CHECK	
TASK CARD NUMBER	TASK TITLE
55-800-00-01	Stabilizer Torsion Box Compartment - Left and Right Sides
55-804-00-01	Vertical Stabilizer Leading Edge
55-812-00-01	Vertical Stabilizer - Front Spar to Rear Spar - Between Ribs 8 and 9
55-814-00-01	Vertical Stabilizer - Rear Spar to Trailing Edge
55-817-00-01	Vertical Stabilizer - Rear Spar to Trailing Edge
55-820-00-01	Rudder
55-822-00-01	Rudder Tab
55-824-00-01	Vertical Stabilizer Forward Tip
55-830-01-01	Left Horizontal Stabilizer - Leading Edge
55-838-01-01	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
55-838-03-02	Left Horizontal Stabilizer - Front Spar to Rear Spar
55-841-00-01	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
55-844-01-01	Left Elevator
55-846-01-01	Left Horizontal Stabilizer Tip
55-850-02-01	Right Horizontal Stabilizer - Leading Edge
55-856-04-01	Right Horizontal Stabilizer - Front Spar to Rear Spar
55-858-02-01	Right Horizontal Stabilizer - Rear Spar to Trailing Edge
55-861-00-01	Right Horizontal Stabilizer - Rear Spar to Trailing Edge
55-864-02-01	Right Elevator
55-866-02-01	Right Horizontal Stabilizer Tip
56-010-00-01	Flight Deck #2 Windows MICROSWITCH
56-020-00-01	Flight Deck Number 2 Windows Guide Bearings
56-030-00-01	Flight Deck Number 2 Windows Open/Close Function
57-603-00-01	Underwing Wing-To-Body Fairing
57-614-01-01	Wing Trailing Edge - Aft of Rear Spar
57-627-02-01	Wing Trailing Edge - Aft of Rear Spar

5C CHECK	
TASK CARD NUMBER	TASK TITLE
57-630-00-01	Area Above Wing Center Section
57-804-01-01	Leading Edge to Front Spar - Inboard of Nacelle Strut - Left Wing
57-806-01-01	Leading Edge to Front Spar - Inboard of Nacelle Strut - Left Wing
57-808-01-01	Slat No. 7
57-810-01-01	Krueger Seal Flap/Nacelle Gap Cover Area - Left Wing
57-812-01-01	Krueger Seal Flap/Nacelle Gap Cover Area - Left Wing
57-814-01-01	Leading Edge to Front Spar - Outboard of Nacelle Strut - Left Wing
57-817-01-01	Leading Edge to Front Spar - Outboard of Nacelle Strut - Left Wing
57-818-01-01	Left Wing Outboard Leading Edge Slats Number 1 through 6
57-836-01-01	Left Wing Dry Bay
57-848-01-01	Left Wing Tip
57-852-01-01	Left Wing Fixed T.E. - Aft of Rear Spar, Inbd of Outbd Support Fairing
57-854-01-01	Rear Spar to Landing Gear Support Beam - Left Wing
57-856-01-01	Landing Gear Support Beam and Rear Spar to Trailing Edge - Left Wing
57-858-01-01	Inboard Spoilers Numbers 6 and 7
57-860-01-01	Inboard Trailing Edge Flaps - Left Wing
57-862-01-01	Left Wing Flaperon
57-864-01-01	Rear Spar to Trailing Edge - Outboard of Flaperon - Left Wing
57-866-01-01	Rear Spar to Trailing Edge - Outboard of Flaperon - Left Wing
57-868-01-01	Outboard Spoilers Numbers 1 through 5
57-870-01-01	Left Wing Outboard Flap
57-872-01-01	Left Wing Aileron
57-874-01-01	Flap Support Fairing No. 4
57-876-01-01	Flap Support Fairing No. 4



5C CHECK	
TASK CARD NUMBER	TASK TITLE
57-878-01-01	Inboard Flap Center Track Fairing - Left Wing
57-880-01-01	Flap Support Fairing No. 3 and Inboard Flaperon Support Fairing
57-882-01-01	Flap Support Fairing No. 3 and Inboard Flaperon Support Fairing
57-884-01-01	Outboard Flaperon Support Fairing - Left Wing
57-886-01-01	Flap Support Fairing No. 2
57-888-01-01	Flap Support Fairing No. 2
57-890-01-01	Flap Support Fairing No. 1
57-892-01-01	Flap Support Fairing No. 1
57-894-01-01	Outboard Auxiliary Support Fairing - Left Wing
57-896-02-01	Leading Edge to Front Spar - Inboard of Nacelle Strut - Right Wing
57-898-02-01	Leading Edge to Front Spar - Inboard of Nacelle Strut - Right Wing
57-900-02-01	Slat No. 8
57-902-02-01	Krueger Seal Flap/Nacelle Gap Cover Area - Right Wing
57-904-02-01	Krueger Seal Flap/Nacelle Gap Cover Area - Right Wing
57-906-02-01	Leading Edge to Front Spar - Outboard of Nacelle Strut - Right Wing
57-909-02-01	Leading Edge to Front Spar - Outboard of Nacelle Strut - Right Wing
57-910-02-01	Outboard Leading Edge Slats Number 9 through 14
57-928-02-01	Right Wing Dry Bay
57-940-02-01	Right Wing Tip
57-944-02-01	Right Wing Fixed T.E. - Aft of Rear Spar, Inbd of Outbd Support Fairing
57-946-02-01	Rear Spar to Landing Gear Support Beam - Right Wing
57-948-02-01	Landing Gear Support Beam and Rear Spar to Trailing Edge - Right Wing
57-950-02-01	Inboard Spoilers Numbers 8 and 9
57-952-02-01	Inboard Trailing Edge Flaps - Right Wing
57-954-02-01	Right Wing Flaperon
57-956-02-01	Rear Spar to Trailing Edge - Outboard of Flaperon - Right Wing



5C CHECK	
TASK CARD NUMBER	TASK TITLE
57-958-02-01	Rear Spar to Trailing Edge - Outboard of Flaperon - Right Wing
57-960-02-01	Outboard Spoilers Numbers 10 through 14
57-962-02-01	Right Wing Outboard Flap
57-964-02-01	Right Wing Aileron
57-966-02-01	Flap Support Fairing No. 5
57-968-02-01	Flap Support Fairing No. 5
57-970-02-01	Inboard Flap Center Track Fairing - Right Wing
57-972-02-01	Flap Support Fairing No. 6 and Inbd Flaperon Support Fairing
57-974-02-01	Flap Support Fairing No. 6 and Inbd Flaperon Support Fairing
57-976-02-01	Outboard Flaperon Support Fairing - Right Wing
57-978-02-01	Flap Support Fairing No. 7
57-980-02-01	Flap Support Fairing No. 7
57-982-02-01	Flap Support Fairing No. 8
57-984-02-01	Flap Support Fairing No. 8
57-986-02-01	Outboard Auxiliary Support Fairing - Right Wing

**G. 6C CHECK**

6C CHECK	
TASK CARD NUMBER	TASK TITLE
12-008-00-01	Left Wing Inboard Leading Edge Torque Tube Supports and Couplings
12-008-00-02	Right Wing Inboard Leading Edge Torque Tube Supports and Couplings
12-008-00-11	Left Wing Outboard Leading Edge Torque Tube Supports and Couplings
12-008-00-12	Right Wing Outboard Leading Edge Torque Tube Supports and Couplings
12-008-01-01	Forward Cargo Compartment Torque Tube Supports and Couplings



6C CHECK	
TASK CARD NUMBER	TASK TITLE
12-018-00-01	Left Wing Krueger Flap Drive Arm Bearing
12-018-00-02	Right Wing Krueger Flap Drive Arm Bearing
12-030-00-01	Left Wing Trailing Edge Torque Tube and Torque Tube Supports
12-030-00-02	Right Wing Trailing Edge Torque Tube and Torque Tube Supports
12-100-00-01	Forward Large Cargo Door, Door Mechanisms
12-102-00-01	Aft Large Cargo Door, Door Mechanisms
12-104-00-01	Aft Small Cargo Door Hinge Arms and Adjustment Rods
12-106-00-01	Passenger Entry Door Mechanisms
12-110-00-01	Forward Access Door Latch Pin
12-112-00-01	Main Equipment Center Access Door Latch Pin
20-010-00-01	Primary Flight Control and Brake Control Cables Turns
20-010-00-02	Primary Flight Control and Brake Control Cables
20-010-00-03	Primary Flight Control and Brake Control Cable Turns
20-010-00-04	Primary Flight Control Cable Turns
20-010-00-05	Primary Flight Control Cable Turns
20-012-00-01	Nose Gear Steering Control Cable Turns
20-012-00-02	Nose Gear Steering Control Cable Turns
20-015-00-01	Primary Flight Control and Brake Control Cables - straight runs
20-015-00-02	Primary Flight Control and Brake Control Cables - straight runs
20-015-00-03	Primary Flight Control and Brake Control Cables - Straight Runs
20-015-00-04	Primary Flight Control and Brake Control Cables - Straight Runs
20-015-00-05	Primary Flight Control and Brake Control Cable - Straight Runs
20-015-00-06	Primary Flight Control and Brake Control Cable - Straight Runs
20-015-00-07	Primary Flight Control Cables - Straight Runs
20-015-00-08	Primary Flight Control Cables - Straight Runs
20-015-00-09	Primary Flight Control Cables in Fuselage - Straight Runs





6C CHECK	
TASK CARD NUMBER	TASK TITLE
20-018-00-01	Nose Gear Steering Control Cables - straight runs
20-018-00-02	Nose Gear Steering Control Cables - straight runs
20-110-00-01	Primary Flight Control Cables - Protected Unpressurized Areas
20-110-00-02	Primary Flight Control Cables - Protected Unpressurized Areas
20-110-00-03	Primary Flight Control Cables - Protected Unpressurized Areas
20-110-00-04	Primary Flight Control Cables - Protected Unpressurized Areas
20-110-00-05	Primary Flight Control Cables - PROTECTED/UNPROTECTED UNPRESSURIZED AREAS
20-200-00-01	HIRF/L AFDC Task for ILS, RA, AIMS, Backdrive and Cross Channel
20-251-10-01	FOIL/MESH PANELS; ENGINE COWLS, STRUT, LEADING EDGE
20-251-20-01	FOIL/MESH PANELS; ENGINE COWLS, STRUT, LEADING EDGE
20-260-00-01	Ram Air Turbine (RAT) Wire Shielding Functional Check
20-270-01-01	PFCS Wire Shielding Functional Check - Left Wing
20-270-02-01	PFCS Wire Shielding Functional Check - Right Wing
20-280-00-01	PFCS Wire Shielding Functional Check - Empennage
20-290-00-01	HIRF/Lightning Ace Wire Bundle Shielding
20-300-00-01	HIRF/Arlinc 629 Buses for Flight Controls, Couplers to EE Racks
20-310-01-01	Functional Check Wire Bundle Inspection Left Flaps, Slats, Skew Sensors
20-310-02-01	Functional Check Wire Bundle Right Flaps, Slats, Skew Sensors
20-320-00-01	Gust Suppression Transducers Wire Shielding Functional Check
20-330-00-01	HIRF/Lightning ACE Disconnects to Modal Suppression Transducers
20-340-00-01	HIRF/lightning ACE disconnects to pitch rate sensors
20-400-00-01	HIRF/Lightning Glide Slope and Localizer Antenna Coax
20-410-00-01	Radome Diverter Strips Detailed Visual Inspection
20-420-00-01	HIRF/Lightning Localizer Tracking, VOR/Localizer Antenna COAX



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

6C CHECK	
TASK CARD NUMBER	TASK TITLE
20-430-00-01	HIRF/Lightning Glide Slope Tracking Antenna COAX
20-440-00-01	HIRF/Lightning VOR/Localizer Capture Antenna COAX
20-445-00-01	Fin Tip Diverter Strip
20-450-00-01	HIRF/Lightning Radio Altimeter Antenna to Transceiver Coax
20-460-00-01	HIRF/Lightning GPS Antenna to Left and Right MMR
20-560-01-01	HIRF/ L Functional Test for FQIS, Left Side
20-560-02-01	HIRF/ L Functional Test for FQIS, Right Side
20-600-00-01	Power Feeders connected to P100 and P200 Power Panels
20-602-00-01	Area Above Nose Landing Gear Wheel Well
20-642-00-01	Forward Bulkhead Left Main Landing Gear Wheel Well
20-644-00-01	Forward Bulkhead Right Main Landing Gear Wheel Well
20-648-00-01	Forward Cargo Power Drive Unit Wire Bundles
20-650-00-01	Areas Behind the FWD Cargo Compartment Sidewalls
20-651-00-01	Areas Below the AFT Cargo Compartment
20-652-00-01	Forward Cargo Compartment Power Feeders
20-656-00-01	Areas Below the FWD Cargo Compartment
20-658-00-01	Area Behind the Forward Cargo Compartment
20-659-00-01	Area Behind the Forward Cargo Compartment
20-660-00-01	Aft Cargo Compartment Power Feeders
20-664-00-01	Areas Behind the Aft Cargo Compartment Sidewalls
20-665-00-01	Aft Cargo Power Drive Unit Wire Bundles
20-668-00-01	APU Battery Installation and Power Feeders
20-670-00-01	Area Behind the Bulk Cargo Compartment Sidewalls
20-700-00-01	Areas Behind the Passenger Compartment Air Grilles
20-701-00-01	Areas Behind the Passenger Compartment Air Grilles
20-702-00-01	APU and RAT Power Feeders, and Galley and Cabin Power Feeders



6C CHECK	
TASK CARD NUMBER	TASK TITLE
20-704-00-01	Wiring Behind Passenger Compartment Air Grilles
20-705-00-01	Wiring Behind Passenger Compartment Air Grilles
20-706-00-01	APU, RAT, Galley and Cabin Power Feeders in Passenger Compartment
20-708-00-01	Upper Surface of Ceiling Panels, Bins and Modules
20-712-00-01	Flight Deck EWIS
20-714-00-01	Flight Deck
20-716-00-01	Area Around the Video Control Center
20-730-00-01	Equipment Racks in Main Equipment Center.
20-732-00-01	APU, IDG, BAT. & CHGR and Ground Power Feeders in the Main Equipment Center
20-734-00-01	External Power Receptacle in the Main Equipment Center.
20-742-00-01	Areas Behind the Passenger Compartment Air Grilles
20-744-00-01	Areas Behind the Passenger Compartment Air Grilles
20-750-00-01	Wiring Behind Passenger Compartment Air Grilles
20-752-00-01	Wiring Behind Passenger Compartment Air Grilles
20-754-00-01	Areas Behind the Passenger Compartment Air Grilles
20-756-00-01	Areas Behind the Passenger Compartment Air Grilles
20-758-00-01	Wiring Behind Passenger Compartment Air Grilles
20-760-00-01	Wiring Behind Passenger Compartment Air Grilles
20-766-00-01	Areas Behind the Passenger Compartment Air Grilles
20-768-00-01	Areas Behind the Passenger Compartment Air Grilles
20-774-00-01	Wiring Behind Passenger Compartment Air Grilles
20-776-00-01	Wiring Behind Passenger Compartment Air Grilles
20-778-00-01	Areas Behind the Passenger Compartment Air Grilles
20-780-00-01	Areas Behind the Passenger Compartment Air Grilles



6C CHECK	
TASK CARD NUMBER	TASK TITLE
20-782-00-01	Wiring Behind Passenger Compartment Air Grilles
20-784-00-01	Wiring Behind Passenger Compartment Air Grilles
20-790-00-01	APU and APU Starter Power Feeders
20-792-00-01	APU and APU Starter Power Feeders
20-794-00-01	APU and APU Starter Power Feeders
20-800-00-01	Engine and Backup Generator Power Feeders - Left Engine
20-802-00-01	Engine and Backup Generator Power Feeders - Right Engine
20-840-01-01	IDG and Backup Power Feeders - Left Wing
20-840-02-01	IDG and Backup Power Feeders - Right Wing
20-842-00-01	EWIS within Nacelle Gap - Left
20-842-00-02	EWIS within Nacelle Gap - Right
20-844-00-01	IDG and Backup Power Feeders - Left Wing
20-844-00-02	IDG and Backup Power Feeders - Right Wing
20-850-00-01	Wing Leading Edge Wiring - Left Wing
20-851-00-01	Wing Leading Edge Wiring - Right Wing
20-852-00-01	FQIS Wiring in the Wing Main Tank - Left
20-852-00-02	FQIS Wiring in the Wing Main Tank - Right
21-040-00-01	Chiller Boost Fan
21-048-00-01	E/E Cooling System Override Switch
21-054-00-01	IFE Cooling System Air Supply Multi-holed Orifices
21-055-00-01	Condenser/Reheater
21-110-00-01	Cabin Positive Pressure Relief Valves
21-110-00-02	Cabin Positive Pressure Relief Valves
21-120-00-01	Cabin Positive Pressure Relief Filters
21-130-00-01	AFT and Bulk Cargo Temperature Selector Switches
21-131-00-01	AFT/Bulk Cargo Overheat Protection Switch & Relay



6C CHECK	
TASK CARD NUMBER	TASK TITLE
21-180-00-01	AC Pack Conditioned Air Check Valves
21-180-00-02	AC Pack Conditioned Air Check Valves
21-240-00-01	Ozone Converters
21-250-00-01	E/E Equipment Cooling Override Duct
23-010-00-01	Passenger Address System
23-010-00-02	Personnel Address System
23-060-00-01	Static Dischargers
23-080-00-01	Voice Recorder System - Four Channel Operation
23-100-00-01	Voice Recorder System - Under Water Locator Beacon
23-100-00-02	Voice Recorder System - Under Water Locator Beacon
24-200-00-01	External Power Receptacles (Wear Check)
24-210-00-01	External Power Receptacles (Inspection)
25-055-00-01	Passenger Compartment Articulating Seats
25-062-00-01	Life Raft
25-067-00-01	Off-Wing Slide Compartment Door Lock/Latch System
25-068-00-01	Off-Wing Escape Slide Compartment Door Indication System
25-090-00-01	Flight Deck Escape Rope
25-095-00-01	Left Overwing Exit Door Lifeline
25-095-00-02	Right Overwing Exit Door Lifeline
25-240-00-01	Passenger Entry Door Emergency Escape Slide
25-240-00-02	Overwing Door Emergency Escape Slide
25-260-00-01	Overhead Crew Rest Secondary Egress System
25-260-00-02	Overhead Attendant Rests Secondary Egress System
25-270-00-01	Overhead Crew Rest Secondary Egress Grab Bar



6C CHECK	
TASK CARD NUMBER	TASK TITLE
25-270-00-02	Overhead Attendant Rest Secondary Egress Grab Bar
26-064-00-01	Lower Lobe Attendant Rest (LLAR) Smoke Detection System
26-090-00-01	Engine Fire Switches
26-090-00-02	Engine Fire Switches
26-090-00-03	Engine Fire Switches
26-100-00-01	Engine Fire Extinguishing Distribution Lines
26-100-00-02	Engine Fire Extinguishing Distribution Lines
26-100-00-03	Engine Fire Extinguishing Distribution Lines
26-150-00-01	APU Fire Switch
26-200-00-01	Cargo Fire Extinguishing Arm & Discharge Switches
26-210-00-01	Cargo Fire Extinguishing Tubing
26-250-00-01	Cargo Fire Extinguishing System Filter/Regulator
26-274-00-01	Lower Lobe Attendant Rest Fire Extinguishing System
27-150-00-01	Primary Flight Computer Disconnect Switch
27-170-00-01	Left Wing Aileron and Flaperon System Hydraulic Fuses
27-170-00-02	Right Wing Aileron and Flaperon System Hydraulic Fuses
27-170-00-03	Rudder System Hydraulic Fuse
27-180-00-01	Rudder Check Valve
27-190-00-01	Wheel Jam Breakout Mechanism
27-200-00-01	Rudder Power Control Units
27-210-00-01	Control Column Breakout Mechanism
27-220-00-01	Elevator Power Control Units
27-240-00-01	Elevator Power Control Unit Bearings
27-270-00-01	Stabilizer Secondary Brakes
27-280-00-01	Stabilizer Trim Limit Switches
27-290-00-01	Stabilizer Ballscrew Safety Rod



6C CHECK	
TASK CARD NUMBER	TASK TITLE
27-300-00-01	Stabilizer Trim Actuator Gimbals
27-320-00-01	Left Wing TE Flap No-Back Brakes
27-320-00-02	Right Wing TE Flap No-Back Brakes
27-330-00-01	Auto Speedbrake Function
27-340-00-01	Left Leading Edge Slat No-Back Brakes
27-340-00-02	Right Leading Edge Slat No-Back Brakes
27-350-00-01	Autoslat Priority Valves - Main Landing Gear
27-360-00-01	Left Leading Edge Slat Skew/Loss Cable
27-360-00-02	Right Leading Edge Slat Skew/Loss Cable
27-380-00-01	Spoiler Auxiliary Retract Device (SARD) Operational Check
27-400-00-01	Aileron Trim Inhibit Operational Check
27-420-00-01	Rudder Pedal Pogo
27-430-00-01	Rudder Power Control Unit
27-440-00-01	Stabilizer Freeplay
27-460-00-01	TRAILING EDGE FLAP SUPPORT LINKAGE PIN FREEPLAY
27-460-01-01	TRAILING EDGE FLAP SUPPORT LINKAGE PIN FREEPLAY
28-010-00-01	Fuel Vent Float Valves
28-015-00-01	Left Fuel Surge Tank FLAME ARRESTORS. Zone 542
28-015-00-02	Right Fuel Surge Tank FLAME ARRESTORS. Zone 642
28-022-00-01	Engine Fuel Spar Valve Battery Circuit
28-022-60-01	GFI Relay Check
28-022-60-02	GFI Relay Check
28-023-00-01	Fuel Spar Valve Battery
28-025-00-01	Left Engine Fuel Spar Valve



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

6C CHECK	
TASK CARD NUMBER	TASK TITLE
28-025-00-02	Right Engine Fuel Spar Valve
28-030-00-01	APU Fuel Supply Line And Shroud
28-040-00-01	Defuel Valve Actuator
28-050-00-01	Fuel Jettison System
28-110-00-01	Fuel Quantity Indicating System (FQIS) - Out Of Tank Wiring Lightning Shield to Ground Termination
28-111-00-01	External Wires Over Center Fuel Tank
29-030-00-01	Hydraulic System Gross Internal Leakage
29-140-00-01	Center Hydraulic System Reservoir Pressurization Module
29-140-00-02	Left Hydraulic System Reservoir Pressurization Module
29-140-00-03	Right Hydraulic System Reservoir Pressurization Module
31-010-00-01	Flight Data Recorder System
31-010-00-02	Flight Data Recorder System
31-010-00-03	Flight Data Recorder System
31-010-00-04	Flight Data Recorder System
31-030-00-01	Flight Data Recorder Underwater Locator Beacon (ULB)
31-030-00-02	Flight Data Recorder Underwater Locator Beacon (ULB)
32-160-00-01	Brake Accumulator
32-170-00-01	Normal and Alternate Brake Systems
32-180-00-01	Left Main Landing Gear Antiskid Module Hydraulic Fuses
32-180-00-02	Right Main Landing Gear Antiskid Module Hydraulic Fuses
32-220-00-01	Main Landing Gear
32-230-00-01	Nose Landing Gear
32-300-00-01	Left Main Landing Gear Mechanisms
32-300-00-02	Right Main Landing Gear Mechanisms
32-310-00-01	Left Main Landing Gear Door Mechanisms
32-310-00-02	Right Main Landing Gear Door Mechanisms





6C CHECK	
TASK CARD NUMBER	TASK TITLE
32-320-00-01	Nose Landing Gear Mechanisms
32-330-00-01	Nose Landing Gear Door Mechanisms
32-802-00-01	Nose Landing Gear and Landing Gear Doors
32-806-01-01	Left Main Landing Gear and Landing Gear Doors
32-810-02-01	Right Main Landing Gear and Landing Gear Doors
35-060-00-01	Passenger Oxygen System Door Latch/Actuator
35-060-00-02	Passenger Oxygen System Door Latch/Actuator
35-060-00-03	Passenger Oxygen System Door Latch/Actuator
35-060-00-04	Passenger Oxygen System Door Latch/Actuator
35-070-00-01	Passenger Chemical Oxygen Generators
35-070-00-02	Passenger Chemical Oxygen Generators
35-090-00-01	Passenger Oxygen Masks
35-090-00-02	Passenger Oxygen Masks
35-090-00-03	Passenger Oxygen Masks
35-092-00-01	Lower Lobe Attendant Rest Supplemental Oxygen System
35-096-00-01	Lower Lobe Attendant Rest Supplemental Oxygen System
35-120-00-01	Passenger Gaseous Oxygen System Pressure Regulator
35-120-00-02	Supernumerary Gaseous Oxygen System Pressure Regulator
35-140-00-01	Passenger Gaseous Oxygen System Flow Control Units
35-170-00-01	Oxygen Mask Assemblies
35-170-00-02	Oxygen Mask Assemblies
35-180-00-01	Door Latch/Actuator and Decompression Horns
35-180-00-02	Door Latch/Actuator and Decompression Horns
35-180-00-03	Crew Rest Decompression Alarm Test



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

6C CHECK	
TASK CARD NUMBER	TASK TITLE
35-190-00-01	OFCR/OFAR Oxygen Generators
36-010-00-01	Engine Air Supply Manifold
38-020-00-01	Potable Water Isolation Valves and Cables
38-020-00-02	Potable Water Isolation Valves and Cables
38-030-00-01	Waste Drain Ball Valve & Fitting Seals (Not applicable to the 777F)
38-120-00-01	Potable Water Pressure Relief Valve
47-100-00-01	Restore the Ozone Converter (off-aircraft).
47-110-00-01	Clean the Primary Heat Exchanger (off-aircraft).
47-120-00-01	Functionally check the Regenerative Heat Exchanger (off-aircraft).
47-130-00-01	Restore the Filter Differential Pressure Sensor Switch (off-aircraft).
47-140-00-01	Visually Check for Fluid Accumulation Through the Drain Valve or Drain Cap.
47-150-00-01	Inspect (detailed) the Nitrogen Enriched Air (NEA) distribution lines
47-160-00-01	Operationally check the center tank vent cross flow check valve.
52-120-01-01	Passenger Entry Door Flight Lock Mechanism
52-125-00-01	No. 3 Over-Wing Door Flight Lock Mechanism
52-130-01-01	Passenger Entry Door Girt Bar Mechanism Interlock
52-135-00-01	No. 3 Over-Wing Door Latch Torque Tube Interlock
52-140-01-01	Passenger Entry Door Mode Select Mechanism and Cables
52-145-00-01	No. 3 Over-Wing Doors Mode Select Mechanism and Pull Cable
52-150-01-01	Passenger Entry Door EPAS Tubing
52-155-00-01	No. 3 Over-Wing Doors EPAS Tubing
52-160-00-01	Passenger Entry Door EPAS Circuitry
52-160-00-02	Passenger Entry Door EPAS Circuitry
52-160-00-03	Passenger Entry Door EPAS Circuitry
52-160-00-04	Passenger Entry Door EPAS Circuitry
52-170-01-01	Passenger Entry Door Mechanisms

6C CHECK	
TASK CARD NUMBER	TASK TITLE
52-175-00-01	No. 3 Over-Wing Door Mechanisms
52-180-00-01	Forward Large Cargo Door Manual Drive Mechanism & Lift PDU Brake
52-185-00-01	AFT Large Cargo Door Manual Drive Mechanism & Lift PDU Brake
52-190-00-01	Forward Large Cargo Door Rotary Actuator No-Back
52-195-00-01	AFT Large Cargo Door Rotary Actuator No-Back
52-200-00-01	Forward Large Cargo Door Lock Handle Load Limiter
52-205-00-01	AFT Large Cargo Door Lock Handle Load Limiter
52-210-00-01	Forward Large Cargo Door Ditching Interlock Mechanism
52-215-00-01	AFT Large Cargo Door Ditching Interlock Mechanism
52-220-00-01	AFT Small Cargo Door Hinge Power Drive Unit and Manual Drive Mechanism
52-230-00-01	AFT Small Cargo Door Rotary Actuator
52-240-00-01	Bulk Cargo Door Latch Mechanism
52-250-00-01	Equipment Compartment Exterior Door Latch Mechanisms
52-260-00-01	Passenger Entry Door Closed Proximity Sensors
52-265-00-01	No. 3 Over-Wing Doors Closed Proximity Sensors
52-270-00-01	Bulk Cargo Door Latch Microswitch
52-280-00-01	Forward Access Door Latched Proximity Sensor
52-290-00-01	Main Equip Center Door Latched Proximity Sensor
52-301-00-01	Flight Deck Door Strike Assembly
52-305-00-01	Flight Deck Door Decompression Panel Latches and Hinges
52-310-00-01	Flight Deck Door Pressure Sensor
52-320-00-01	Flight Deck Door Decompression Panel Trim Ring Seals
52-330-00-01	Flight Deck Door Deny Time Delay
52-502-00-01	Forward Large Cargo Door



6C CHECK	
TASK CARD NUMBER	TASK TITLE
52-503-00-01	Forward Large Cargo Door
52-504-00-01	Forward Large Cargo Door
52-505-00-01	Forward Large Cargo Door
52-510-00-01	Aft Large Cargo Door
52-511-00-01	Aft Large Cargo Door
52-512-00-01	Aft Large Cargo Door
52-513-00-01	Aft Large Cargo Door
52-527-01-01	Left #1 Entry Door
52-528-01-01	Left #2 Passenger Entry Door
52-529-01-01	Left #3 Overwing Door
52-531-01-01	Left #4 Passenger Entry Door
52-533-01-01	Left #5 Passenger Entry Door
52-542-02-01	Right #1 Entry Door
52-543-02-01	Right #2 Passenger Entry Door
52-544-02-01	Right #3 Overwing Door
52-546-02-01	Right #4 Passenger Entry Door
52-548-02-01	Right #5 Passenger Entry Door
52-610-01-01	Left #1 Passenger Entry Door
52-611-01-01	Left #2 Passenger Entry Door
52-612-01-01	Left #3 Overwing Door
52-614-01-01	Left #4 Passenger Entry Door
52-616-01-01	Left #5 Passenger Entry Door
52-620-02-01	Right #1 Passenger Entry Door
52-621-02-01	Right #2 Passenger Entry Door
52-622-02-01	Right #3 Overwing Door
52-624-02-01	Right #4 Passenger Entry Door



6C CHECK	
TASK CARD NUMBER	TASK TITLE
52-626-02-01	Right #5 Passenger Entry Door
52-802-00-01	Forward Large Cargo Door
52-804-00-01	Forward Large Cargo Door
52-806-00-01	Aft Small Cargo Door
52-808-00-01	Aft Small Cargo Door
52-810-00-01	Aft Large Cargo Door
52-812-00-01	Aft Large Cargo Door
52-814-00-01	Bulk Cargo Door
52-816-01-01	Left No. 1 Passenger Entry Door - Section 41
52-818-01-01	Left No. 1 Passenger/Crew Entry Door - Section 41
52-820-01-01	Left No. 2 Passenger Entry Door - Section 43
52-822-01-01	Left No. 2 Passenger Entry Door - Section 43
52-824-01-01	Left No. 3 Overwing Door - Section 44
52-825-01-01	Left No. 3 Overwing Door - Section 44
52-827-01-01	Left No. 4 Passenger Entry Door - Section 46
52-829-01-01	Left No. 4 Passenger Entry Door - Section 46
52-831-01-01	Left No. 5 Passenger Entry Door - Section 47
52-833-01-01	Left No. 5 Passenger Entry Door - Section 47
52-834-02-01	Right No. 1 Passenger/Crew Entry Door - Section 41
52-836-02-01	Right No. 1 Passenger/Crew Entry Door - Section 41
52-840-02-01	Right No. 2 Passenger Entry Door - Section 43
52-842-02-01	Right No. 2 Passenger Entry Door - Section 43
52-844-02-01	Right No. 3 Overwing Door - Section 44
52-846-02-01	Right No. 3 Overwing Door - Section 44



6C CHECK	
TASK CARD NUMBER	TASK TITLE
52-849-02-01	Right No. 4 Passenger Entry Door - Section 46
52-851-02-01	Right No. 4 Passenger Entry Door - Section 46
52-853-02-01	Right No. 5 Passenger Entry Door - Section 47
52-855-02-01	Right No. 5 Passenger Entry Door - Section 47
53-503-00-01	Left Area Outboard and Above Nose Landing Gear Wheel Well
53-504-00-01	Right Area Outboard and Above Nose Landing Gear Wheel Well
53-506-00-01	Main Equipment Center
53-507-00-01	Main Equipment Center
53-508-00-01	Main Equipment Center
53-509-01-01	Forward Cargo Compartment
53-511-00-01	Forward Cargo Compartment
53-512-00-01	Forward Cargo Compartment
53-514-00-01	Area Below Forward Cargo Compartment
53-515-00-01	Area Below Forward Cargo Compartment
53-518-00-01	Main Landing Gear Wheel Well, Left
53-519-00-01	Main Landing Gear Wheel Well, Right
53-520-00-01	Area Above Main Landing Gear Wheel Well
53-522-01-01	Aft Cargo Compartment
53-523-01-01	Aft Cargo Compartment
53-524-00-01	Aft Cargo Compartment
53-525-00-01	Aft Cargo Compartment
53-526-00-01	Aft Cargo Compartment
53-529-01-01	Area Below Aft Cargo Compartment
53-530-01-01	Area Below Aft Cargo Compartment
53-532-00-01	Area Below Aft Cargo Compartment
53-532-01-01	Area Below Aft Cargo Compartment



6C CHECK	
TASK CARD NUMBER	TASK TITLE
53-533-00-01	Area Below Aft Cargo Compartment
53-533-01-01	Area Below Aft Cargo Compartment
53-534-00-01	Area Below Aft Cargo Compartment
53-536-00-01	Bulk Cargo Compartment
53-537-00-01	Bulk Cargo Compartment
53-538-00-01	Area Below Bulk Cargo Compartment
53-539-00-01	Area Aft of Bulk Cargo Compartment
53-540-00-01	Area Aft of Bulk Cargo Compartment
53-543-00-01	Overwing Wing-To-Body Fairings, Left
53-544-00-01	Overwing Wing-To-Body Fairings, Right
53-545-01-01	Forward Wing-To-Body Fairings - Left
53-545-02-01	Forward Wing-To-Body Fairings - Right
53-546-01-01	Overwing Wing-To-Body Fairings - Left
53-546-02-01	Overwing Wing-To-Body Fairings - Right
53-547-01-01	Aft Wing-To-Body Fairings - Left
53-547-02-01	Aft Wing-To-Body Fairings - Right
53-548-00-01	Flight Compartment
53-549-00-01	Flight Compartment
53-550-00-01	Flight Compartment
53-553-00-01	Passenger Compartment - Left
53-554-00-01	Passenger Compartment - Right
53-559-00-01	Main Deck Compartment
53-560-00-01	Main Deck Compartment
53-561-00-01	Area Above Main Deck Compartment Ceiling



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

6C CHECK	
TASK CARD NUMBER	TASK TITLE
53-564-00-01	Passenger Compartment - Left
53-565-00-01	Passenger Compartment - Right
53-570-00-01	Passenger Compartment - Left
53-571-00-01	Passenger Compartment - Right
53-572-00-01	Passenger Compartment - Left
53-573-00-01	Passenger Compartment - Right
53-574-00-01	Area Above Main Deck Compartment Ceiling
53-575-00-01	Area Above Main Deck Compartment Ceiling
53-579-00-01	Area Above Main Deck Compartment Ceiling
53-581-00-01	Area Above Main Deck Compartment Ceiling
53-584-00-01	Passenger Compartment
53-585-00-01	Passenger Compartment
53-586-00-01	Passenger Compartment
53-592-00-01	Passenger Compartment
53-593-00-01	Passenger Compartment
53-594-00-01	Passenger Compartment
53-595-00-01	Area above Main Deck Compartment Ceiling
53-596-00-01	Area above Main Deck Compartment Ceiling
53-598-00-01	Area above Main Deck Compartment Ceiling
53-602-00-01	Passenger Compartment
53-603-00-01	Passenger Compartment
53-608-00-01	Passenger Compartment
53-609-00-01	Passenger Compartment
53-610-00-01	Area above Wing Center Section
53-611-00-01	Area above Wing Center Section
53-612-00-01	Passenger Compartment Left and Right





6C CHECK	
TASK CARD NUMBER	TASK TITLE
53-613-00-01	Area above Passenger Compartment Ceiling
53-614-00-01	Passenger Compartment Left
53-614-00-02	Passenger Compartment Right
53-616-00-01	Passenger Compartment Left and Right
53-618-00-01	Passenger Compartment Left and Right
53-620-00-01	Forward Wing-To-Body Fairings - Left
53-620-00-02	Forward Wing-To-Body Fairings - Right
53-621-00-01	Aft Wing-To-Body Fairings - Left
53-621-00-02	Aft Wing-To-Body Fairings - Right
53-624-00-01	Passenger Compartment Ceiling
53-625-00-01	Passenger Compartment Ceiling
53-653-00-01	Lower Fuselage - Subzone 110
53-653-00-02	Lower Fuselage - Subzone 110
53-654-00-01	Area Forward of Nose Landing Gear Wheel Well
53-655-00-01	Lower Fuselage - Subzone 110
53-656-00-01	Nose Landing Gear Wheel Well
53-657-00-01	Area Aft of Forward Cargo Compartment
53-658-00-02	LOWER FUSELAGE -SUBZONE 120
53-659-00-02	LOWER FUSELAGE -SUBZONE 120
53-666-00-01	LEFT MAIN LANDING GEAR WHEEL WELL AREA
53-666-00-03	RIGHT MAIN LANDING GEAR WHEEL WELL AREA
53-666-01-01	MAIN LANDING GEAR WHEEL WELL AREA
53-667-00-01	Lower Fuselage - Subzone 140
53-668-00-01	Left Main Landing Gear Wheel Well



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

6C CHECK	
TASK CARD NUMBER	TASK TITLE
53-668-00-02	Right Main Landing Gear Wheel Well
53-669-00-01	Aft Cargo Compartment
53-670-00-01	Area Below Aft Cargo Compartment
53-671-00-01	Lower Fuselage - Subzone 150 and 160
53-672-00-01	Lower Fuselage - Subzone 160
53-673-00-01	Underwing Wing-To-Body Fairing - Left
53-673-00-02	Underwing Wing-To-Body Fairing - Right
53-674-00-01	Flight Compartment
53-675-00-01	Subzone 220 BS 246 to 655 (Section 41)
53-676-00-01	Subzone 230 BS 655 to 1035 (Section 43)
53-677-00-01	Subzone 240 BS 1035 to 1434 (Section 44)
53-678-00-01	Subzone 250 BS 1434 to 1832 (Section 46)
53-679-00-01	Subzone 260 BS 1832 to 2195.75 (Section 47)
53-681-00-01	Subzone 310 - Section 48
53-682-00-01	Subzone 310 - Section 48
53-683-00-01	Subzone 310 - Section 48
53-800-00-01	Left Fuselage Lower Half - Section 41 & 43 - STA 92.5 to STA 867
53-800-00-02	Right Fuselage Lower Half - Section 41 & 43 - STA 92.5 to STA 867
53-800-00-03	Lower Left Fuselage & Wing to Body Fairing - STA 858 to STA 1655
53-800-00-04	Lower Right Fuselage & Wing to Body Fairing - STA 858 to STA 1655
53-800-00-05	Lower Left Fuselage - STA 1655 to STA 2196
53-800-00-06	Lower Right Fuselage - STA 1655 to STA 2196
53-804-00-01	Radome
53-806-00-01	Area Forward of Nose Landing Gear Wheel Well
53-810-00-01	Nose Gear Wheel Well (Inspection Accomplished from Within Wheel Well)
53-812-00-01	Area Above and Outboard of the Nose Landing Gear Wheel Well



6C CHECK	
TASK CARD NUMBER	TASK TITLE
53-814-00-01	Main Equipment Center
53-818-00-01	Forward Cargo Compartment
53-820-00-01	Forward Cargo Compartment
53-822-00-01	Area Below Forward Cargo
53-824-00-01	Area Below Forward Cargo Compartment
53-826-00-01	Area Aft of Forward Cargo Compartment
53-828-00-01	Area Above Wing Center Section
53-830-00-01	Left Environmental Control Systems Bay
53-830-00-02	Right Environmental Control Systems Bay
53-832-00-01	Forward Keel Beam
53-834-00-01	Area Above Main Landing Gear Wheel Well
53-838-00-01	Left Main Landing Gear Wheel Well (Inspection accomplished within WW)
53-842-00-01	Right Main Landing Gear Wheel Well (Inspection accomplished Within WW)
53-844-00-01	Aft Keel Beam
53-852-00-01	Aft Cargo Compartment
53-852-01-01	Aft Cargo Compartment
53-854-00-01	Aft Cargo Compartment
53-856-00-01	Aft Cargo Compartment
53-858-00-01	Aft Cargo Compartment
53-860-00-01	Area Below Aft Cargo Compartment
53-862-00-01	Area Below Aft Cargo Compartment
53-864-00-01	Area Below Aft Cargo Compartment
53-866-00-01	Area Below Aft Cargo Compartment
53-870-00-01	Bulk Cargo Compartment



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

6C CHECK	
TASK CARD NUMBER	TASK TITLE
53-872-00-01	Bulk Cargo Compartment
53-874-00-01	Area Below Bulk Cargo Compartment
53-876-00-01	Area Aft of the Bulk Cargo Compartment
53-878-00-01	Area Aft of the Bulk Cargo Compartment
53-880-00-01	Forward Wing-To-Body Fairings - Left
53-882-00-01	Forward Wing-To-Body Fairings - Right
53-884-00-01	Overwing Wing-To-Body Fairing - Left
53-886-00-01	Overwing Wing-To-Body Fairings - Right
53-888-00-01	Underwing Wing-to-Body Fairings - Left
53-890-00-01	Underwing Wing-To-Body Fairings - Right
53-892-00-01	Aft Wing-to-Body Fairings - Left
53-894-00-01	Aft Wing-To-Body Fairings - Right
53-896-00-01	Left Upper Fuselage - Body Sections 41 and 43 - STA 246 to STA 1035
53-896-00-02	Right Upper Fuselage - Body Sections 41 and 43 - STA 246 to STA 1035
53-896-00-03	Left Upper Fuselage - Body Section 44 - BS 1035 to 1434
53-896-00-04	Right Upper Fuselage - Body Section 44 - STA 1035 to STA 1434
53-896-00-05	Left Upper Fuselage - Body Section 46 and 47 - STA 1434 to STA 2150
53-896-00-06	Right Upper Fuselage - Body Sections 46 and 47 - STA 1434 to STA 2150
53-898-00-01	Left Upper Fuselage - Flight Compartment - STA 92.5 to STA 246
53-898-00-02	Right Upper Fuselage - Flight Compartment - STA 92.5 to STA 246
53-900-00-01	Flight Compartment
53-902-00-01	Flight Compartment
53-904-00-01	Passenger Compartment - Section 41
53-906-00-01	Area Above Passenger Compartment Ceiling - Section 41
53-908-00-01	Passenger Compartment - Section 43
53-910-00-01	Area Above Passenger Compartment Ceiling - Section 43



6C CHECK	
TASK CARD NUMBER	TASK TITLE
53-912-00-01	Passenger Compartment - Section 44
53-914-00-01	Area Above Passenger Compartment - Section 44
53-916-00-01	Passenger Compartment - Section 46
53-918-00-01	Area Above Passenger Compartment Ceiling - Section 46
53-920-00-01	Passenger Compartment - Section 47
53-922-00-01	Area Above Passenger Compartment Ceiling - Section 47
53-924-00-01	Body Section 48 - BS2150 to BS 2570
53-924-00-02	Body Section 48 - BS2150 to BS 2570
53-926-00-01	Fuselage Area Aft of Bulkhead - Inspection Accomplished within Fuselage
53-932-00-01	Upper Fuselage - Left and Right - Section 43
54-538-01-01	Forward Torque Box - Left Nacelle Strut
54-540-01-01	AFT Torque Box - Left Nacelle Strut
54-541-01-02	AFT Torque Box - Left Nacelle Strut (For GE90-100 series engines only)
54-542-01-02	Strut Forward Torque Box (For GE90-100 series engines only)
54-543-01-02	AFT Torque Box - Left Nacelle Strut (GE90-100)
54-546-02-01	Forward Torque Box - Right Nacelle Strut
54-548-02-01	AFT Torque Box - Right Nacelle Strut
54-549-02-02	AFT Torque Box - Right Nacelle Strut (For GE90-100 series engines only)
54-550-02-02	Strut Forward Torque Box (For GE90-100 series engines only)
54-551-02-02	AFT Torque Box - Right Nacelle Strut (GE90-100 Engine)
54-582-01-01	FORWARD TORQUE BOX - LEFT NACELLE STRUT (GE90-100 Only)
54-583-02-01	FORWARD TORQUE BOX - RIGHT NACELLE STRUT (GE90-100 Only)
54-610-01-01	Aft Torque Box - Left Nacelle Strut
54-612-02-01	Aft Torque Box - Right Nacelle Strut



6C CHECK	
TASK CARD NUMBER	TASK TITLE
54-822-01-01	Forward Strut Fairing - Left Nacelle Strut
54-824-01-01	Forward and Aft Torque Box - Left Nacelle Strut - Cowls Opened
54-826-01-01	Forward and Aft Torque Box - Left Nacelle Strut
54-828-01-01	Aft Strut Fairing - Left Nacelle Strut
54-832-02-01	Forward Strut Fairing - Right Nacelle Strut
54-834-02-01	Forward and Aft Torque Box - Right Nacelle Strut - Fan Cowls Opened
54-836-02-01	Forward and Aft Torque Box - Right Nacelle Strut
54-838-02-01	Aft Strut Fairing - Right Nacelle Strut
55-501-00-01	Horizontal Stabilizer Center Section
55-502-00-01	Horizontal Stabilizer Center Section
55-503-00-01	Area Aft of Bulkhead
55-504-00-01	Area Aft of Bulkhead Stabilizer Torsion Box Compartment
55-505-00-01	Stabilizer Torsion Box Compartment
55-507-00-01	Fuselage - BS 2150-2570.3 (Section 48)
55-508-00-01	Fuselage - BS 2150-2570.3 (Section 48)
55-509-00-01	Vertical Stabilizer - Auxiliary Spar to Front Spar
55-510-00-01	Vertical Stabilizer - Auxiliary Spar to Front Spar
55-511-00-01	Vertical Stabilizer - Front Spar to Rear Spar
55-512-00-01	Vertical Stabilizer - Front Spar to Rear Spar
55-513-00-01	Vertical Stabilizer - Front Spar to Rear Spar
55-513-01-01	Vertical Stabilizer - Front Spar to Rear Spar
55-514-00-01	Vertical Stabilizer - Front Spar to Rear Spar
55-514-01-01	Vertical Stabilizer - Front Spar to Rear Spar
55-515-00-01	Vertical Stabilizer - Rear Spar to Trailing Edge
55-515-01-01	Vertical Stabilizer - Rear Spar to Trailing Edge
55-516-00-01	Vertical Stabilizer - Rear Spar to Trailing Edge



6C CHECK	
TASK CARD NUMBER	TASK TITLE
55-516-01-01	Vertical Stabilizer - Rear Spar to Trailing Edge
55-517-00-01	Vertical Stabilizer - Rear Spar to Trailing Edge
55-517-01-01	Vertical Stabilizer - Rear Spar to Trailing Edge
55-518-00-01	Vertical Stabilizer - Rear Spar to Trailing Edge
55-518-01-01	Vertical Stabilizer - Rear Spar to Trailing Edge
55-519-00-01	Rudder
55-520-00-01	Rudder
55-520-01-01	Rudder
55-521-00-01	Rudder Tab
55-522-00-01	Rudder Tab
55-523-00-01	Rudder Tab
55-524-00-01	Vertical Stabilizer Leading Edge
55-524-01-01	Vertical Stabilizer Leading Edge
55-525-00-01	Vertical Stabilizer - Auxiliary Spar to Front Spar
55-525-01-01	Vertical Stabilizer - Auxiliary Spar to Front Spar
55-526-00-01	Vertical Stabilizer - Front Spar to Rear Spar
55-527-01-01	Left Horizontal Stabilizer Center Section
55-528-01-01	Left Horizontal Stabilizer Center Section
55-529-01-01	Left Horizontal Stabilizer Center Section
55-530-01-01	Left Horizontal Stabilizer Center Section
55-531-01-01	Left Horizontal Stabilizer Center
55-532-01-01	Left Horizontal Stabilizer - Front Spar to Rear Spar
55-533-01-01	Left Horizontal Stabilizer - Front Spar to Rear Spar
55-534-01-01	Left Horizontal Stabilizer - Rear Spar to Trailing Edge



6C CHECK	
TASK CARD NUMBER	TASK TITLE
55-534-03-01	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
55-535-01-01	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
55-535-03-01	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
55-536-01-01	Left Elevator
55-536-03-01	Left Elevator
55-537-01-01	Left Horizontal Stabilizer Tip
55-538-02-01	Right Horizontal Stabilizer Center Section
55-539-02-01	Right Horizontal Stabilizer Center Section
55-540-02-01	Right Horizontal Stabilizer Center Section
55-541-02-01	Right Horizontal Stabilizer Center Section
55-542-02-01	Right Horizontal Stabilizer Center Section
55-543-02-01	Right Horizontal Stabilizer - Front Spar to Rear Spar
55-544-02-01	Right Horizontal Stabilizer - Front Spar to Rear Spar
55-545-02-01	Right Horizontal Stabilizer - Rear Spar to Trailing Edge
55-545-04-01	Right Horizontal Stabilizer - Rear Spar to Trailing Edge
55-546-02-01	Right Horizontal Stabilizer - Rear Spar to Trailing Edge
55-546-04-01	Right Horizontal Stabilizer - Rear Spar to Trailing Edge
55-547-02-01	Right Elevator
55-547-04-01	Right Elevator
55-548-02-01	Right Horizontal Stabilizer Tip
55-549-00-01	Area Aft of Bulkhead and Stabilizer Torsion Box Compartment
55-550-00-01	Vertical Stabilizer - Front Spar to Rear Spar
55-551-00-01	Left Horizontal Stabilizer Tip
55-552-00-01	Right Horizontal Stabilizer Tip
55-800-00-01	Stabilizer Torsion Box Compartment - Left and Right Sides
55-804-00-01	Vertical Stabilizer Leading Edge





6C CHECK	
TASK CARD NUMBER	TASK TITLE
55-808-00-01	Vertical Stabilizer - Auxiliary Spar to Rear Spar
55-811-00-01	Vertical Stabilizer - Auxiliary Spar / Front Spar
55-812-00-01	Vertical Stabilizer - Front Spar to Rear Spar - Between Ribs 8 and 9
55-814-00-01	Vertical Stabilizer - Rear Spar to Trailing Edge
55-817-00-01	Vertical Stabilizer - Rear Spar to Trailing Edge
55-819-00-01	Vertical Stabilizer - Rear Spar to Trailing Edge
55-820-00-01	Rudder
55-822-00-01	Rudder Tab
55-824-00-01	Vertical Stabilizer Forward Tip
55-826-00-01	Vertical Stabilizer Forward Tip
55-828-01-01	Left Horizontal Stabilizer - Center Section
55-830-01-01	Left Horizontal Stabilizer - Leading Edge
55-832-01-01	Left Horizontal Stabilizer - Auxiliary Spar to Rear Spar
55-834-01-01	Left Horizontal Stabilizer - Auxiliary Spar to Front Spar
55-838-01-01	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
55-838-03-02	Left Horizontal Stabilizer - Front Spar to Rear Spar
55-841-00-01	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
55-843-00-01	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
55-844-01-01	Left Elevator
55-846-01-01	Left Horizontal Stabilizer Tip
55-848-02-01	Right Horizontal Stabilizer Center Section
55-850-02-01	Right Horizontal Stabilizer - Leading Edge
55-852-02-01	Right Horizontal Stabilizer - Auxiliary Spar to Rear Spar
55-854-02-01	Right Horizontal Stabilizer Auxiliary Spar to Front Spar



6C CHECK	
TASK CARD NUMBER	TASK TITLE
55-856-04-01	Right Horizontal Stabilizer - Front Spar to Rear Spar
55-858-02-01	Right Horizontal Stabilizer - Rear Spar to Trailing Edge
55-861-00-01	Right Horizontal Stabilizer - Rear Spar to Trailing Edge
55-863-00-01	Right Horizontal Stabilizer - Rear Spar to Trailing Edge
55-864-02-01	Right Elevator
55-866-02-01	Right Horizontal Stabilizer Tip
56-010-00-01	Flight Deck #2 Windows MICROSWITCH
56-020-00-01	Flight Deck Number 2 Windows Guide Bearings
56-030-00-01	Flight Deck Number 2 Windows Open/Close Function
57-501-00-01	Wing Center Section
57-503-01-01	Slat Number 7
57-505-01-01	Wing Inspar Area (Fuel Tanks) - Inboard of Wing Rib 17
57-506-01-01	Wing Inspar Area (Fuel Tanks) - Inboard of Wing Rib 17
57-507-01-01	Wing Inspar Area (Fuel Tanks) - Rib 17 to Wing Tip
57-508-01-01	Wing Inspar Area (Fuel Tanks) - Rib 17 to Rib 34
57-509-01-01	Wing Inspar Area (Fuel Tanks) - Rib 34 to Wing Tip
57-510-01-01	Main Tank - Rib 17 to Rib 32 - Left Wing
57-511-01-01	Main Tank - Rib 17 to Rib 32 - Left Wing
57-512-00-01	Slats Number 1 Through 6 Cove Skin
57-514-00-01	Wing Inboard and Outboard Main Flap Attach Bolts
57-515-01-01	Left Wing Inboard Main Flap
57-516-01-01	Left Wing Inboard Main Flap
57-517-01-01	Left Wing Inboard Main Flap
57-518-01-01	Left Wing Inboard Aft Flap
57-519-01-01	Left Wing Flaperon
57-520-01-01	Left Wing Flaperon



6C CHECK	
TASK CARD NUMBER	TASK TITLE
57-521-00-01	Left Wing Inboard Trailing Edge Flap Torque Tube
57-521-00-02	Right Wing Inboard Trailing Edge Flap Torque Tube
57-523-01-01	Left Wing Outboard Flap
57-524-01-01	Left Wing Outboard Flap
57-530-01-01	Flap Support Fairing Number 4
57-531-01-01	Inboard Flap Center Track Fairing - Left Wing
57-532-01-01	Left Wing Flap Support Fairing Number 3
57-533-01-01	Outboard Flaperon Support Fairing - Left Wing
57-536-02-01	Slat Number 8
57-539-00-01	Slats Number 9 Through 14 Cove Skin
57-540-02-01	Wing Inspar Area (Fuel Tanks) - Inboard of Wing Rib 17
57-541-02-01	Wing Inspar Area (Fuel Tanks) - Inboard of Wing Rib 17
57-542-02-01	Wing Inspar Area (Fuel Tanks) - Rib 17 to Wing Tip
57-543-02-01	Wing Inspar Area (Fuel Tanks) - Rib 17 to Rib 34
57-544-02-01	Wing Inspar Area (Fuel Tanks) - Rib 34 to Wing Tip
57-545-02-01	Main Tank - Rib17 to Rib 32 - Right Wing
57-546-02-01	Main Tank - Rib 17 to Rib 32 - Right Wing
57-550-02-01	Right Wing Inboard Main Flap
57-551-02-01	Right Wing Inboard Main Flap
57-552-02-01	Right Wing Inboard Main Flap
57-553-02-01	Right Wing Inboard Aft Flap
57-554-02-01	Right Wing Flaperon
57-555-02-01	Right Wing Flaperon
57-556-02-01	Right Wing Outboard Flap



6C CHECK	
TASK CARD NUMBER	TASK TITLE
57-557-02-01	Right Wing Outboard Flap
57-560-02-01	Flap Support Fairing Number 5 RIGHT WING
57-561-02-01	Inboard Flap Center Track Fairing - Right Wing
57-562-02-01	Flap Support Fairing Number 6 Right Wing
57-563-02-01	Outboard Flaperon Support Fairing - Right Wing
57-601-00-01	Wing Center Section
57-602-00-01	Area Above Wing Center Section
57-603-00-01	Underwing Wing-To-Body Fairing
57-604-00-01	Lower Fuselage - Subzone 130
57-605-00-01	Lower Fuselage - Subzone 130 and 140
57-606-00-01	Left Side - Environmental Control Systems Bay and Underwing Fairings
57-606-00-02	Lower Fuselage - Forward Keel Beam Area
57-606-00-03	Lower Fuselage - Right Side - Environmental Control Systems Bay and Un
57-607-01-01	Left Wing
57-608-01-01	Left Wing
57-609-01-01	Left Wing
57-610-01-01	Left Wing
57-612-01-01	Left Wing
57-613-01-01	Wing Leading Edge - Forward of Front Spar
57-614-01-01	Wing Trailing Edge - Aft of Rear Spar
57-620-02-01	Right Wing
57-621-02-01	Right Wing
57-622-02-01	Right Wing
57-623-02-01	Right Wing
57-625-02-01	Right Wing
57-626-02-01	Wing Leading Edge - Forward of Front Spar



6C CHECK	
TASK CARD NUMBER	TASK TITLE
57-627-02-01	Wing Trailing Edge - Aft of Rear Spar
57-630-00-01	Area Above Wing Center Section
57-631-01-01	Left Wing Tip
57-632-02-01	Right Wing Tip
57-633-01-01	Left Wing
57-634-02-01	Right Wing
57-802-00-01	Wing Center Section
57-804-01-01	Leading Edge to Front Spar - Inboard of Nacelle Strut - Left Wing
57-806-01-01	Leading Edge to Front Spar - Inboard of Nacelle Strut - Left Wing
57-808-01-01	Slat No. 7
57-810-01-01	Krueger Seal Flap/Nacelle Gap Cover Area - Left Wing
57-812-01-01	Krueger Seal Flap/Nacelle Gap Cover Area - Left Wing
57-814-01-01	Leading Edge to Front Spar - Outboard of Nacelle Strut - Left Wing
57-817-01-01	Leading Edge to Front Spar - Outboard of Nacelle Strut - Left Wing
57-818-01-01	Left Wing Outboard Leading Edge Slats Number 1 through 6
57-820-01-01	Slat Number 6
57-822-01-01	Slat Number 5
57-824-01-01	Slat Number 4
57-826-01-01	Slat Number 3
57-828-01-01	Slat Number 2
57-831-01-01	Slat Number 1
57-832-01-01	Lower Wing Inspar Area (Fuel Tanks) - Inboard of Wing Rib 17 - Left Wing
57-832-01-02	Upper Wing Inspar Area (Fuel Tanks) - Inboard of Wing Rib 17 - Left Wing
57-834-01-01	Center Fuel Tank - Rib 1 to Rib 8 - Left Wing



6C CHECK	
TASK CARD NUMBER	TASK TITLE
57-836-01-01	Left Wing Dry Bay
57-838-01-01	Main Tank - Rib 8 to Rib 17 - Left Wing
57-840-01-01	Wing Inspar Area - Rib 17 to Wing Tip - Left Wing Lower Surface
57-840-01-02	Wing Inspar Area - Rib 17 to Wing Tip - Left Wing Upper Surface
57-842-01-01	Main Tank - Rib 17 to Rib 32 - Left Wing
57-845-01-01	Main Tank Rib 32 to Rib 34 - Left Wing
57-847-01-01	Main Tank, Surge Tank, and Inspar Area - Left Wing
57-848-01-01	Left Wing Tip
57-851-01-01	Left Wing Tip
57-852-01-01	Left Wing Fixed T.E. - Aft of Rear Spar, Inbd of Outbd Support Fairing
57-854-01-01	Rear Spar to Landing Gear Support Beam - Left Wing
57-856-01-01	Landing Gear Support Beam and Rear Spar to Trailing Edge - Left Wing
57-858-01-01	Inboard Spoilers Numbers 6 and 7
57-860-01-01	Inboard Trailing Edge Flaps - Left Wing
57-862-01-01	Left Wing Flaperon
57-864-01-01	Rear Spar to Trailing Edge - Outboard of Flaperon - Left Wing
57-866-01-01	Rear Spar to Trailing Edge - Outboard of Flaperon - Left Wing
57-868-01-01	Outboard Spoilers Numbers 1 through 5
57-870-01-01	Left Wing Outboard Flap
57-872-01-01	Left Wing Aileron
57-874-01-01	Flap Support Fairing No. 4
57-876-01-01	Flap Support Fairing No. 4
57-878-01-01	Inboard Flap Center Track Fairing - Left Wing
57-880-01-01	Flap Support Fairing No. 3 and Inboard Flaperon Support Fairing
57-882-01-01	Flap Support Fairing No. 3 and Inboard Flaperon Support Fairing
57-884-01-01	Outboard Flaperon Support Fairing - Left Wing



6C CHECK	
TASK CARD NUMBER	TASK TITLE
57-886-01-01	Flap Support Fairing No. 2
57-888-01-01	Flap Support Fairing No. 2
57-890-01-01	Flap Support Fairing No. 1
57-892-01-01	Flap Support Fairing No. 1
57-894-01-01	Outboard Auxiliary Support Fairing - Left Wing
57-896-02-01	Leading Edge to Front Spar - Inboard of Nacelle Strut - Right Wing
57-898-02-01	Leading Edge to Front Spar - Inboard of Nacelle Strut - Right Wing
57-900-02-01	Slat No. 8
57-902-02-01	Krueger Seal Flap/Nacelle Gap Cover Area - Right Wing
57-904-02-01	Krueger Seal Flap/Nacelle Gap Cover Area - Right Wing
57-906-02-01	Leading Edge to Front Spar - Outboard of Nacelle Strut - Right Wing
57-909-02-01	Leading Edge to Front Spar - Outboard of Nacelle Strut - Right Wing
57-910-02-01	Outboard Leading Edge Slats Number 9 through 14
57-912-02-01	Slat Number 9
57-914-02-01	Slat Number 10
57-916-02-01	Slat Number 11
57-918-02-01	Slat Number 12
57-920-02-01	Slat Number 13
57-923-02-01	Slat Number 14
57-924-02-01	Lower Wing Inspar Area (Fuel Tanks) - Inboard of Wing Rib 17 - Right Wing
57-924-02-02	Upper Wing Inspar Area (Fuel Tanks) - Inboard of Wing Rib 17 - Right Wing
57-926-02-01	Center Fuel Tank - Rib 1 to Rib 8 - Right Wing
57-928-02-01	Right Wing Dry Bay
57-930-02-01	Main Tank - Rib 8 to Rib 17 - Right Wing



6C CHECK	
TASK CARD NUMBER	TASK TITLE
57-932-02-01	Wing Inspar Area (Fuel Tanks) - Rib 17 to Wing Tip - Right Wing Lower Surface
57-932-02-02	Wing Inspar Area (Fuel Tanks) - Rib 17 to Wing Tip - Right Wing Upper Surface
57-934-02-01	Main Tank - Rib 17 to Rib 32 - Right Wing
57-937-02-01	Main Tank - Rib 32 to Rib 34 - Right Wing
57-939-02-01	Main Tank, Surge Tank, and Inspar Area - Right Wing
57-940-02-01	Right Wing Tip
57-943-02-01	Right Wing Tip
57-944-02-01	Right Wing Fixed T.E. - Aft of Rear Spar, Inbd of Outbd Support Fairing
57-946-02-01	Rear Spar to Landing Gear Support Beam - Right Wing
57-948-02-01	Landing Gear Support Beam and Rear Spar to Trailing Edge - Right Wing
57-950-02-01	Inboard Spoilers Numbers 8 and 9
57-952-02-01	Inboard Trailing Edge Flaps - Right Wing
57-954-02-01	Right Wing Flaperon
57-956-02-01	Rear Spar to Trailing Edge - Outboard of Flaperon - Right Wing
57-958-02-01	Rear Spar to Trailing Edge - Outboard of Flaperon - Right Wing
57-960-02-01	Outboard Spoilers Numbers 10 through 14
57-962-02-01	Right Wing Outboard Flap
57-964-02-01	Right Wing Aileron
57-966-02-01	Flap Support Fairing No. 5
57-968-02-01	Flap Support Fairing No. 5
57-970-02-01	Inboard Flap Center Track Fairing - Right Wing
57-972-02-01	Flap Support Fairing No. 6 and Inbd Flaperon Support Fairing
57-974-02-01	Flap Support Fairing No. 6 and Inbd Flaperon Support Fairing
57-976-02-01	Outboard Flaperon Support Fairing - Right Wing
57-978-02-01	Flap Support Fairing No. 7
57-980-02-01	Flap Support Fairing No. 7





6C CHECK	
TASK CARD NUMBER	TASK TITLE
57-982-02-01	Flap Support Fairing No. 8
57-984-02-01	Flap Support Fairing No. 8
57-986-02-01	Outboard Auxiliary Support Fairing - Right Wing

**H. 7C CHECK**

7C CHECK	
TASK CARD NUMBER	TASK TITLE
12-008-00-01	Left Wing Inboard Leading Edge Torque Tube Supports and Couplings
12-008-00-02	Right Wing Inboard Leading Edge Torque Tube Supports and Couplings
12-008-00-11	Left Wing Outboard Leading Edge Torque Tube Supports and Couplings
12-008-00-12	Right Wing Outboard Leading Edge Torque Tube Supports and Couplings
12-008-01-01	Forward Cargo Compartment Torque Tube Supports and Couplings
12-018-00-01	Left Wing Krueger Flap Drive Arm Bearing
12-018-00-02	Right Wing Krueger Flap Drive Arm Bearing
12-030-00-01	Left Wing Trailing Edge Torque Tube and Torque Tube Supports
12-030-00-02	Right Wing Trailing Edge Torque Tube and Torque Tube Supports
12-106-00-01	Passenger Entry Door Mechanisms
12-110-00-01	Forward Access Door Latch Pin
12-112-00-01	Main Equipment Center Access Door Latch Pin
20-010-00-01	Primary Flight Control and Brake Control Cables Turns
20-010-00-02	Primary Flight Control and Brake Control Cables
20-010-00-03	Primary Flight Control and Brake Control Cable Turns
20-010-00-04	Primary Flight Control Cable Turns
20-010-00-05	Primary Flight Control Cable Turns



7C CHECK	
TASK CARD NUMBER	TASK TITLE
20-012-00-01	Nose Gear Steering Control Cable Turns
20-012-00-02	Nose Gear Steering Control Cable Turns
20-015-00-01	Primary Flight Control and Brake Control Cables - straight runs
20-015-00-02	Primary Flight Control and Brake Control Cables - straight runs
20-015-00-03	Primary Flight Control and Brake Control Cables - Straight Runs
20-015-00-04	Primary Flight Control and Brake Control Cables - Straight Runs
20-015-00-05	Primary Flight Control and Brake Control Cable - Straight Runs
20-015-00-06	Primary Flight Control and Brake Control Cable - Straight Runs
20-015-00-07	Primary Flight Control Cables - Straight Runs
20-015-00-08	Primary Flight Control Cables - Straight Runs
20-015-00-09	Primary Flight Control Cables in Fuselage - Straight Runs
20-018-00-01	Nose Gear Steering Control Cables - straight runs
20-018-00-02	Nose Gear Steering Control Cables - straight runs
20-110-00-01	Primary Flight Control Cables - Protected Unpressurized Areas
20-110-00-02	Primary Flight Control Cables - Protected Unpressurized Areas
20-110-00-03	Primary Flight Control Cables - Protected Unpressurized Areas
20-110-00-04	Primary Flight Control Cables - Protected Unpressurized Areas
20-110-00-05	Primary Flight Control Cables - PROTECTED/UNPROTECTED UNPRESSURIZED AREAS
20-200-00-01	HIRF/L AFDC Task for ILS, RA, AIMS, Backdrive and Cross Channel
20-251-10-01	FOIL/MESH PANELS; ENGINE COWLS, STRUT, LEADING EDGE
20-251-20-01	FOIL/MESH PANELS; ENGINE COWLS, STRUT, LEADING EDGE
20-260-00-01	Ram Air Turbine (RAT) Wire Shielding Functional Check
20-270-01-01	PFCS Wire Shielding Functional Check - Left Wing
20-270-02-01	PFCS Wire Shielding Functional Check - Right Wing
20-280-00-01	PFCS Wire Shielding Functional Check - Empennage
20-290-00-01	HIRF/Lightning Ace Wire Bundle Shielding

7C CHECK	
TASK CARD NUMBER	TASK TITLE
20-300-00-01	HIRF/Arlinc 629 Buses for Flight Controls, Couplers to EE Racks
20-310-01-01	Functional Check Wire Bundle Inspection Left Flaps, Slats, Skew Sensors
20-310-02-01	Functional Check Wire Bundle Right Flaps, Slats, Skew Sensors
20-320-00-01	Gust Suppression Transducers Wire Shielding Functional Check
20-330-00-01	HIRF/Lightning ACE Disconnects to Modal Suppression Transducers
20-340-00-01	HIRF/lightning ACE disconnects to pitch rate sensors
20-400-00-01	HIRF/Lightning Glide Slope and Localizer Antenna Coax
20-430-00-01	HIRF/Lightning Glide Slope Tracking Antenna COAX
20-450-00-01	HIRF/Lightning Radio Altimeter Antenna to Transceiver Coax
20-460-00-01	HIRF/Lightning GPS Antenna to Left and Right MMR
20-642-00-01	Forward Bulkhead Left Main Landing Gear Wheel Well
20-644-00-01	Forward Bulkhead Right Main Landing Gear Wheel Well
20-648-00-01	Forward Cargo Power Drive Unit Wire Bundles
20-650-00-01	Areas Behind the FWD Cargo Compartment Sidewalls
20-658-00-01	Area Behind the Forward Cargo Compartment
20-665-00-01	Aft Cargo Power Drive Unit Wire Bundles
20-700-00-01	Areas Behind the Passenger Compartment Air Grilles
20-704-00-01	Wiring Behind Passenger Compartment Air Grilles
20-716-00-01	Area Around the Video Control Center
20-734-00-01	External Power Receptacle in the Main Equipment Center.
20-742-00-01	Areas Behind the Passenger Compartment Air Grilles
20-750-00-01	Wiring Behind Passenger Compartment Air Grilles
20-754-00-01	Areas Behind the Passenger Compartment Air Grilles
20-758-00-01	Wiring Behind Passenger Compartment Air Grilles



7C CHECK	
TASK CARD NUMBER	TASK TITLE
20-766-00-01	Areas Behind the Passenger Compartment Air Grilles
20-774-00-01	Wiring Behind Passenger Compartment Air Grilles
20-778-00-01	Areas Behind the Passenger Compartment Air Grilles
20-782-00-01	Wiring Behind Passenger Compartment Air Grilles
20-794-00-01	APU and APU Starter Power Feeders
20-800-00-01	Engine and Backup Generator Power Feeders - Left Engine
20-802-00-01	Engine and Backup Generator Power Feeders - Right Engine
21-040-00-01	Chiller Boost Fan
21-048-00-01	E/E Cooling System Override Switch
21-055-00-01	Condenser/Reheater
21-110-00-01	Cabin Positive Pressure Relief Valves
21-110-00-02	Cabin Positive Pressure Relief Valves
21-120-00-01	Cabin Positive Pressure Relief Filters
21-130-00-01	AFT and Bulk Cargo Temperature Selector Switches
21-131-00-01	AFT/Bulk Cargo Overheat Protection Switch & Relay
21-180-00-01	AC Pack Conditioned Air Check Valves
21-180-00-02	AC Pack Conditioned Air Check Valves
21-240-00-01	Ozone Converters
23-010-00-01	Passenger Address System
23-010-00-02	Personnel Address System
23-060-00-01	Static Dischargers
23-080-00-01	Voice Recorder System - Four Channel Operation
23-100-00-01	Voice Recorder System - Under Water Locator Beacon
23-100-00-02	Voice Recorder System - Under Water Locator Beacon
24-200-00-01	External Power Receptacles (Wear Check)
24-210-00-01	External Power Receptacles (Inspection)



7C CHECK	
TASK CARD NUMBER	TASK TITLE
25-055-00-01	Passenger Compartment Articulating Seats
25-062-00-01	Life Raft
25-067-00-01	Off-Wing Slide Compartment Door Lock/Latch System
25-068-00-01	Off-Wing Escape Slide Compartment Door Indication System
25-240-00-01	Passenger Entry Door Emergency Escape Slide
25-240-00-02	Overwing Door Emergency Escape Slide
26-090-00-01	Engine Fire Switches
26-090-00-02	Engine Fire Switches
26-090-00-03	Engine Fire Switches
26-100-00-01	Engine Fire Extinguishing Distribution Lines
26-100-00-02	Engine Fire Extinguishing Distribution Lines
26-100-00-03	Engine Fire Extinguishing Distribution Lines
26-150-00-01	APU Fire Switch
26-200-00-01	Cargo Fire Extinguishing Arm & Discharge Switches
26-210-00-01	Cargo Fire Extinguishing Tubing
27-150-00-01	Primary Flight Computer Disconnect Switch
27-170-00-01	Left Wing Aileron and Flaperon System Hydraulic Fuses
27-170-00-02	Right Wing Aileron and Flaperon System Hydraulic Fuses
27-170-00-03	Rudder System Hydraulic Fuse
27-180-00-01	Rudder Check Valve
27-190-00-01	Wheel Jam Breakout Mechanism
27-200-00-01	Rudder Power Control Units
27-210-00-01	Control Column Breakout Mechanism
27-220-00-01	Elevator Power Control Units



7C CHECK	
TASK CARD NUMBER	TASK TITLE
27-240-00-01	Elevator Power Control Unit Bearings
27-270-00-01	Stabilizer Secondary Brakes
27-280-00-01	Stabilizer Trim Limit Switches
27-320-00-01	Left Wing TE Flap No-Back Brakes
27-320-00-02	Right Wing TE Flap No-Back Brakes
27-330-00-01	Auto Speedbrake Function
27-340-00-01	Left Leading Edge Slat No-Back Brakes
27-340-00-02	Right Leading Edge Slat No-Back Brakes
27-350-00-01	Autoslat Priority Valves - Main Landing Gear
27-360-00-01	Left Leading Edge Slat Skew/Loss Cable
27-360-00-02	Right Leading Edge Slat Skew/Loss Cable
27-400-00-01	Aileron Trim Inhibit Operational Check
27-420-00-01	Rudder Pedal Pogo
27-430-00-01	Rudder Power Control Unit
27-440-00-01	Stabilizer Freeplay
28-010-00-01	Fuel Vent Float Valves
28-015-00-01	Left Fuel Surge Tank FLAME ARRESTORS. Zone 542
28-015-00-02	Right Fuel Surge Tank FLAME ARRESTORS. Zone 642
28-022-00-01	Engine Fuel Spar Valve Battery Circuit
28-022-60-01	GFI Relay Check
28-022-60-02	GFI Relay Check
28-025-00-01	Left Engine Fuel Spar Valve
28-025-00-02	Right Engine Fuel Spar Valve
28-030-00-01	APU Fuel Supply Line And Shroud
28-040-00-01	Defuel Valve Actuator
28-050-00-01	Fuel Jettison System

7C CHECK	
TASK CARD NUMBER	TASK TITLE
29-030-00-01	Hydraulic System Gross Internal Leakage
29-140-00-01	Center Hydraulic System Reservoir Pressurization Module
29-140-00-02	Left Hydraulic System Reservoir Pressurization Module
29-140-00-03	Right Hydraulic System Reservoir Pressurization Module
31-010-00-01	Flight Data Recorder System
31-010-00-02	Flight Data Recorder System
31-010-00-03	Flight Data Recorder System
31-010-00-04	Flight Data Recorder System
31-030-00-01	Flight Data Recorder Underwater Locator Beacon (ULB)
31-030-00-02	Flight Data Recorder Underwater Locator Beacon (ULB)
32-160-00-01	Brake Accumulator
32-170-00-01	Normal and Alternate Brake Systems
32-180-00-01	Left Main Landing Gear Antiskid Module Hydraulic Fuses
32-180-00-02	Right Main Landing Gear Antiskid Module Hydraulic Fuses
32-300-00-01	Left Main Landing Gear Mechanisms
32-300-00-02	Right Main Landing Gear Mechanisms
32-310-00-01	Left Main Landing Gear Door Mechanisms
32-310-00-02	Right Main Landing Gear Door Mechanisms
32-320-00-01	Nose Landing Gear Mechanisms
32-330-00-01	Nose Landing Gear Door Mechanisms
32-802-00-01	Nose Landing Gear and Landing Gear Doors
32-806-01-01	Left Main Landing Gear and Landing Gear Doors
32-810-02-01	Right Main Landing Gear and Landing Gear Doors
35-060-00-01	Passenger Oxygen System Door Latch/Actuator



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

7C CHECK	
TASK CARD NUMBER	TASK TITLE
35-060-00-02	Passenger Oxygen System Door Latch/Actuator
35-060-00-03	Passenger Oxygen System Door Latch/Actuator
35-060-00-04	Passenger Oxygen System Door Latch/Actuator
35-140-00-01	Passenger Gaseous Oxygen System Flow Control Units
35-180-00-01	Door Latch/Actuator and Decompression Horns
35-180-00-02	Door Latch/Actuator and Decompression Horns
35-180-00-03	Crew Rest Decompression Alarm Test
36-010-00-01	Engine Air Supply Manifold
38-020-00-01	Potable Water Isolation Valves and Cables
38-020-00-02	Potable Water Isolation Valves and Cables
38-030-00-01	Waste Drain Ball Valve & Fitting Seals (Not applicable to the 777F)
38-120-00-01	Potable Water Pressure Relief Valve
47-100-00-01	Restore the Ozone Converter (off-aircraft).
47-110-00-01	Clean the Primary Heat Exchanger (off-aircraft).
47-120-00-01	Functionally check the Regenerative Heat Exchanger (off-aircraft).
47-130-00-01	Restore the Filter Differential Pressure Sensor Switch (off-aircraft).
47-140-00-01	Visually Check for Fluid Accumulation Through the Drain Valve or Drain Cap.
47-150-00-01	Inspect (detailed) the Nitrogen Enriched Air (NEA) distribution lines
52-120-01-01	Passenger Entry Door Flight Lock Mechanism
52-125-00-01	No. 3 Over-Wing Door Flight Lock Mechanism
52-130-01-01	Passenger Entry Door Girt Bar Mechanism Interlock
52-135-00-01	No. 3 Over-Wing Door Latch Torque Tube Interlock
52-150-01-01	Passenger Entry Door EPAS Tubing
52-155-00-01	No. 3 Over-Wing Doors EPAS Tubing
52-160-00-01	Passenger Entry Door EPAS Circuitry
52-160-00-02	Passenger Entry Door EPAS Circuitry





7C CHECK	
TASK CARD NUMBER	TASK TITLE
52-160-00-03	Passenger Entry Door EPAS Circuitry
52-160-00-04	Passenger Entry Door EPAS Circuitry
52-170-01-01	Passenger Entry Door Mechanisms
52-175-00-01	No. 3 Over-Wing Door Mechanisms
52-180-00-01	Forward Large Cargo Door Manual Drive Mechanism & Lift PDU Brake
52-185-00-01	AFT Large Cargo Door Manual Drive Mechanism & Lift PDU Brake
52-210-00-01	Forward Large Cargo Door Ditching Interlock Mechanism
52-215-00-01	AFT Large Cargo Door Ditching Interlock Mechanism
52-220-00-01	AFT Small Cargo Door Hinge Power Drive Unit and Manual Drive Mechanism
52-240-00-01	Bulk Cargo Door Latch Mechanism
52-260-00-01	Passenger Entry Door Closed Proximity Sensors
52-265-00-01	No. 3 Over-Wing Doors Closed Proximity Sensors
52-270-00-01	Bulk Cargo Door Latch Microswitch
52-280-00-01	Forward Access Door Latched Proximity Sensor
52-290-00-01	Main Equip Center Door Latched Proximity Sensor
52-310-00-01	Flight Deck Door Pressure Sensor
52-330-00-01	Flight Deck Door Deny Time Delay
52-502-00-01	Forward Large Cargo Door
52-510-00-01	Aft Large Cargo Door
52-527-01-01	Left #1 Entry Door
52-528-01-01	Left #2 Passenger Entry Door
52-529-01-01	Left #3 Overwing Door
52-531-01-01	Left #4 Passenger Entry Door
52-533-01-01	Left #5 Passenger Entry Door



7C CHECK	
TASK CARD NUMBER	TASK TITLE
52-542-02-01	Right #1 Entry Door
52-543-02-01	Right #2 Passenger Entry Door
52-544-02-01	Right #3 Overwing Door
52-546-02-01	Right #4 Passenger Entry Door
52-548-02-01	Right #5 Passenger Entry Door
52-601-00-01	Forward Large Cargo Door
52-602-00-01	Aft Small Cargo Door
52-603-00-01	Bulk Cargo Door
52-604-00-01	Aft Large Cargo Door
52-802-00-01	Forward Large Cargo Door
52-806-00-01	Aft Small Cargo Door
52-810-00-01	Aft Large Cargo Door
52-814-00-01	Bulk Cargo Door
52-816-01-01	Left No. 1 Passenger Entry Door - Section 41
52-820-01-01	Left No. 2 Passenger Entry Door - Section 43
52-824-01-01	Left No. 3 Overwing Door - Section 44
52-827-01-01	Left No. 4 Passenger Entry Door - Section 46
52-831-01-01	Left No. 5 Passenger Entry Door - Section 47
52-834-02-01	Right No. 1 Passenger/Crew Entry Door - Section 41
52-840-02-01	Right No. 2 Passenger Entry Door - Section 43
52-844-02-01	Right No. 3 Overwing Door - Section 44
52-849-02-01	Right No. 4 Passenger Entry Door - Section 46
52-853-02-01	Right No. 5 Passenger Entry Door - Section 47
53-508-00-01	Main Equipment Center
53-509-01-01	Forward Cargo Compartment
53-518-00-01	Main Landing Gear Wheel Well, Left



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

7C CHECK	
TASK CARD NUMBER	TASK TITLE
53-519-00-01	Main Landing Gear Wheel Well, Right
53-520-00-01	Area Above Main Landing Gear Wheel Well
53-522-01-01	Aft Cargo Compartment
53-523-01-01	Aft Cargo Compartment
53-529-01-01	Area Below Aft Cargo Compartment
53-530-01-01	Area Below Aft Cargo Compartment
53-532-00-01	Area Below Aft Cargo Compartment
53-533-00-01	Area Below Aft Cargo Compartment
53-543-00-01	Overwing Wing-To-Body Fairings, Left
53-544-00-01	Overwing Wing-To-Body Fairings, Right
53-545-01-01	Forward Wing-To-Body Fairings - Left
53-545-02-01	Forward Wing-To-Body Fairings - Right
53-546-01-01	Overwing Wing-To-Body Fairings - Left
53-546-02-01	Overwing Wing-To-Body Fairings - Right
53-547-01-01	Aft Wing-To-Body Fairings - Left
53-547-02-01	Aft Wing-To-Body Fairings - Right
53-553-00-01	Passenger Compartment - Left
53-554-00-01	Passenger Compartment - Right
53-564-00-01	Passenger Compartment - Left
53-565-00-01	Passenger Compartment - Right
53-584-00-01	Passenger Compartment
53-585-00-01	Passenger Compartment
53-586-00-01	Passenger Compartment
53-602-00-01	Passenger Compartment



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

7C CHECK	
TASK CARD NUMBER	TASK TITLE
53-603-00-01	Passenger Compartment
53-611-00-01	Area above Wing Center Section
53-614-00-01	Passenger Compartment Left
53-614-00-02	Passenger Compartment Right
53-620-00-01	Forward Wing-To-Body Fairings - Left
53-620-00-02	Forward Wing-To-Body Fairings - Right
53-621-00-01	Aft Wing-To-Body Fairings - Left
53-621-00-02	Aft Wing-To-Body Fairings - Right
53-651-00-01	Forward Access Door
53-652-00-01	Main Equipment Center Access Door
53-656-00-01	Nose Landing Gear Wheel Well
53-666-01-01	MAIN LANDING GEAR WHEEL WELL AREA
53-668-00-01	Left Main Landing Gear Wheel Well
53-668-00-02	Right Main Landing Gear Wheel Well
53-682-00-01	Subzone 310 - Section 48
53-683-00-01	Subzone 310 - Section 48
53-800-00-01	Left Fuselage Lower Half - Section 41 & 43 - STA 92.5 to STA 867
53-800-00-02	Right Fuselage Lower Half - Section 41 & 43 - STA 92.5 to STA 867
53-800-00-03	Lower Left Fuselage & Wing to Body Fairing - STA 858 to STA 1655
53-800-00-04	Lower Right Fuselage & Wing to Body Fairing - STA 858 to STA 1655
53-800-00-05	Lower Left Fuselage - STA 1655 to STA 2196
53-800-00-06	Lower Right Fuselage - STA 1655 to STA 2196
53-804-00-01	Radome
53-806-00-01	Area Forward of Nose Landing Gear Wheel Well
53-810-00-01	Nose Gear Wheel Well (Inspection Accomplished from Within Wheel Well)
53-812-00-01	Area Above and Outboard of the Nose Landing Gear Wheel Well



7C CHECK	
TASK CARD NUMBER	TASK TITLE
53-814-00-01	Main Equipment Center
53-832-00-01	Forward Keel Beam
53-838-00-01	Left Main Landing Gear Wheel Well (Inspection accomplished within WW)
53-842-00-01	Right Main Landing Gear Wheel Well (Inspection accomplished Within WW)
53-844-00-01	Aft Keel Beam
53-852-00-01	Aft Cargo Compartment
53-876-00-01	Area Aft of the Bulk Cargo Compartment
53-880-00-01	Forward Wing-To-Body Fairings - Left
53-882-00-01	Forward Wing-To-Body Fairings - Right
53-898-00-01	Left Upper Fuselage - Flight Compartment - STA 92.5 to STA 246
53-898-00-02	Right Upper Fuselage - Flight Compartment - STA 92.5 to STA 246
53-900-00-01	Flight Compartment
53-904-00-01	Passenger Compartment - Section 41
53-906-00-01	Area Above Passenger Compartment Ceiling - Section 41
53-908-00-01	Passenger Compartment - Section 43
53-910-00-01	Area Above Passenger Compartment Ceiling - Section 43
53-912-00-01	Passenger Compartment - Section 44
53-914-00-01	Area Above Passenger Compartment - Section 44
53-916-00-01	Passenger Compartment - Section 46
53-918-00-01	Area Above Passenger Compartment Ceiling - Section 46
53-920-00-01	Passenger Compartment - Section 47
53-922-00-01	Area Above Passenger Compartment Ceiling - Section 47
53-926-00-01	Fuselage Area Aft of Bulkhead - Inspection Accomplished within Fuselage
54-610-01-01	Aft Torque Box - Left Nacelle Strut



7C CHECK	
TASK CARD NUMBER	TASK TITLE
54-612-02-01	Aft Torque Box - Right Nacelle Strut
54-822-01-01	Forward Strut Fairing - Left Nacelle Strut
54-824-01-01	Forward and Aft Torque Box - Left Nacelle Strut - Cowls Opened
54-826-01-01	Forward and Aft Torque Box - Left Nacelle Strut
54-828-01-01	Aft Strut Fairing - Left Nacelle Strut
54-832-02-01	Forward Strut Fairing - Right Nacelle Strut
54-834-02-01	Forward and Aft Torque Box - Right Nacelle Strut - Fan Cowls Opened
54-836-02-01	Forward and Aft Torque Box - Right Nacelle Strut
54-838-02-01	Aft Strut Fairing - Right Nacelle Strut
55-501-00-01	Horizontal Stabilizer Center Section
55-654-00-01	Vertical Stabilizer - Rear Spar to Trailing Edge
55-654-01-01	Vertical Stabilizer - Rear Spar to Trailing Edge
55-658-01-01	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
55-658-03-01	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
55-662-02-01	Right Horizontal Stabilizer - Rear Spar to Trailing Edge
55-662-04-01	Right Horizontal Stabilizer - Rear Spar to Trailing Edge
55-800-00-01	Stabilizer Torsion Box Compartment - Left and Right Sides
55-804-00-01	Vertical Stabilizer Leading Edge
55-812-00-01	Vertical Stabilizer - Front Spar to Rear Spar - Between Ribs 8 and 9
55-814-00-01	Vertical Stabilizer - Rear Spar to Trailing Edge
55-817-00-01	Vertical Stabilizer - Rear Spar to Trailing Edge
55-820-00-01	Rudder
55-822-00-01	Rudder Tab
55-824-00-01	Vertical Stabilizer Forward Tip
55-830-01-01	Left Horizontal Stabilizer - Leading Edge
55-838-01-01	Left Horizontal Stabilizer - Rear Spar to Trailing Edge

7C CHECK	
TASK CARD NUMBER	TASK TITLE
55-838-03-02	Left Horizontal Stabilizer - Front Spar to Rear Spar
55-841-00-01	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
55-844-01-01	Left Elevator
55-846-01-01	Left Horizontal Stabilizer Tip
55-850-02-01	Right Horizontal Stabilizer - Leading Edge
55-856-04-01	Right Horizontal Stabilizer - Front Spar to Rear Spar
55-858-02-01	Right Horizontal Stabilizer - Rear Spar to Trailing Edge
55-861-00-01	Right Horizontal Stabilizer - Rear Spar to Trailing Edge
55-864-02-01	Right Elevator
55-866-02-01	Right Horizontal Stabilizer Tip
56-010-00-01	Flight Deck #2 Windows MICROSWITCH
56-020-00-01	Flight Deck Number 2 Windows Guide Bearings
56-030-00-01	Flight Deck Number 2 Windows Open/Close Function
57-603-00-01	Underwing Wing-To-Body Fairing
57-614-01-01	Wing Trailing Edge - Aft of Rear Spar
57-627-02-01	Wing Trailing Edge - Aft of Rear Spar
57-630-00-01	Area Above Wing Center Section
57-804-01-01	Leading Edge to Front Spar - Inboard of Nacelle Strut - Left Wing
57-806-01-01	Leading Edge to Front Spar - Inboard of Nacelle Strut - Left Wing
57-808-01-01	Slat No. 7
57-810-01-01	Krueger Seal Flap/Nacelle Gap Cover Area - Left Wing
57-812-01-01	Krueger Seal Flap/Nacelle Gap Cover Area - Left Wing
57-814-01-01	Leading Edge to Front Spar - Outboard of Nacelle Strut - Left Wing
57-817-01-01	Leading Edge to Front Spar - Outboard of Nacelle Strut - Left Wing



7C CHECK	
TASK CARD NUMBER	TASK TITLE
57-818-01-01	Left Wing Outboard Leading Edge Slats Number 1 through 6
57-836-01-01	Left Wing Dry Bay
57-848-01-01	Left Wing Tip
57-852-01-01	Left Wing Fixed T.E. - Aft of Rear Spar, Inbd of Outbd Support Fairing
57-854-01-01	Rear Spar to Landing Gear Support Beam - Left Wing
57-856-01-01	Landing Gear Support Beam and Rear Spar to Trailing Edge - Left Wing
57-858-01-01	Inboard Spoilers Numbers 6 and 7
57-860-01-01	Inboard Trailing Edge Flaps - Left Wing
57-862-01-01	Left Wing Flaperon
57-864-01-01	Rear Spar to Trailing Edge - Outboard of Flaperon - Left Wing
57-866-01-01	Rear Spar to Trailing Edge - Outboard of Flaperon - Left Wing
57-868-01-01	Outboard Spoilers Numbers 1 through 5
57-870-01-01	Left Wing Outboard Flap
57-872-01-01	Left Wing Aileron
57-874-01-01	Flap Support Fairing No. 4
57-876-01-01	Flap Support Fairing No. 4
57-878-01-01	Inboard Flap Center Track Fairing - Left Wing
57-880-01-01	Flap Support Fairing No. 3 and Inboard Flaperon Support Fairing
57-882-01-01	Flap Support Fairing No. 3 and Inboard Flaperon Support Fairing
57-884-01-01	Outboard Flaperon Support Fairing - Left Wing
57-886-01-01	Flap Support Fairing No. 2
57-888-01-01	Flap Support Fairing No. 2
57-890-01-01	Flap Support Fairing No. 1
57-892-01-01	Flap Support Fairing No. 1
57-894-01-01	Outboard Auxiliary Support Fairing - Left Wing
57-896-02-01	Leading Edge to Front Spar - Inboard of Nacelle Strut - Right Wing





7C CHECK	
TASK CARD NUMBER	TASK TITLE
57-898-02-01	Leading Edge to Front Spar - Inboard of Nacelle Strut - Right Wing
57-900-02-01	Slat No. 8
57-902-02-01	Krueger Seal Flap/Nacelle Gap Cover Area - Right Wing
57-904-02-01	Krueger Seal Flap/Nacelle Gap Cover Area - Right Wing
57-906-02-01	Leading Edge to Front Spar - Outboard of Nacelle Strut - Right Wing
57-909-02-01	Leading Edge to Front Spar - Outboard of Nacelle Strut - Right Wing
57-910-02-01	Outboard Leading Edge Slats Number 9 through 14
57-928-02-01	Right Wing Dry Bay
57-940-02-01	Right Wing Tip
57-944-02-01	Right Wing Fixed T.E. - Aft of Rear Spar, Inbd of Outbd Support Fairing
57-946-02-01	Rear Spar to Landing Gear Support Beam - Right Wing
57-948-02-01	Landing Gear Support Beam and Rear Spar to Trailing Edge - Right Wing
57-950-02-01	Inboard Spoilers Numbers 8 and 9
57-952-02-01	Inboard Trailing Edge Flaps - Right Wing
57-954-02-01	Right Wing Flaperon
57-956-02-01	Rear Spar to Trailing Edge - Outboard of Flaperon - Right Wing
57-958-02-01	Rear Spar to Trailing Edge - Outboard of Flaperon - Right Wing
57-960-02-01	Outboard Spoilers Numbers 10 through 14
57-962-02-01	Right Wing Outboard Flap
57-964-02-01	Right Wing Aileron
57-966-02-01	Flap Support Fairing No. 5
57-968-02-01	Flap Support Fairing No. 5
57-970-02-01	Inboard Flap Center Track Fairing - Right Wing
57-972-02-01	Flap Support Fairing No. 6 and Inbd Flaperon Support Fairing



7C CHECK	
TASK CARD NUMBER	TASK TITLE
57-974-02-01	Flap Support Fairing No. 6 and Inbd Flaperon Support Fairing
57-976-02-01	Outboard Flaperon Support Fairing - Right Wing
57-978-02-01	Flap Support Fairing No. 7
57-980-02-01	Flap Support Fairing No. 7
57-982-02-01	Flap Support Fairing No. 8
57-984-02-01	Flap Support Fairing No. 8
57-986-02-01	Outboard Auxiliary Support Fairing - Right Wing

**I. 8C CHECK**

8C CHECK	
TASK CARD NUMBER	TASK TITLE
12-008-00-01	Left Wing Inboard Leading Edge Torque Tube Supports and Couplings
12-008-00-02	Right Wing Inboard Leading Edge Torque Tube Supports and Couplings
12-008-00-11	Left Wing Outboard Leading Edge Torque Tube Supports and Couplings
12-008-00-12	Right Wing Outboard Leading Edge Torque Tube Supports and Couplings
12-008-01-01	Forward Cargo Compartment Torque Tube Supports and Couplings
12-018-00-01	Left Wing Krueger Flap Drive Arm Bearing
12-018-00-02	Right Wing Krueger Flap Drive Arm Bearing
12-030-00-01	Left Wing Trailing Edge Torque Tube and Torque Tube Supports
12-030-00-02	Right Wing Trailing Edge Torque Tube and Torque Tube Supports
12-100-00-01	Forward Large Cargo Door, Door Mechanisms
12-102-00-01	Aft Large Cargo Door, Door Mechanisms
12-104-00-01	Aft Small Cargo Door Hinge Arms and Adjustment Rods
12-106-00-01	Passenger Entry Door Mechanisms
12-110-00-01	Forward Access Door Latch Pin
12-112-00-01	Main Equipment Center Access Door Latch Pin



8C CHECK	
TASK CARD NUMBER	TASK TITLE
20-010-00-01	Primary Flight Control and Brake Control Cables Turns
20-010-00-02	Primary Flight Control and Brake Control Cables
20-010-00-03	Primary Flight Control and Brake Control Cable Turns
20-010-00-04	Primary Flight Control Cable Turns
20-010-00-05	Primary Flight Control Cable Turns
20-012-00-01	Nose Gear Steering Control Cable Turns
20-012-00-02	Nose Gear Steering Control Cable Turns
20-015-00-01	Primary Flight Control and Brake Control Cables - straight runs
20-015-00-02	Primary Flight Control and Brake Control Cables - straight runs
20-015-00-03	Primary Flight Control and Brake Control Cables - Straight Runs
20-015-00-04	Primary Flight Control and Brake Control Cables - Straight Runs
20-015-00-05	Primary Flight Control and Brake Control Cable - Straight Runs
20-015-00-06	Primary Flight Control and Brake Control Cable - Straight Runs
20-015-00-07	Primary Flight Control Cables - Straight Runs
20-015-00-08	Primary Flight Control Cables - Straight Runs
20-015-00-09	Primary Flight Control Cables in Fuselage - Straight Runs
20-018-00-01	Nose Gear Steering Control Cables - straight runs
20-018-00-02	Nose Gear Steering Control Cables - straight runs
20-110-00-01	Primary Flight Control Cables - Protected Unpressurized Areas
20-110-00-02	Primary Flight Control Cables - Protected Unpressurized Areas
20-110-00-03	Primary Flight Control Cables - Protected Unpressurized Areas
20-110-00-04	Primary Flight Control Cables - Protected Unpressurized Areas
20-110-00-05	Primary Flight Control Cables - PROTECTED/UNPROTECTED UNPRESSURIZED AREAS
20-200-00-01	HIRF/L AFDC Task for ILS, RA, AIMS, Backdrive and Cross Channel



8C CHECK	
TASK CARD NUMBER	TASK TITLE
20-251-10-01	FOIL/MESH PANELS; ENGINE COWLS, STRUT, LEADING EDGE
20-251-20-01	FOIL/MESH PANELS; ENGINE COWLS, STRUT, LEADING EDGE
20-260-00-01	Ram Air Turbine (RAT) Wire Shielding Functional Check
20-270-01-01	PFCS Wire Shielding Functional Check - Left Wing
20-270-02-01	PFCS Wire Shielding Functional Check - Right Wing
20-280-00-01	PFCS Wire Shielding Functional Check - Empennage
20-290-00-01	HIRF/Lightning Ace Wire Bundle Shielding
20-300-00-01	HIRF/Arlinc 629 Buses for Flight Controls, Couplers to EE Racks
20-310-01-01	Functional Check Wire Bundle Inspection Left Flaps, Slats, Skew Sensors
20-310-02-01	Functional Check Wire Bundle Right Flaps, Slats, Skew Sensors
20-320-00-01	Gust Suppression Transducers Wire Shielding Functional Check
20-330-00-01	HIRF/Lightning ACE Disconnects to Modal Suppression Transducers
20-340-00-01	HIRF/lightning ACE disconnects to pitch rate sensors
20-400-00-01	HIRF/Lightning Glide Slope and Localizer Antenna Coax
20-410-00-01	Radome Diverter Strips Detailed Visual Inspection
20-420-00-01	HIRF/Lightning Localizer Tracking, VOR/Localizer Antenna COAX
20-430-00-01	HIRF/Lightning Glide Slope Tracking Antenna COAX
20-440-00-01	HIRF/Lightning VOR/Localizer Capture Antenna COAX
20-445-00-01	Fin Tip Diverter Strip
20-450-00-01	HIRF/Lightning Radio Altimeter Antenna to Transceiver Coax
20-460-00-01	HIRF/Lightning GPS Antenna to Left and Right MMR
20-560-01-01	HIRF/ L Functional Test for FQIS, Left Side
20-560-02-01	HIRF/ L Functional Test for FQIS, Right Side
20-640-10-01	Wing Center Section Fuel Tank (SFAR 88)
20-641-00-01	ECS Bay Installed EWIS
20-642-00-01	Forward Bulkhead Left Main Landing Gear Wheel Well



8C CHECK	
TASK CARD NUMBER	TASK TITLE
20-644-00-01	Forward Bulkhead Right Main Landing Gear Wheel Well
20-648-00-01	Forward Cargo Power Drive Unit Wire Bundles
20-650-00-01	Areas Behind the FWD Cargo Compartment Sidewalls
20-651-00-01	Areas Below the AFT Cargo Compartment
20-658-00-01	Area Behind the Forward Cargo Compartment
20-664-00-01	Areas Behind the Aft Cargo Compartment Sidewalls
20-665-00-01	Aft Cargo Power Drive Unit Wire Bundles
20-668-00-01	APU Battery Installation and Power Feeders
20-670-00-01	Area Behind the Bulk Cargo Compartment Sidewalls
20-672-00-01	Area Behind the Bulk Cargo Compartment
20-700-00-01	Areas Behind the Passenger Compartment Air Grilles
20-704-00-01	Wiring Behind Passenger Compartment Air Grilles
20-716-00-01	Area Around the Video Control Center
20-734-00-01	External Power Receptacle in the Main Equipment Center.
20-742-00-01	Areas Behind the Passenger Compartment Air Grilles
20-750-00-01	Wiring Behind Passenger Compartment Air Grilles
20-754-00-01	Areas Behind the Passenger Compartment Air Grilles
20-758-00-01	Wiring Behind Passenger Compartment Air Grilles
20-766-00-01	Areas Behind the Passenger Compartment Air Grilles
20-774-00-01	Wiring Behind Passenger Compartment Air Grilles
20-778-00-01	Areas Behind the Passenger Compartment Air Grilles
20-782-00-01	Wiring Behind Passenger Compartment Air Grilles
20-794-00-01	APU and APU Starter Power Feeders
20-796-00-01	Main Deck Entry Doors



8C CHECK	
TASK CARD NUMBER	TASK TITLE
20-800-00-01	Engine and Backup Generator Power Feeders - Left Engine
20-802-00-01	Engine and Backup Generator Power Feeders - Right Engine
20-840-01-01	IDG and Backup Power Feeders - Left Wing
20-840-02-01	IDG and Backup Power Feeders - Right Wing
20-842-00-01	EWIS within Nacelle Gap - Left
20-842-00-02	EWIS within Nacelle Gap - Right
20-844-00-01	IDG and Backup Power Feeders - Left Wing
20-844-00-02	IDG and Backup Power Feeders - Right Wing
20-856-11-01	Center Fuel Tank (Rib 1 to Rib 8) - Left Wing (SFAR 88)
20-856-12-01	Center Fuel Tank (Rib 1 to Rib 8) - Right Wing (SFAR 88)
20-858-11-01	Main Tank (Rib 8 to Rib 17) - Left Wing (SFAR 88)
20-858-12-01	Main Tank (Rib 8 to Rib 17) - Right Wing (SFAR 88)
20-860-11-01	Main Tank (Rib 17 to Rib 32) - Left Wing (SFAR 88)
20-860-12-01	Main Tank (Rib 17 to Rib 32) - Right Wing (SFAR 88)
20-864-11-01	Surge Tank - Rib 38 to Rib 41 - Left Wing (SFAR 88)
20-864-12-01	Surge Tank - Rib 38 to Rib 41 - Right Wing (SFAR 88)
20-866-00-01	Flap Support No. 3
20-868-00-01	Flap Support No. 6
21-040-00-01	Chiller Boost Fan
21-048-00-01	E/E Cooling System Override Switch
21-054-00-01	IFE Cooling System Air Supply Multi-holed Orifices
21-055-00-01	Condenser/Reheater
21-110-00-01	Cabin Positive Pressure Relief Valves
21-110-00-02	Cabin Positive Pressure Relief Valves
21-120-00-01	Cabin Positive Pressure Relief Filters
21-130-00-01	AFT and Bulk Cargo Temperature Selector Switches



8C CHECK	
TASK CARD NUMBER	TASK TITLE
21-131-00-01	AFT/Bulk Cargo Overheat Protection Switch & Relay
21-180-00-01	AC Pack Conditioned Air Check Valves
21-180-00-02	AC Pack Conditioned Air Check Valves
21-240-00-01	Ozone Converters
21-250-00-01	E/E Equipment Cooling Override Duct
23-010-00-01	Passenger Address System
23-010-00-02	Personnel Address System
23-060-00-01	Static Dischargers
23-080-00-01	Voice Recorder System - Four Channel Operation
23-100-00-01	Voice Recorder System - Under Water Locator Beacon
23-100-00-02	Voice Recorder System - Under Water Locator Beacon
24-200-00-01	External Power Receptacles (Wear Check)
24-210-00-01	External Power Receptacles (Inspection)
25-055-00-01	Passenger Compartment Articulating Seats
25-062-00-01	Life Raft
25-067-00-01	Off-Wing Slide Compartment Door Lock/Latch System
25-068-00-01	Off-Wing Escape Slide Compartment Door Indication System
25-240-00-01	Passenger Entry Door Emergency Escape Slide
25-240-00-02	Overwing Door Emergency Escape Slide
25-260-00-01	Overhead Crew Rest Secondary Egress System
25-260-00-02	Overhead Attendant Rests Secondary Egress System
25-270-00-01	Overhead Crew Rest Secondary Egress Grab Bar
25-270-00-02	Overhead Attendant Rest Secondary Egress Grab Bar
26-064-00-01	Lower Lobe Attendant Rest (LLAR) Smoke Detection System



8C CHECK	
TASK CARD NUMBER	TASK TITLE
26-090-00-01	Engine Fire Switches
26-090-00-02	Engine Fire Switches
26-090-00-03	Engine Fire Switches
26-100-00-01	Engine Fire Extinguishing Distribution Lines
26-100-00-02	Engine Fire Extinguishing Distribution Lines
26-100-00-03	Engine Fire Extinguishing Distribution Lines
26-150-00-01	APU Fire Switch
26-200-00-01	Cargo Fire Extinguishing Arm & Discharge Switches
26-210-00-01	Cargo Fire Extinguishing Tubing
27-150-00-01	Primary Flight Computer Disconnect Switch
27-170-00-01	Left Wing Aileron and Flaperon System Hydraulic Fuses
27-170-00-02	Right Wing Aileron and Flaperon System Hydraulic Fuses
27-170-00-03	Rudder System Hydraulic Fuse
27-180-00-01	Rudder Check Valve
27-190-00-01	Wheel Jam Breakout Mechanism
27-200-00-01	Rudder Power Control Units
27-210-00-01	Control Column Breakout Mechanism
27-220-00-01	Elevator Power Control Units
27-240-00-01	Elevator Power Control Unit Bearings
27-270-00-01	Stabilizer Secondary Brakes
27-280-00-01	Stabilizer Trim Limit Switches
27-320-00-01	Left Wing TE Flap No-Back Brakes
27-320-00-02	Right Wing TE Flap No-Back Brakes
27-330-00-01	Auto Speedbrake Function
27-340-00-01	Left Leading Edge Slat No-Back Brakes
27-340-00-02	Right Leading Edge Slat No-Back Brakes





8C CHECK	
TASK CARD NUMBER	TASK TITLE
27-350-00-01	Autoslat Priority Valves - Main Landing Gear
27-360-00-01	Left Leading Edge Slat Skew/Loss Cable
27-360-00-02	Right Leading Edge Slat Skew/Loss Cable
27-400-00-01	Aileron Trim Inhibit Operational Check
27-420-00-01	Rudder Pedal Pogo
27-430-00-01	Rudder Power Control Unit
27-440-00-01	Stabilizer Freeplay
27-460-00-01	TRAILING EDGE FLAP SUPPORT LINKAGE PIN FREEPLAY
28-010-00-01	Fuel Vent Float Valves
28-011-00-01	Left Wing
28-011-00-02	Right Wing
28-013-20-01	Left Wing Pressure Relief Valve (SFAR 88)
28-013-20-02	Right Wing Pressure Relief Valve (SFAR 88)
28-013-30-01	Left Wing Overfill Float Switch. (SFAR 88)
28-013-30-02	Right wing Overfill Float Switch. (SFAR 88)
28-013-40-01	Left Wing Vent Scoop Lower Duct. (SFAR 88)
28-013-40-02	Right Wing Vent Scoop Lower Duct. (SFAR 88)
28-015-00-01	Left Fuel Surge Tank FLAME ARRESTORS. Zone 542
28-015-00-02	Right Fuel Surge Tank FLAME ARRESTORS. Zone 642
28-015-20-01	Left Wing Scavenge Jet Pumps. (SFAR 88)
28-015-20-02	Right Wing Scavenge Jet Pumps. (SFAR 88)
28-015-20-03	Wing Center Section Scavenge Jet Pumps. (SFAR 88)
28-021-10-01	Left Wing in-Tank tubing, equipment static ground straps and clamps. (SFAR 88)
28-021-10-02	Right Wing in-Tank tubing, equipment static ground straps and clamps. (SFAR 88)



8C CHECK	
TASK CARD NUMBER	TASK TITLE
28-021-10-03	Center Main Tank tubing, equipment static ground straps and clamps. (SFAR 88)
28-021-10-04	Auxiliary Tank Tubing and Equipment Static Ground Straps and Clamps
28-021-20-01	Left Wing Fueling Shutoff Valve
28-021-20-02	Right Wing Fueling Shutoff Valve
28-021-30-01	Left Wing Fueling Receptacle. (SFAR 88)
28-021-30-02	Right Wing Fueling Receptacle. (SFAR 88)
28-022-00-01	Engine Fuel Spar Valve Battery Circuit
28-022-30-01	Left wing Pump Housing. (SFAR 88)
28-022-30-02	Right wing Pump Housing. (SFAR 88)
28-022-30-03	Pump Housing (AUX TANK)
28-022-40-01	Left Wing Boost and Jettison Pumps. (SFAR 88)
28-022-40-02	Right Wing Boost and Jettison Pumps. (SFAR 88)
28-022-40-03	Wing Center Section Override/Jettison Pumps. (SFAR 88)
28-022-50-01	Left Wing Motor Operated Valve. (SFAR 88)
28-022-50-02	Right Wing Motor Operated Valve. (SFAR 88)
28-022-50-03	Motor Operated Valve (AUX TANK)
28-022-60-01	GFI Relay Check
28-022-60-02	GFI Relay Check
28-023-00-01	Fuel Spar Valve Battery
28-025-00-01	Left Engine Fuel Spar Valve
28-025-00-02	Right Engine Fuel Spar Valve
28-025-20-01	APU DC Fuel Pump (SFAR 88)
28-025-30-01	APU Fuel Shutoff Valve (SFAR 88)
28-025-40-01	APU Isolation Valve (SFAR 88)
28-026-10-01	Defuel Valve (SFAR 88)
28-030-00-01	APU Fuel Supply Line And Shroud



8C CHECK	
TASK CARD NUMBER	TASK TITLE
28-031-20-01	Left Wing Jettison Nozzle Valve. (SFAR 88)
28-031-20-02	Right Wing Jettison Nozzle Valve. (SFAR 88)
28-031-30-01	Left Wing Jettison Isolation Valve. (SFAR 88)
28-031-30-02	Right Wing Jettison Isolation Valve. (SFAR 88)
28-031-40-01	Left Wing Jettison Nozzle Manifold. (SFAR 88)
28-031-40-02	Right Wing Jettison Nozzle Manifold. (SFAR 88)
28-040-00-01	Defuel Valve Actuator
28-041-10-01	Left Wing Main Tank FQIS Wiring. (SFAR 88)
28-041-10-02	Right Wing Main Tank FQIS Wiring. (SFAR 88)
28-041-10-03	Wing Center Tank FQIS Wiring. (SFAR 88)
28-041-10-04	FQIS Wiring. (AUX TANK)
28-041-20-01	Left Wing Main Tank FQIS Equipment. (SFAR 88)
28-041-20-02	Right Wing Main Tank FQIS Equipment. (SFAR 88)
28-041-20-03	Wing Center Tank FQIS Equipment. (SFAR 88)
28-041-20-04	FQIS Equipment (AUX TANK)
28-041-30-01	Fuel Quantity Indicating System (FQIS) - Out Of Tank Wiring Lightning Shield to Ground Termination
28-050-00-01	Fuel Jettison System
29-030-00-01	Hydraulic System Gross Internal Leakage
29-140-00-01	Center Hydraulic System Reservoir Pressurization Module
29-140-00-02	Left Hydraulic System Reservoir Pressurization Module
29-140-00-03	Right Hydraulic System Reservoir Pressurization Module
31-010-00-01	Flight Data Recorder System
31-010-00-02	Flight Data Recorder System
31-010-00-03	Flight Data Recorder System



8C CHECK	
TASK CARD NUMBER	TASK TITLE
31-010-00-04	Flight Data Recorder System
31-030-00-01	Flight Data Recorder Underwater Locator Beacon (ULB)
31-030-00-02	Flight Data Recorder Underwater Locator Beacon (ULB)
32-160-00-01	Brake Accumulator
32-170-00-01	Normal and Alternate Brake Systems
32-180-00-01	Left Main Landing Gear Antiskid Module Hydraulic Fuses
32-180-00-02	Right Main Landing Gear Antiskid Module Hydraulic Fuses
32-300-00-01	Left Main Landing Gear Mechanisms
32-300-00-02	Right Main Landing Gear Mechanisms
32-310-00-01	Left Main Landing Gear Door Mechanisms
32-310-00-02	Right Main Landing Gear Door Mechanisms
32-320-00-01	Nose Landing Gear Mechanisms
32-330-00-01	Nose Landing Gear Door Mechanisms
32-802-00-01	Nose Landing Gear and Landing Gear Doors
32-806-01-01	Left Main Landing Gear and Landing Gear Doors
32-810-02-01	Right Main Landing Gear and Landing Gear Doors
35-060-00-01	Passenger Oxygen System Door Latch/Actuator
35-060-00-02	Passenger Oxygen System Door Latch/Actuator
35-060-00-03	Passenger Oxygen System Door Latch/Actuator
35-060-00-04	Passenger Oxygen System Door Latch/Actuator
35-070-00-01	Passenger Chemical Oxygen Generators
35-070-00-02	Passenger Chemical Oxygen Generators
35-090-00-01	Passenger Oxygen Masks
35-090-00-02	Passenger Oxygen Masks
35-090-00-03	Passenger Oxygen Masks
35-092-00-01	Lower Lobe Attendant Rest Supplemental Oxygen System

8C CHECK	
TASK CARD NUMBER	TASK TITLE
35-096-00-01	Lower Lobe Attendant Rest Supplemental Oxygen System
35-120-00-01	Passenger Gaseous Oxygen System Pressure Regulator
35-120-00-02	Supernumerary Gaseous Oxygen System Pressure Regulator
35-140-00-01	Passenger Gaseous Oxygen System Flow Control Units
35-170-00-01	Oxygen Mask Assemblies
35-170-00-02	Oxygen Mask Assemblies
35-180-00-01	Door Latch/Actuator and Decompression Horns
35-180-00-02	Door Latch/Actuator and Decompression Horns
35-180-00-03	Crew Rest Decompression Alarm Test
35-190-00-01	OFCR/OFAR Oxygen Generators
36-010-00-01	Engine Air Supply Manifold
38-020-00-01	Potable Water Isolation Valves and Cables
38-020-00-02	Potable Water Isolation Valves and Cables
38-030-00-01	Waste Drain Ball Valve & Fitting Seals (Not applicable to the 777F)
38-120-00-01	Potable Water Pressure Relief Valve
47-100-00-01	Restore the Ozone Converter (off-aircraft).
47-110-00-01	Clean the Primary Heat Exchanger (off-aircraft).
47-120-00-01	Functionally check the Regenerative Heat Exchanger (off-aircraft).
47-130-00-01	Restore the Filter Differential Pressure Sensor Switch (off-aircraft).
47-140-00-01	Visually Check for Fluid Accumulation Through the Drain Valve or Drain Cap.
47-150-00-01	Inspect (detailed) the Nitrogen Enriched Air (NEA) distribution lines
47-160-00-01	Operationally check the center tank vent cross flow check valve.
52-120-01-01	Passenger Entry Door Flight Lock Mechanism
52-125-00-01	No. 3 Over-Wing Door Flight Lock Mechanism



8C CHECK	
TASK CARD NUMBER	TASK TITLE
52-130-01-01	Passenger Entry Door Girt Bar Mechanism Interlock
52-135-00-01	No. 3 Over-Wing Door Latch Torque Tube Interlock
52-140-01-01	Passenger Entry Door Mode Select Mechanism and Cables
52-145-00-01	No. 3 Over-Wing Doors Mode Select Mechanism and Pull Cable
52-150-01-01	Passenger Entry Door EPAS Tubing
52-155-00-01	No. 3 Over-Wing Doors EPAS Tubing
52-160-00-01	Passenger Entry Door EPAS Circuitry
52-160-00-02	Passenger Entry Door EPAS Circuitry
52-160-00-03	Passenger Entry Door EPAS Circuitry
52-160-00-04	Passenger Entry Door EPAS Circuitry
52-170-01-01	Passenger Entry Door Mechanisms
52-175-00-01	No. 3 Over-Wing Door Mechanisms
52-180-00-01	Forward Large Cargo Door Manual Drive Mechanism & Lift PDU Brake
52-185-00-01	AFT Large Cargo Door Manual Drive Mechanism & Lift PDU Brake
52-190-00-01	Forward Large Cargo Door Rotary Actuator No-Back
52-195-00-01	AFT Large Cargo Door Rotary Actuator No-Back
52-200-00-01	Forward Large Cargo Door Lock Handle Load Limiter
52-205-00-01	AFT Large Cargo Door Lock Handle Load Limiter
52-210-00-01	Forward Large Cargo Door Ditching Interlock Mechanism
52-215-00-01	AFT Large Cargo Door Ditching Interlock Mechanism
52-220-00-01	AFT Small Cargo Door Hinge Power Drive Unit and Manual Drive Mechanism
52-230-00-01	AFT Small Cargo Door Rotary Actuator
52-240-00-01	Bulk Cargo Door Latch Mechanism
52-250-00-01	Equipment Compartment Exterior Door Latch Mechanisms
52-260-00-01	Passenger Entry Door Closed Proximity Sensors
52-265-00-01	No. 3 Over-Wing Doors Closed Proximity Sensors



8C CHECK	
TASK CARD NUMBER	TASK TITLE
52-270-00-01	Bulk Cargo Door Latch Microswitch
52-280-00-01	Forward Access Door Latched Proximity Sensor
52-290-00-01	Main Equip Center Door Latched Proximity Sensor
52-310-00-01	Flight Deck Door Pressure Sensor
52-330-00-01	Flight Deck Door Deny Time Delay
52-502-00-01	Forward Large Cargo Door
52-510-00-01	Aft Large Cargo Door
52-527-01-01	Left #1 Entry Door
52-528-01-01	Left #2 Passenger Entry Door
52-529-01-01	Left #3 Overwing Door
52-531-01-01	Left #4 Passenger Entry Door
52-533-01-01	Left #5 Passenger Entry Door
52-542-02-01	Right #1 Entry Door
52-543-02-01	Right #2 Passenger Entry Door
52-544-02-01	Right #3 Overwing Door
52-546-02-01	Right #4 Passenger Entry Door
52-548-02-01	Right #5 Passenger Entry Door
52-802-00-01	Forward Large Cargo Door
52-804-00-01	Forward Large Cargo Door
52-806-00-01	Aft Small Cargo Door
52-808-00-01	Aft Small Cargo Door
52-810-00-01	Aft Large Cargo Door
52-812-00-01	Aft Large Cargo Door
52-814-00-01	Bulk Cargo Door



8C CHECK	
TASK CARD NUMBER	TASK TITLE
52-816-01-01	Left No. 1 Passenger Entry Door - Section 41
52-818-01-01	Left No. 1 Passenger/Crew Entry Door - Section 41
52-820-01-01	Left No. 2 Passenger Entry Door - Section 43
52-822-01-01	Left No. 2 Passenger Entry Door - Section 43
52-824-01-01	Left No. 3 Overwing Door - Section 44
52-825-01-01	Left No. 3 Overwing Door - Section 44
52-827-01-01	Left No. 4 Passenger Entry Door - Section 46
52-829-01-01	Left No. 4 Passenger Entry Door - Section 46
52-831-01-01	Left No. 5 Passenger Entry Door - Section 47
52-833-01-01	Left No. 5 Passenger Entry Door - Section 47
52-834-02-01	Right No. 1 Passenger/Crew Entry Door - Section 41
52-836-02-01	Right No. 1 Passenger/Crew Entry Door - Section 41
52-840-02-01	Right No. 2 Passenger Entry Door - Section 43
52-842-02-01	Right No. 2 Passenger Entry Door - Section 43
52-844-02-01	Right No. 3 Overwing Door - Section 44
52-846-02-01	Right No. 3 Overwing Door - Section 44
52-849-02-01	Right No. 4 Passenger Entry Door - Section 46
52-851-02-01	Right No. 4 Passenger Entry Door - Section 46
52-853-02-01	Right No. 5 Passenger Entry Door - Section 47
52-855-02-01	Right No. 5 Passenger Entry Door - Section 47
53-508-00-01	Main Equipment Center
53-509-01-01	Forward Cargo Compartment
53-518-00-01	Main Landing Gear Wheel Well, Left
53-519-00-01	Main Landing Gear Wheel Well, Right
53-520-00-01	Area Above Main Landing Gear Wheel Well
53-522-01-01	Aft Cargo Compartment





8C CHECK	
TASK CARD NUMBER	TASK TITLE
53-523-01-01	Aft Cargo Compartment
53-529-01-01	Area Below Aft Cargo Compartment
53-530-01-01	Area Below Aft Cargo Compartment
53-532-00-01	Area Below Aft Cargo Compartment
53-532-01-01	Area Below Aft Cargo Compartment
53-533-00-01	Area Below Aft Cargo Compartment
53-533-01-01	Area Below Aft Cargo Compartment
53-543-00-01	Overwing Wing-To-Body Fairings, Left
53-544-00-01	Overwing Wing-To-Body Fairings, Right
53-545-01-01	Forward Wing-To-Body Fairings - Left
53-545-02-01	Forward Wing-To-Body Fairings - Right
53-546-01-01	Overwing Wing-To-Body Fairings - Left
53-546-02-01	Overwing Wing-To-Body Fairings - Right
53-547-01-01	Aft Wing-To-Body Fairings - Left
53-547-02-01	Aft Wing-To-Body Fairings - Right
53-553-00-01	Passenger Compartment - Left
53-554-00-01	Passenger Compartment - Right
53-564-00-01	Passenger Compartment - Left
53-565-00-01	Passenger Compartment - Right
53-574-00-01	Area Above Main Deck Compartment Ceiling
53-579-00-01	Area Above Main Deck Compartment Ceiling
53-584-00-01	Passenger Compartment
53-585-00-01	Passenger Compartment
53-586-00-01	Passenger Compartment



8C CHECK	
TASK CARD NUMBER	TASK TITLE
53-595-00-01	Area above Main Deck Compartment Ceiling
53-596-00-01	Area above Main Deck Compartment Ceiling
53-602-00-01	Passenger Compartment
53-603-00-01	Passenger Compartment
53-611-00-01	Area above Wing Center Section
53-614-00-01	Passenger Compartment Left
53-614-00-02	Passenger Compartment Right
53-620-00-01	Forward Wing-To-Body Fairings - Left
53-620-00-02	Forward Wing-To-Body Fairings - Right
53-621-00-01	Aft Wing-To-Body Fairings - Left
53-621-00-02	Aft Wing-To-Body Fairings - Right
53-656-00-01	Nose Landing Gear Wheel Well
53-666-00-01	LEFT MAIN LANDING GEAR WHEEL WELL AREA
53-666-00-03	RIGHT MAIN LANDING GEAR WHEEL WELL AREA
53-666-01-01	MAIN LANDING GEAR WHEEL WELL AREA
53-668-00-01	Left Main Landing Gear Wheel Well
53-668-00-02	Right Main Landing Gear Wheel Well
53-680-00-01	Horizontal Stabilizer Center Section
53-682-00-01	Subzone 310 - Section 48
53-683-00-01	Subzone 310 - Section 48
53-800-00-01	Left Fuselage Lower Half - Section 41 & 43 - STA 92.5 to STA 867
53-800-00-02	Right Fuselage Lower Half - Section 41 & 43 - STA 92.5 to STA 867
53-800-00-03	Lower Left Fuselage & Wing to Body Fairing - STA 858 to STA 1655
53-800-00-04	Lower Right Fuselage & Wing to Body Fairing - STA 858 to STA 1655
53-800-00-05	Lower Left Fuselage - STA 1655 to STA 2196
53-800-00-06	Lower Right Fuselage - STA 1655 to STA 2196



8C CHECK	
TASK CARD NUMBER	TASK TITLE
53-804-00-01	Radome
53-806-00-01	Area Forward of Nose Landing Gear Wheel Well
53-810-00-01	Nose Gear Wheel Well (Inspection Accomplished from Within Wheel Well)
53-812-00-01	Area Above and Outboard of the Nose Landing Gear Wheel Well
53-814-00-01	Main Equipment Center
53-818-00-01	Forward Cargo Compartment
53-822-00-01	Area Below Forward Cargo
53-826-00-01	Area Aft of Forward Cargo Compartment
53-830-00-01	Left Environmental Control Systems Bay
53-830-00-02	Right Environmental Control Systems Bay
53-832-00-01	Forward Keel Beam
53-838-00-01	Left Main Landing Gear Wheel Well (Inspection accomplished within WW)
53-842-00-01	Right Main Landing Gear Wheel Well (Inspection accomplished Within WW)
53-844-00-01	Aft Keel Beam
53-852-00-01	Aft Cargo Compartment
53-852-01-01	Aft Cargo Compartment
53-854-00-01	Aft Cargo Compartment
53-864-00-01	Area Below Aft Cargo Compartment
53-866-00-01	Area Below Aft Cargo Compartment
53-870-00-01	Bulk Cargo Compartment
53-874-00-01	Area Below Bulk Cargo Compartment
53-876-00-01	Area Aft of the Bulk Cargo Compartment
53-880-00-01	Forward Wing-To-Body Fairings - Left
53-882-00-01	Forward Wing-To-Body Fairings - Right



## 777-200/300 MAINTENANCE PLANNING DOCUMENT

8C CHECK	
TASK CARD NUMBER	TASK TITLE
53-884-00-01	Overwing Wing-To-Body Fairing - Left
53-886-00-01	Overwing Wing-To-Body Fairings - Right
53-888-00-01	Underwing Wing-to-Body Fairings - Left
53-890-00-01	Underwing Wing-To-Body Fairings - Right
53-892-00-01	Aft Wing-to-Body Fairings - Left
53-894-00-01	Aft Wing-To-Body Fairings - Right
53-896-00-01	Left Upper Fuselage - Body Sections 41 and 43 - STA 246 to STA 1035
53-896-00-02	Right Upper Fuselage - Body Sections 41 and 43 - STA 246 to STA 1035
53-896-00-03	Left Upper Fuselage - Body Section 44 - BS 1035 to 1434
53-896-00-04	Right Upper Fuselage - Body Section 44 - STA 1035 to STA 1434
53-896-00-05	Left Upper Fuselage - Body Section 46 and 47 - STA 1434 to STA 2150
53-896-00-06	Right Upper Fuselage - Body Sections 46 and 47 - STA 1434 to STA 2150
53-898-00-01	Left Upper Fuselage - Flight Compartment - STA 92.5 to STA 246
53-898-00-02	Right Upper Fuselage - Flight Compartment - STA 92.5 to STA 246
53-900-00-01	Flight Compartment
53-904-00-01	Passenger Compartment - Section 41
53-906-00-01	Area Above Passenger Compartment Ceiling - Section 41
53-908-00-01	Passenger Compartment - Section 43
53-910-00-01	Area Above Passenger Compartment Ceiling - Section 43
53-912-00-01	Passenger Compartment - Section 44
53-914-00-01	Area Above Passenger Compartment - Section 44
53-916-00-01	Passenger Compartment - Section 46
53-918-00-01	Area Above Passenger Compartment Ceiling - Section 46
53-920-00-01	Passenger Compartment - Section 47
53-922-00-01	Area Above Passenger Compartment Ceiling - Section 47
53-924-00-01	Body Section 48 - BS2150 to BS 2570



8C CHECK	
TASK CARD NUMBER	TASK TITLE
53-924-00-02	Body Section 48 - BS2150 to BS 2570
53-926-00-01	Fuselage Area Aft of Bulkhead - Inspection Accomplished within Fuselage
54-537-01-01	Left Nacelle Strut
54-538-01-01	Forward Torque Box - Left Nacelle Strut
54-540-01-01	AFT Torque Box - Left Nacelle Strut
54-541-01-02	AFT Torque Box - Left Nacelle Strut (For GE90-100 series engines only)
54-542-01-02	Strut Forward Torque Box (For GE90-100 series engines only)
54-543-01-02	AFT Torque Box - Left Nacelle Strut (GE90-100)
54-545-02-01	Right Nacelle Strut
54-546-02-01	Forward Torque Box - Right Nacelle Strut
54-548-02-01	AFT Torque Box - Right Nacelle Strut
54-549-02-02	AFT Torque Box - Right Nacelle Strut (For GE90-100 series engines only)
54-550-02-02	Strut Forward Torque Box (For GE90-100 series engines only)
54-551-02-02	AFT Torque Box - Right Nacelle Strut (GE90-100 Engine)
54-582-01-01	FORWARD TORQUE BOX - LEFT NACELLE STRUT (GE90-100 Only)
54-583-02-01	FORWARD TORQUE BOX - RIGHT NACELLE STRUT (GE90-100 Only)
54-610-01-01	Aft Torque Box - Left Nacelle Strut
54-612-02-01	Aft Torque Box - Right Nacelle Strut
54-822-01-01	Forward Strut Fairing - Left Nacelle Strut
54-824-01-01	Forward and Aft Torque Box - Left Nacelle Strut - Cowls Opened
54-826-01-01	Forward and Aft Torque Box - Left Nacelle Strut
54-828-01-01	Aft Strut Fairing - Left Nacelle Strut
54-832-02-01	Forward Strut Fairing - Right Nacelle Strut
54-834-02-01	Forward and Aft Torque Box - Right Nacelle Strut - Fan Cowls Opened



8C CHECK	
TASK CARD NUMBER	TASK TITLE
54-836-02-01	Forward and Aft Torque Box - Right Nacelle Strut
54-838-02-01	Aft Strut Fairing - Right Nacelle Strut
55-501-00-01	Horizontal Stabilizer Center Section
55-502-00-01	Horizontal Stabilizer Center Section
55-509-00-01	Vertical Stabilizer - Auxiliary Spar to Front Spar
55-511-00-01	Vertical Stabilizer - Front Spar to Rear Spar
55-515-00-01	Vertical Stabilizer - Rear Spar to Trailing Edge
55-515-01-01	Vertical Stabilizer - Rear Spar to Trailing Edge
55-517-00-01	Vertical Stabilizer - Rear Spar to Trailing Edge
55-517-01-01	Vertical Stabilizer - Rear Spar to Trailing Edge
55-518-00-01	Vertical Stabilizer - Rear Spar to Trailing Edge
55-518-01-01	Vertical Stabilizer - Rear Spar to Trailing Edge
55-521-00-01	Rudder Tab
55-522-00-01	Rudder Tab
55-527-01-01	Left Horizontal Stabilizer Center Section
55-534-01-01	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
55-534-03-01	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
55-535-01-01	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
55-535-03-01	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
55-538-02-01	Right Horizontal Stabilizer Center Section
55-545-02-01	Right Horizontal Stabilizer - Rear Spar to Trailing Edge
55-545-04-01	Right Horizontal Stabilizer - Rear Spar to Trailing Edge
55-546-02-01	Right Horizontal Stabilizer - Rear Spar to Trailing Edge
55-546-04-01	Right Horizontal Stabilizer - Rear Spar to Trailing Edge
55-652-00-01	Vertical Stabilizer Leading Edge
55-653-00-01	Vertical Stabilizer - Auxiliary Spar to Front Spar

8C CHECK	
TASK CARD NUMBER	TASK TITLE
55-653-01-01	Vertical Stabilizer - Auxiliary Spar to Front Spar
55-655-00-01	Vertical Stabilizer Forward Tip
55-656-01-01	Left Horizontal Stabilizer Leading Edge
55-657-01-01	Left Horizontal Stabilizer - Auxiliary Spar to Front Spar
55-659-01-01	Left Horizontal Stabilizer Tip
55-660-02-01	Right Horizontal Stabilizer Leading Edge
55-661-02-01	Right Horizontal Stabilizer - Auxiliary Spar to Front Spar
55-663-02-01	Right Horizontal Stabilizer Tip
55-800-00-01	Stabilizer Torsion Box Compartment - Left and Right Sides
55-804-00-01	Vertical Stabilizer Leading Edge
55-806-00-01	Vertical Stabilizer Leading Edge
55-808-00-01	Vertical Stabilizer - Auxiliary Spar to Rear Spar
55-812-00-01	Vertical Stabilizer - Front Spar to Rear Spar - Between Ribs 8 and 9
55-814-00-01	Vertical Stabilizer - Rear Spar to Trailing Edge
55-817-00-01	Vertical Stabilizer - Rear Spar to Trailing Edge
55-820-00-01	Rudder
55-822-00-01	Rudder Tab
55-824-00-01	Vertical Stabilizer Forward Tip
55-828-01-01	Left Horizontal Stabilizer - Center Section
55-830-01-01	Left Horizontal Stabilizer - Leading Edge
55-832-01-01	Left Horizontal Stabilizer - Auxiliary Spar to Rear Spar
55-838-01-01	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
55-838-03-02	Left Horizontal Stabilizer - Front Spar to Rear Spar
55-841-00-01	Left Horizontal Stabilizer - Rear Spar to Trailing Edge



8C CHECK	
TASK CARD NUMBER	TASK TITLE
55-844-01-01	Left Elevator
55-846-01-01	Left Horizontal Stabilizer Tip
55-848-02-01	Right Horizontal Stabilizer Center Section
55-850-02-01	Right Horizontal Stabilizer - Leading Edge
55-852-02-01	Right Horizontal Stabilizer - Auxiliary Spar to Rear Spar
55-856-04-01	Right Horizontal Stabilizer - Front Spar to Rear Spar
55-858-02-01	Right Horizontal Stabilizer - Rear Spar to Trailing Edge
55-861-00-01	Right Horizontal Stabilizer - Rear Spar to Trailing Edge
55-864-02-01	Right Elevator
55-866-02-01	Right Horizontal Stabilizer Tip
56-010-00-01	Flight Deck #2 Windows MICROSWITCH
56-020-00-01	Flight Deck Number 2 Windows Guide Bearings
56-030-00-01	Flight Deck Number 2 Windows Open/Close Function
57-501-00-01	Wing Center Section
57-505-01-01	Wing Inspar Area (Fuel Tanks) - Inboard of Wing Rib 17
57-507-01-01	Wing Inspar Area (Fuel Tanks) - Rib 17 to Wing Tip
57-515-01-01	Left Wing Inboard Main Flap
57-519-01-01	Left Wing Flaperon
57-520-01-01	Left Wing Flaperon
57-533-01-01	Outboard Flaperon Support Fairing - Left Wing
57-540-02-01	Wing Inspar Area (Fuel Tanks) - Inboard of Wing Rib 17
57-542-02-01	Wing Inspar Area (Fuel Tanks) - Rib 17 to Wing Tip
57-550-02-01	Right Wing Inboard Main Flap
57-554-02-01	Right Wing Flaperon
57-555-02-01	Right Wing Flaperon
57-563-02-01	Outboard Flaperon Support Fairing - Right Wing



8C CHECK	
TASK CARD NUMBER	TASK TITLE
57-603-00-01	Underwing Wing-To-Body Fairing
57-614-01-01	Wing Trailing Edge - Aft of Rear Spar
57-627-02-01	Wing Trailing Edge - Aft of Rear Spar
57-630-00-01	Area Above Wing Center Section
57-804-01-01	Leading Edge to Front Spar - Inboard of Nacelle Strut - Left Wing
57-806-01-01	Leading Edge to Front Spar - Inboard of Nacelle Strut - Left Wing
57-808-01-01	Slat No. 7
57-810-01-01	Krueger Seal Flap/Nacelle Gap Cover Area - Left Wing
57-812-01-01	Krueger Seal Flap/Nacelle Gap Cover Area - Left Wing
57-814-01-01	Leading Edge to Front Spar - Outboard of Nacelle Strut - Left Wing
57-817-01-01	Leading Edge to Front Spar - Outboard of Nacelle Strut - Left Wing
57-818-01-01	Left Wing Outboard Leading Edge Slats Number 1 through 6
57-832-01-01	Lower Wing Inspar Area (Fuel Tanks) - Inboard of Wing Rib 17 - Left Wing
57-832-01-02	Upper Wing Inspar Area (Fuel Tanks) - Inboard of Wing Rib 17 - Left Wing
57-836-01-01	Left Wing Dry Bay
57-840-01-01	Wing Inspar Area - Rib 17 to Wing Tip - Left Wing Lower Surface
57-840-01-02	Wing Inspar Area - Rib 17 to Wing Tip - Left Wing Upper Surface
57-848-01-01	Left Wing Tip
57-852-01-01	Left Wing Fixed T.E. - Aft of Rear Spar, Inbd of Outbd Support Fairing
57-854-01-01	Rear Spar to Landing Gear Support Beam - Left Wing
57-856-01-01	Landing Gear Support Beam and Rear Spar to Trailing Edge - Left Wing
57-858-01-01	Inboard Spoilers Numbers 6 and 7
57-860-01-01	Inboard Trailing Edge Flaps - Left Wing
57-862-01-01	Left Wing Flaperon



8C CHECK	
TASK CARD NUMBER	TASK TITLE
57-864-01-01	Rear Spar to Trailing Edge - Outboard of Flaperon - Left Wing
57-866-01-01	Rear Spar to Trailing Edge - Outboard of Flaperon - Left Wing
57-868-01-01	Outboard Spoilers Numbers 1 through 5
57-870-01-01	Left Wing Outboard Flap
57-872-01-01	Left Wing Aileron
57-874-01-01	Flap Support Fairing No. 4
57-876-01-01	Flap Support Fairing No. 4
57-878-01-01	Inboard Flap Center Track Fairing - Left Wing
57-880-01-01	Flap Support Fairing No. 3 and Inboard Flaperon Support Fairing
57-882-01-01	Flap Support Fairing No. 3 and Inboard Flaperon Support Fairing
57-884-01-01	Outboard Flaperon Support Fairing - Left Wing
57-886-01-01	Flap Support Fairing No. 2
57-888-01-01	Flap Support Fairing No. 2
57-890-01-01	Flap Support Fairing No. 1
57-892-01-01	Flap Support Fairing No. 1
57-894-01-01	Outboard Auxiliary Support Fairing - Left Wing
57-896-02-01	Leading Edge to Front Spar - Inboard of Nacelle Strut - Right Wing
57-898-02-01	Leading Edge to Front Spar - Inboard of Nacelle Strut - Right Wing
57-900-02-01	Slat No. 8
57-902-02-01	Krueger Seal Flap/Nacelle Gap Cover Area - Right Wing
57-904-02-01	Krueger Seal Flap/Nacelle Gap Cover Area - Right Wing
57-906-02-01	Leading Edge to Front Spar - Outboard of Nacelle Strut - Right Wing
57-909-02-01	Leading Edge to Front Spar - Outboard of Nacelle Strut - Right Wing
57-910-02-01	Outboard Leading Edge Slats Number 9 through 14
57-924-02-01	Lower Wing Inspar Area (Fuel Tanks) - Inboard of Wing Rib 17 - Right Wing
57-924-02-02	Upper Wing Inspar Area (Fuel Tanks) - Inboard of Wing Rib 17 - Right Wing



8C CHECK	
TASK CARD NUMBER	TASK TITLE
57-928-02-01	Right Wing Dry Bay
57-932-02-01	Wing Inspar Area (Fuel Tanks) - Rib 17 to Wing Tip - Right Wing Lower Surface
57-932-02-02	Wing Inspar Area (Fuel Tanks) - Rib 17 to Wing Tip - Right Wing Upper Surface
57-940-02-01	Right Wing Tip
57-944-02-01	Right Wing Fixed T.E. - Aft of Rear Spar, Inbd of Outbd Support Fairing
57-946-02-01	Rear Spar to Landing Gear Support Beam - Right Wing
57-948-02-01	Landing Gear Support Beam and Rear Spar to Trailing Edge - Right Wing
57-950-02-01	Inboard Spoilers Numbers 8 and 9
57-952-02-01	Inboard Trailing Edge Flaps - Right Wing
57-954-02-01	Right Wing Flaperon
57-956-02-01	Rear Spar to Trailing Edge - Outboard of Flaperon - Right Wing
57-958-02-01	Rear Spar to Trailing Edge - Outboard of Flaperon - Right Wing
57-960-02-01	Outboard Spoilers Numbers 10 through 14
57-962-02-01	Right Wing Outboard Flap
57-964-02-01	Right Wing Aileron
57-966-02-01	Flap Support Fairing No. 5
57-968-02-01	Flap Support Fairing No. 5
57-970-02-01	Inboard Flap Center Track Fairing - Right Wing
57-972-02-01	Flap Support Fairing No. 6 and Inbd Flaperon Support Fairing
57-974-02-01	Flap Support Fairing No. 6 and Inbd Flaperon Support Fairing
57-976-02-01	Outboard Flaperon Support Fairing - Right Wing
57-978-02-01	Flap Support Fairing No. 7
57-980-02-01	Flap Support Fairing No. 7
57-982-02-01	Flap Support Fairing No. 8



8C CHECK	
TASK CARD NUMBER	TASK TITLE
57-984-02-01	Flap Support Fairing No. 8
57-986-02-01	Outboard Auxiliary Support Fairing - Right Wing